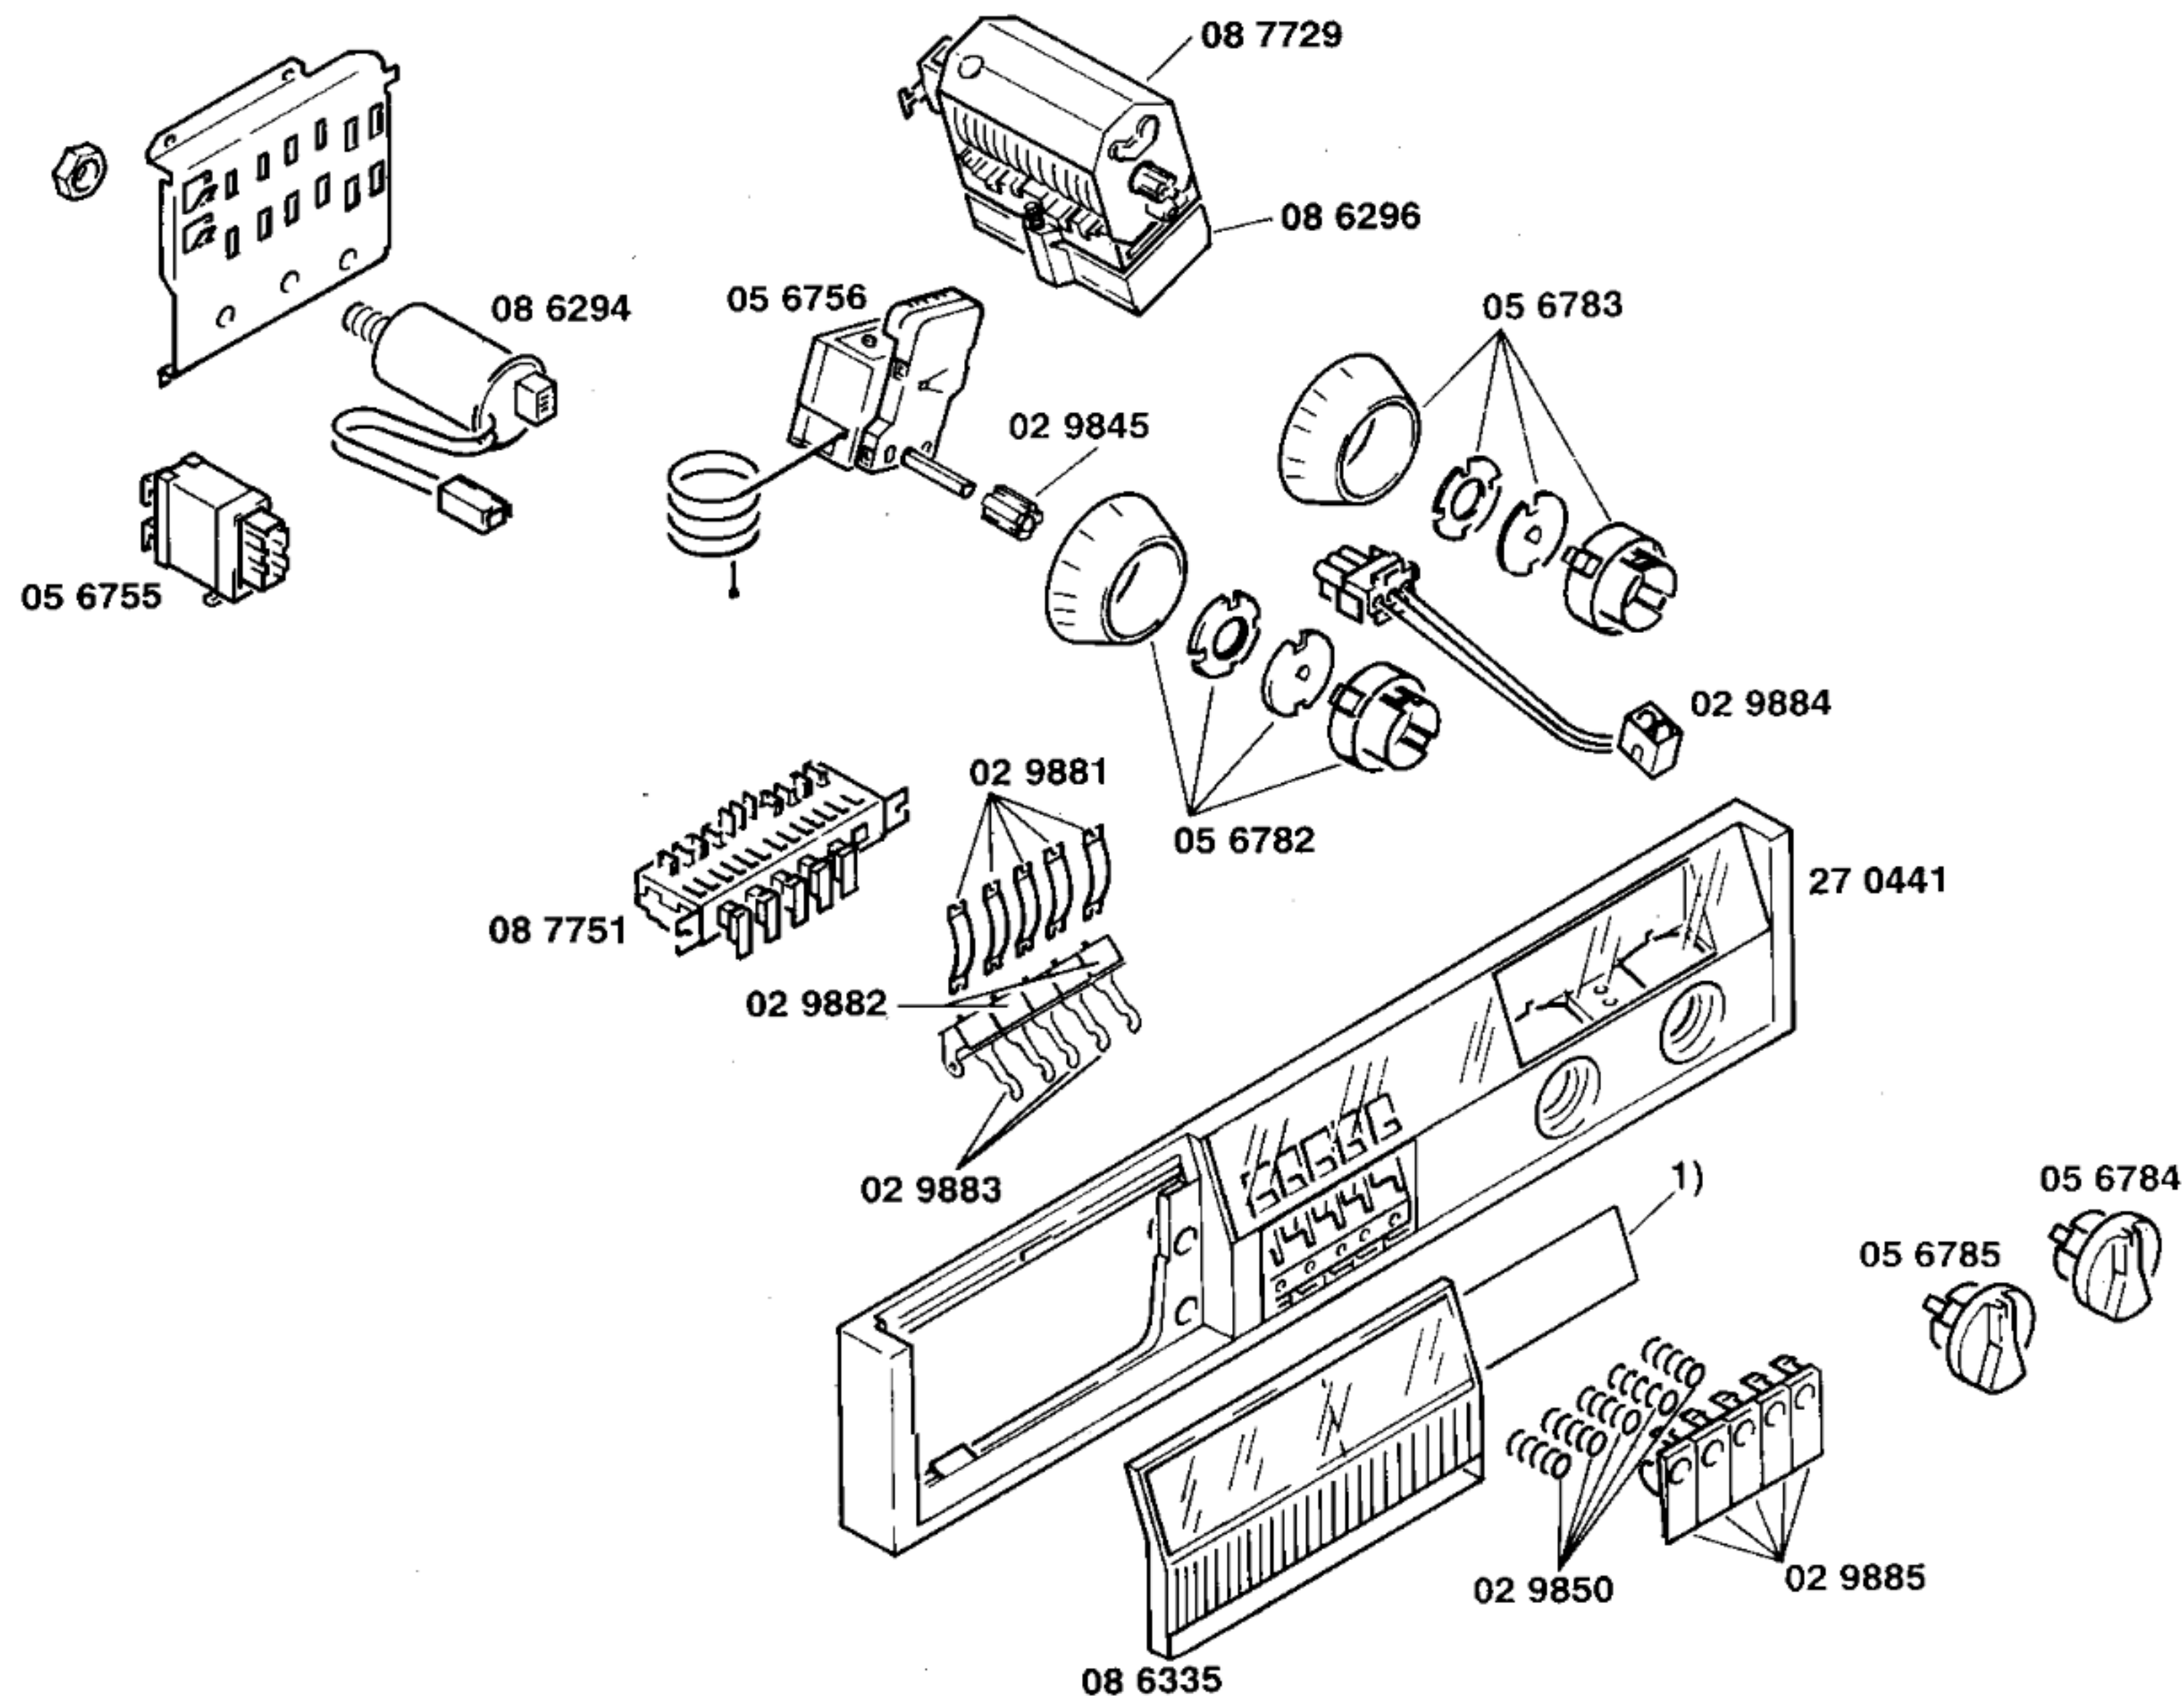


**BOSCH**WFK5600-WFK5600CH/04-CH1
WFK5600-WFK5600CH/05-CH2WASCHGERÄTE
WaschvollautomatenIdent - Nummern - Konstante
3740

- 1) 08 6336
(D)
08 6337
(NL)
08 6338
(N)
08 6339
(SF)
08 6340
(S)
08 6341
(E)
08 6342
(F)
08 6343
(DK)
08 6344
(I)
08 6686
(TR,YU,E,GB)
08 6690
(GB)

Gebrauchsanweisungen:

51 3939

(D,F,I)

Programmtabellen:

51 3940

(D)

51 3941

(F,I)

Aufstellanweisungen:

51 3556


(D,I,S,N,SF)

51 3557

(S,DK)


51 3558


(NL,F,E,GB)

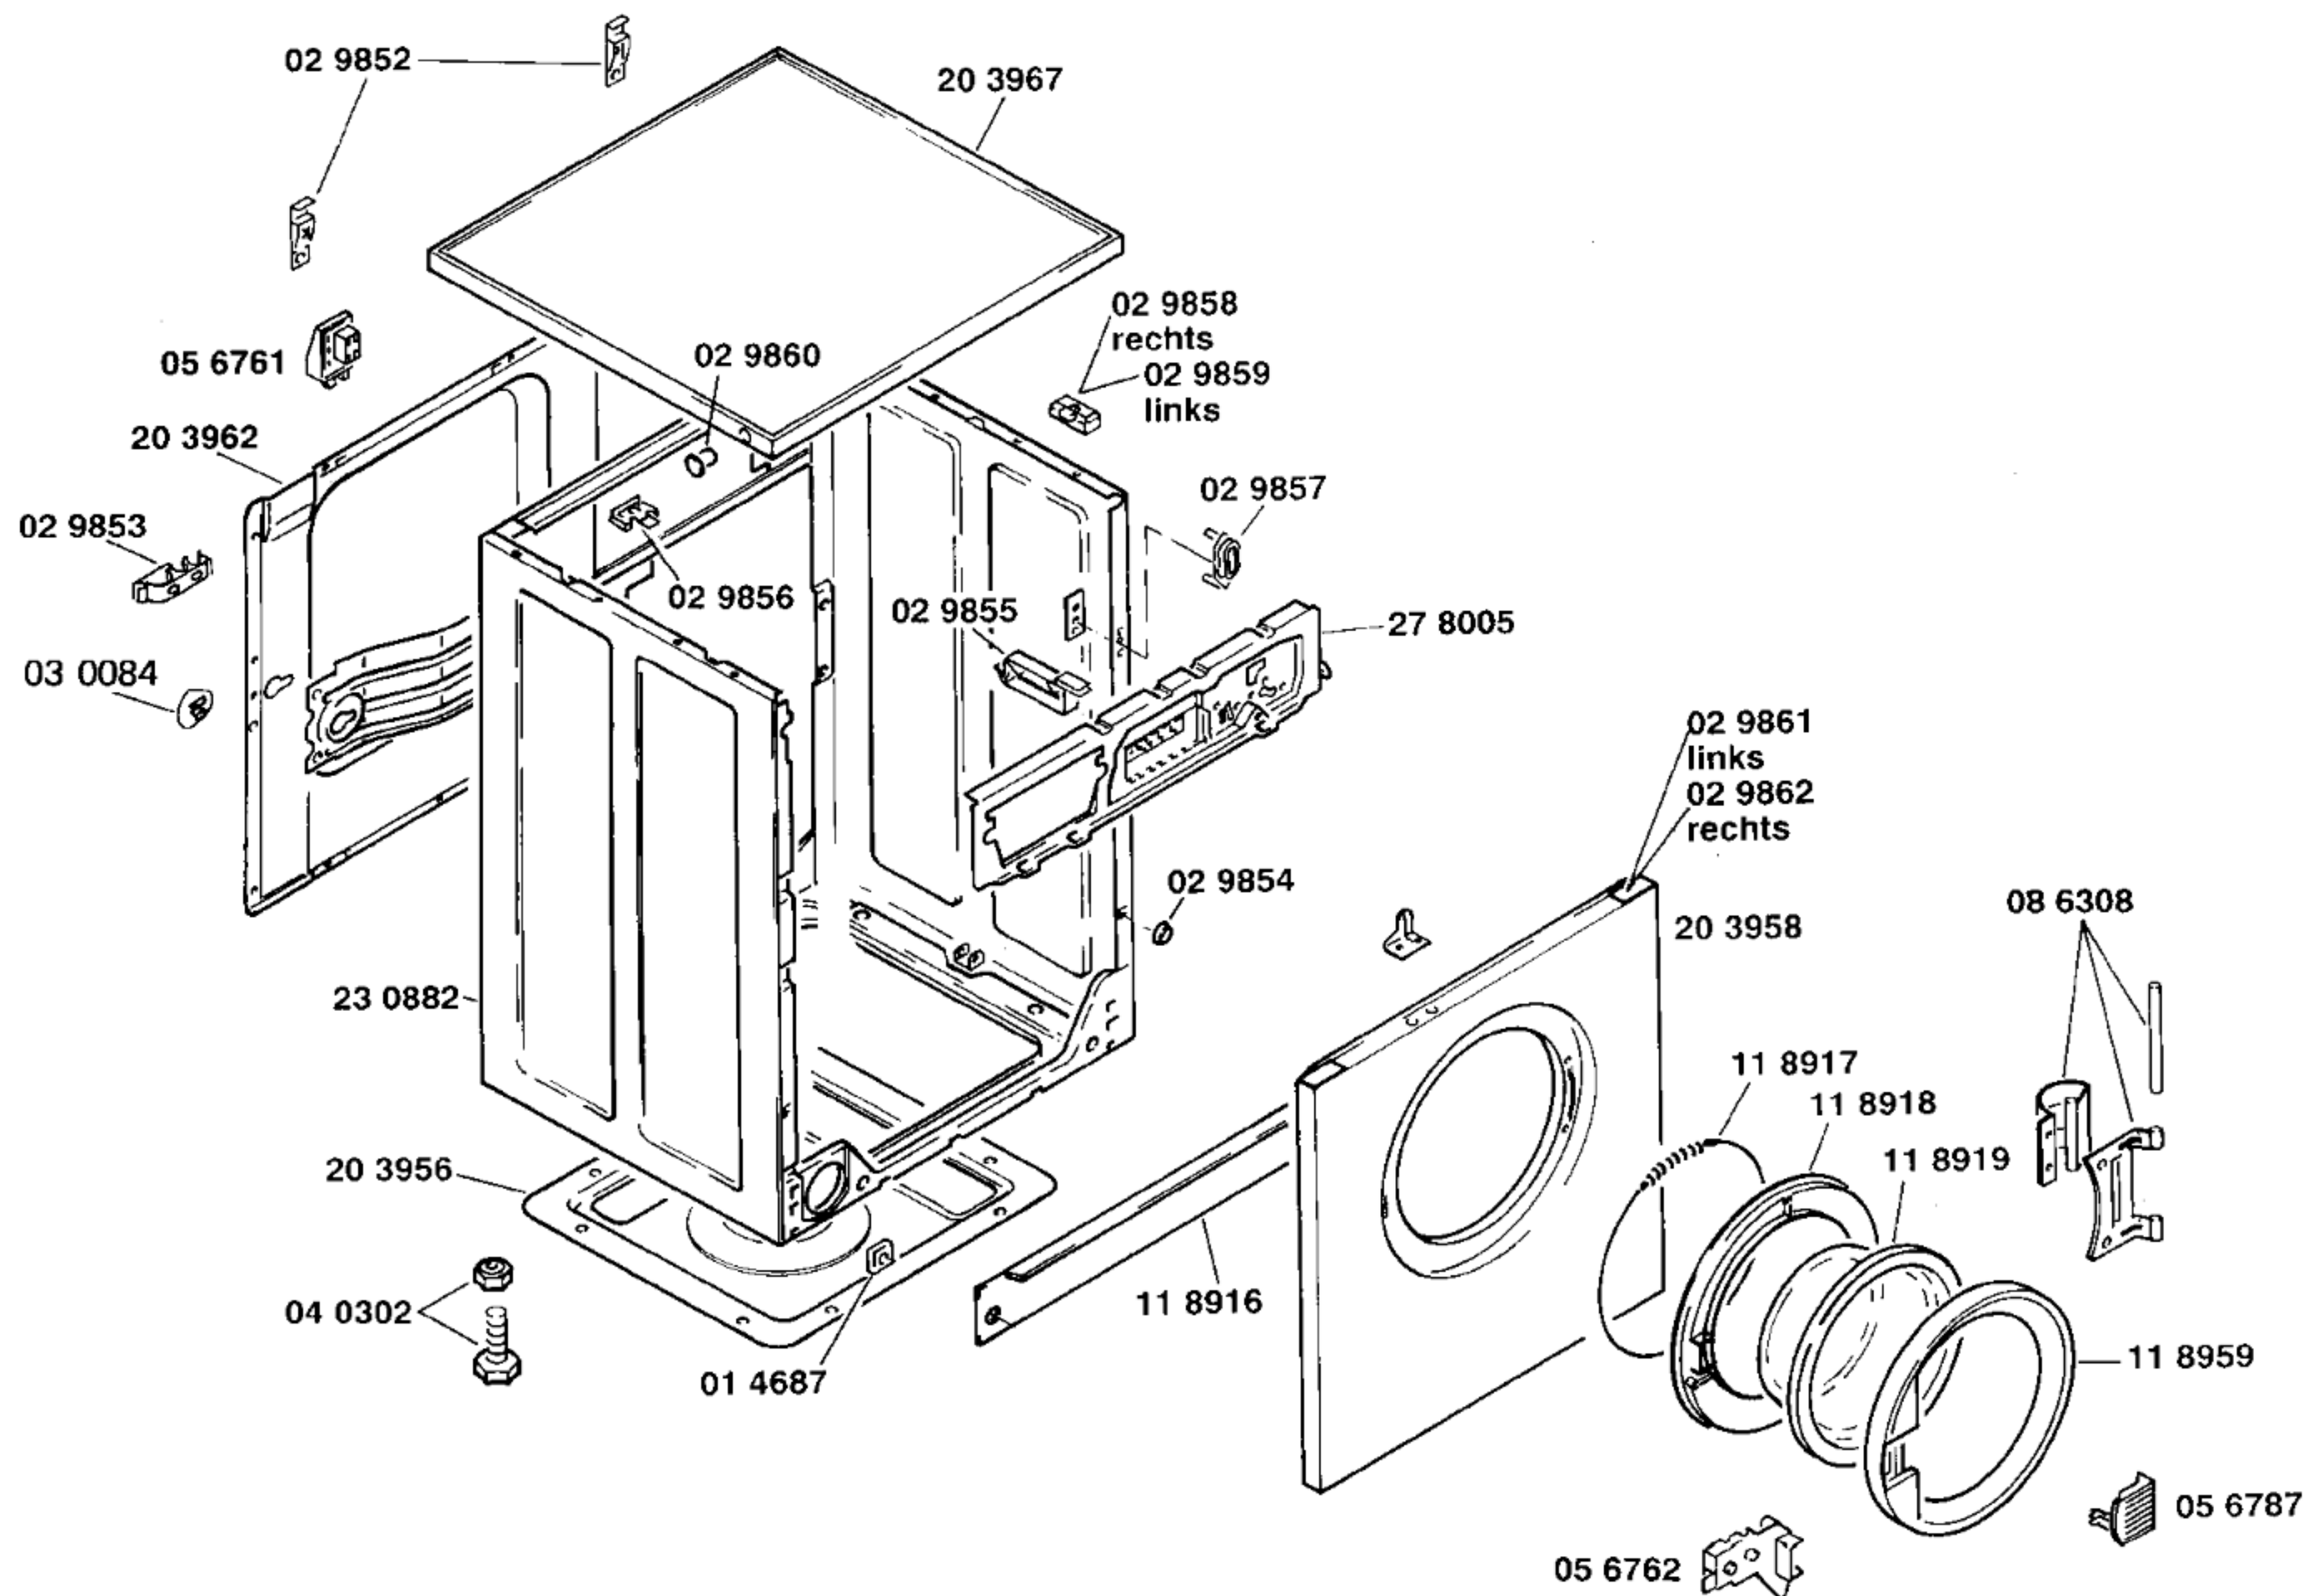**BOSCH**WFK5600-WFK5600CH/04-CH1
WFK5600-WFK5600CH/05-CH2WASCHGERÄTE
WaschvollautomatenIdent – Nummern – Konstante
3740

**BOSCH**WFK5600-WFK5600CH/04-CH1
WFK5600-WFK5600CH/05-CH2WASCHGERÄTE
WaschvollautomatenIdent - Nummern - Konstante
3740

- 1) 05 6766
CH1
05 8436
CH2
- 2) 27 1715
15 5272
Triac-Motorleistung

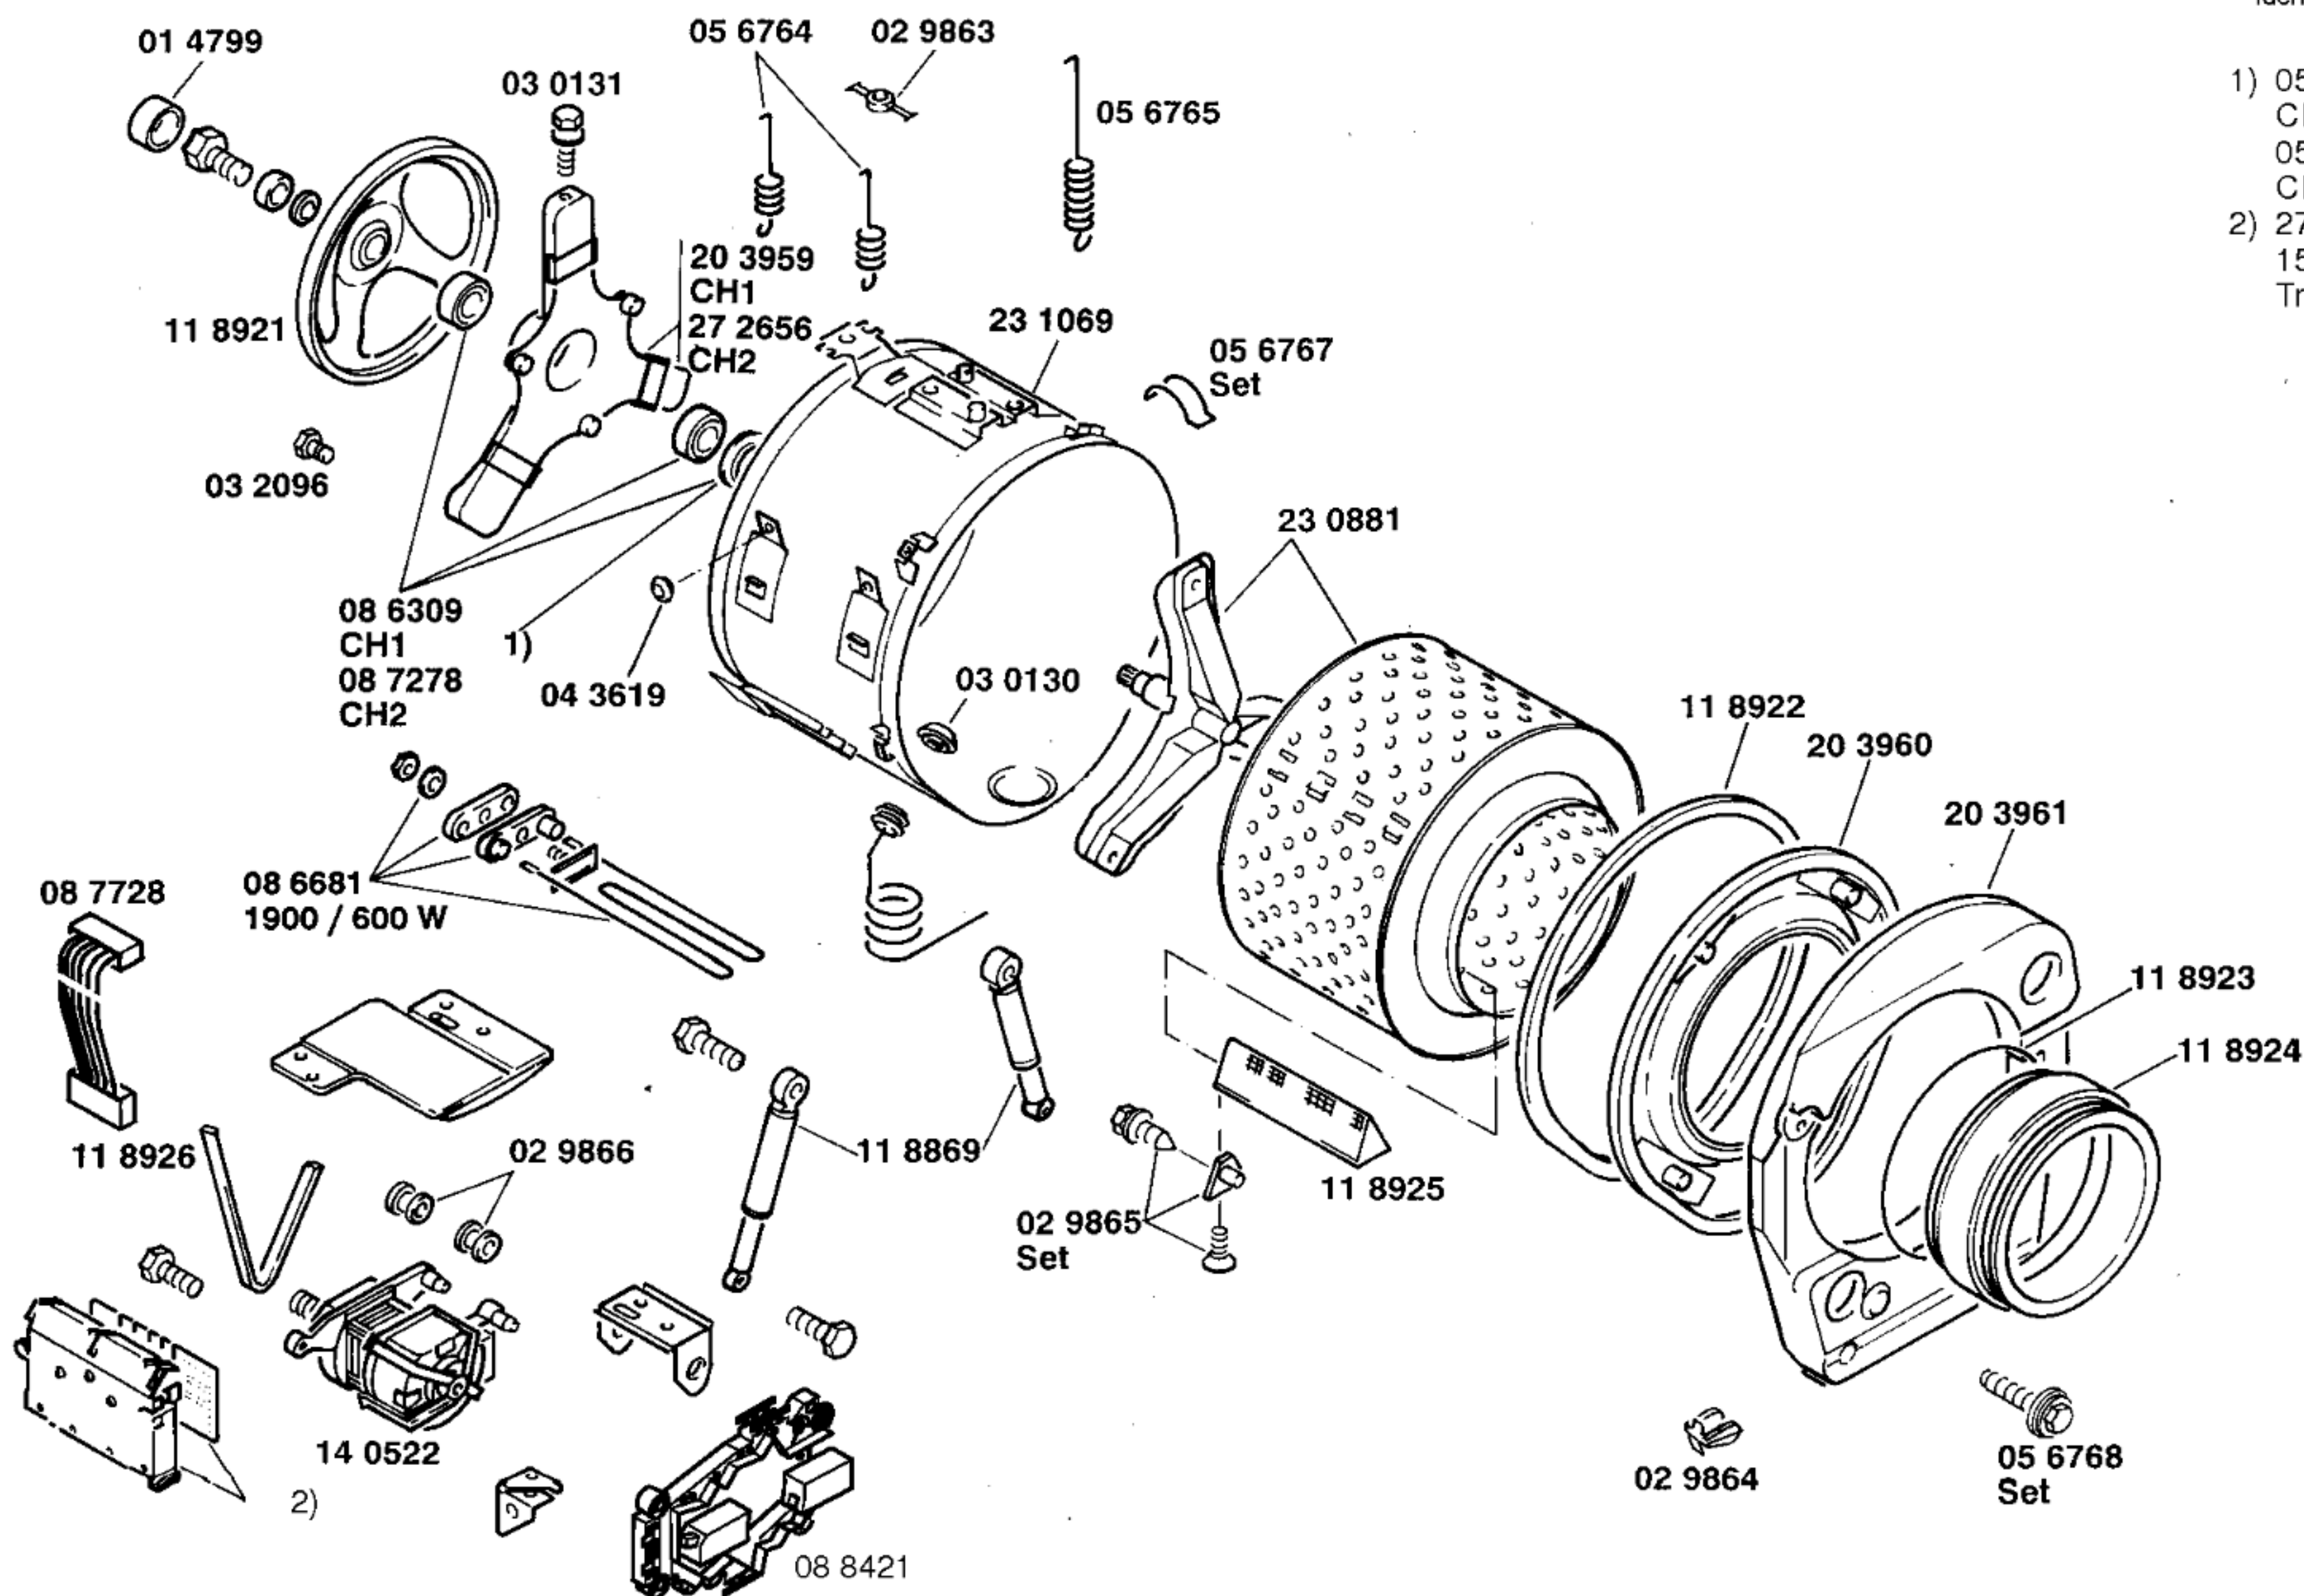

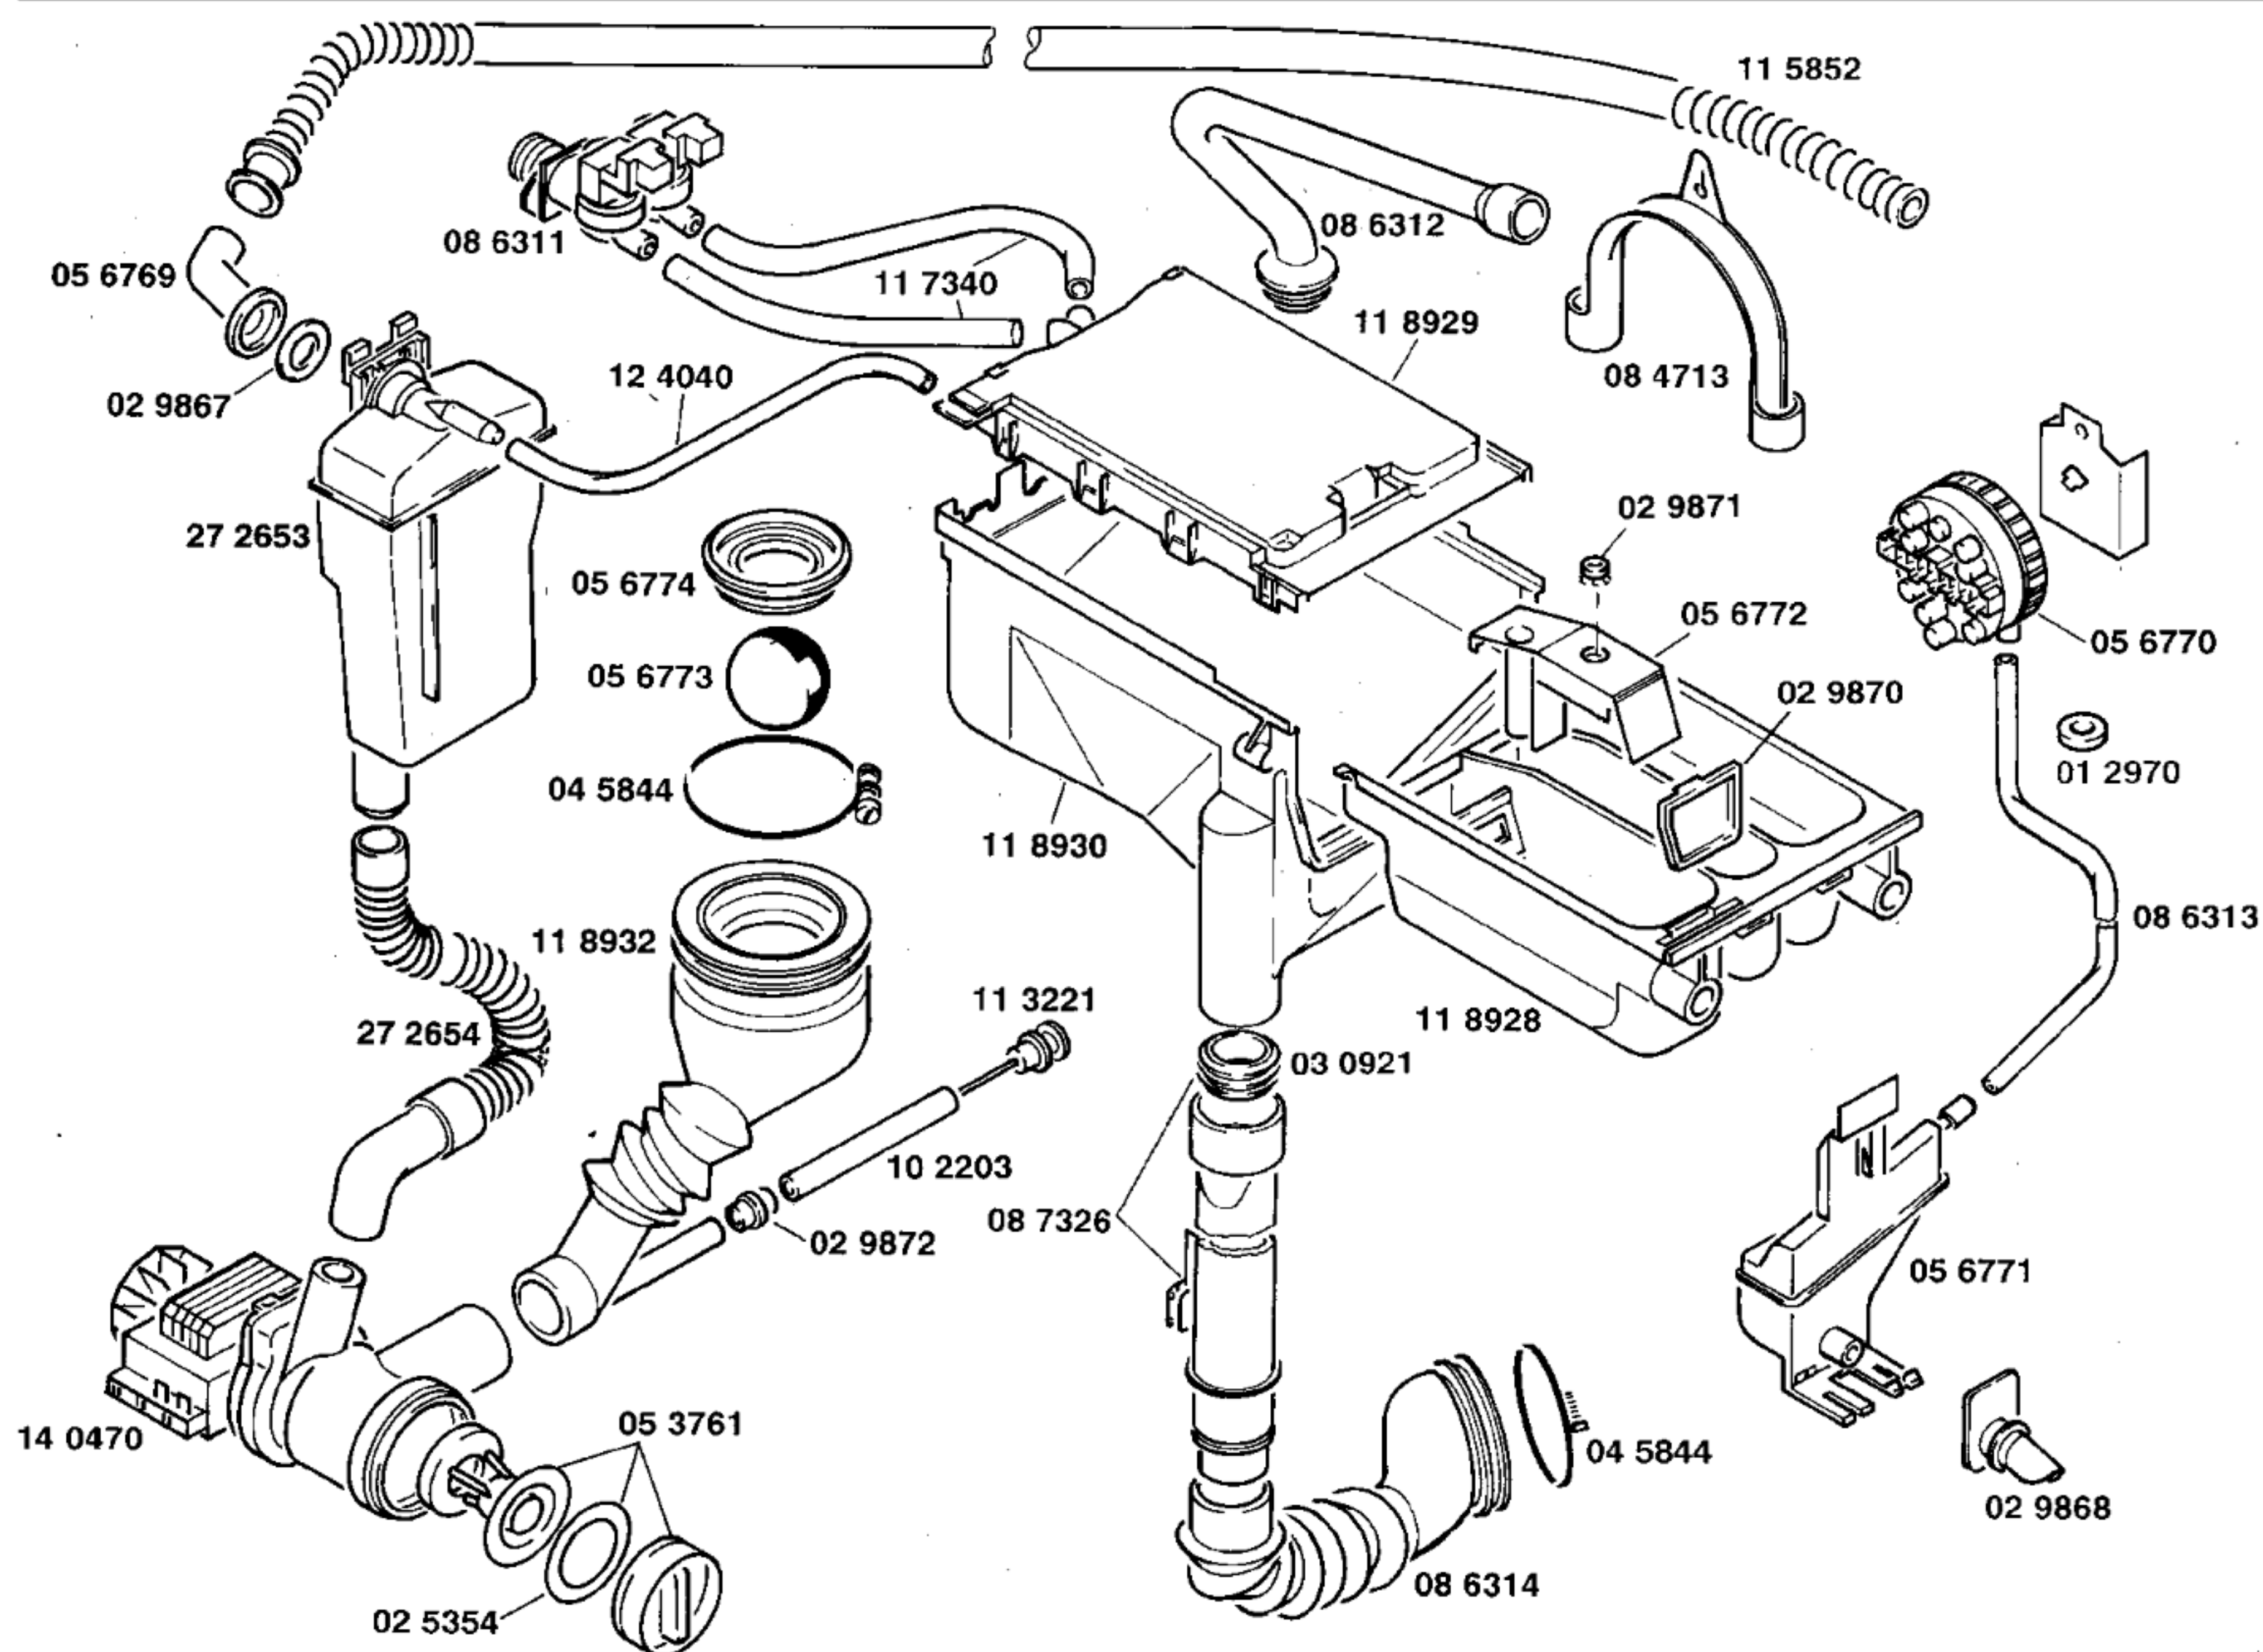**BOSCH**WFK5600-WFK5600CH/04-CH1
WFK5600-WFK5600CH/05-CH2WASCHGERÄTE
WaschvollautomatenIdent - Nummern - Konstante
3740