


**BOSCH**

V341-WMV3414/02-D1
 V341-WMV341426/02-I1
 V341-WMV341453/02-N1

WASCHGERÄTE
 Waschvollautomaten

Ident - Nummern - Konstante
 3740

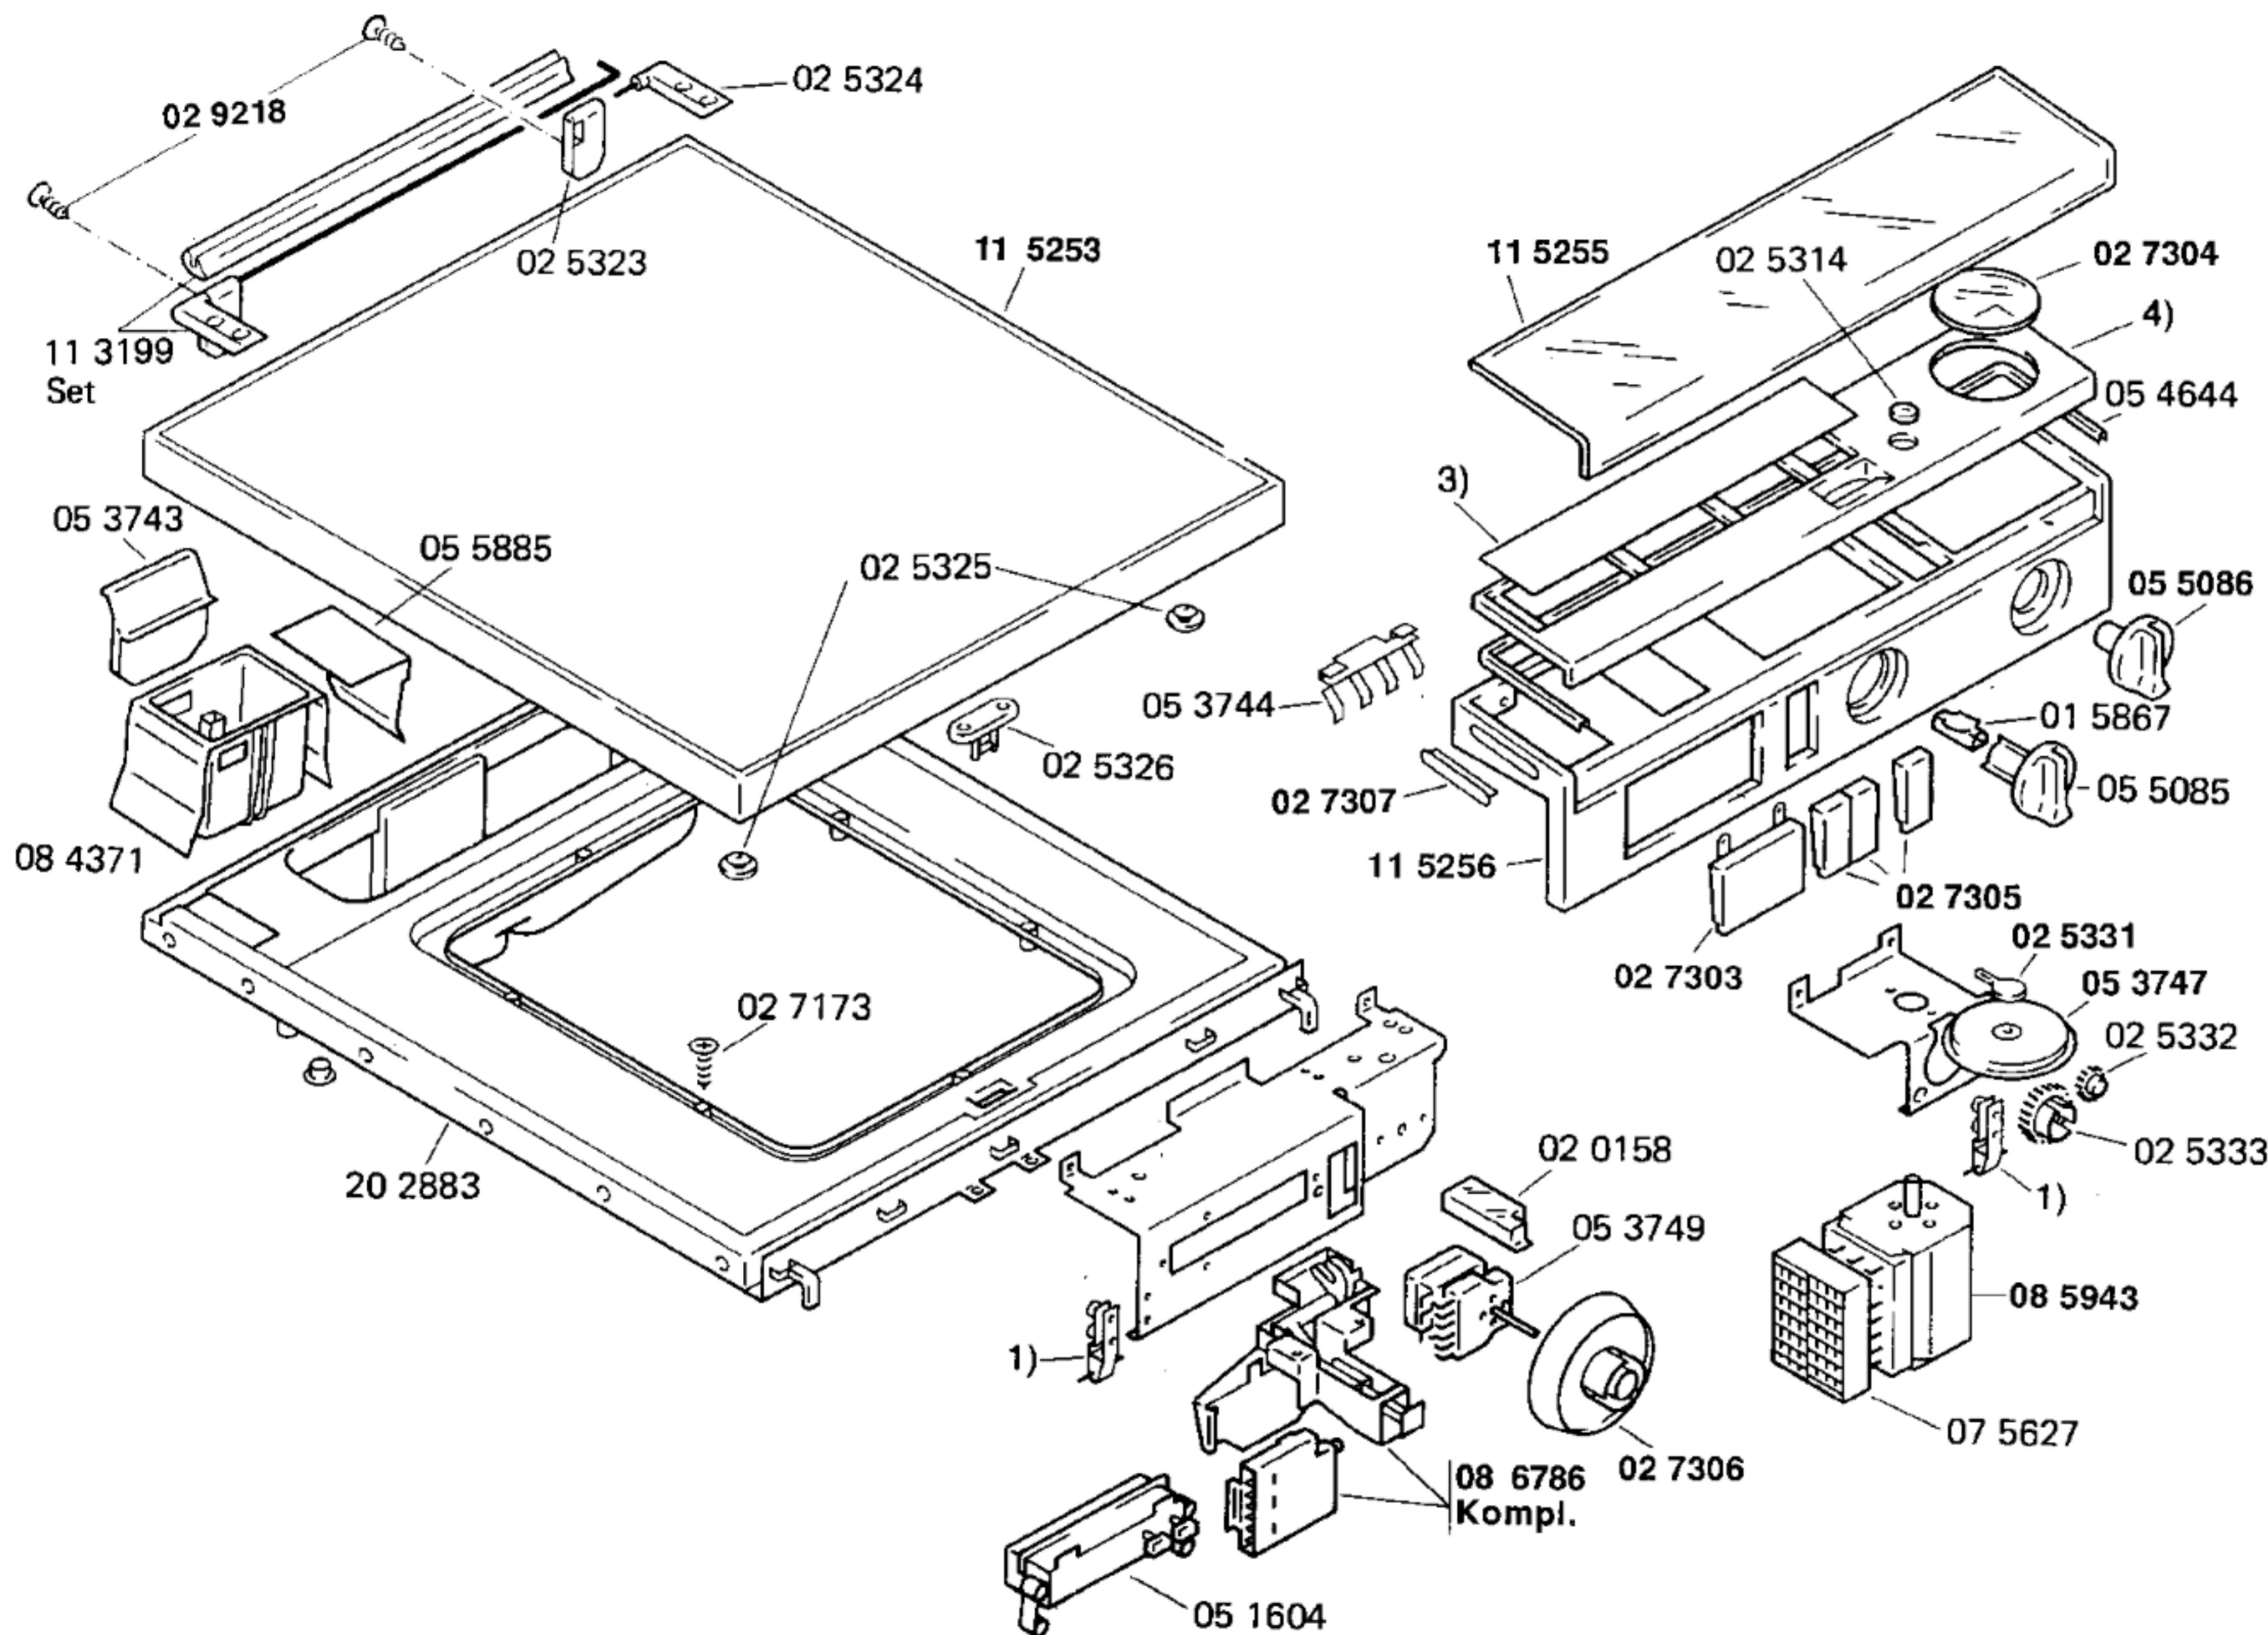

Aufstellanweisungen:
 51 3182
 (D,GB,F,I,NL,E)
 51 1674
 (D,I,S,DK,N,SF)
Gebrauchsanweisungen:
 51 3216
 (D,GB,F,I,NL,E)
 51 3217
 (D,I,S,DK,N,SF)
Programmtabellen:
 51 3178
 (D,GB,F,I,NL,E)
 51 3177
 (D,I,S,DK,N,SF)

- 1) 02 5334
- 2) einschl. 05 4644
- 3) 08 5880
 (D,Symbole)
 08 5881
 (F,NL)
 08 5882
 (SF,DK)
 08 5883
 (S,N)
 08 5884
 (I,GB)
 08 5885
 (E)
- 4) 11 8162
 (D,N)
 11 8766
 (I)




BOSCH

V341-WMV3414/02-D1
V341-WMV341426/02-I1
V341-WMV341453/02-N1


WASCHGERÄTE
Waschvollautomaten

Ident - Nummern - Konstante
3740

- 1) 04 5561
- 2) 01 4687
- 3) 02 5342
- 4) 02 8340
- 5) 02 5345

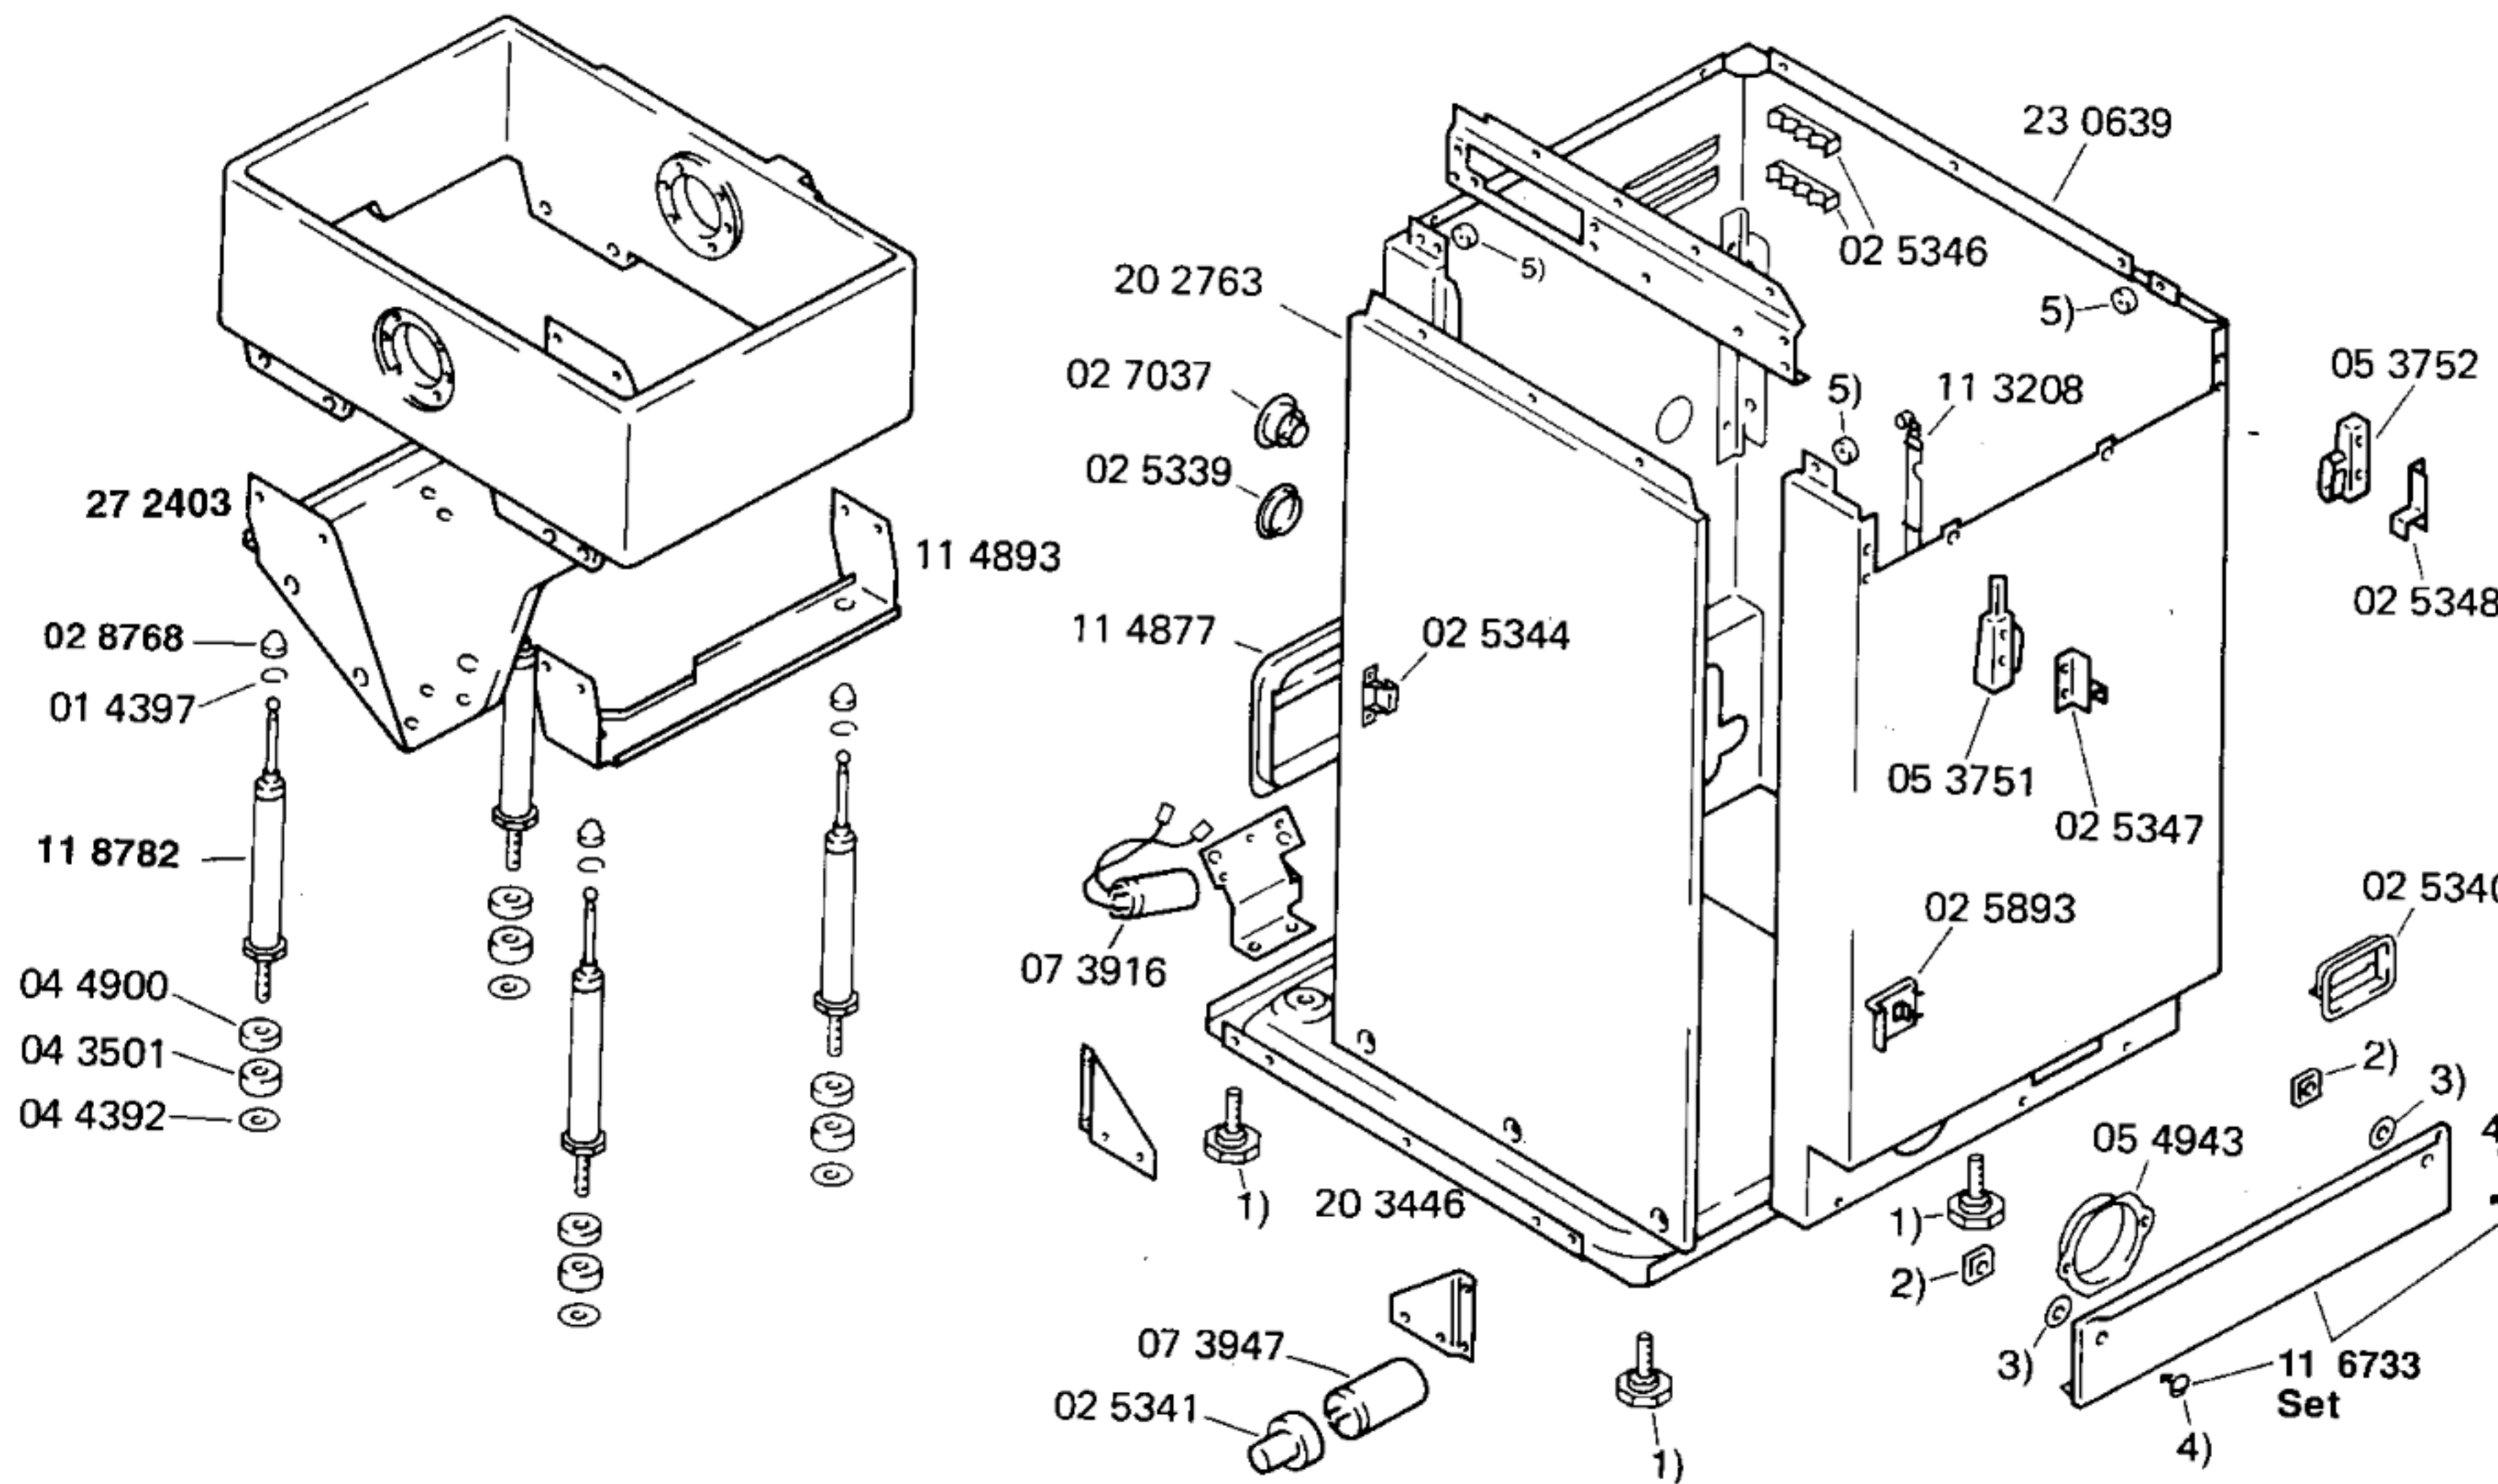

Ident - Nummern - Konstante
 3740

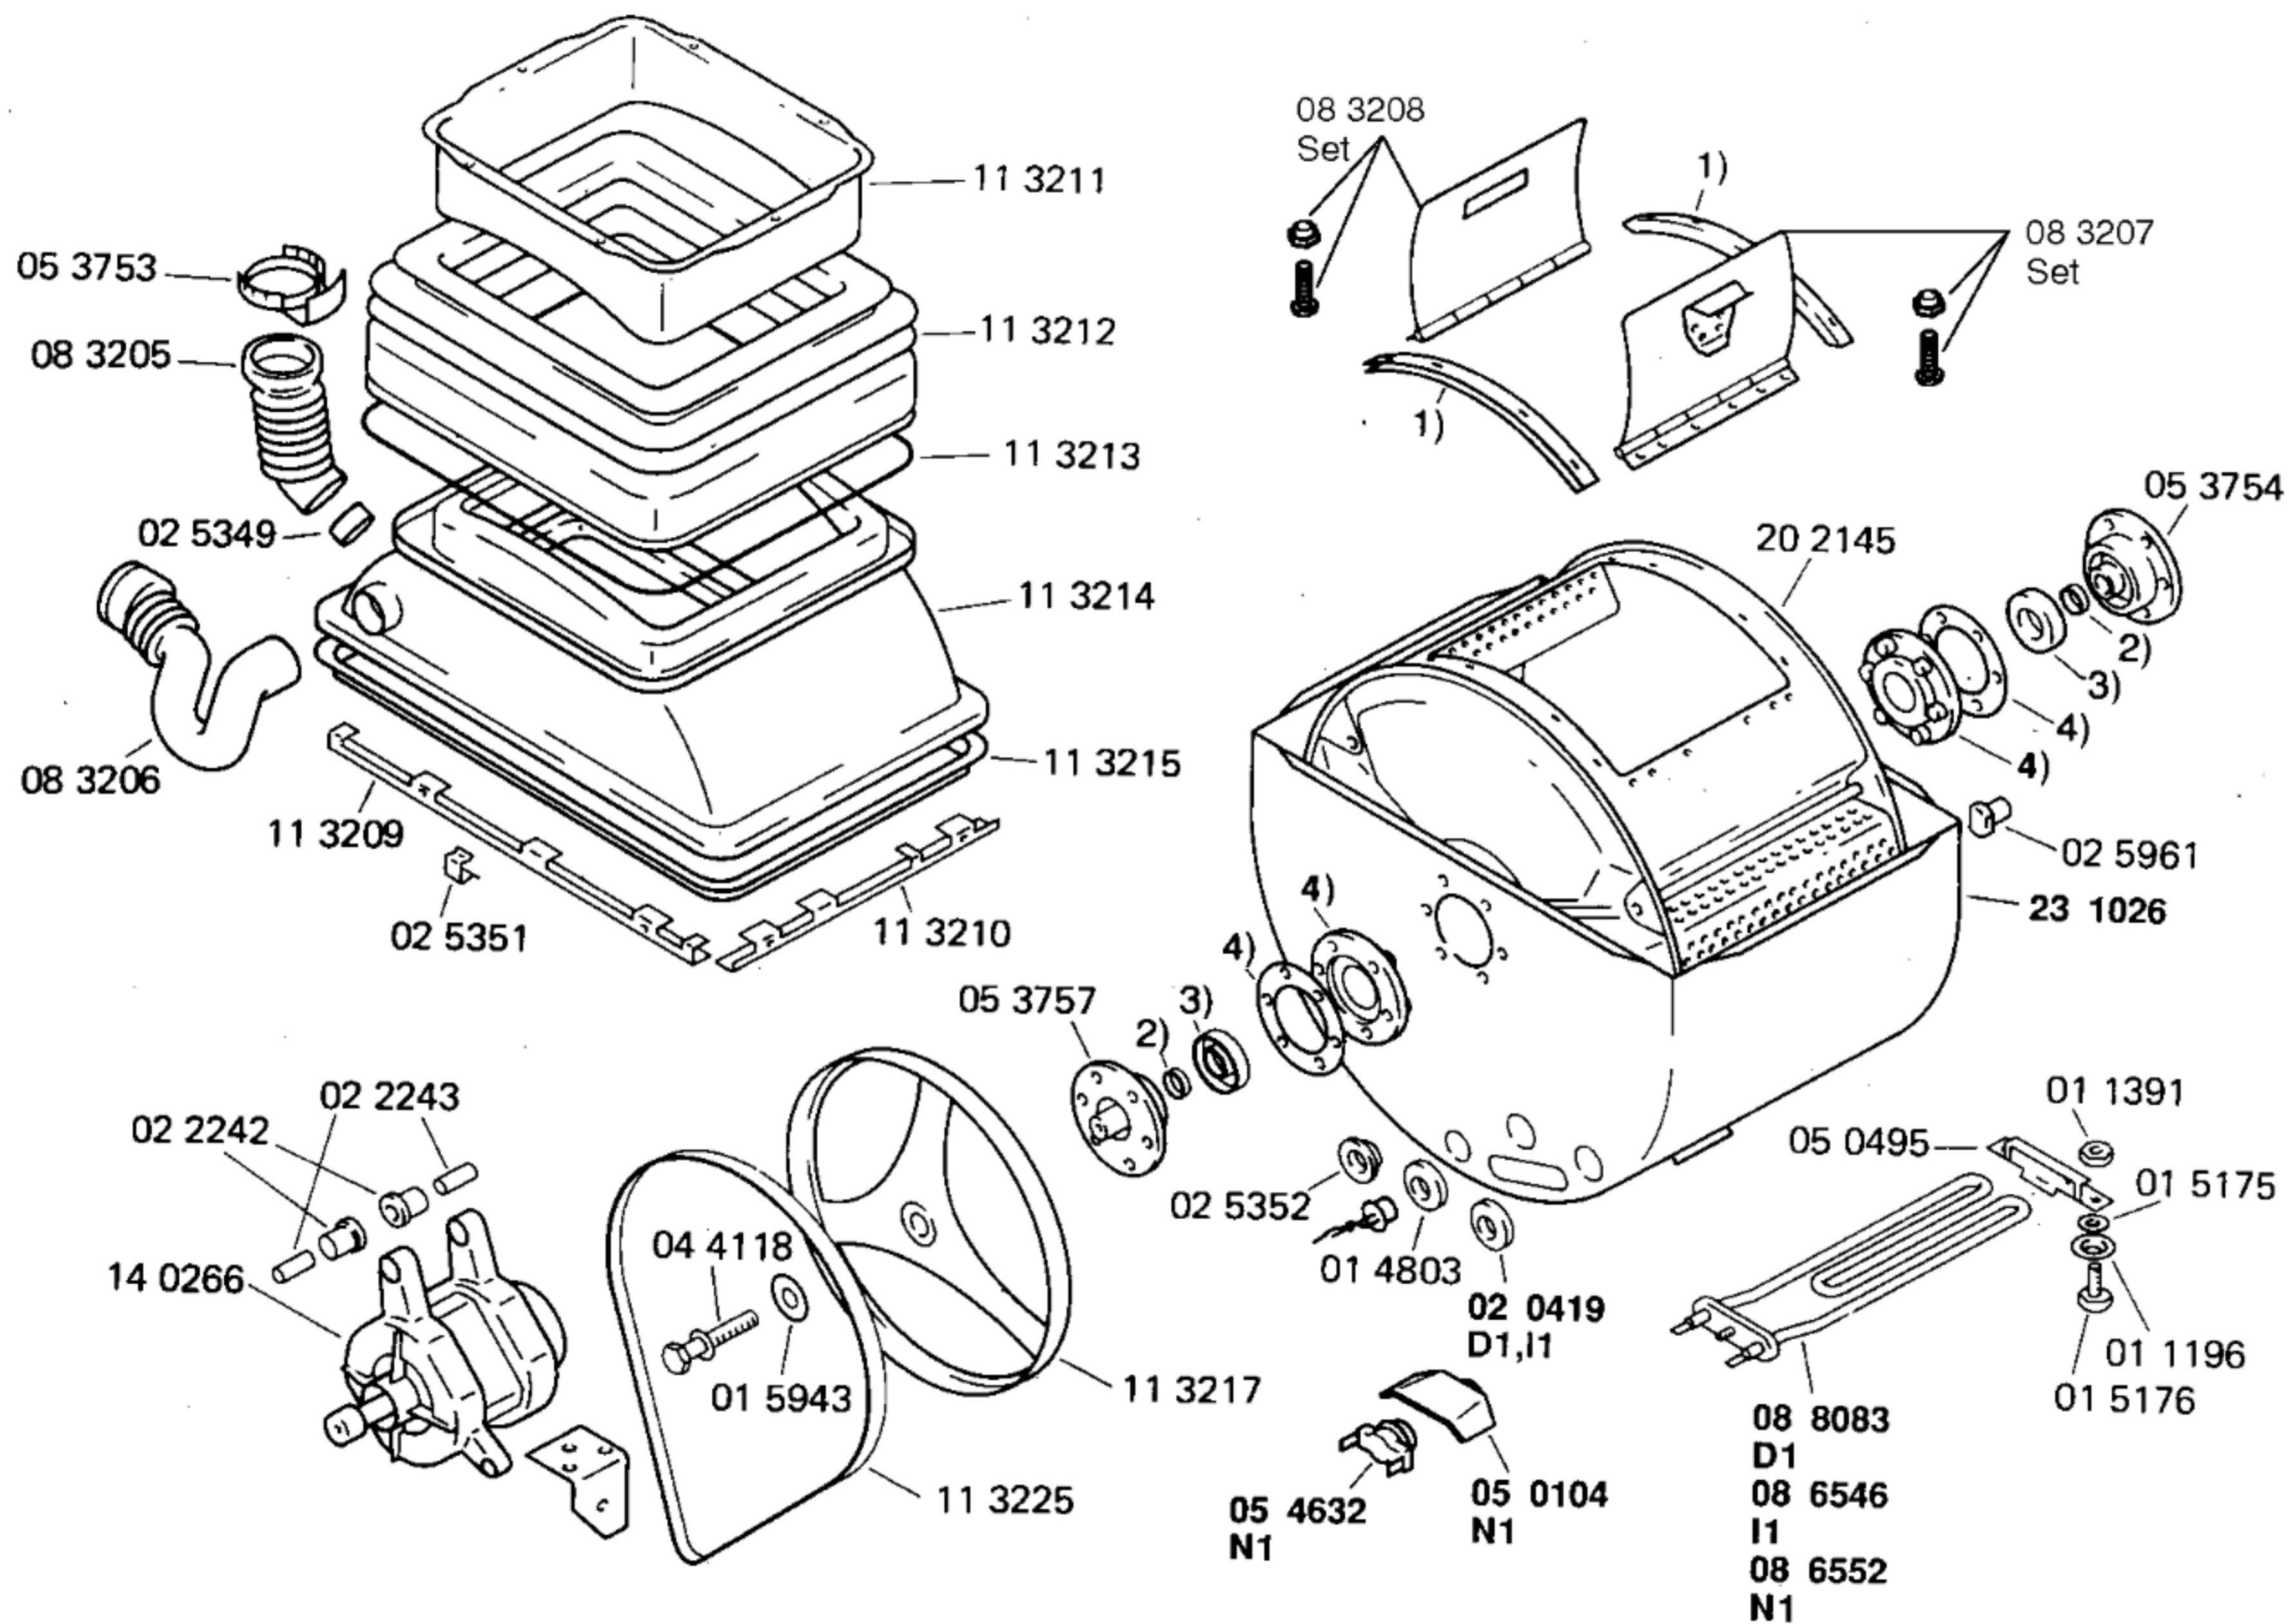

- 1) 11 3216
- 2) 04 2309
- 3) 02 5350
- 4) 05 7022



BOSCH

V341-WMV3414/02-D1
V341-WMV341426/02-I1
V341-WMV341453/02-N1

WASCHGERÄTE
Waschvollautomaten

Ident - Nummern - Konstante
3740

