


**BOSCH**

V3000-WMV3000/00-D1  
 V3000-WMV3000/01-D2  
 V3000-WMV3000/02-D3

WASCHGERÄTE  
 Waschvollautomaten

Ident - Nummern - Konstante  
 3740 . . . . .

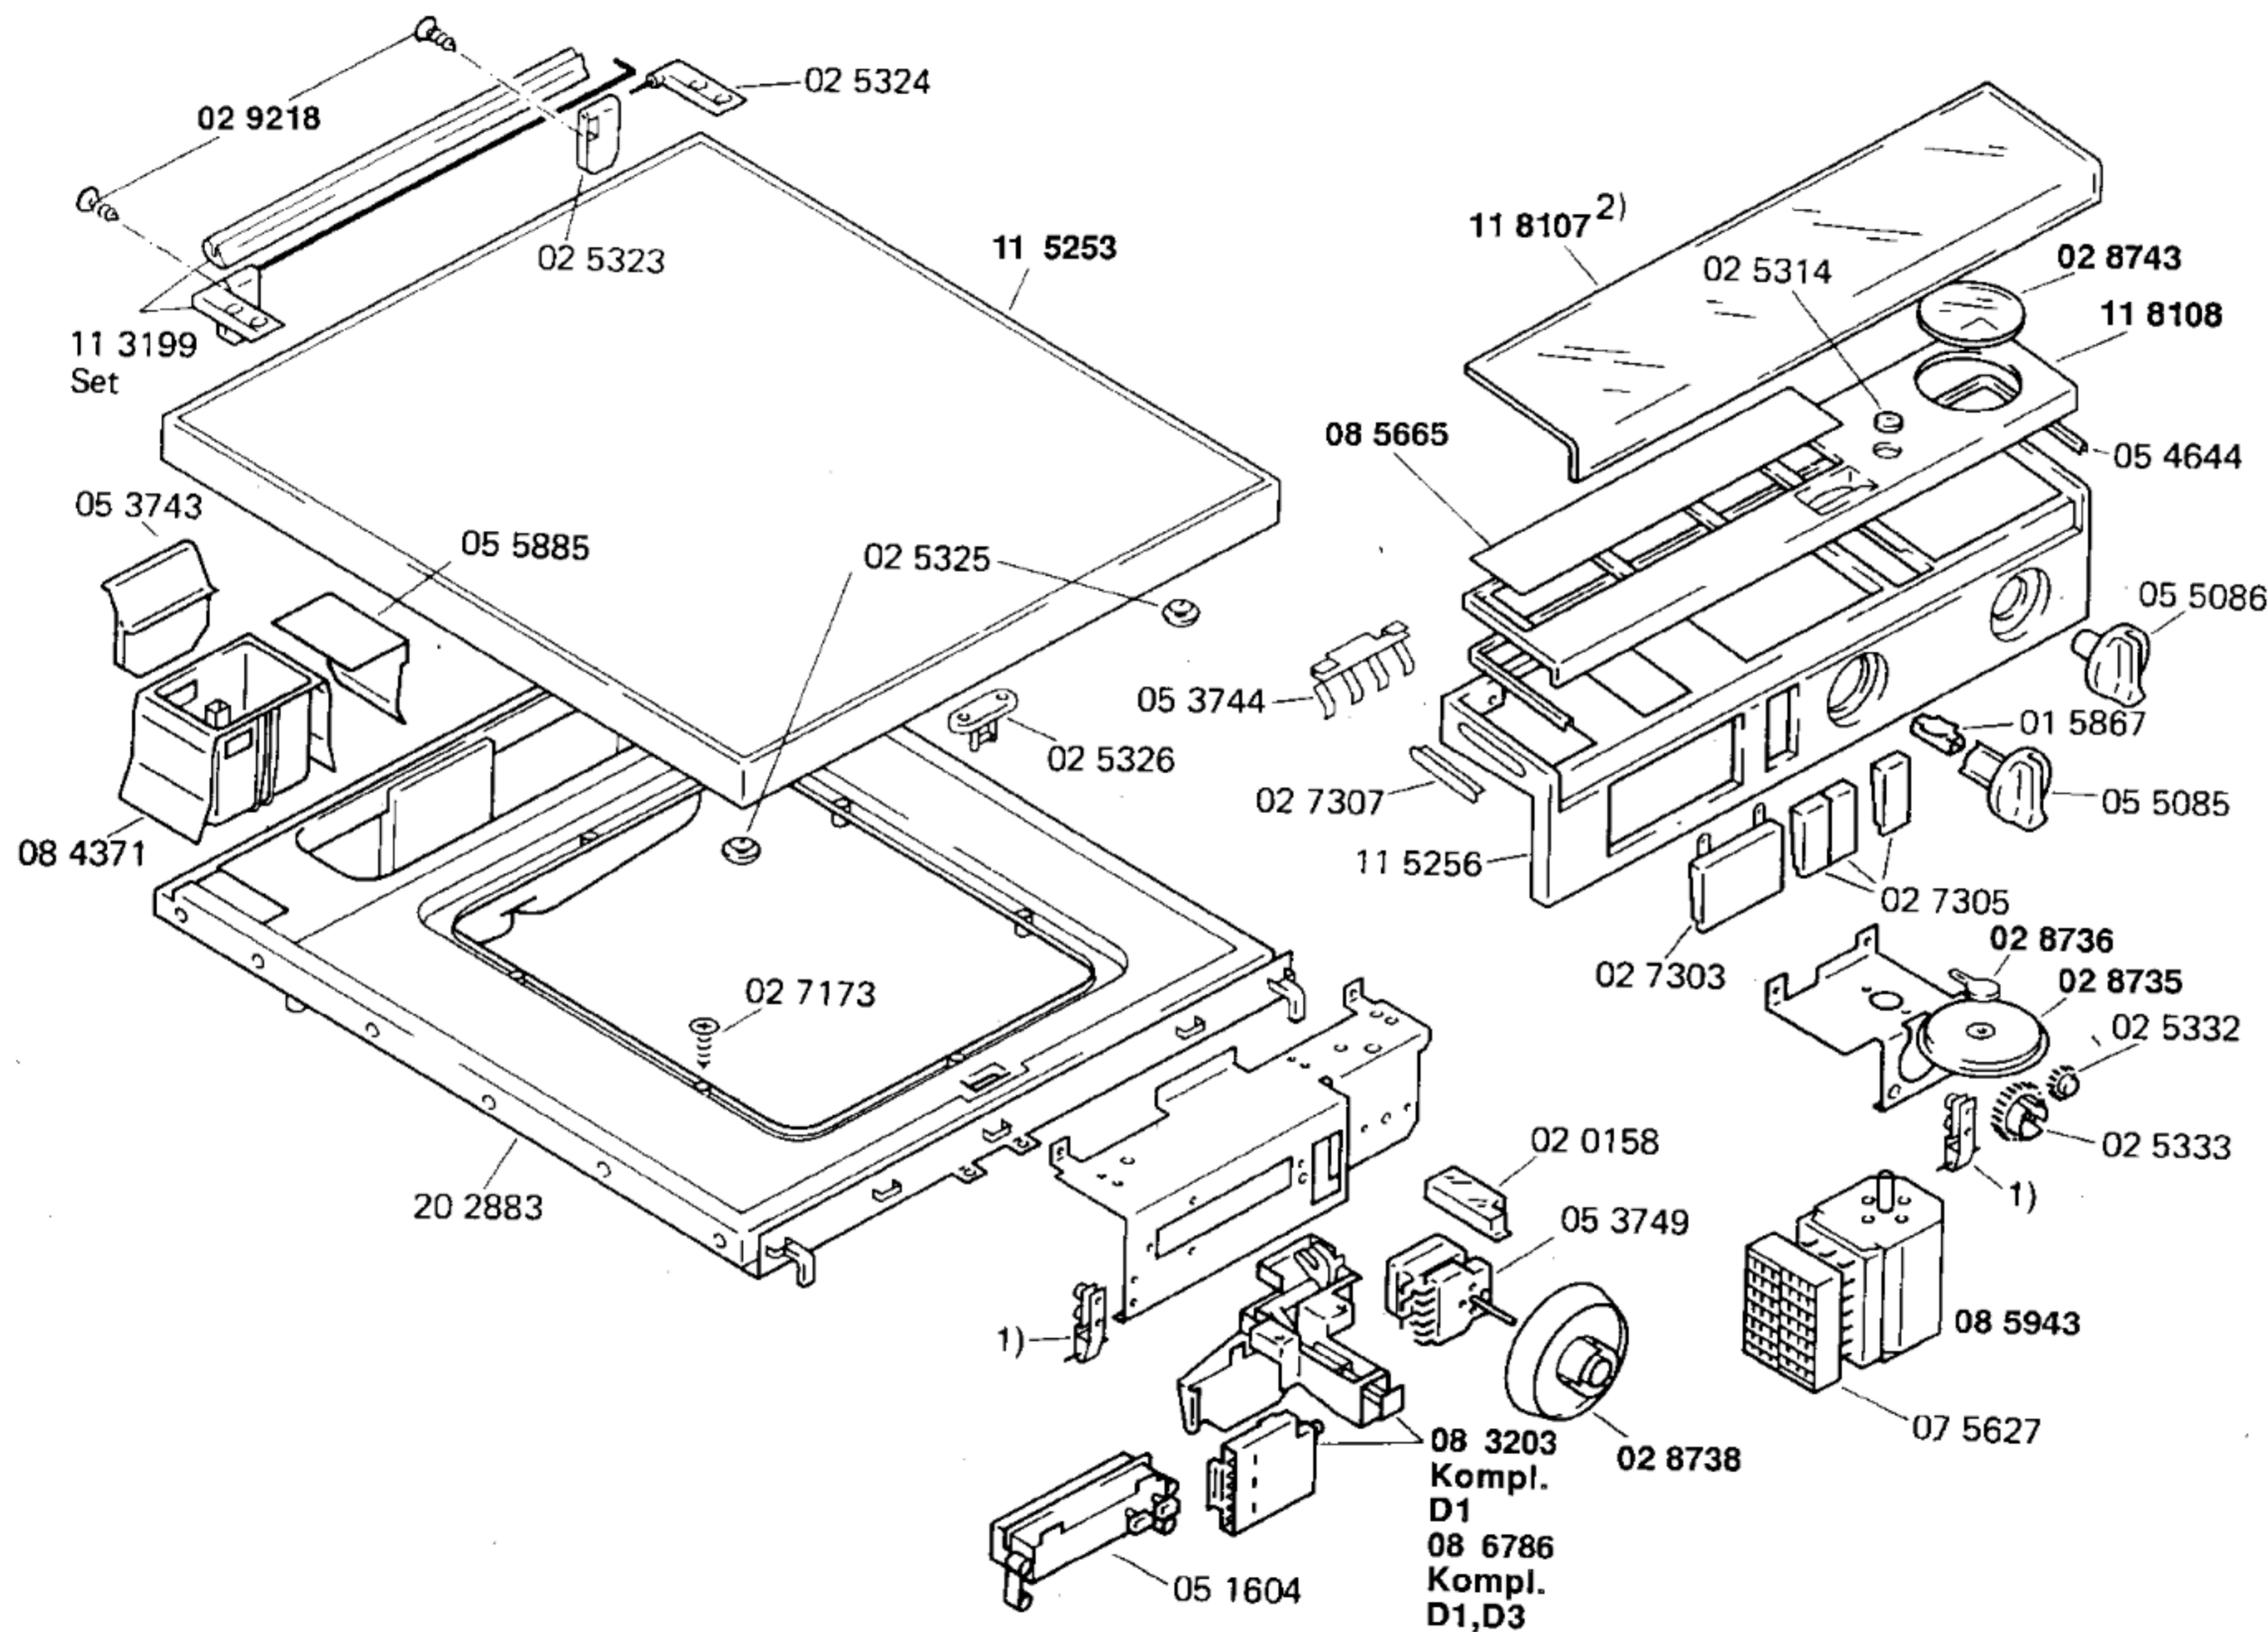

- 51 3182 Aufstellanweisung (D,GB,F,I,NL,E)
- 51 3303 Gebrauchsanweisung (D)
- 51 3302 Programmtabelle (D,I)

1) 02 5334  
 2) einschl. 05 4644




**BOSCH**



V3000-WMV3000/00-D1  
V3000-WMV3000/01-D2  
V3000-WMV3000/02-D3

WASCHGERÄTE  
Waschvollautomaten

Ident - Nummern - Konstante  
3740 . . . . .

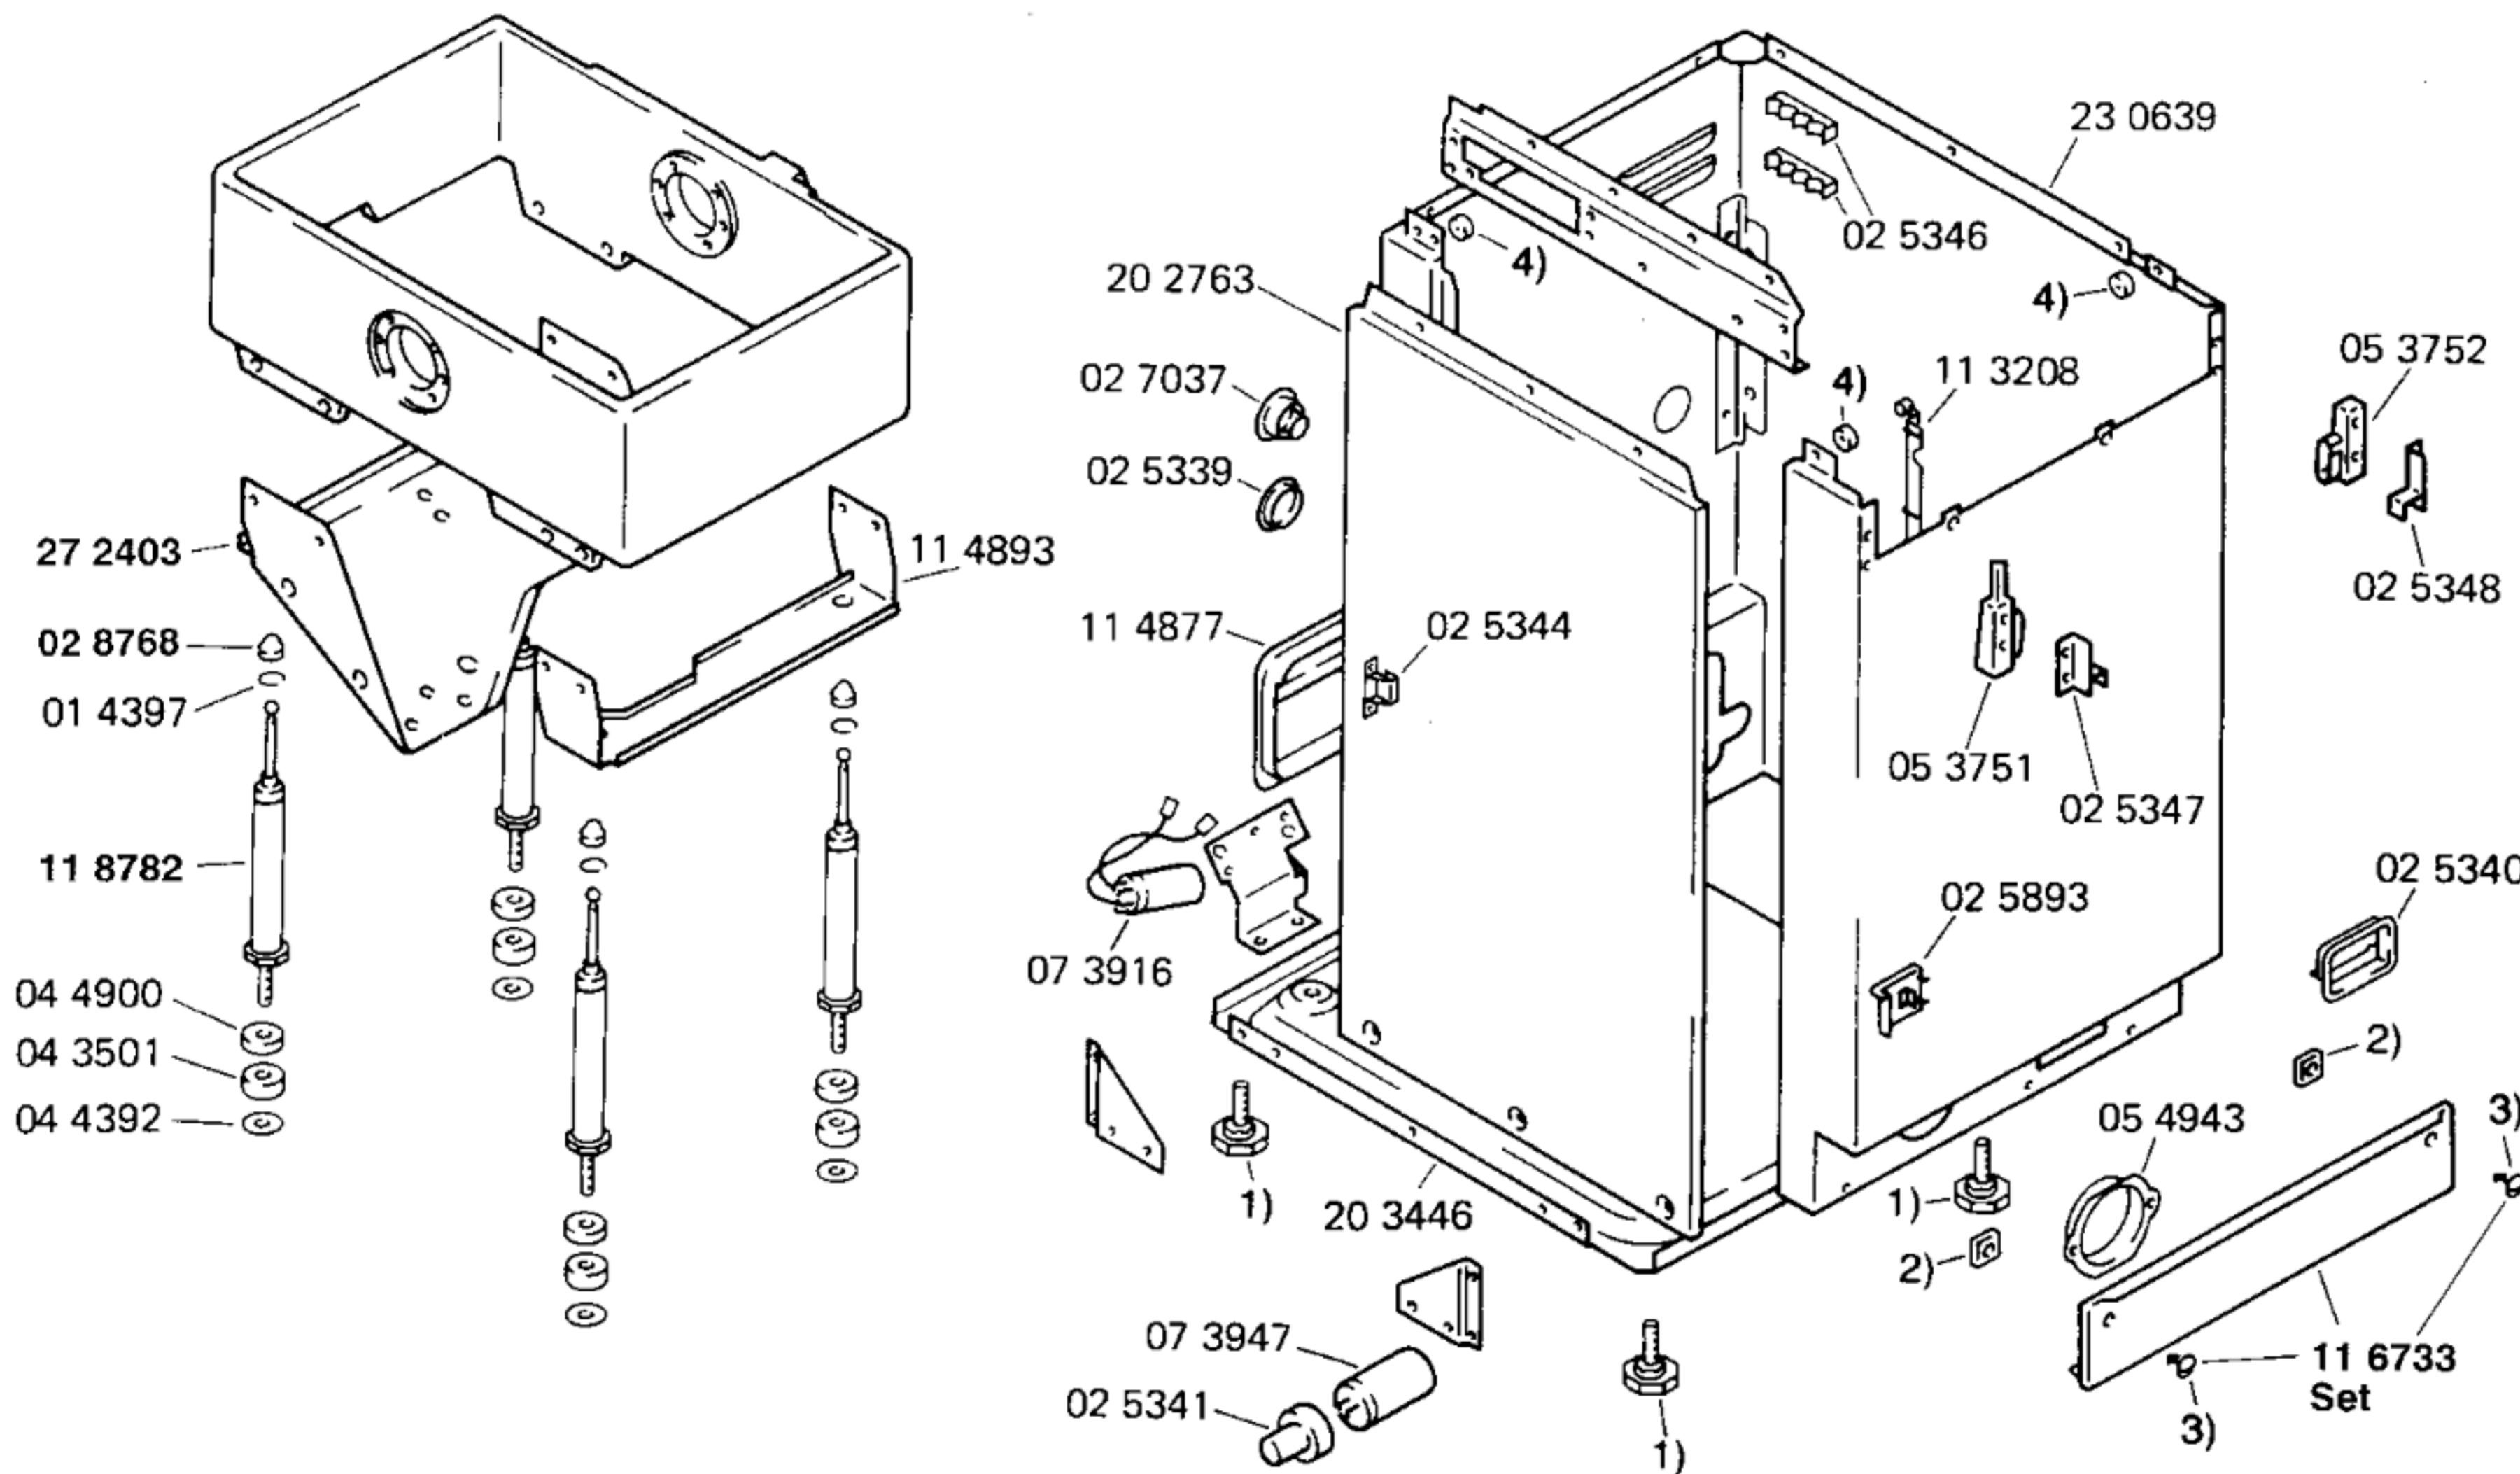

- 1) 04 5561
- 2) 01 4687
- 3) 02 8340
- 4) 02 5345

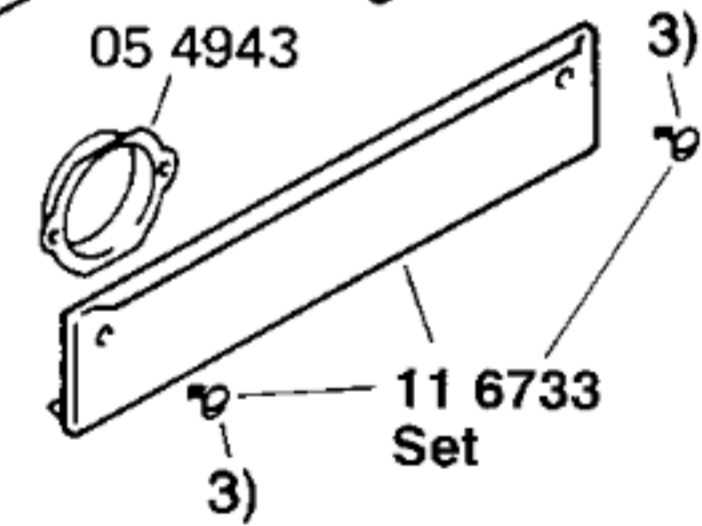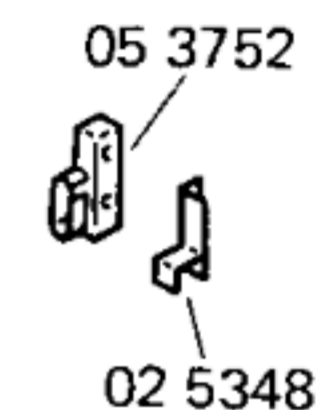




**BOSCH**

V3000-WMV3000/00-D1  
V3000-WMV3000/01-D2  
V3000-WMV3000/02-D3

WASCHGERÄTE  
Waschvollautomaten

Ident - Nummern - Konstante  
3740 . . . . .

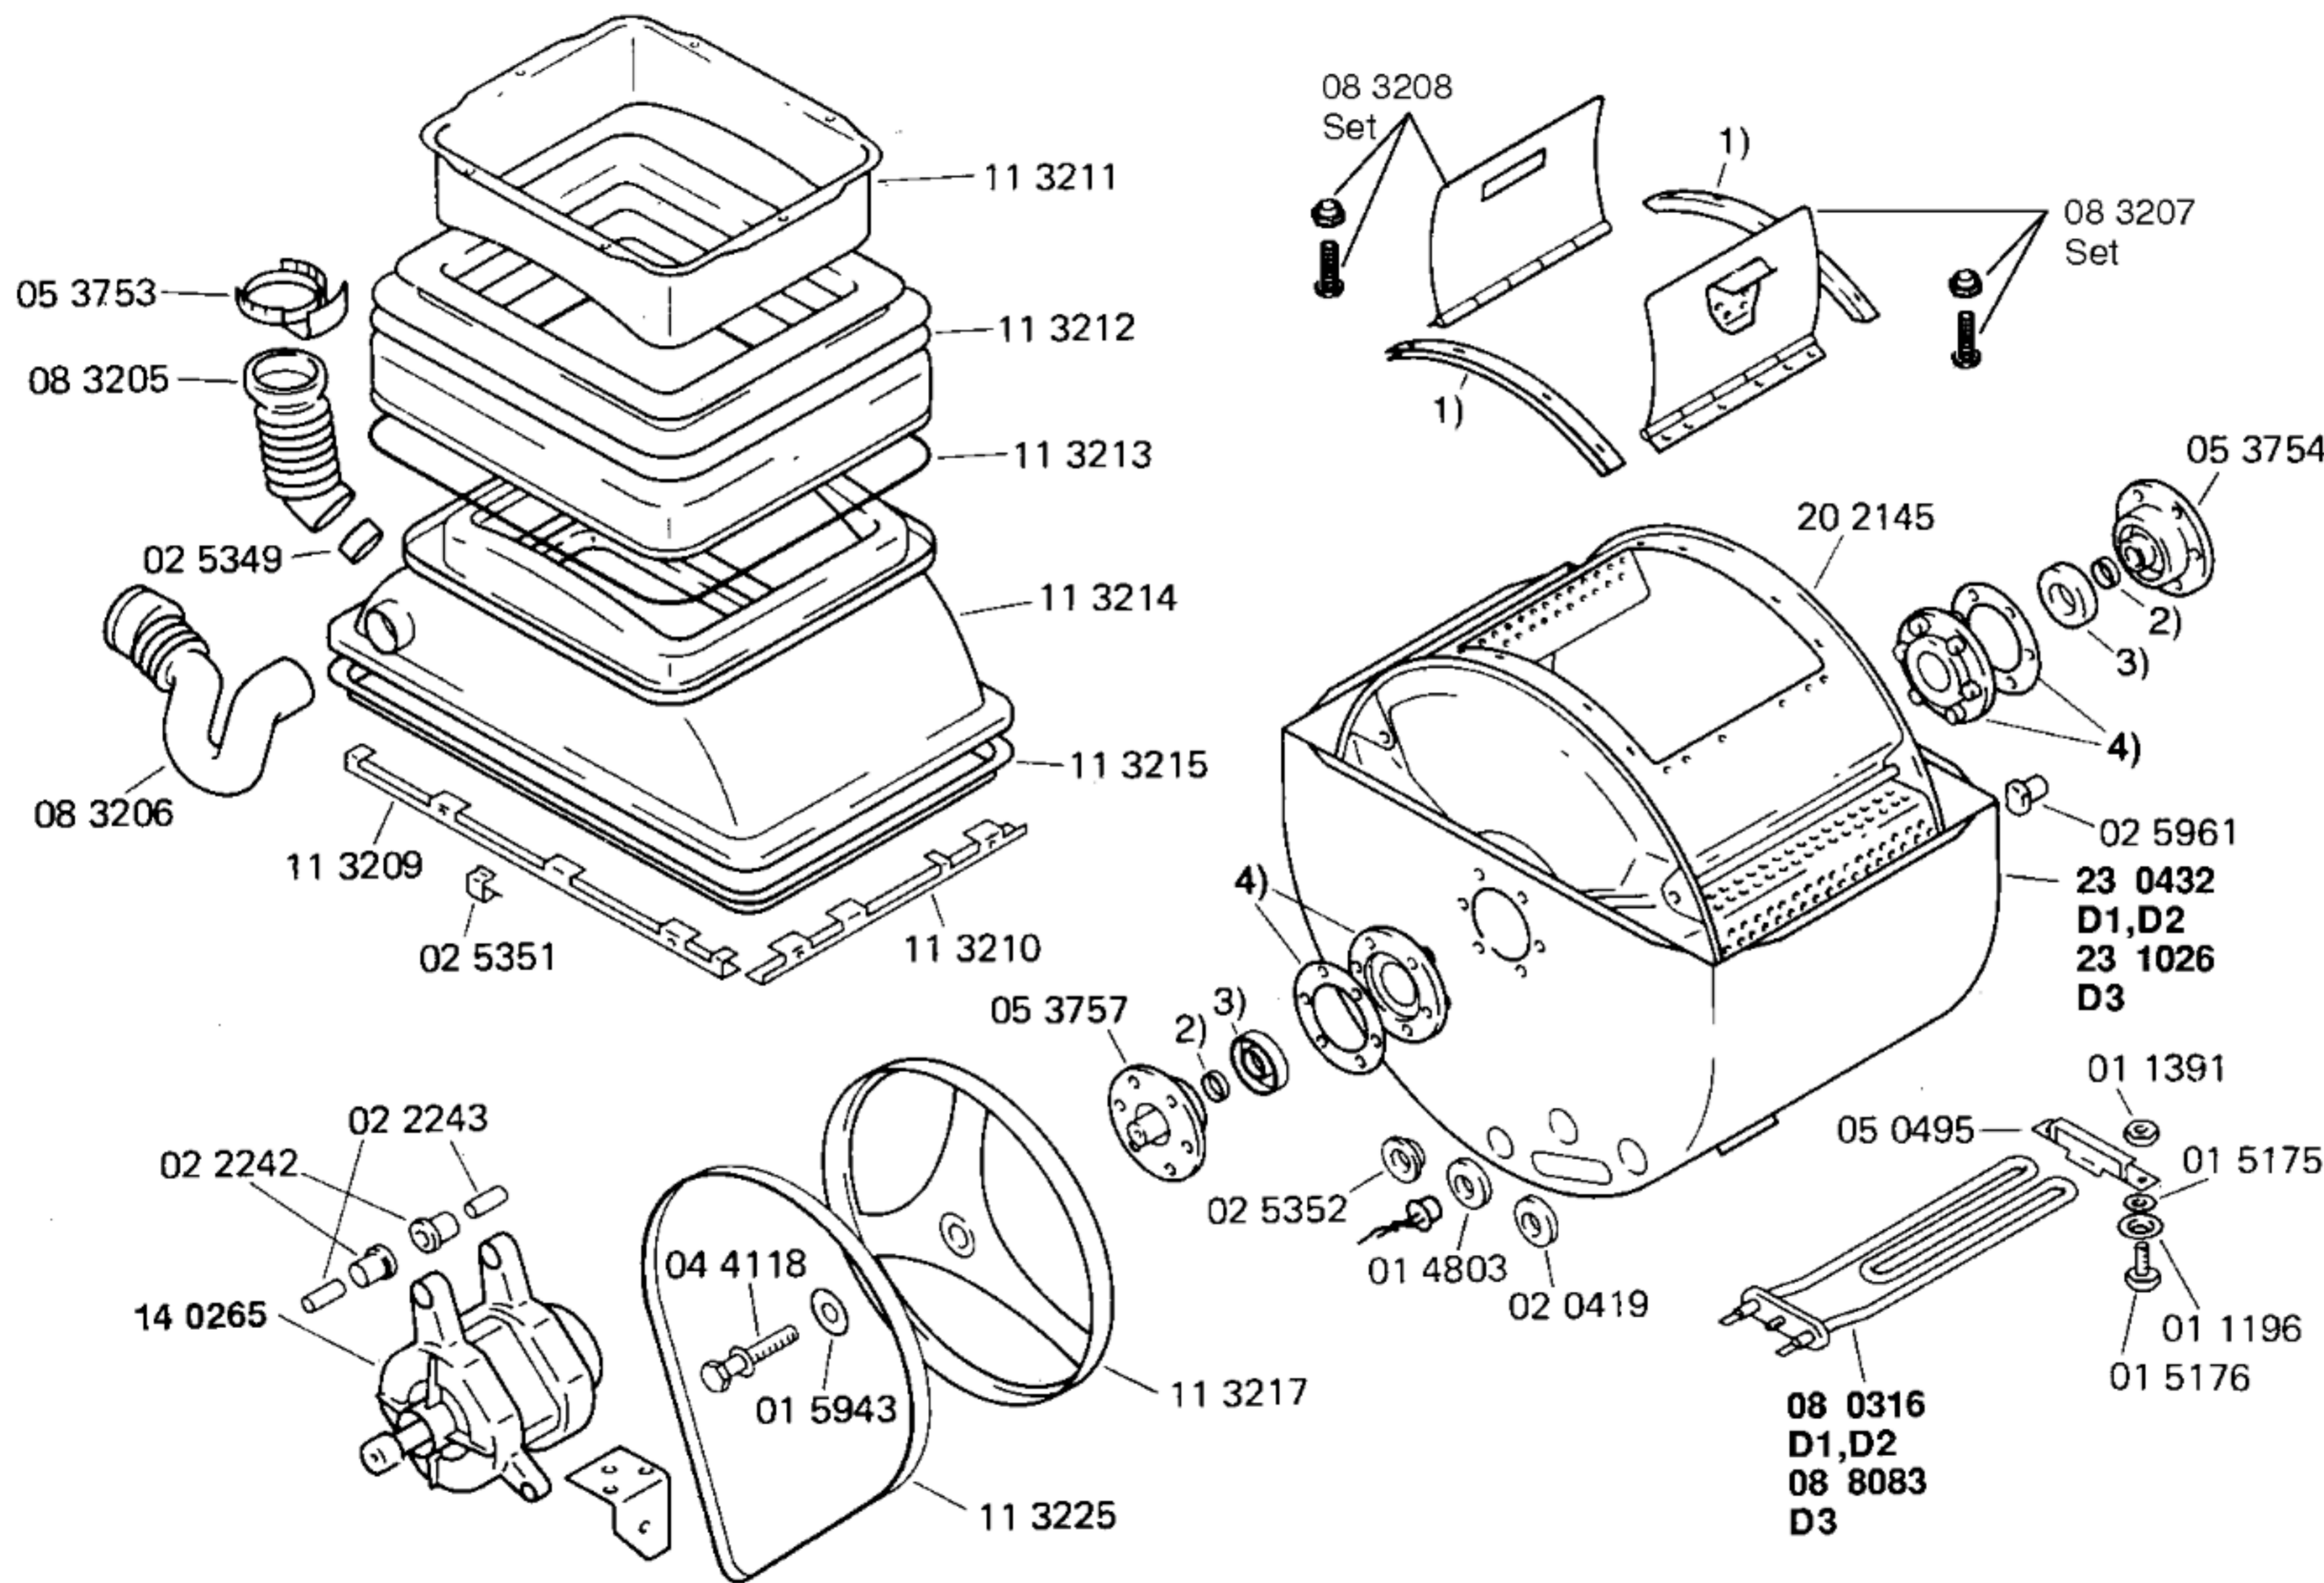

- 1) 11 3216
- 2) 04 2309
- 3) 02 5350
- 4) 05 7022



**BOSCH**

V3000-WMV3000/00-D1  
V3000-WMV3000/01-D2  
V3000-WMV3000/02-D3

WASCHGERÄTE  
Waschvollautomaten

Ident - Nummern - Konstante  
3740 . . . . .

