



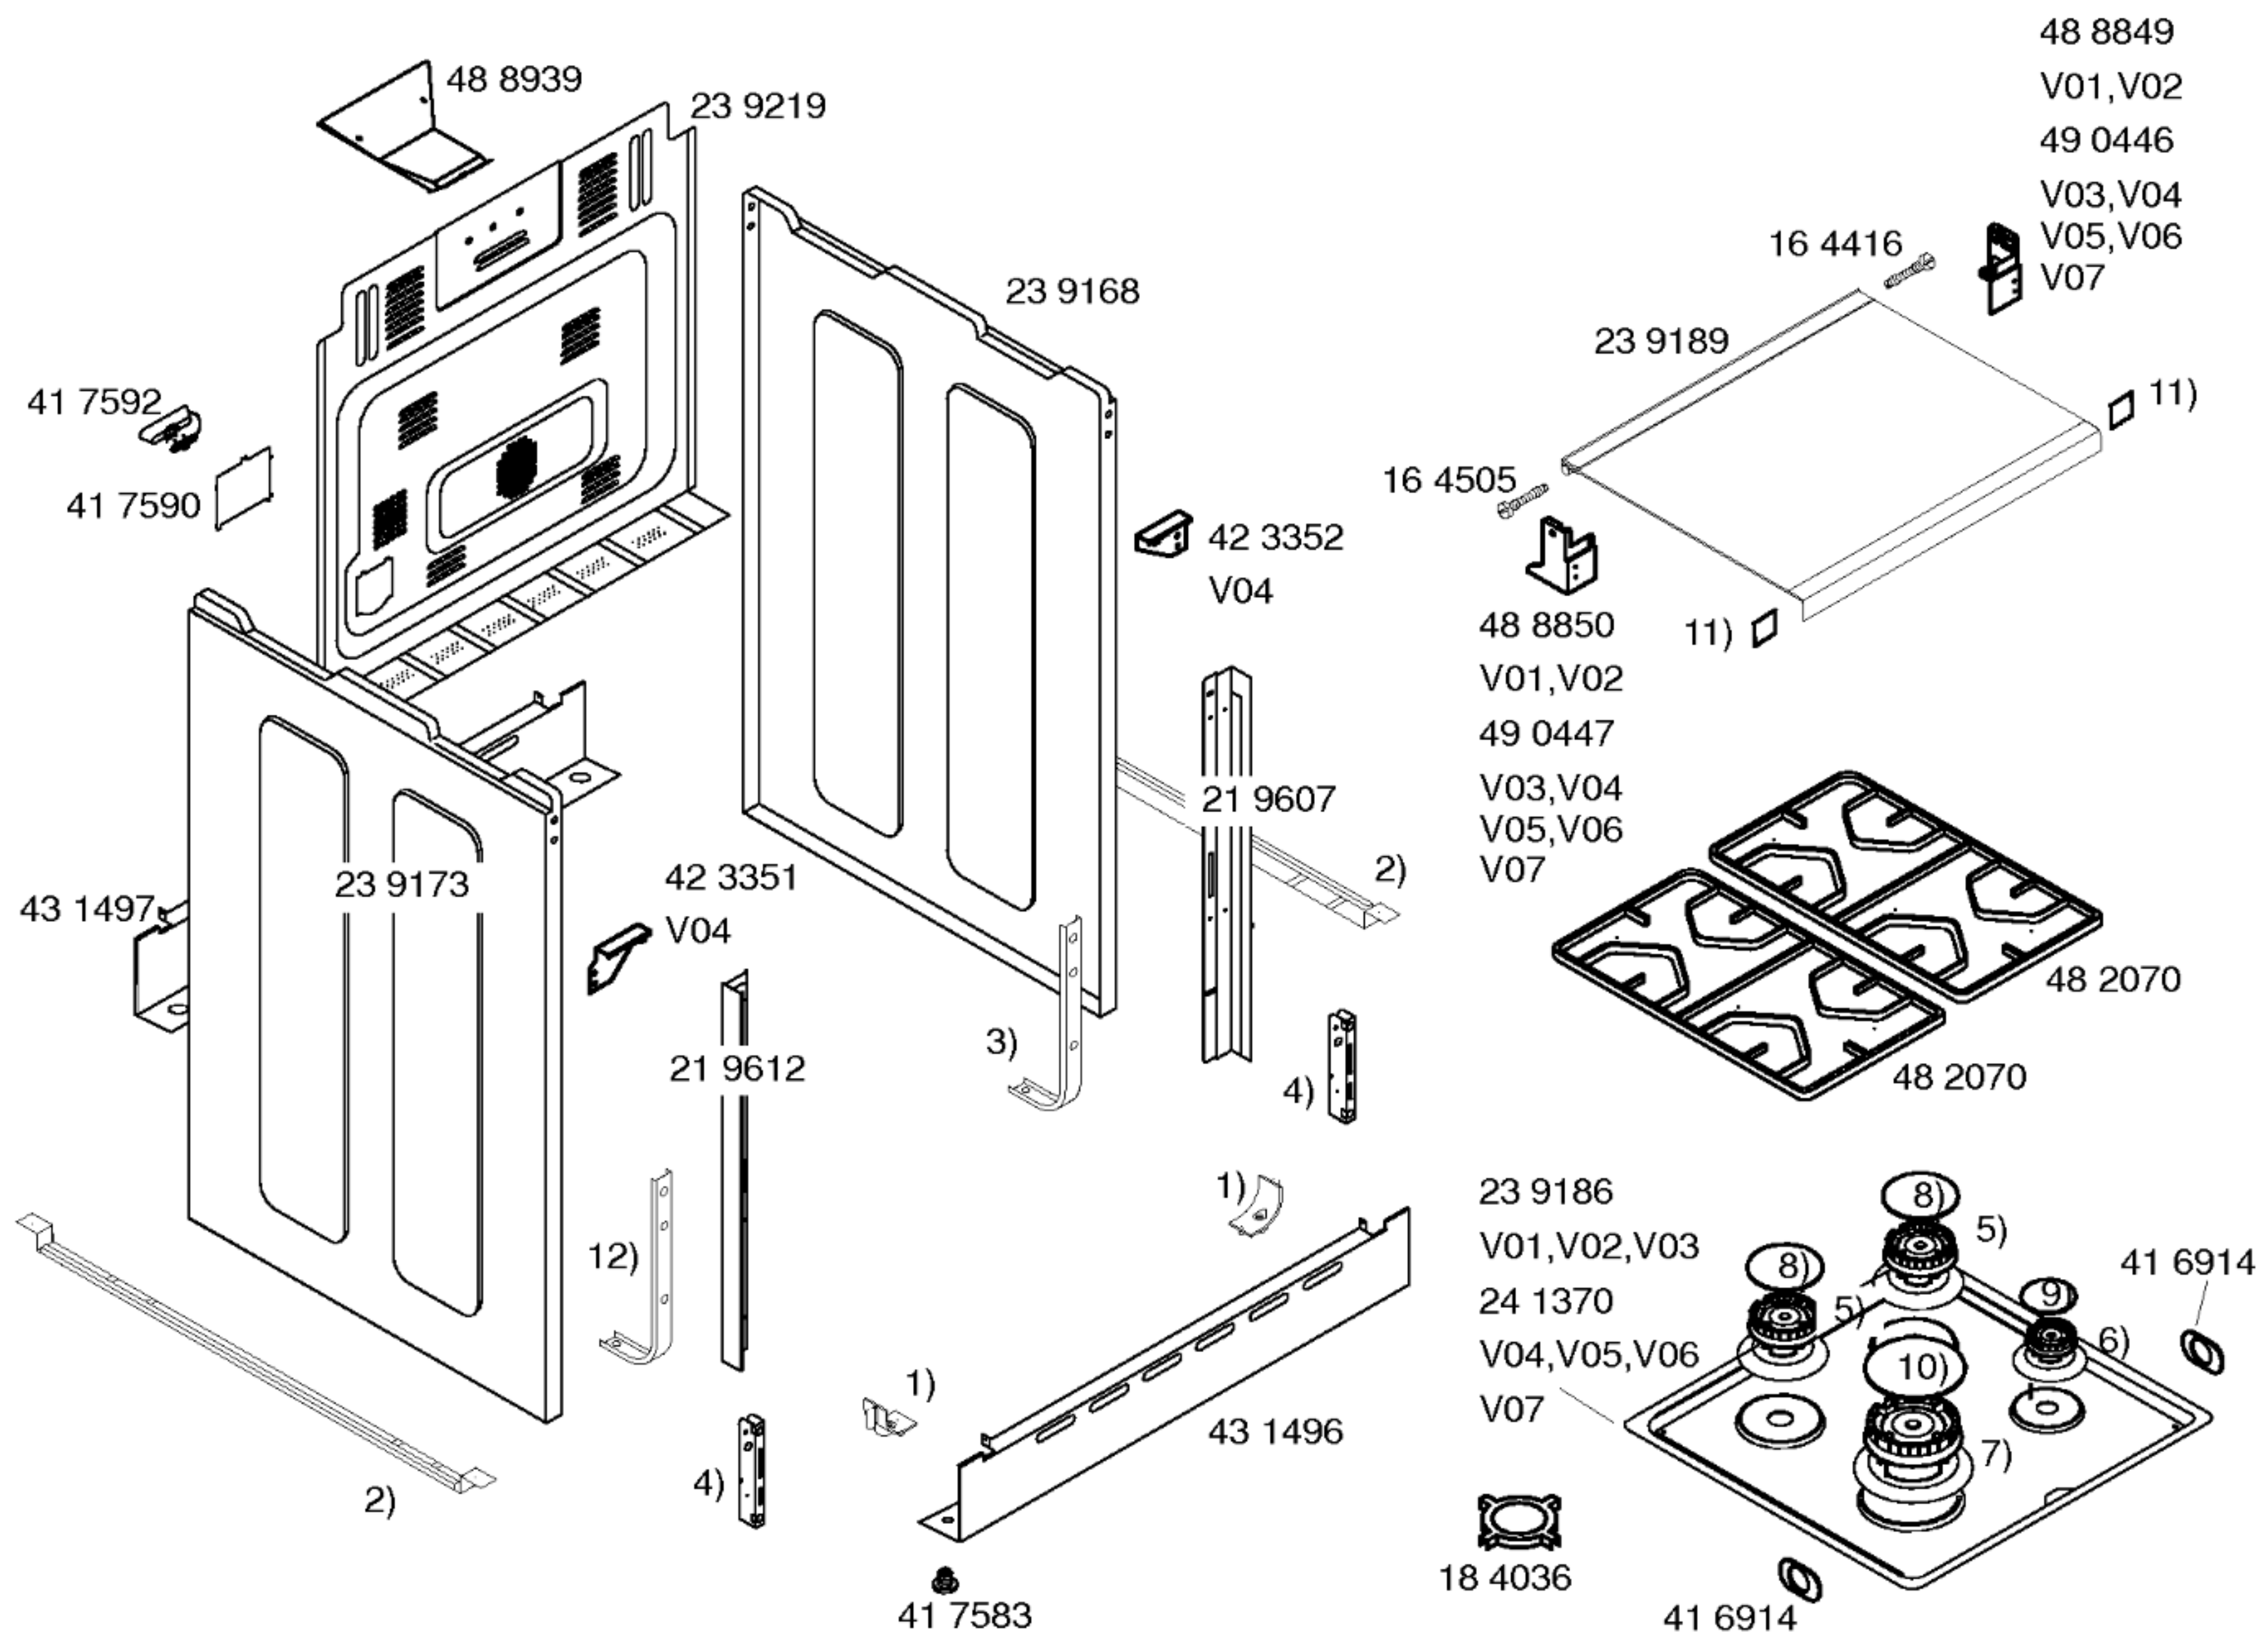


Gebrauchsanweisung
 58 3704
 V01
 58 5852
 V02,V03
 D,NL,FR
 Anleitung zur
 Gasarten-Umstellung
 58 3578


- 1) 41 7587
- 2) 43 1499
- 3) 43 1502
- 4) 41 7579
- 5) 26 7357
- 6) 26 7359
- 7) 26 7356
- 8) 18 4404
- V01
 41 8694
 V02,V03,V04,V05
 V06,V07
- 9) 18 4406
 V01
 41 8696
 V02,V03,V04,V05
 V06,V07
- 10) 18 4408
 V01
 41 8881
 V02,V03,V04,V05
 V06,V07
- 11) 18 4302
- 12) 43 1503


- 1) 41 7878
 2) 18 8166

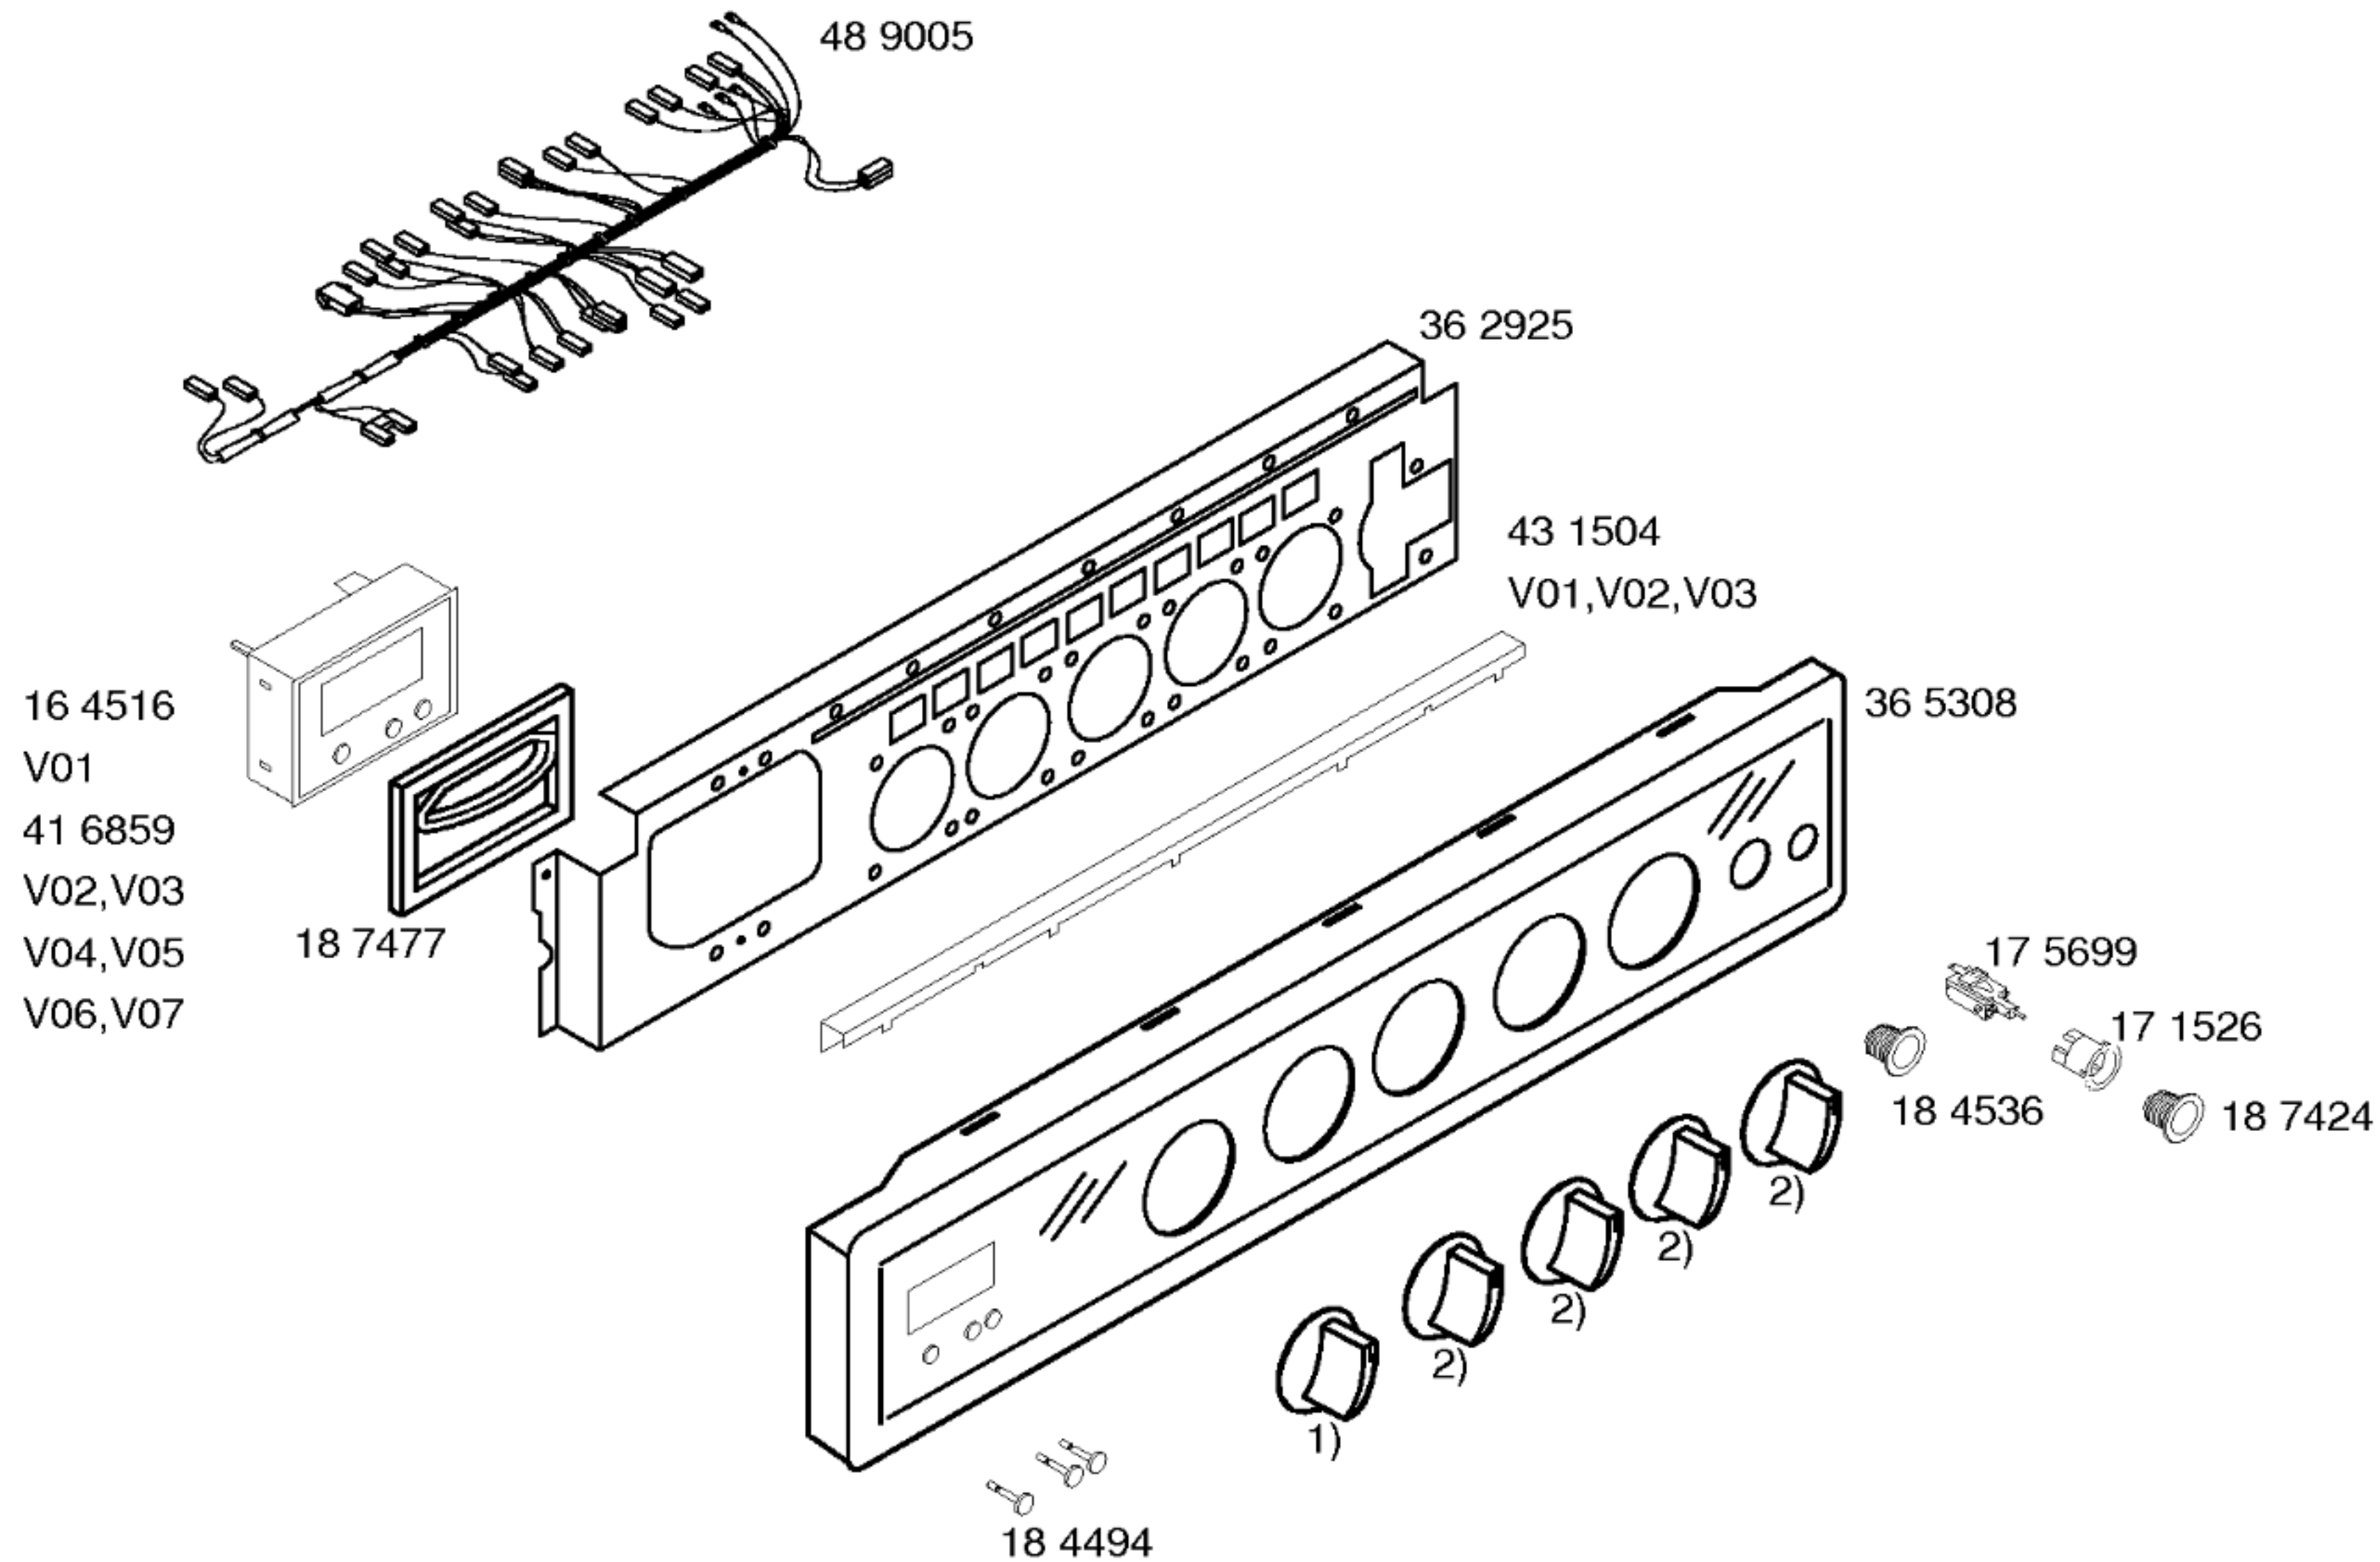

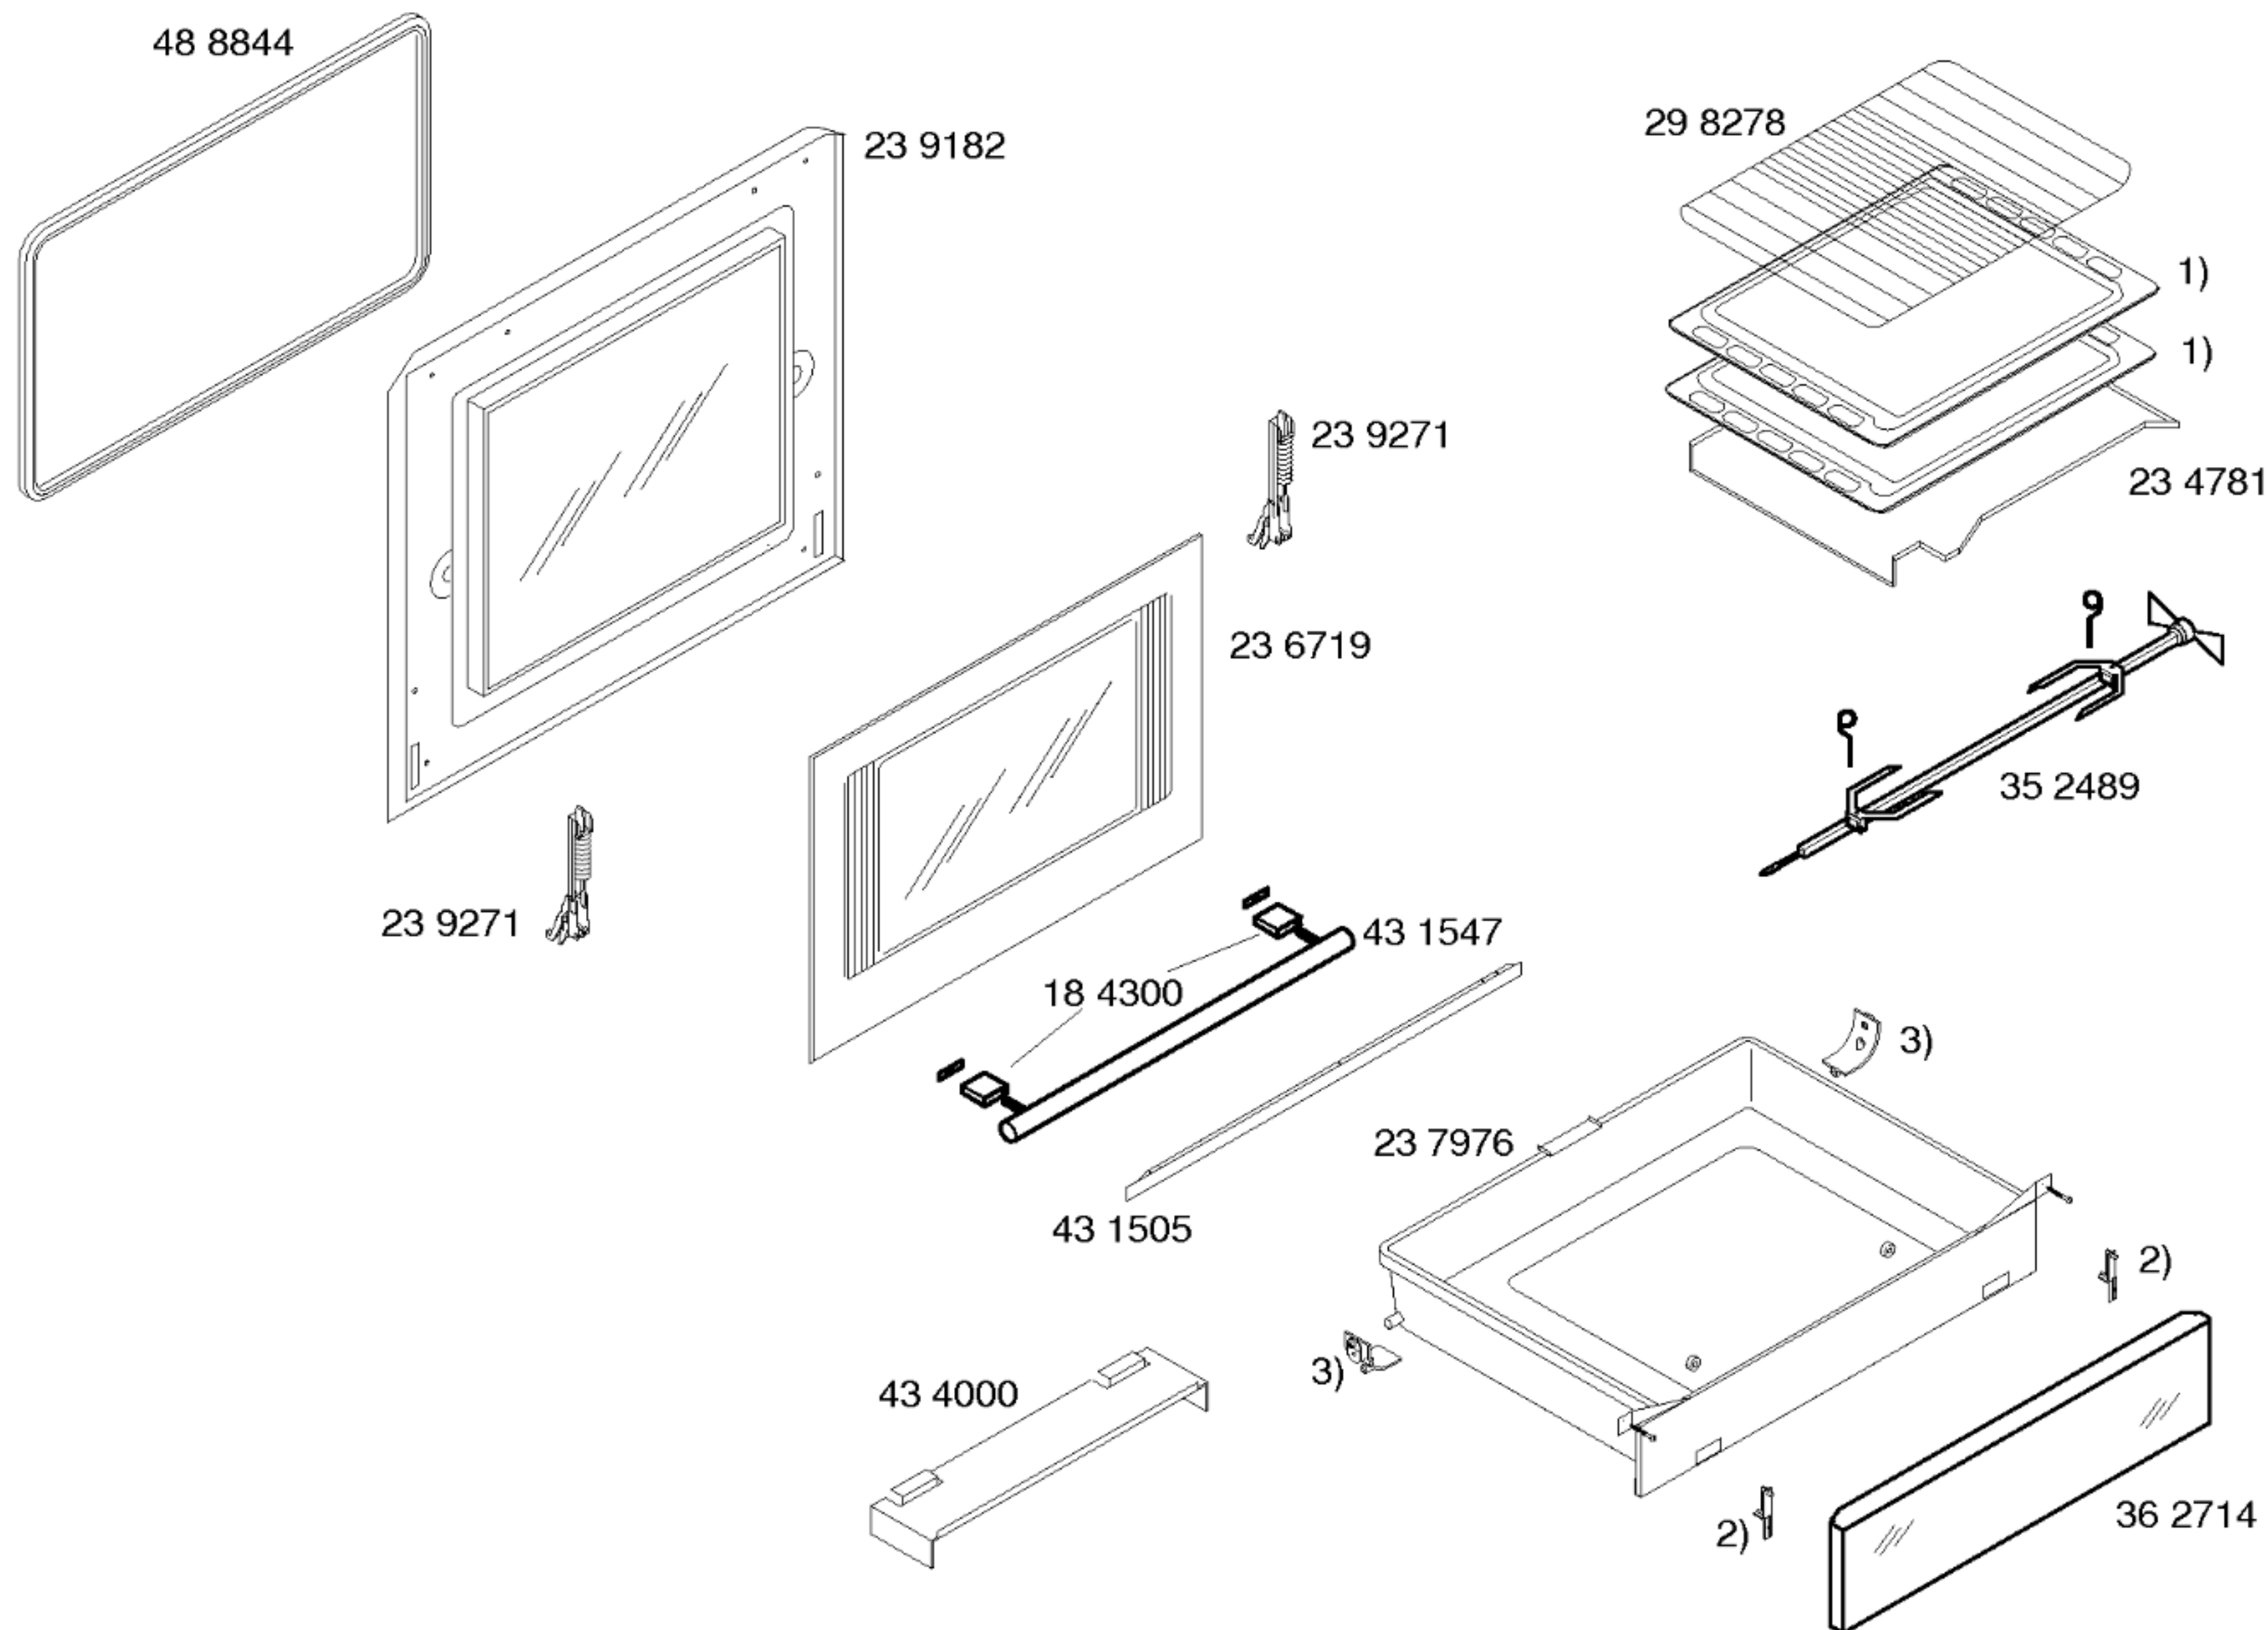

- 1) 35 3489
- 2) 41 7588
- 3) 41 7587

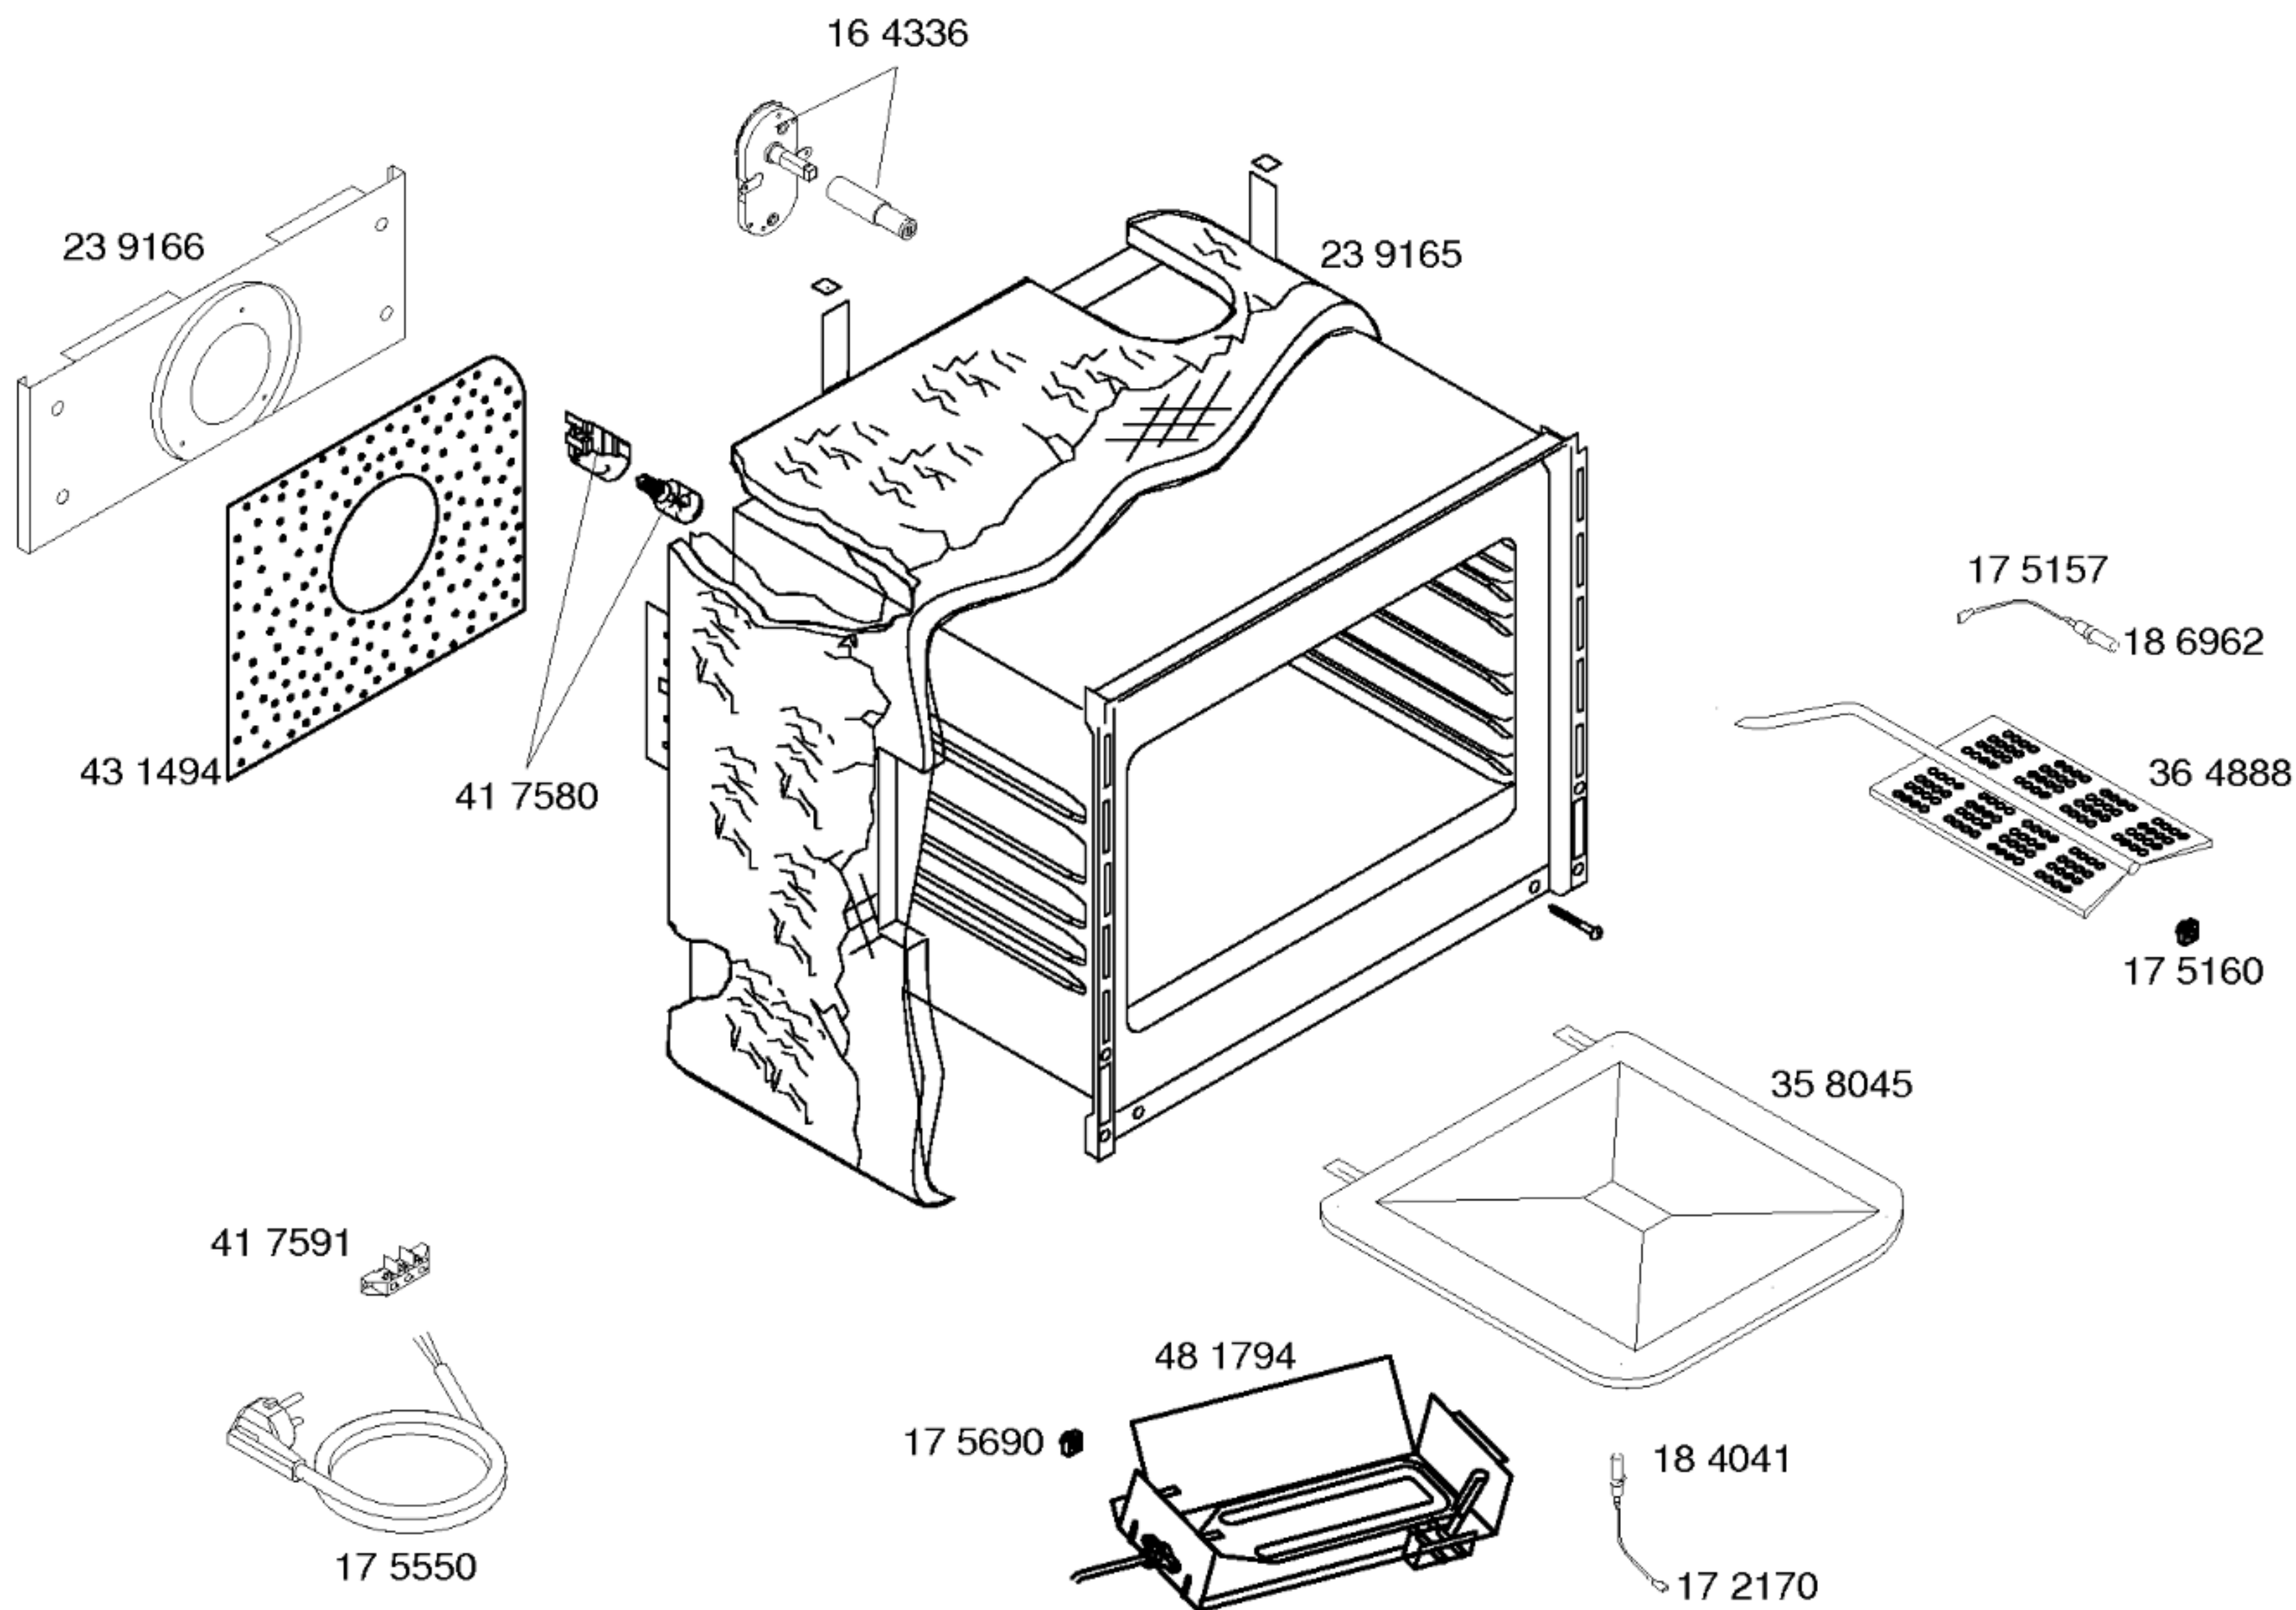

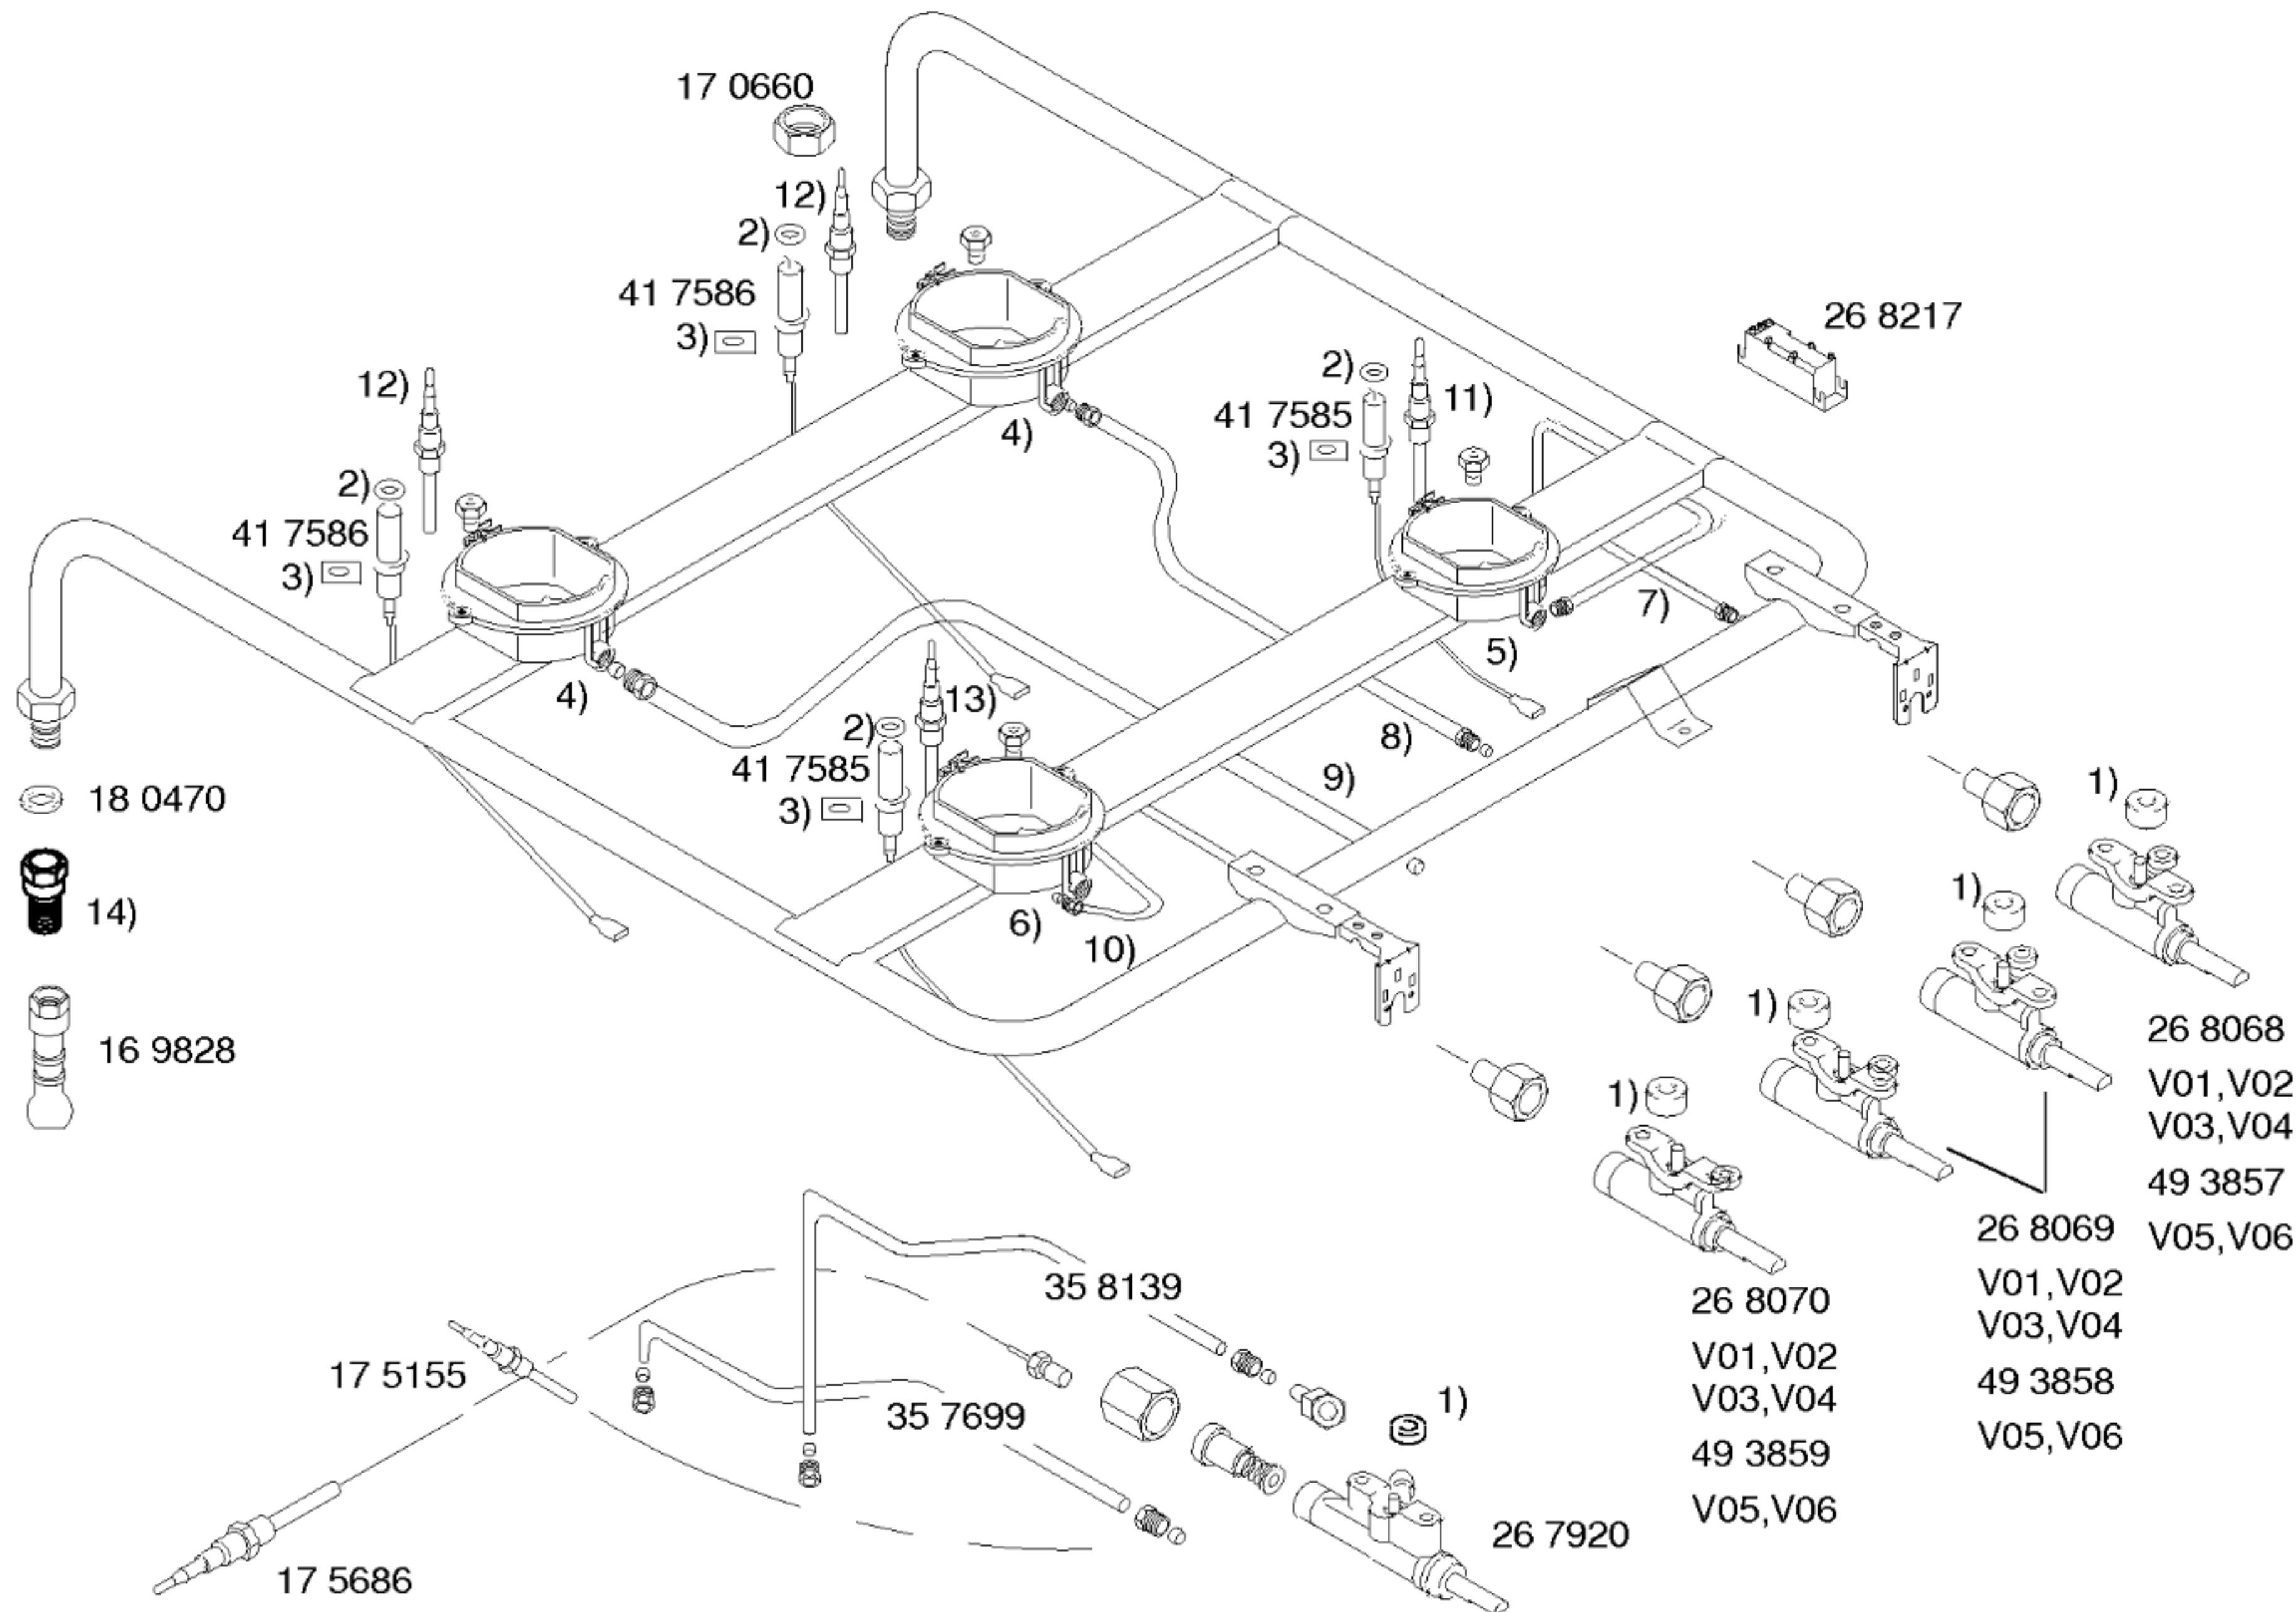

- 1) 16 9339
- 2) 17 3894
- 3) 17 3895
- 4) 26 7950
- 5) 26 7951
- 6) 26 7949
- 7) 35 8189
- 8) 35 8190
- 9) 35 8188
- 10) 35 8187
- 11) 17 5430

- 12) 17 5431
- 13) 17 5432

- 14) 18 1018-ISO8

Konisch

41 8147-ISO228

Parallel

Duesensatz Für:
 EG H/E G20 20mbar
 17 5536

FG G30/31 30mbar
 17 5537

EG H/E G20 20mbar
 (inkl.Bypassdusen)
 41 7596

FG G30/31 30mbar
 (inkl.Bypassdusen)
 41 7840