


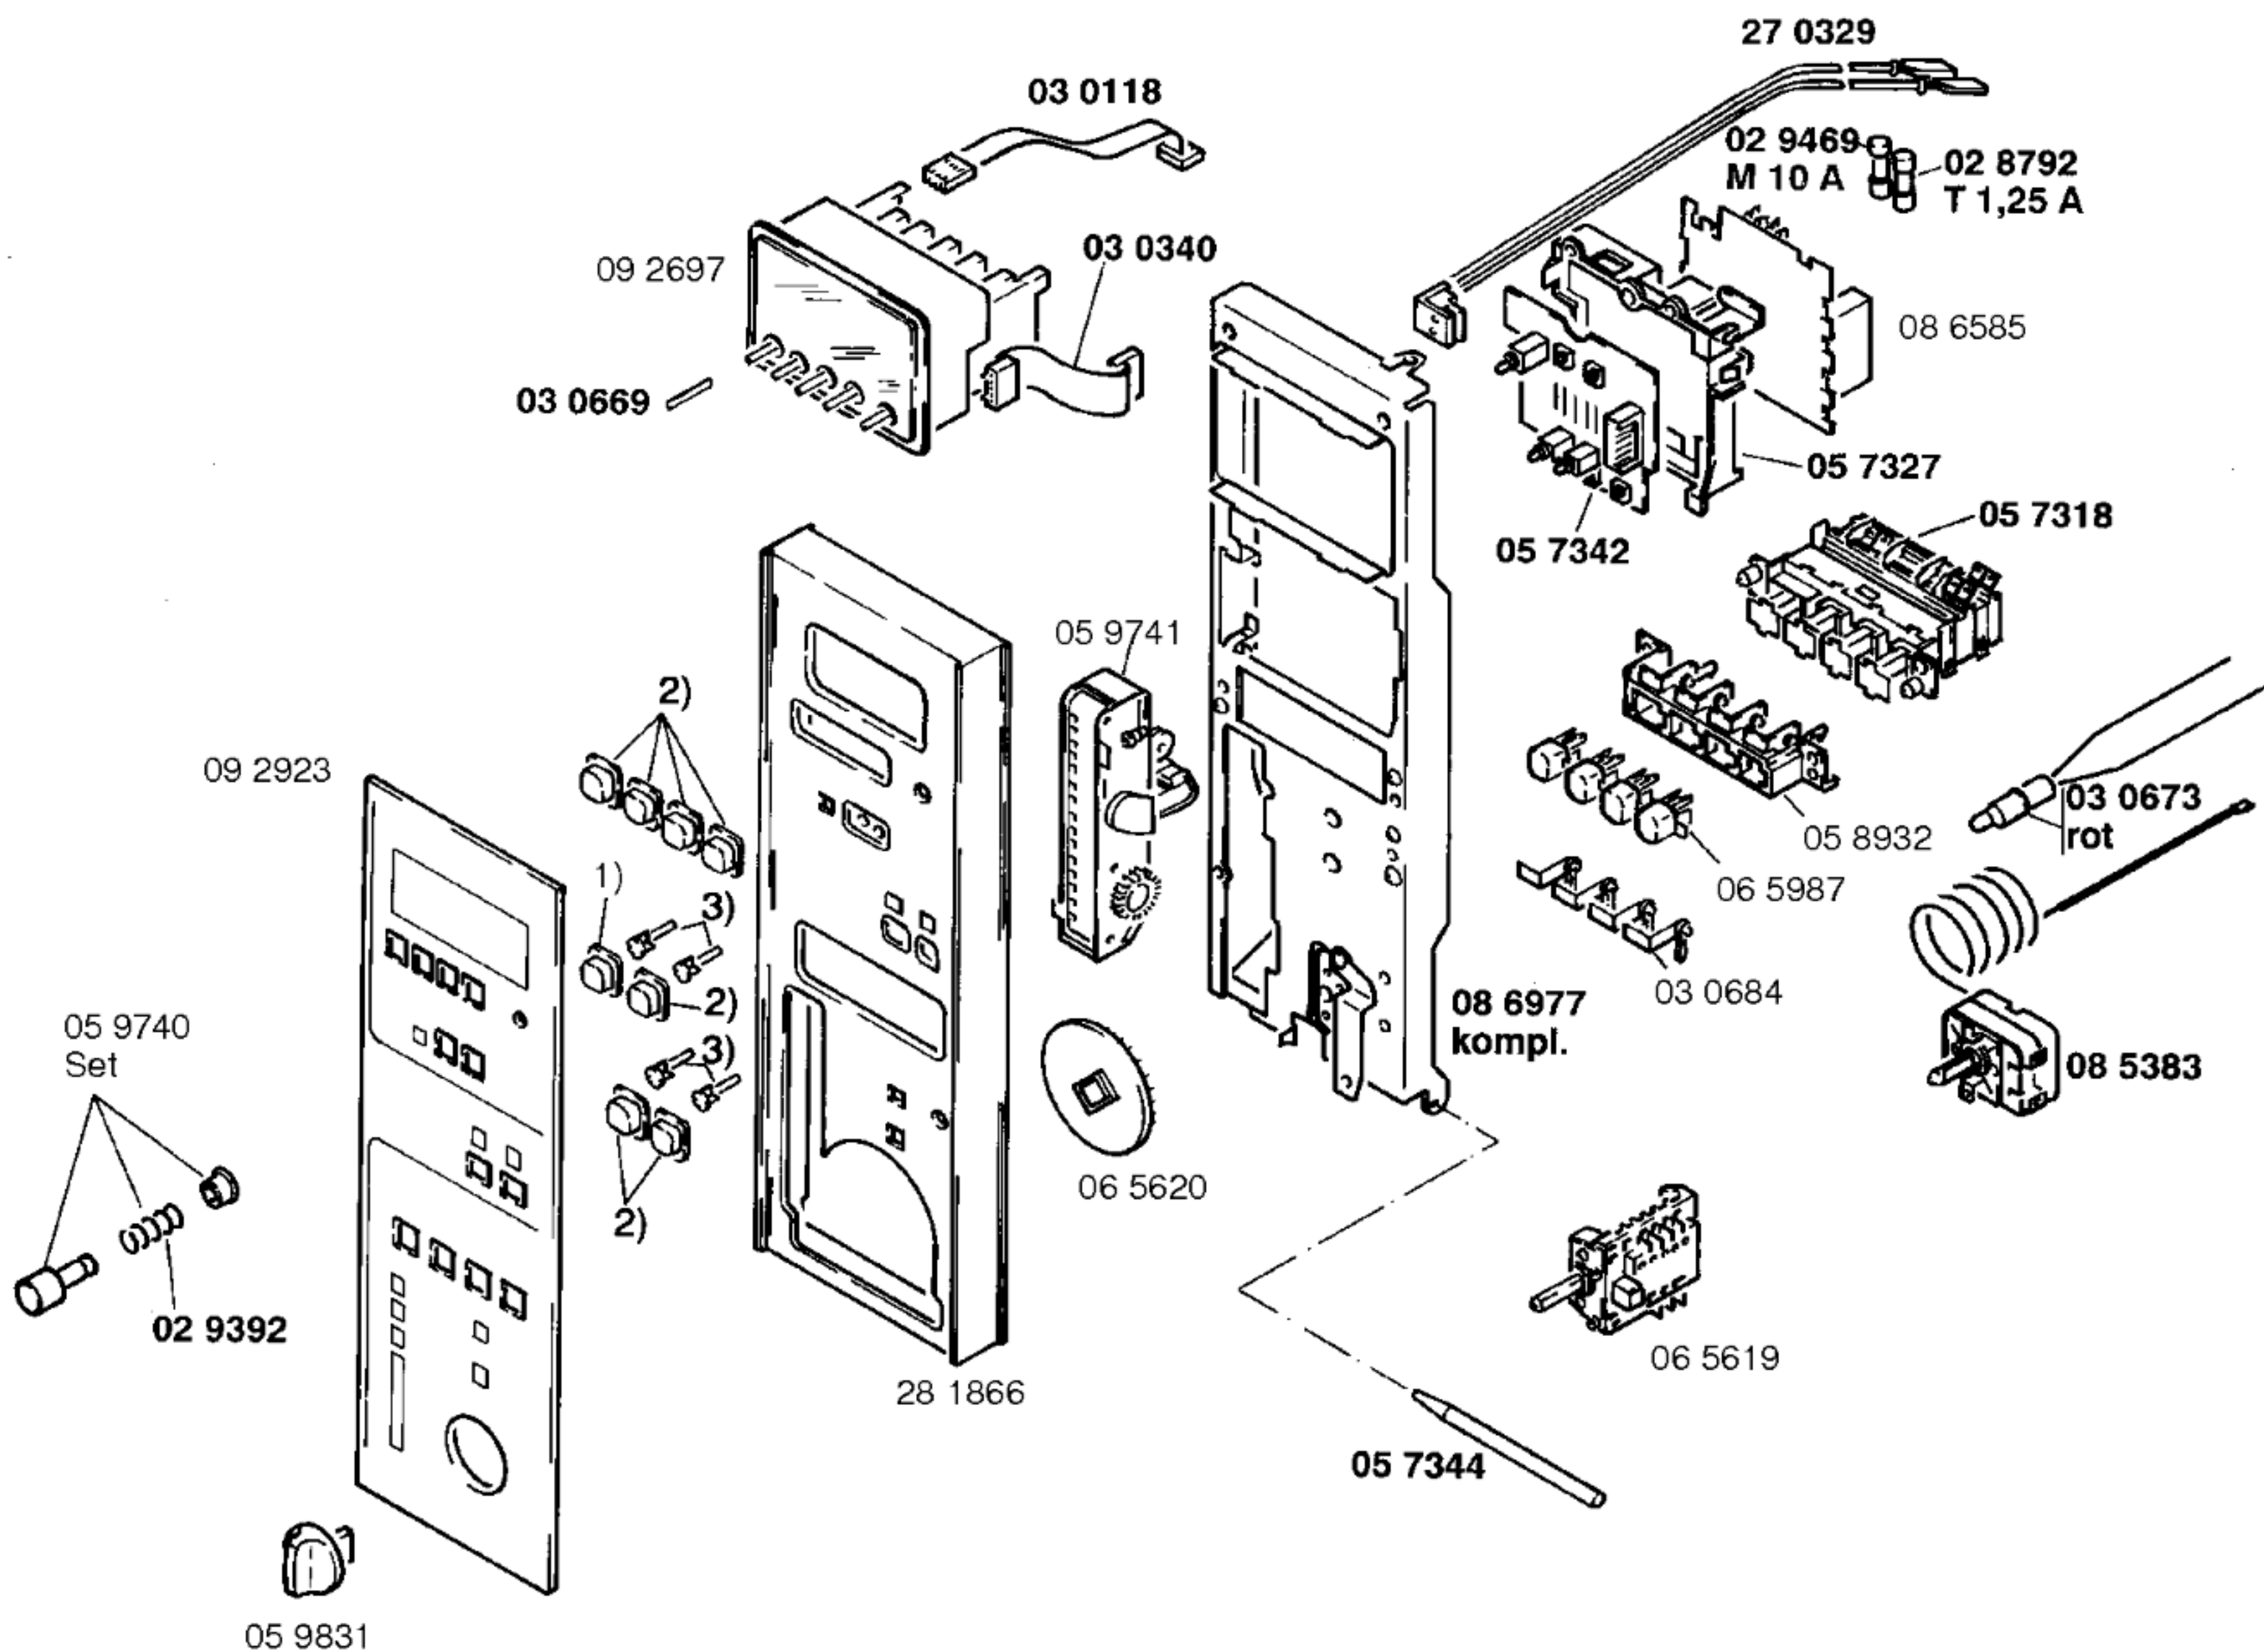

Gebrauchsanweisung
51 5864
(D,GB,F,I,NL)


Kochbuch
51 5729
(D)
51 5849
(NL)

Kurzanweisung
51 6004
(D)


Zubehör:

Einbaurahmen
HZ 67060
Alu-Backblech
HZ 8055
Glaspfanne
HZ 8056
Glasbräter
HZ 9150

1) 03 0681
2) 05 9834
3) 03 0679

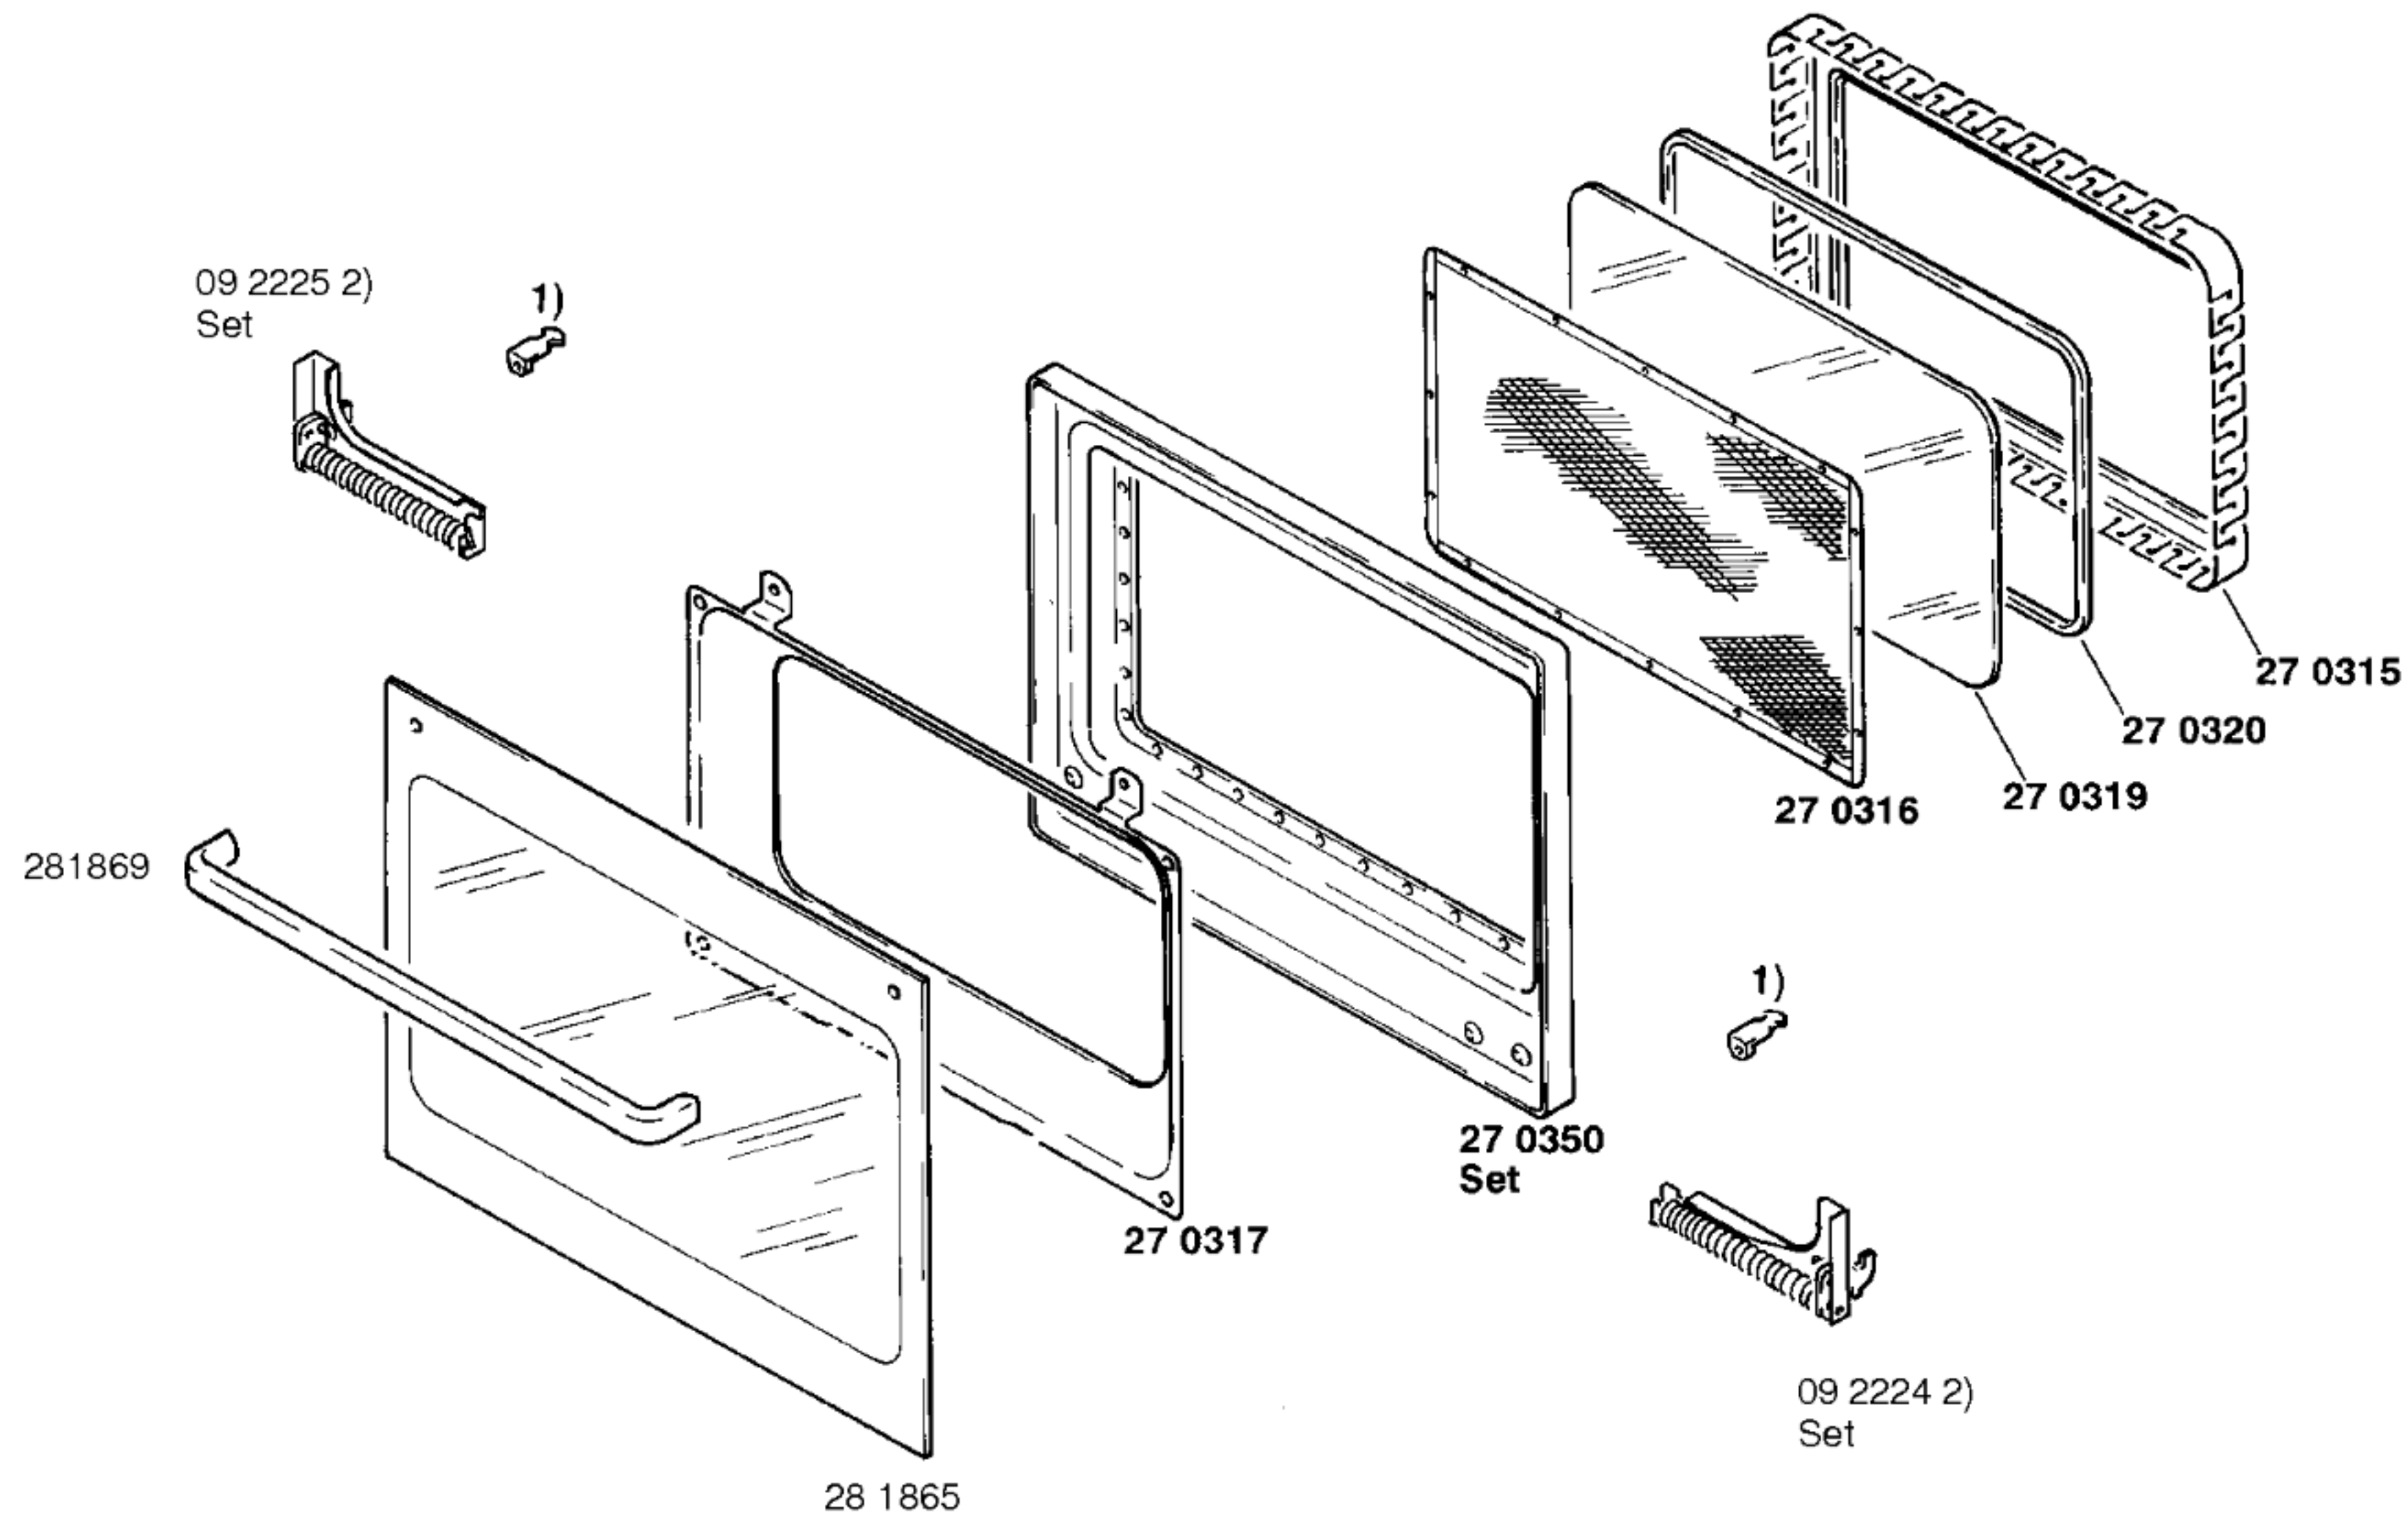


- 1) 03 0671
- 2) 03 0813
- Arretierstift

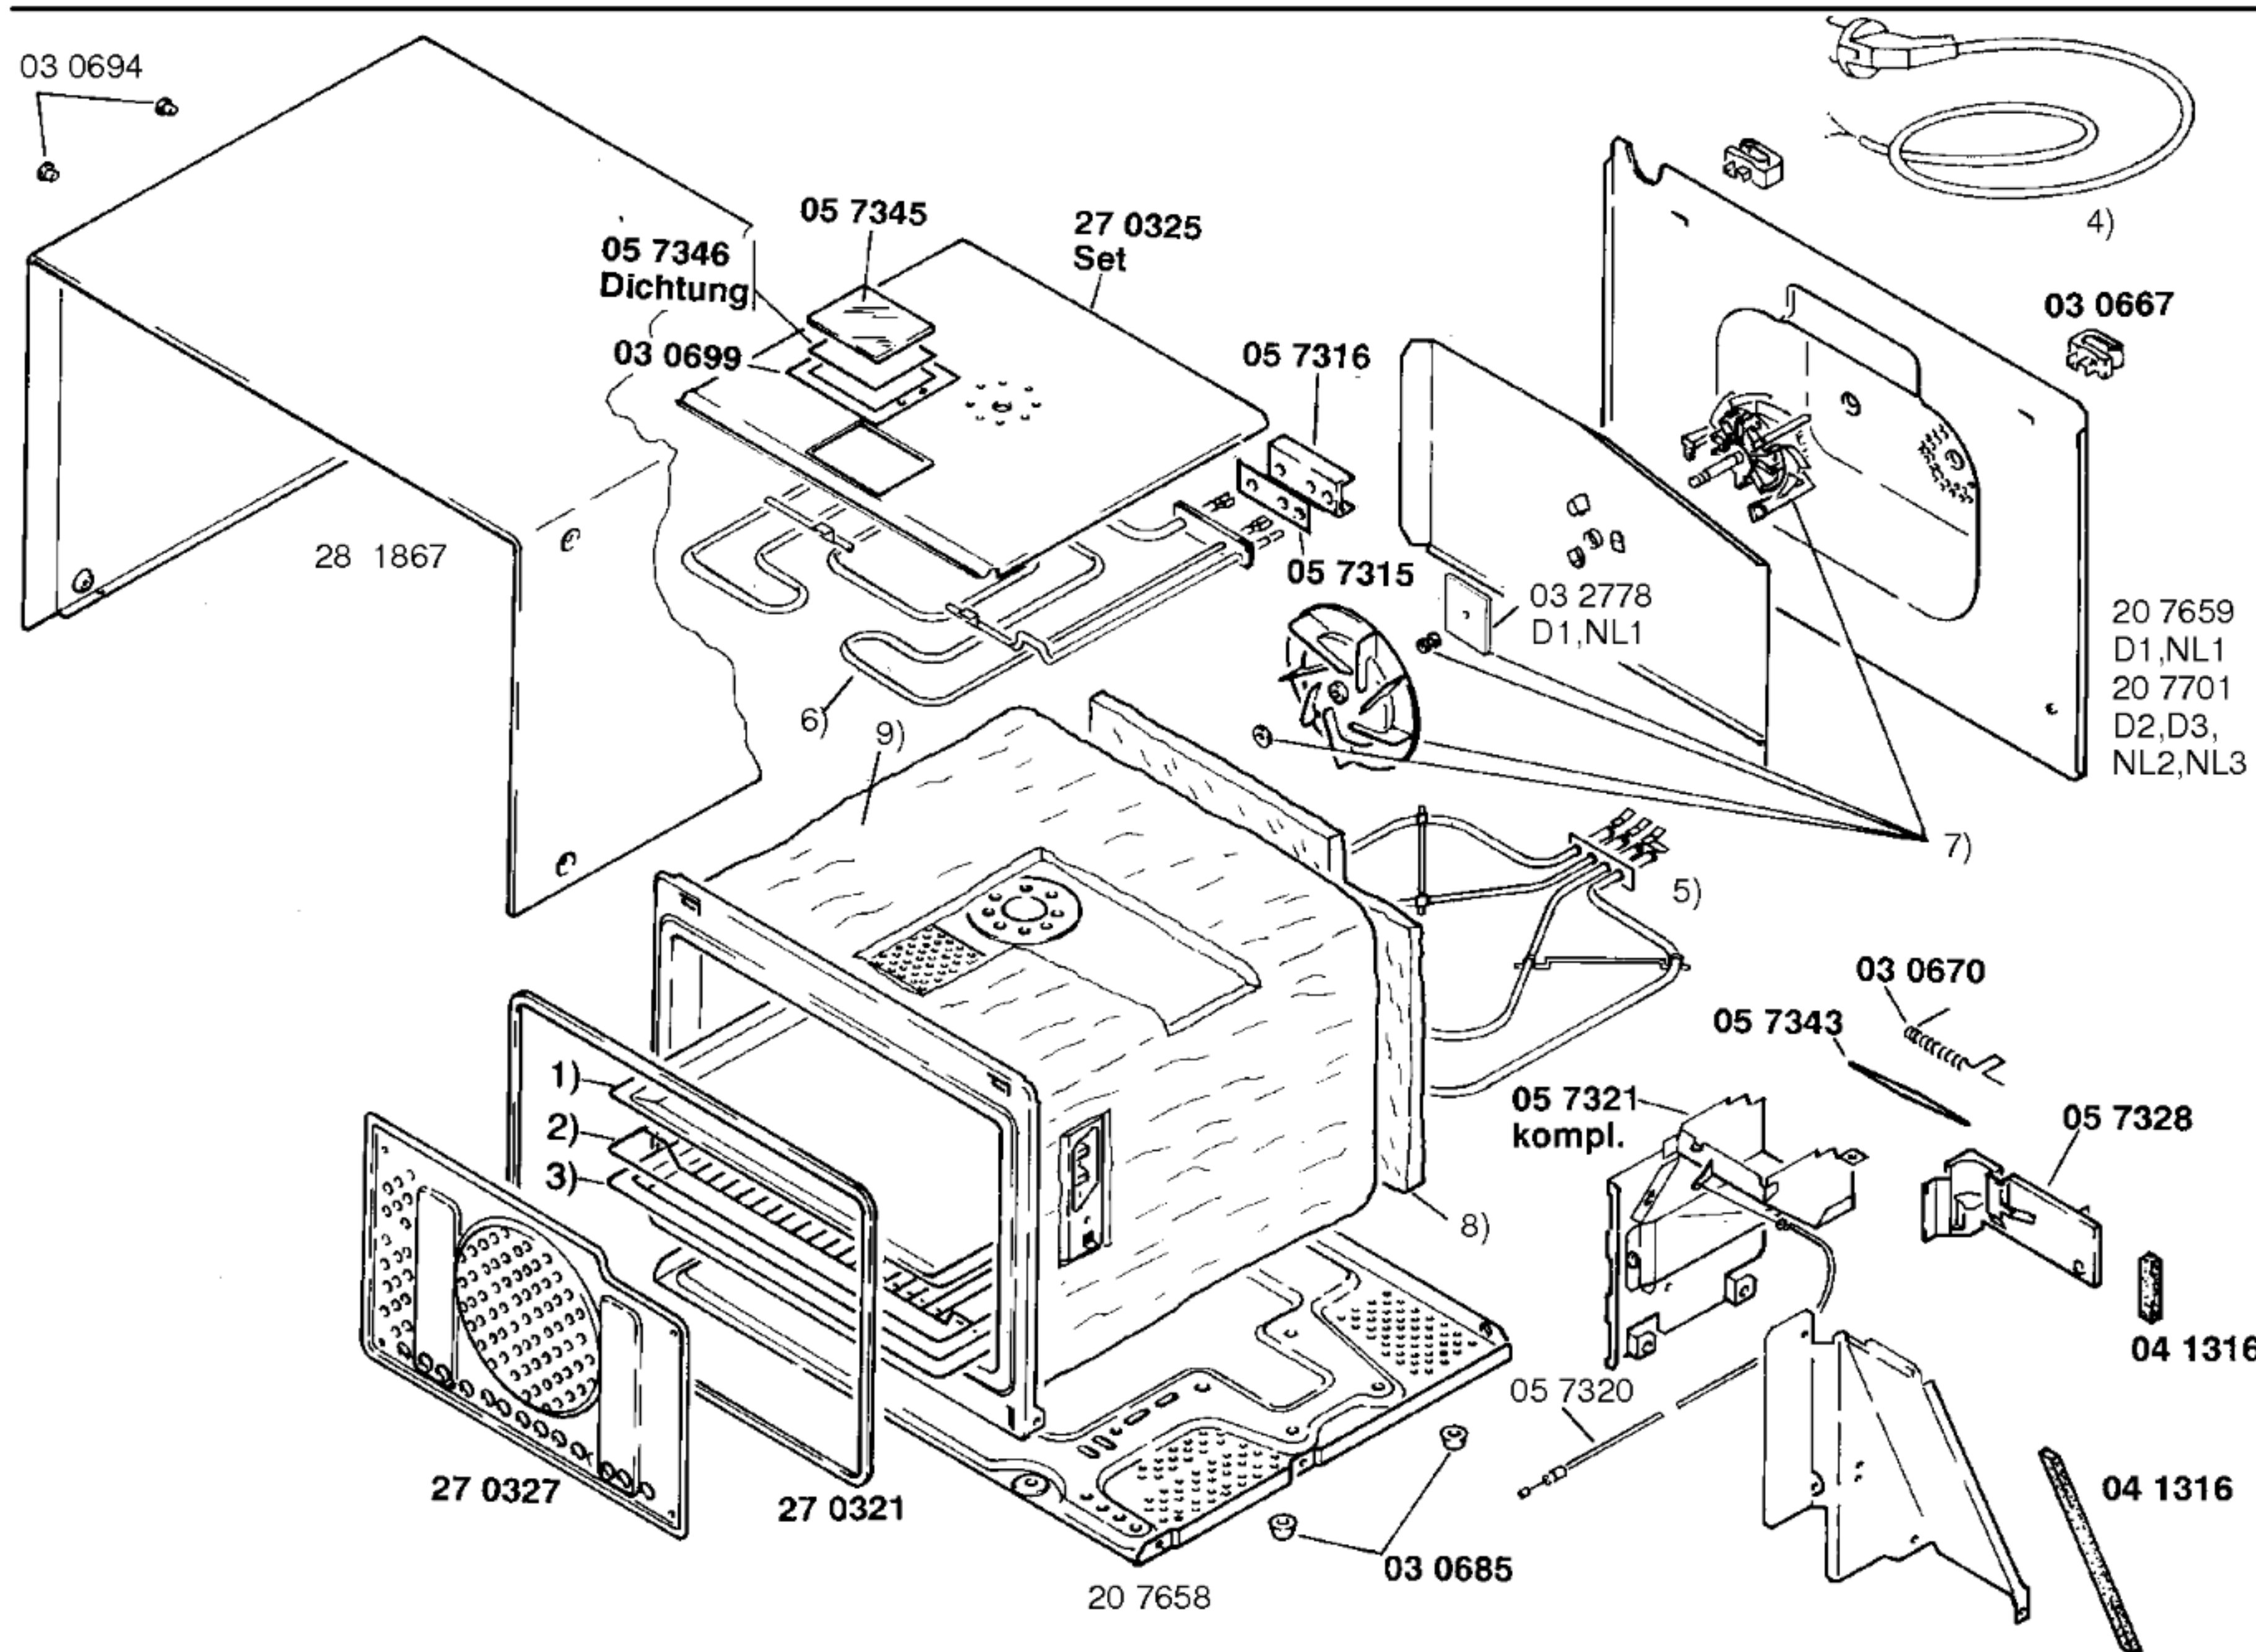

- 1) 11 4538
Backblech
- 2) 11 4539
- 3) 11 4537
Glasschale
- 4) 08 8694
- 5) 270323
- 6) 27 0324
- 7) 08 8518
D1,NL1
09 2677
D2,D3,NL2,NL3
- 8) 27 3122
D1,NL1
28 3307
D2,D3,NL2,NL3
- 9) 23 1101
Set
D1,NL1
23 2269
Set
D2,D3,NL2,NL3

02 8732
Anschlag-Backblech

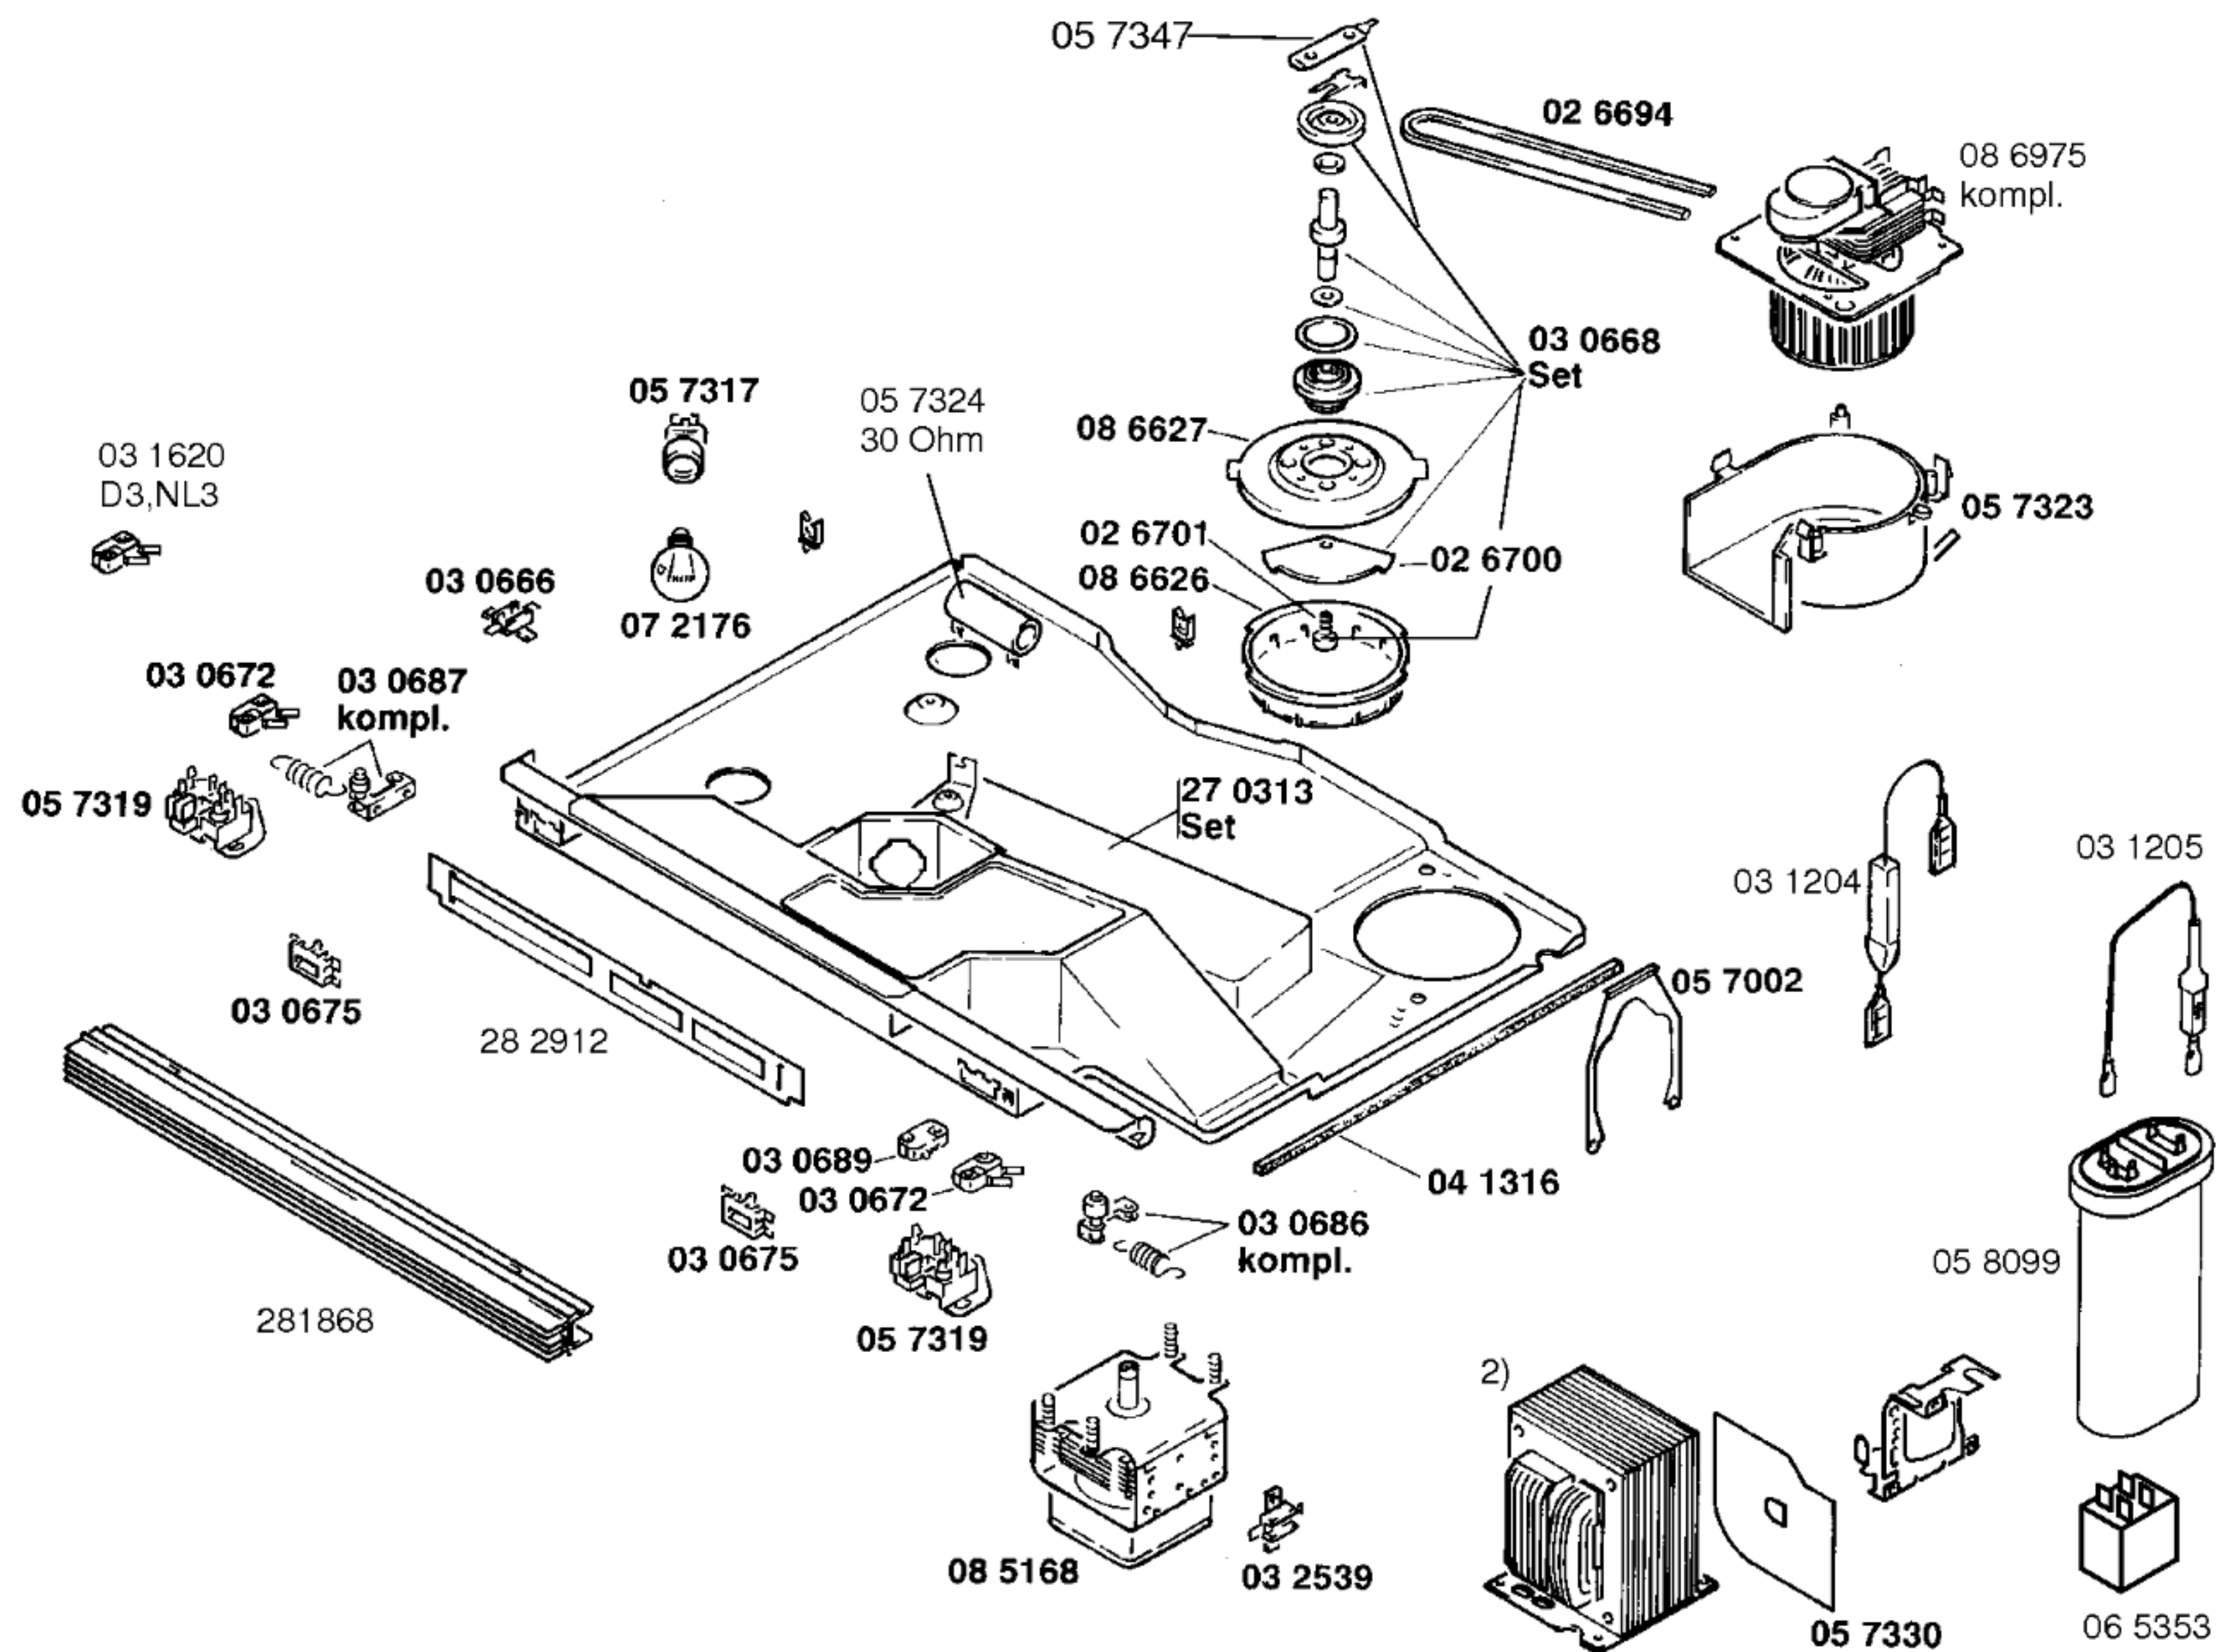

1) 08 7498
mitbestellen

2) 09 2690