


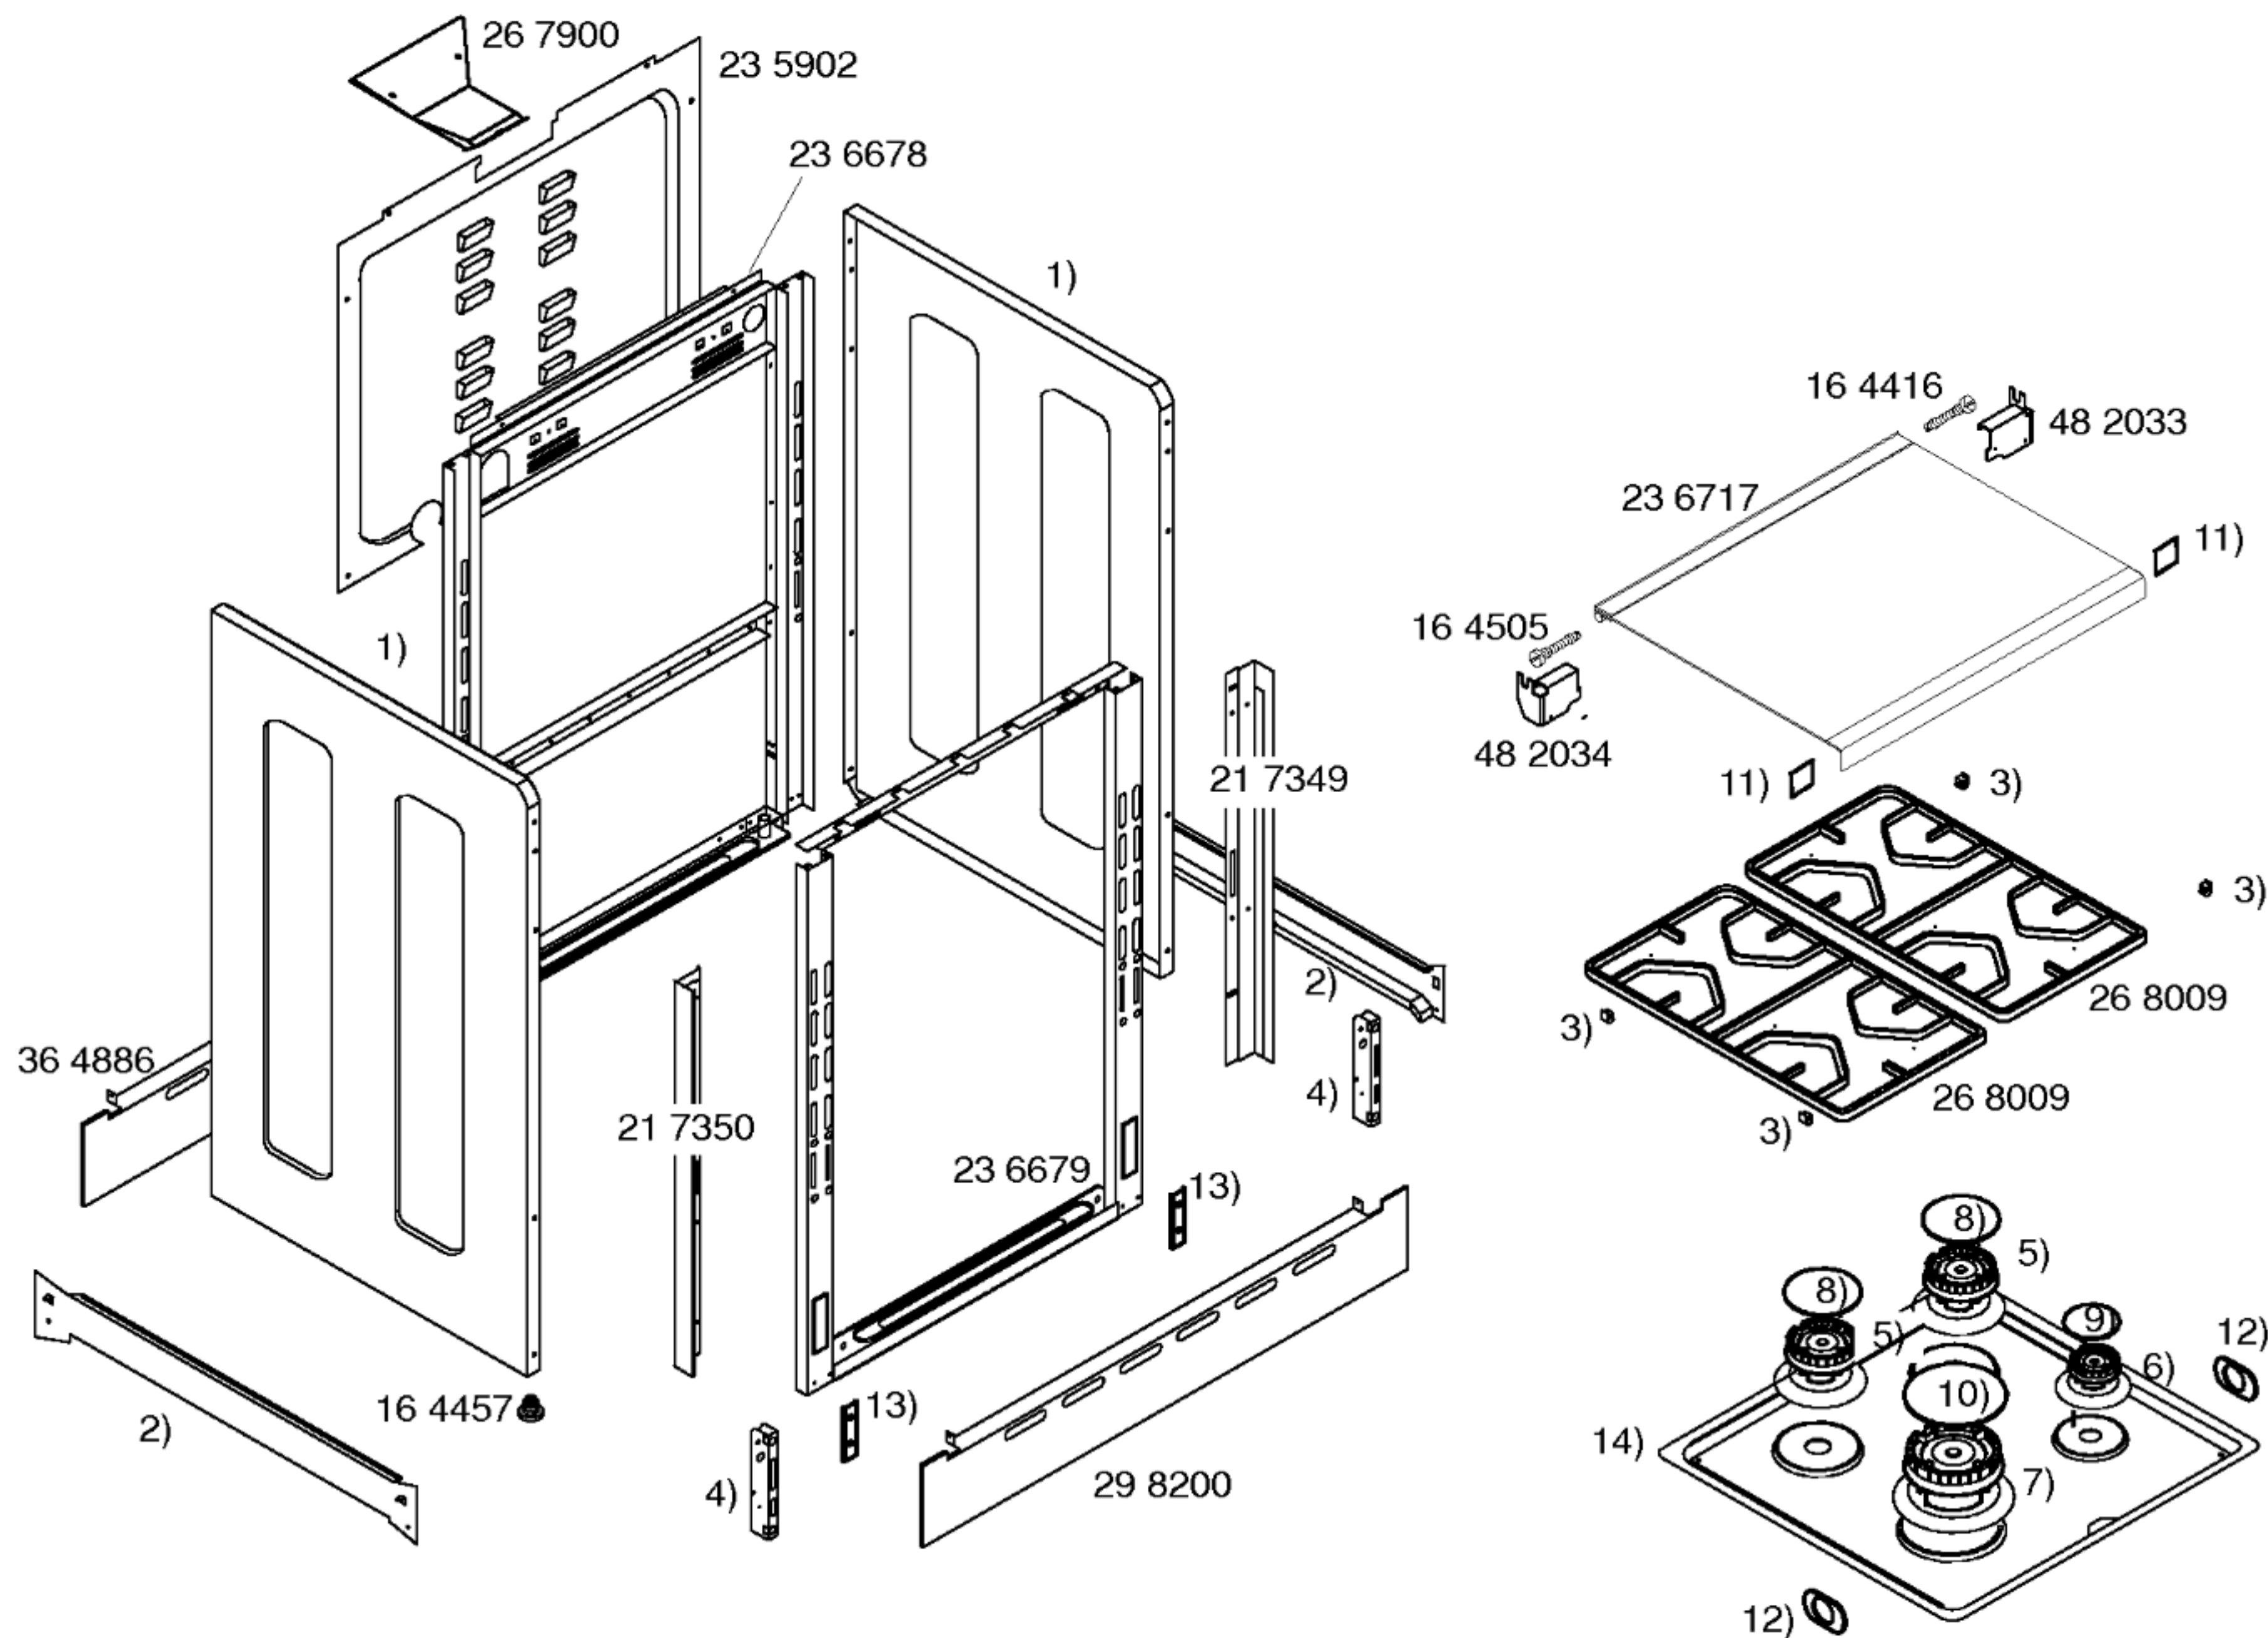

Gebrauchsanweisung
58 0053


- 1) 23 6654
- 2) 35 2493
- 3) 16 8053
- 4) 18 3902
- 5) 26 7357
- 6) 26 7359
- 7) 26 7356
- 8) 17 3897
- 9) 17 3898
- 10) 17 3896
- 11) 18 3455
- 12) 18 6972
- 13) 18 7489

14) 23 5805


V01,V02,V03

21 8904


V04

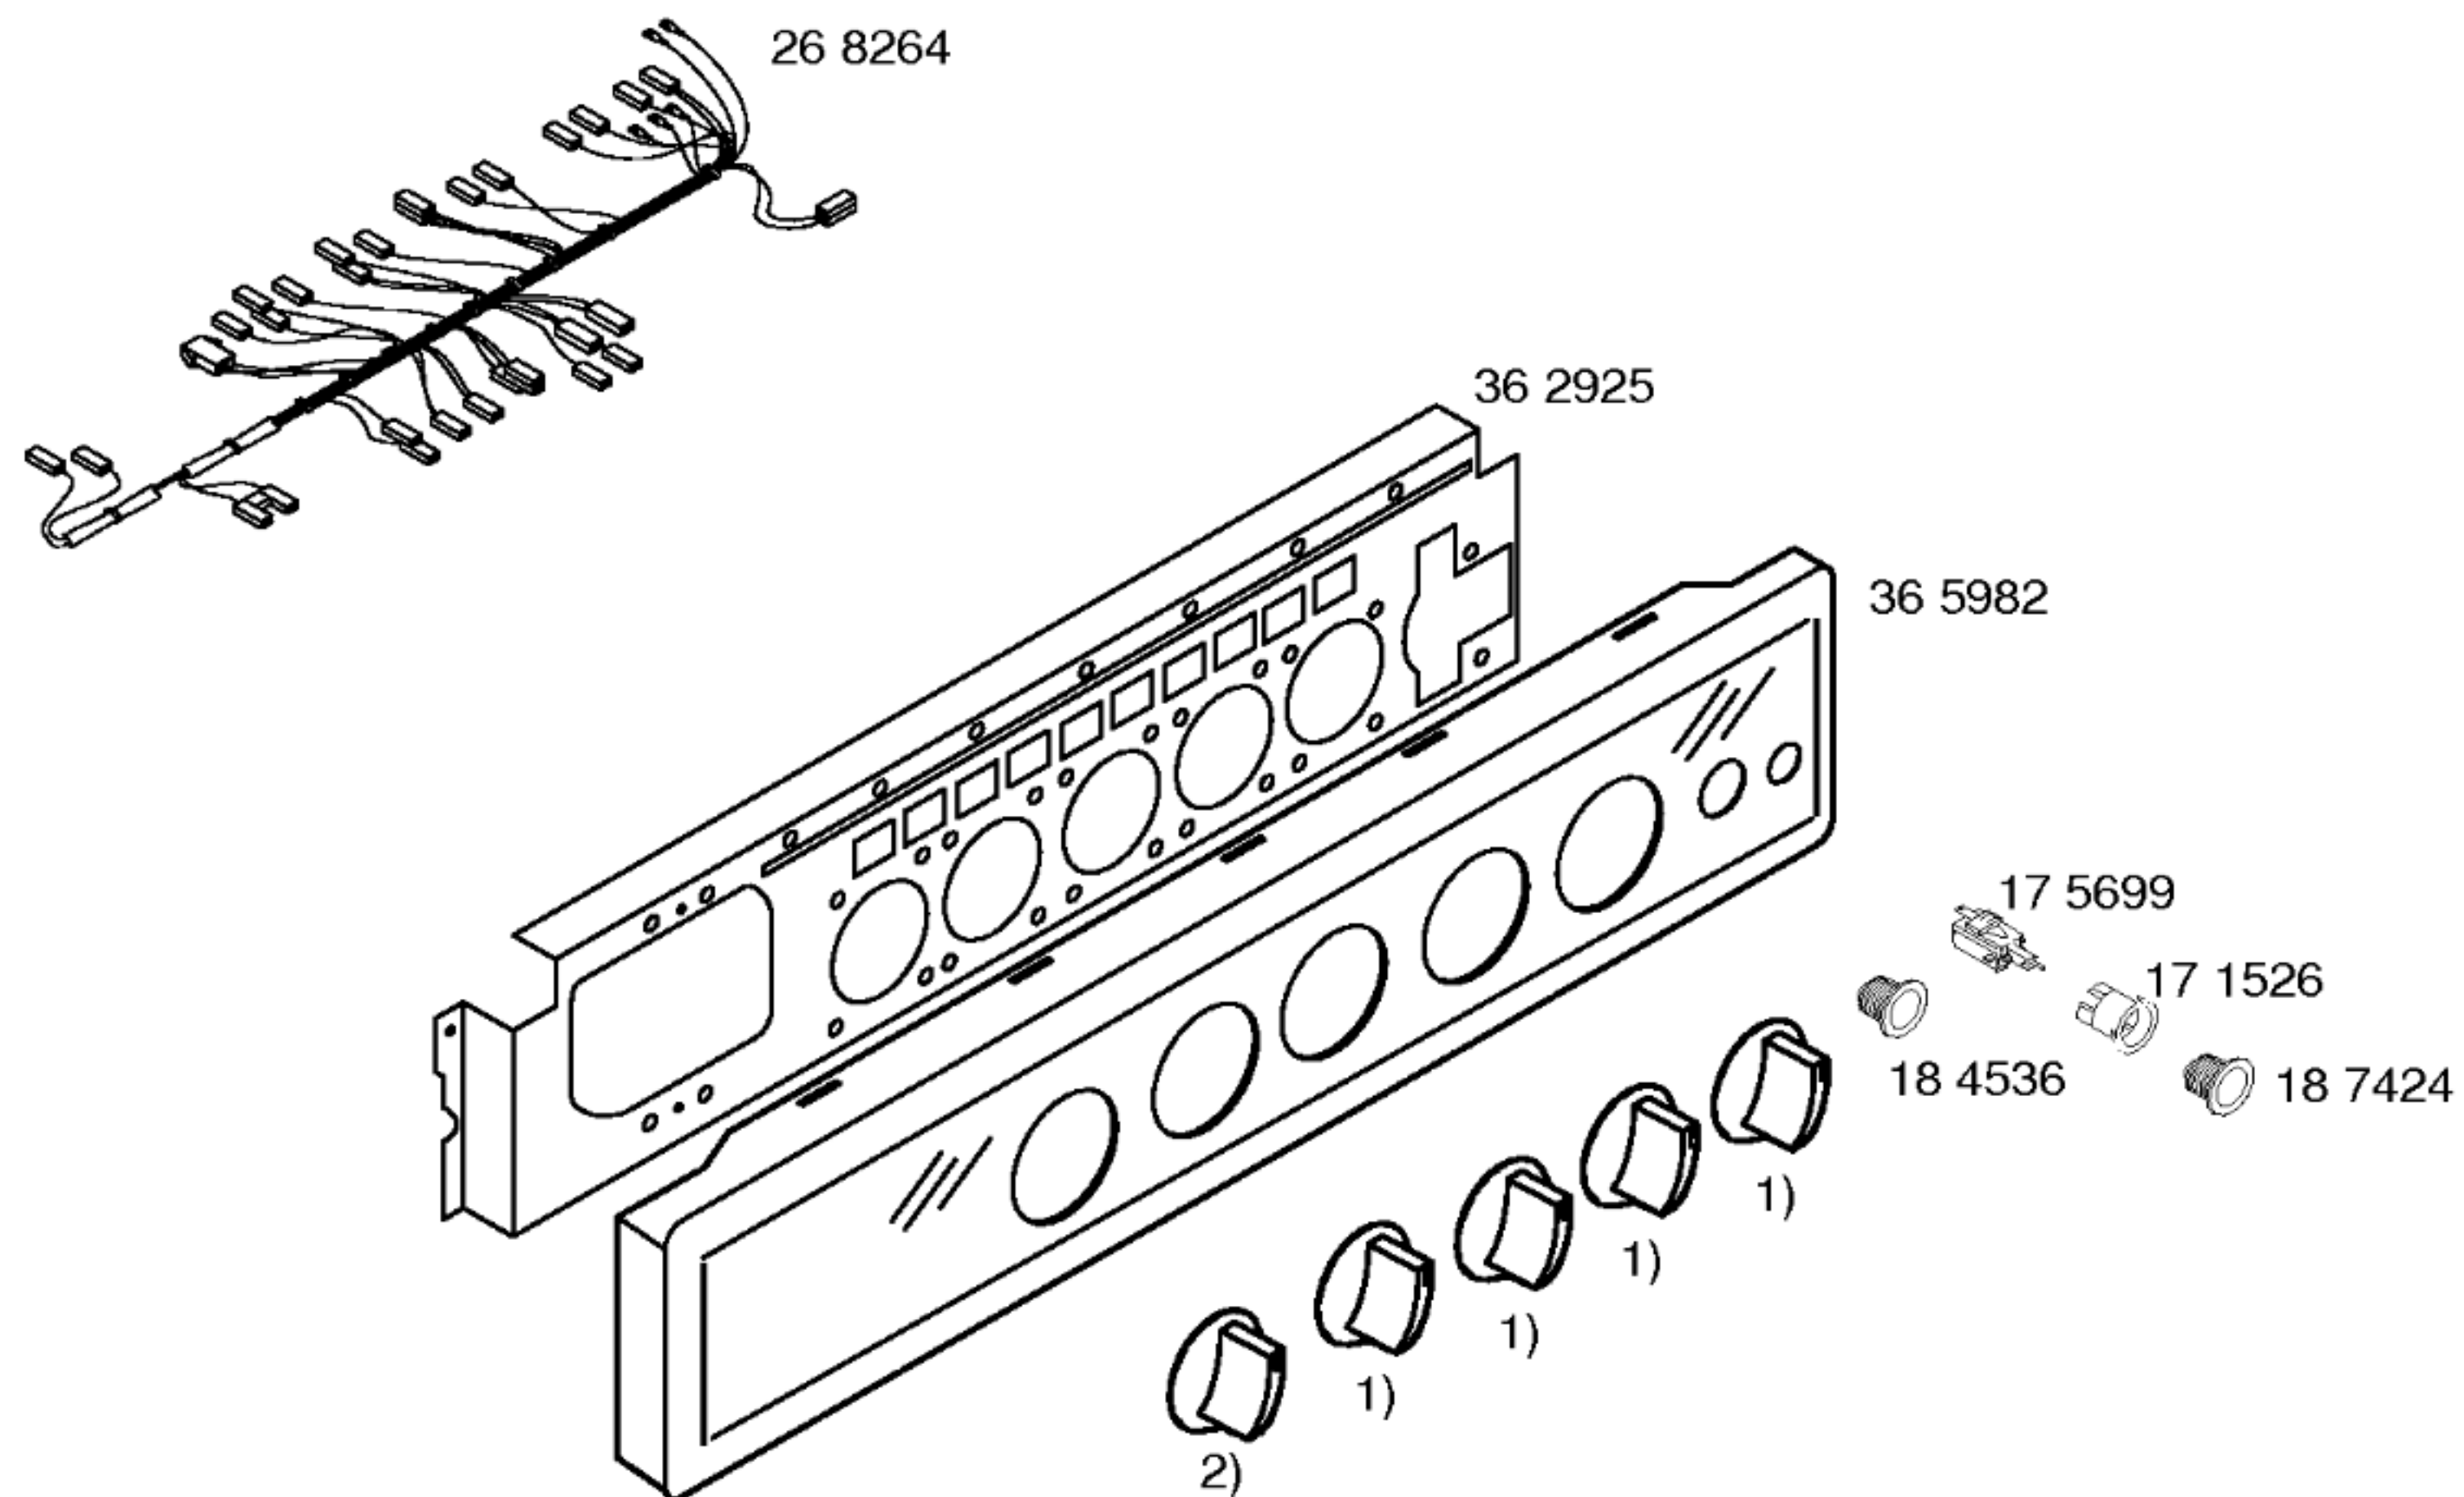


- 1) 18 7422
V01
18 8166
V02,V03,V04
- 2) 18 4535
V01
18 8167
V02,V03,V04

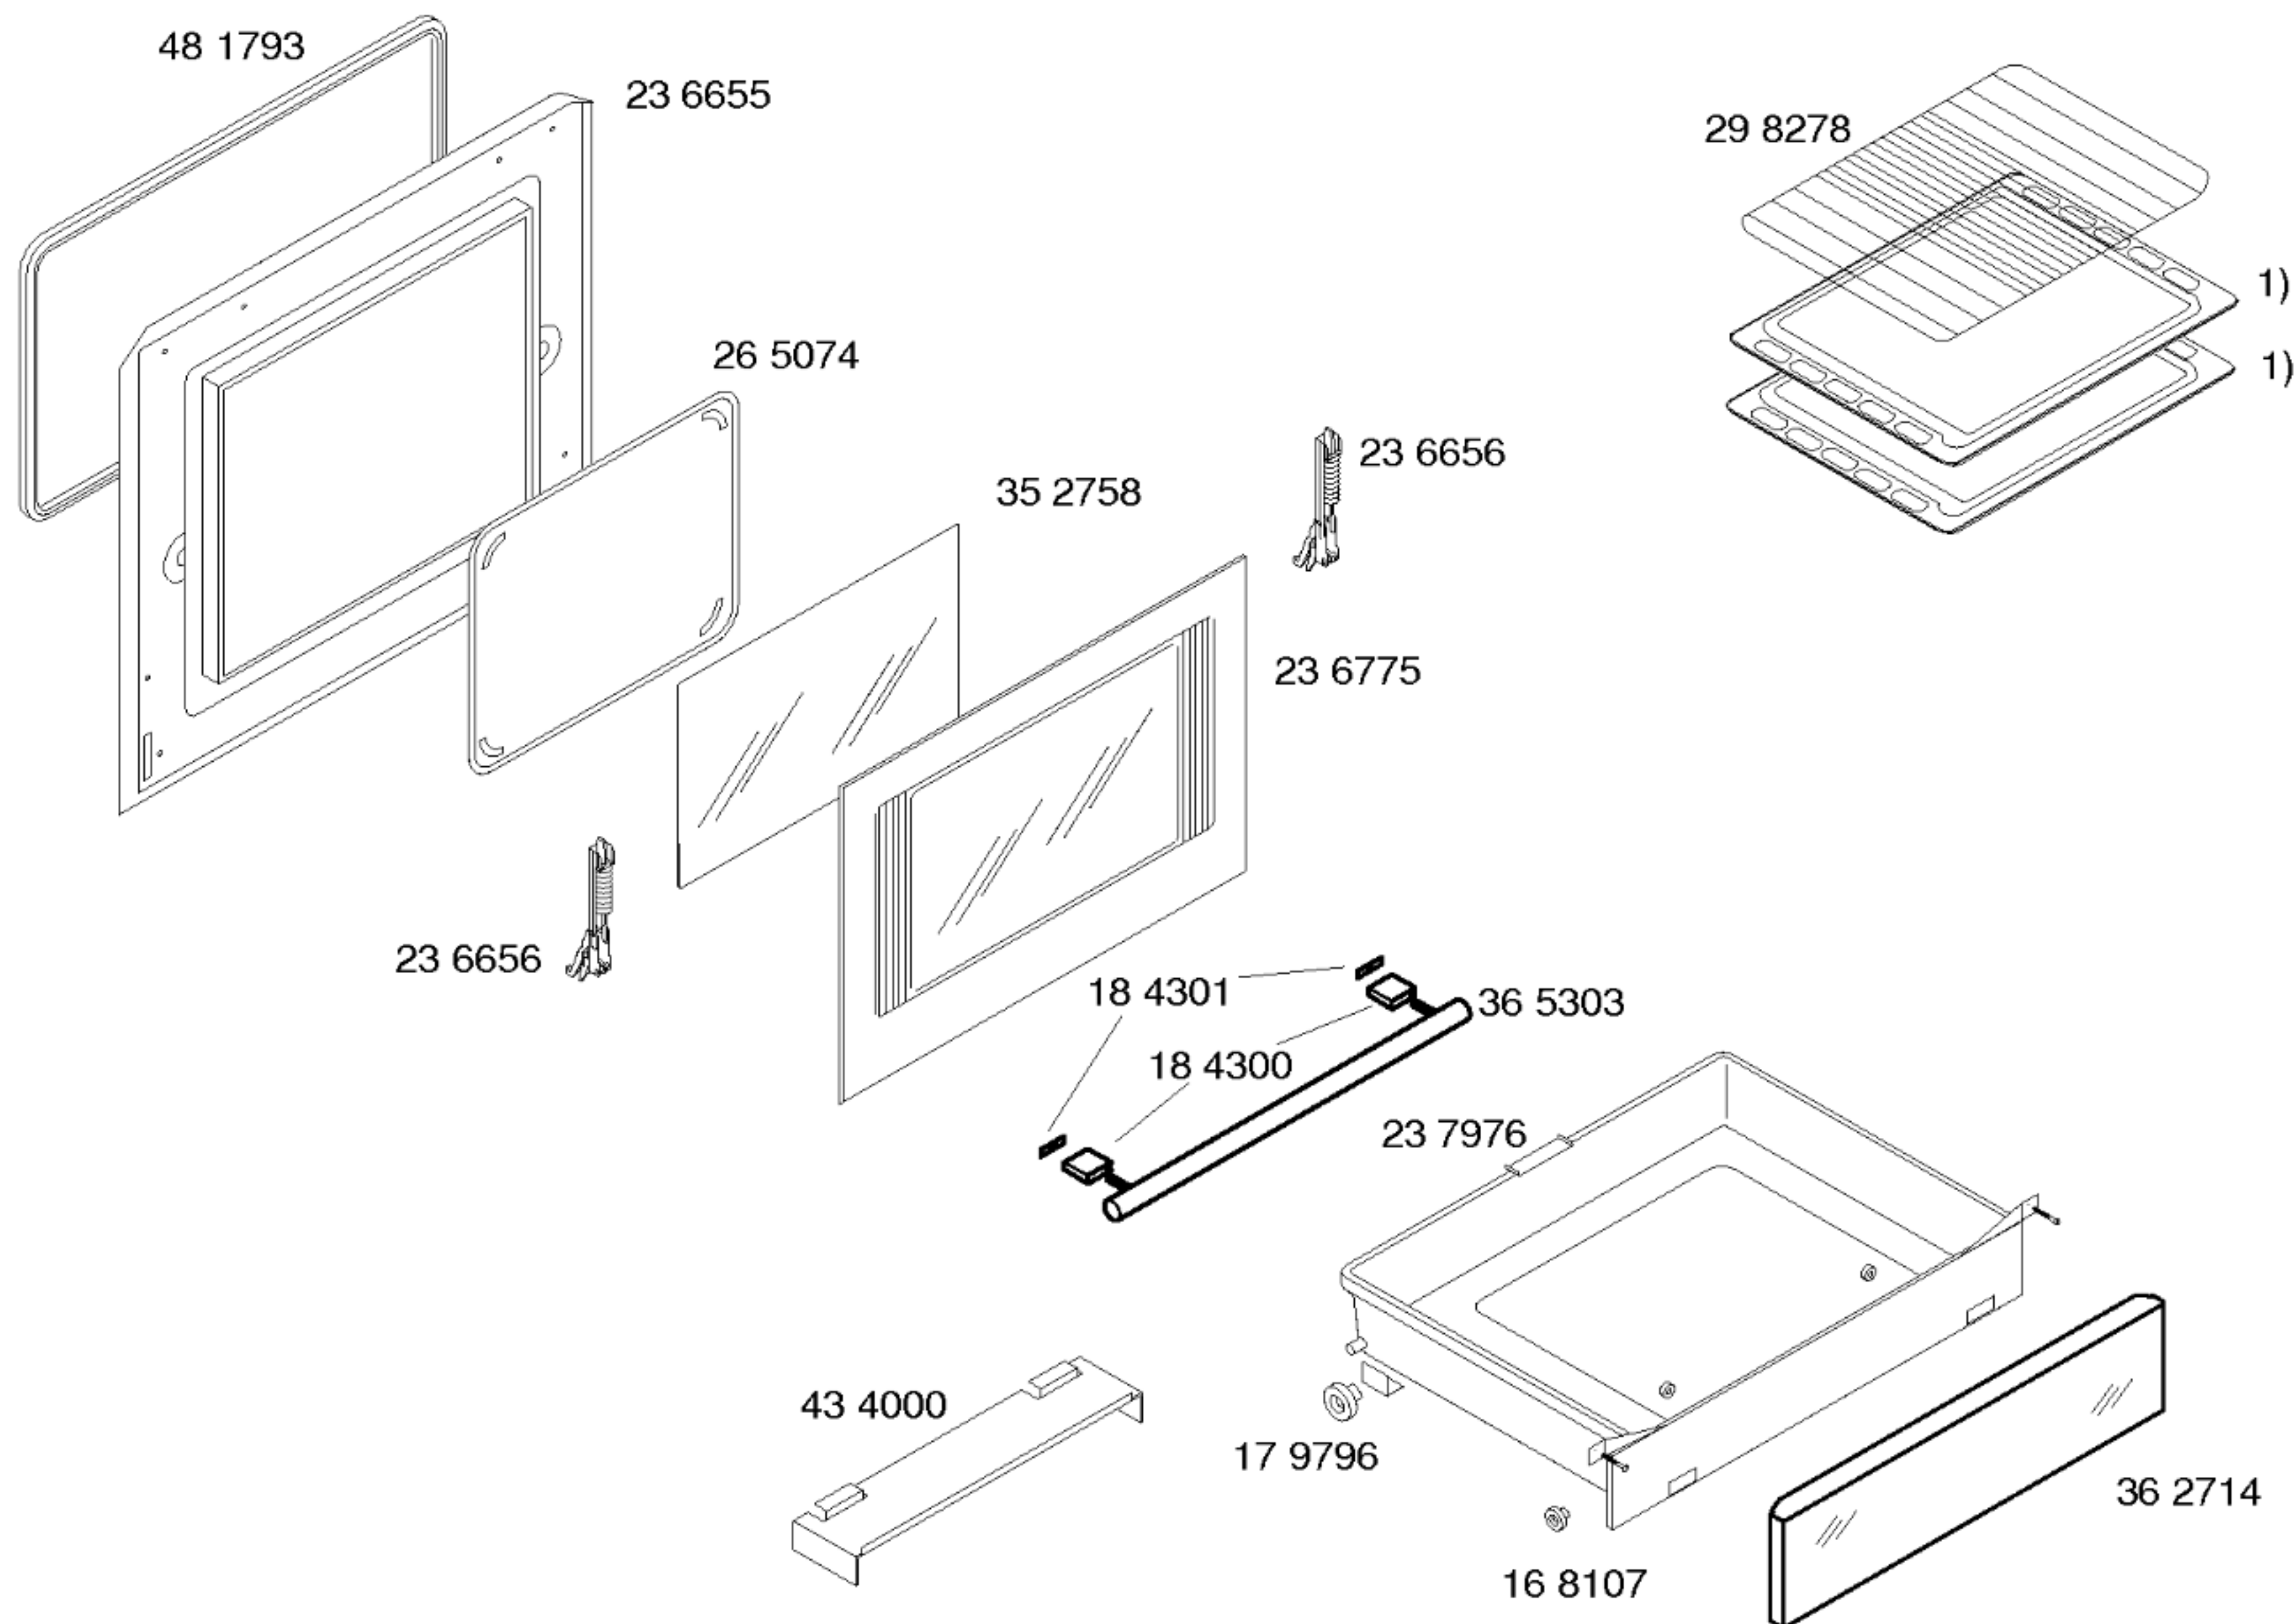

1) 35 3489

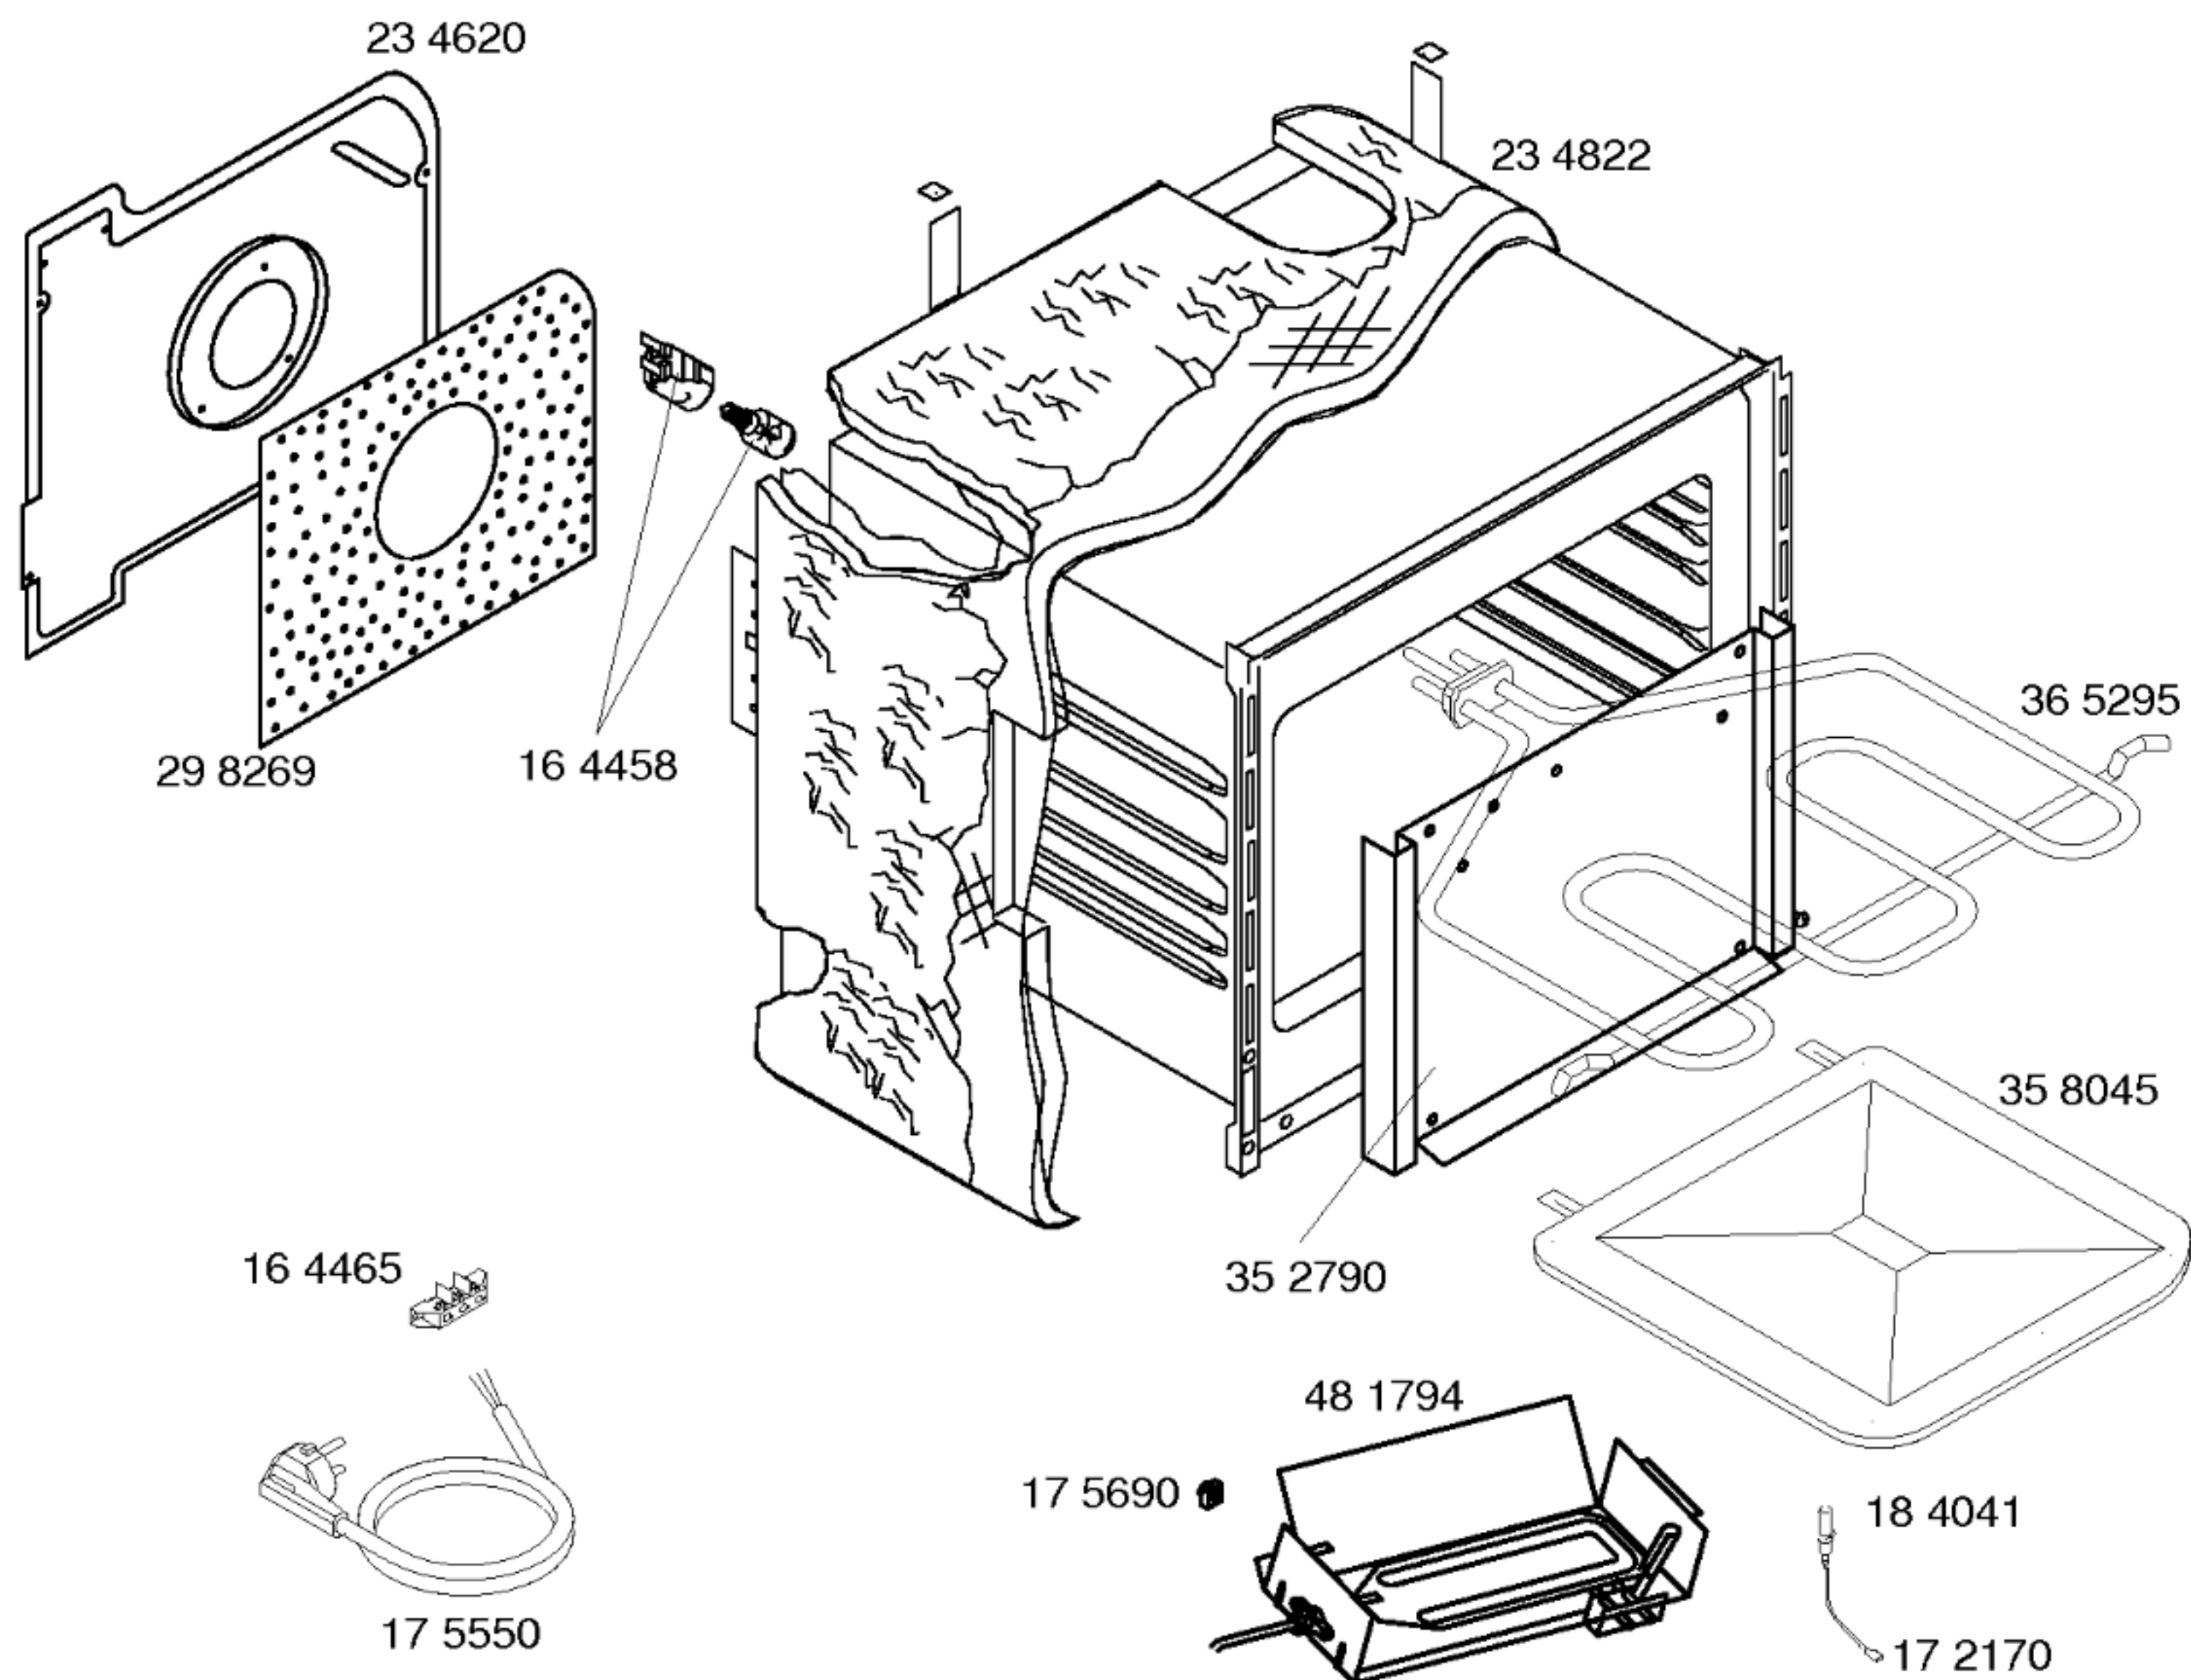

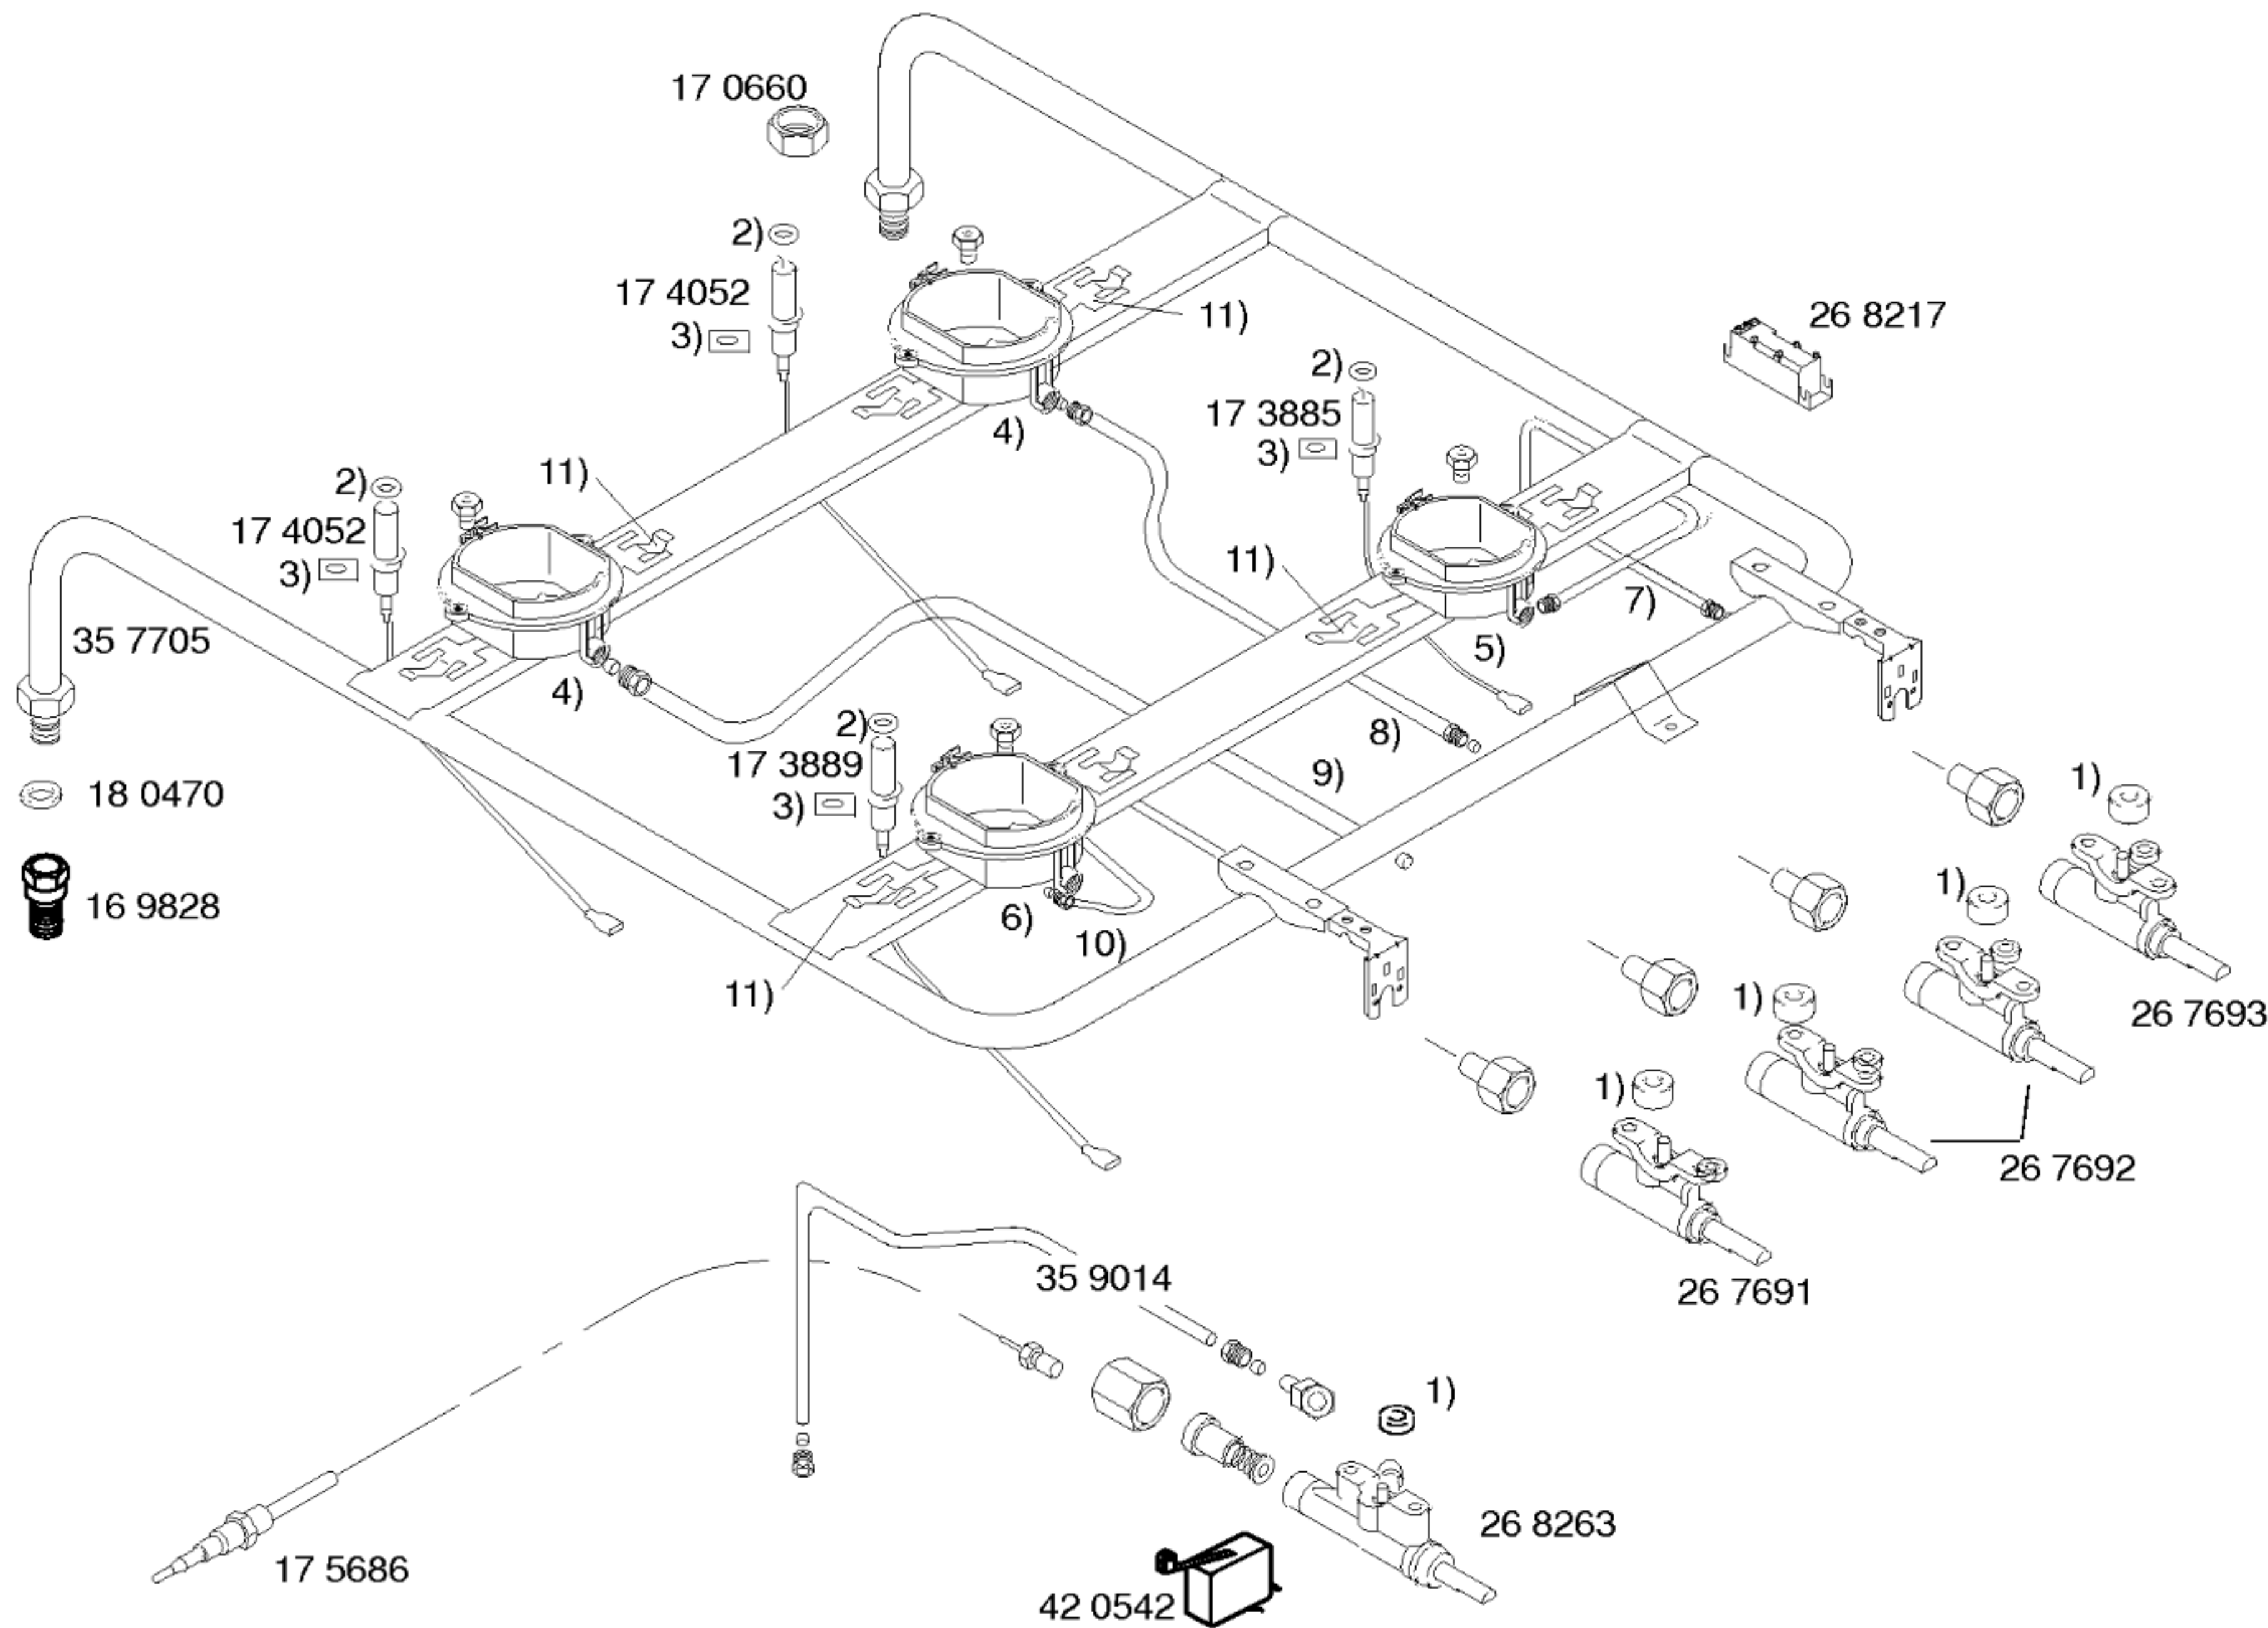

- 1) 16 9339
- 2) 17 3894
- 3) 17 3895
- 4) 26 7362
- 5) 26 7363
- 6) 26 7360
- 7) 35 7702
- 8) 35 7703
- 9) 35 7701
- 10) 35 7700
- 11) 17 4634

Duesensatz Erdgas
17 5535
Duesensatz
Fluessiggas
17 5534