


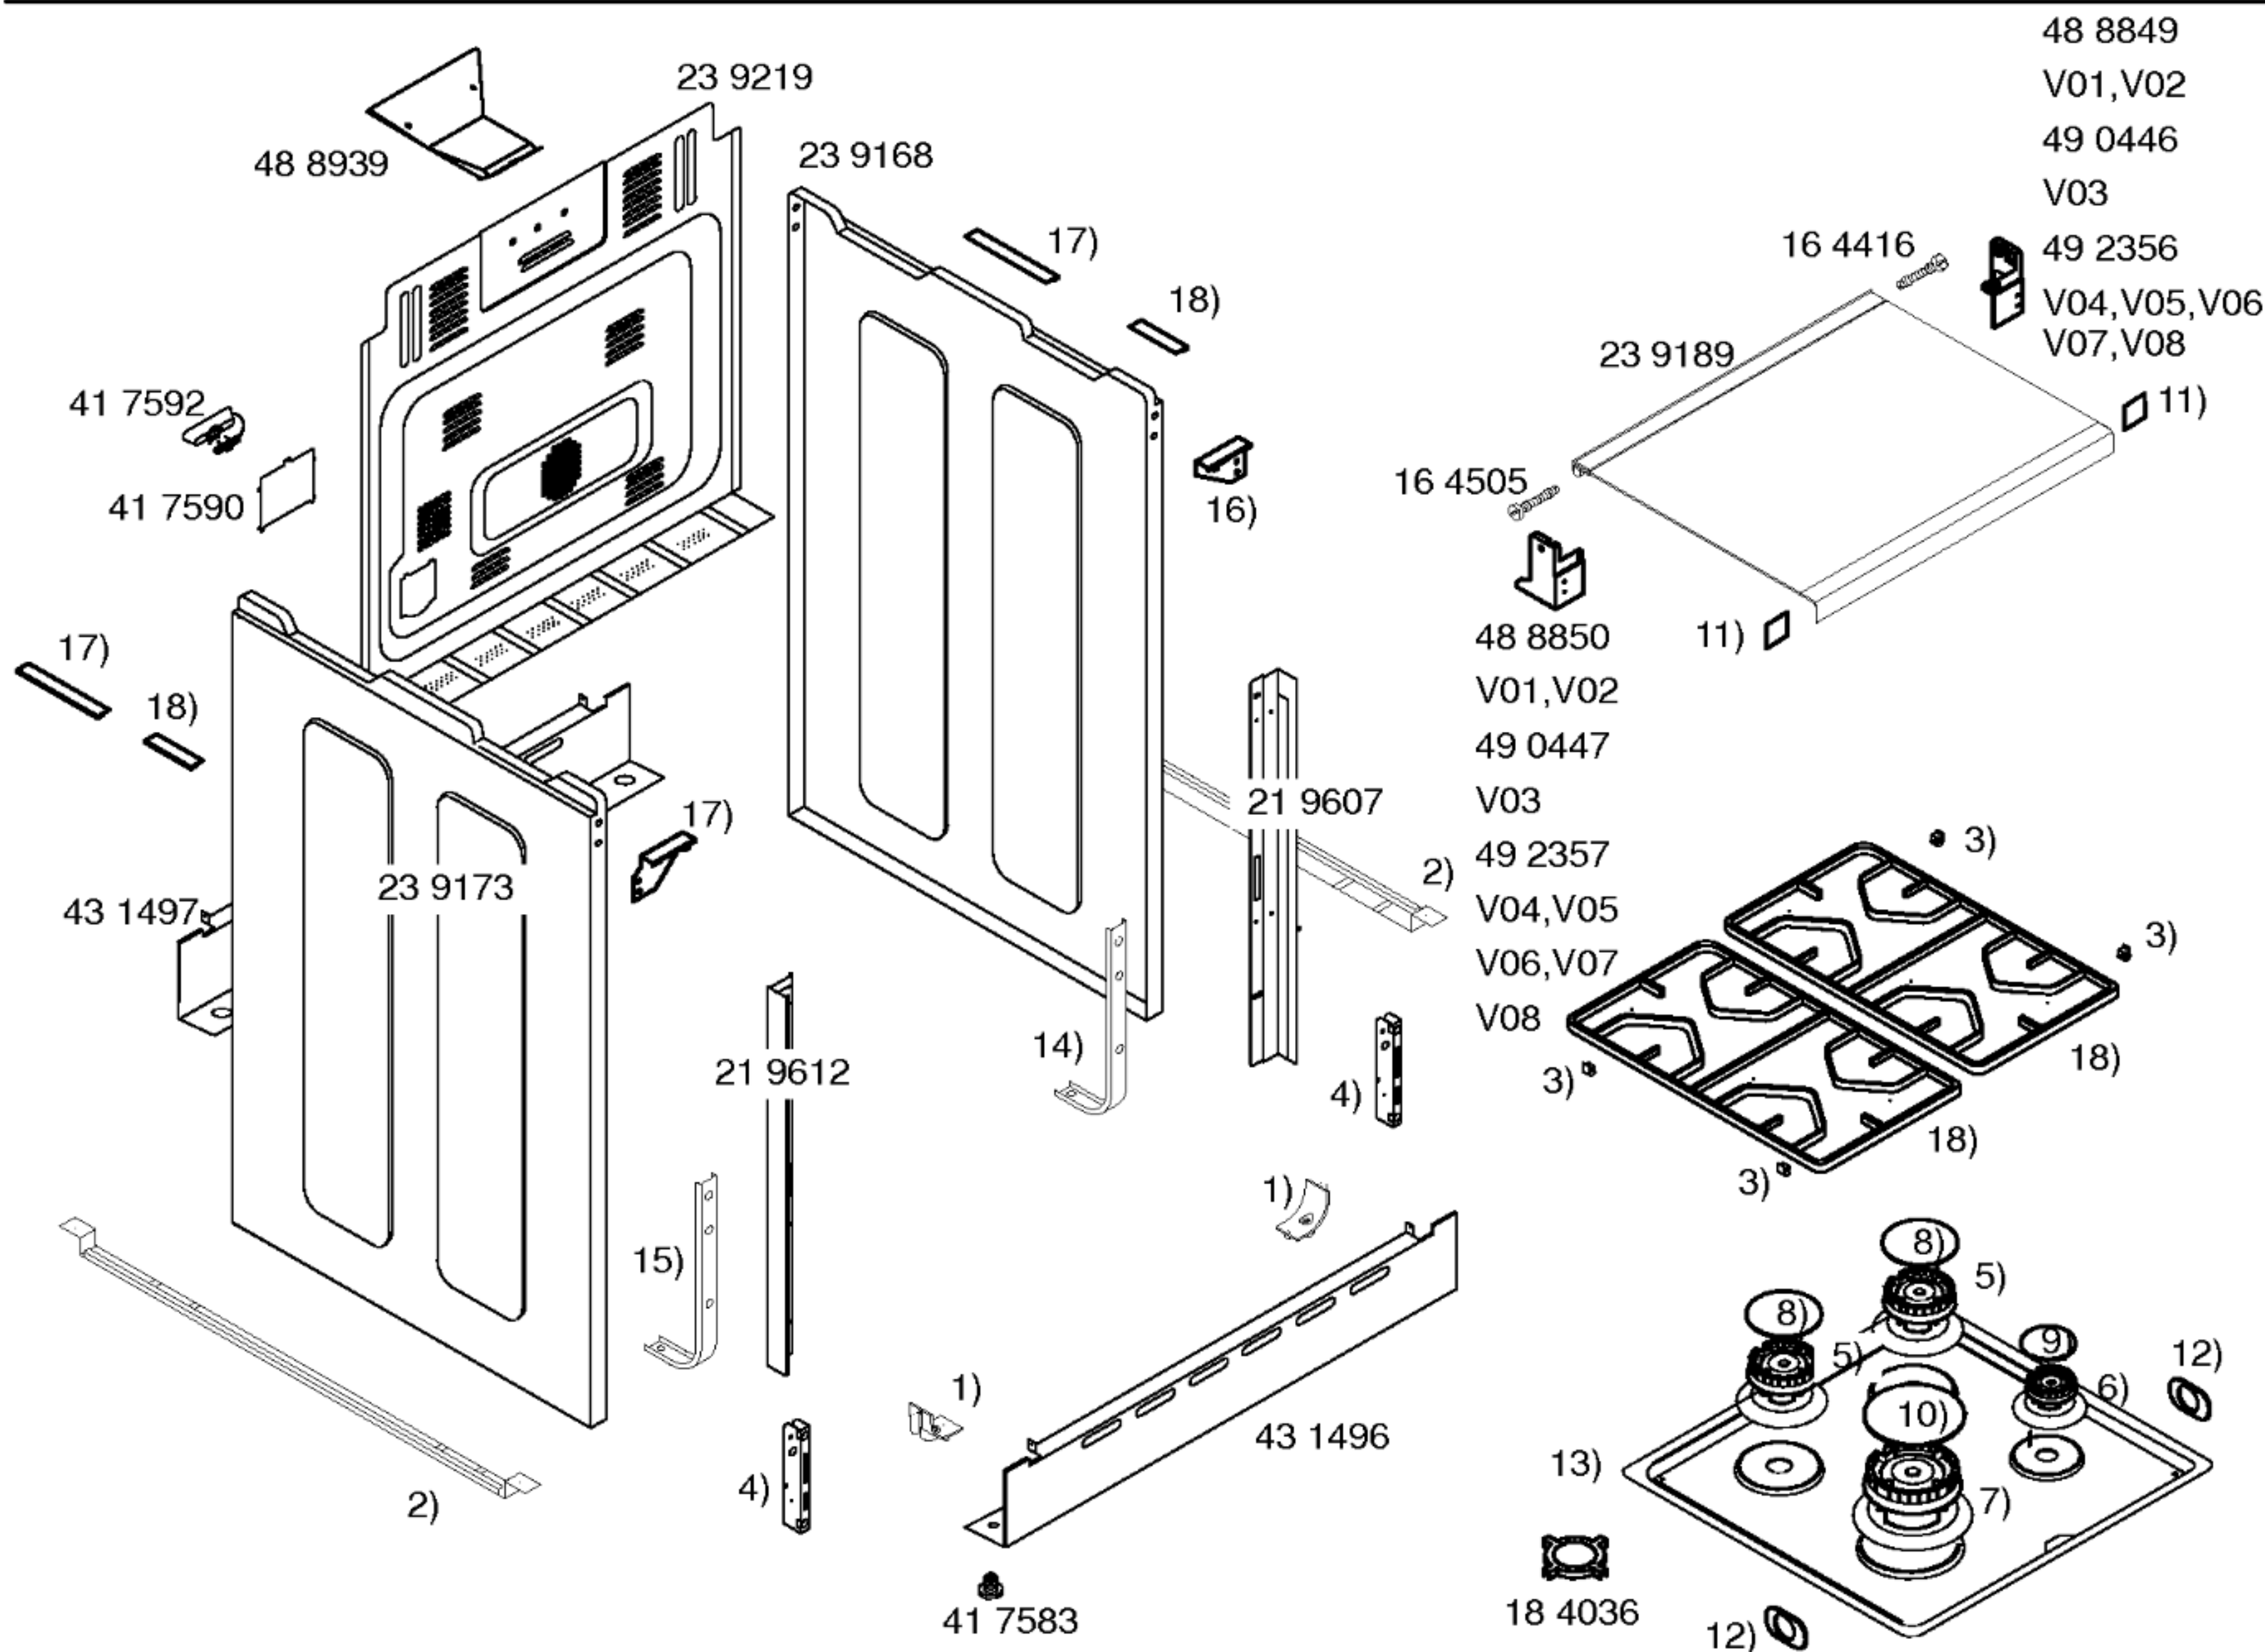

Gebrauchsanweisung
59 6523

Anleitung zur
Gasarten-Umstellung
58 3578

- 1) 41 7587
- 2) 43 1499
- 3) 16 8053
- 4) 41 7579
- 5) 26 7357
- 6) 26 7359
- 7) 26 7356
- 8) 17 3897
- 9) 17 3898
- 10) 17 3896
- 11) 18 4302
- 12) 41 6914

V01,V02,V03

13) 23 9186

V01,V02,V03

14) 43 1502

15) 43 1503

16) 42 3351

V04

17) 42 3352

V04,V05,V06,V07

V08


18) 26 8009


V01,V02,V03,V04

V05,V06,V07

44 4739

V08

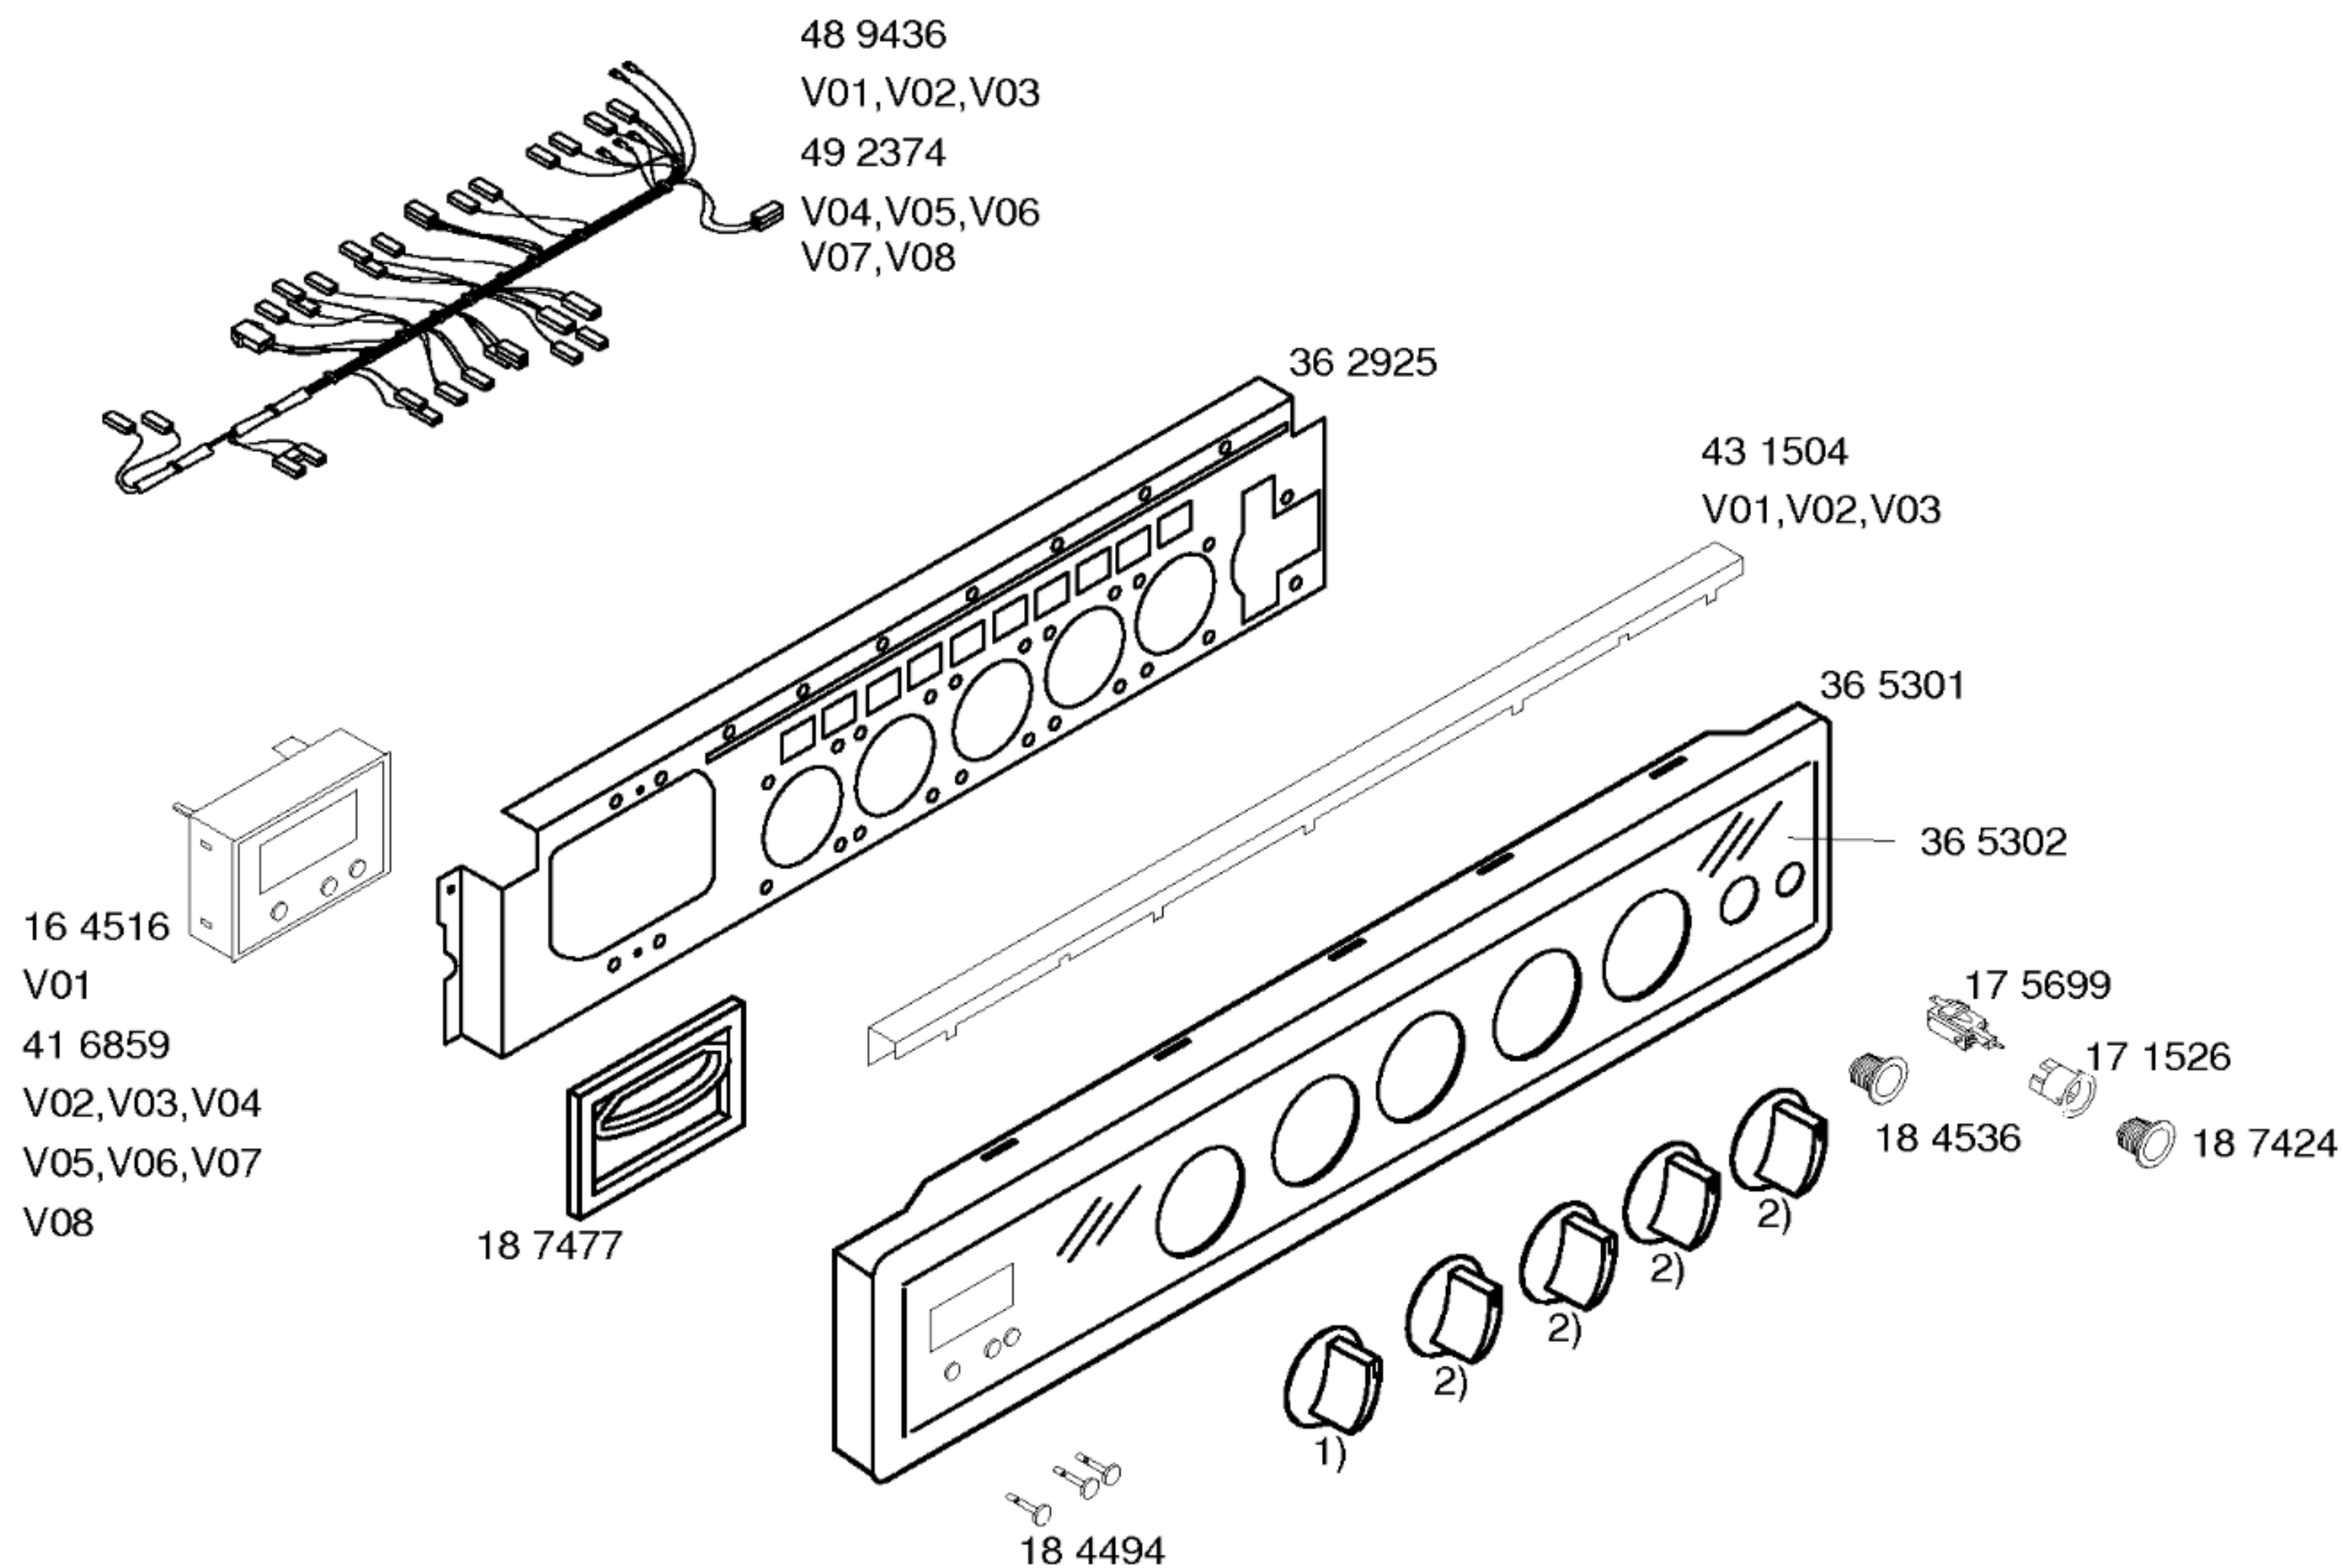


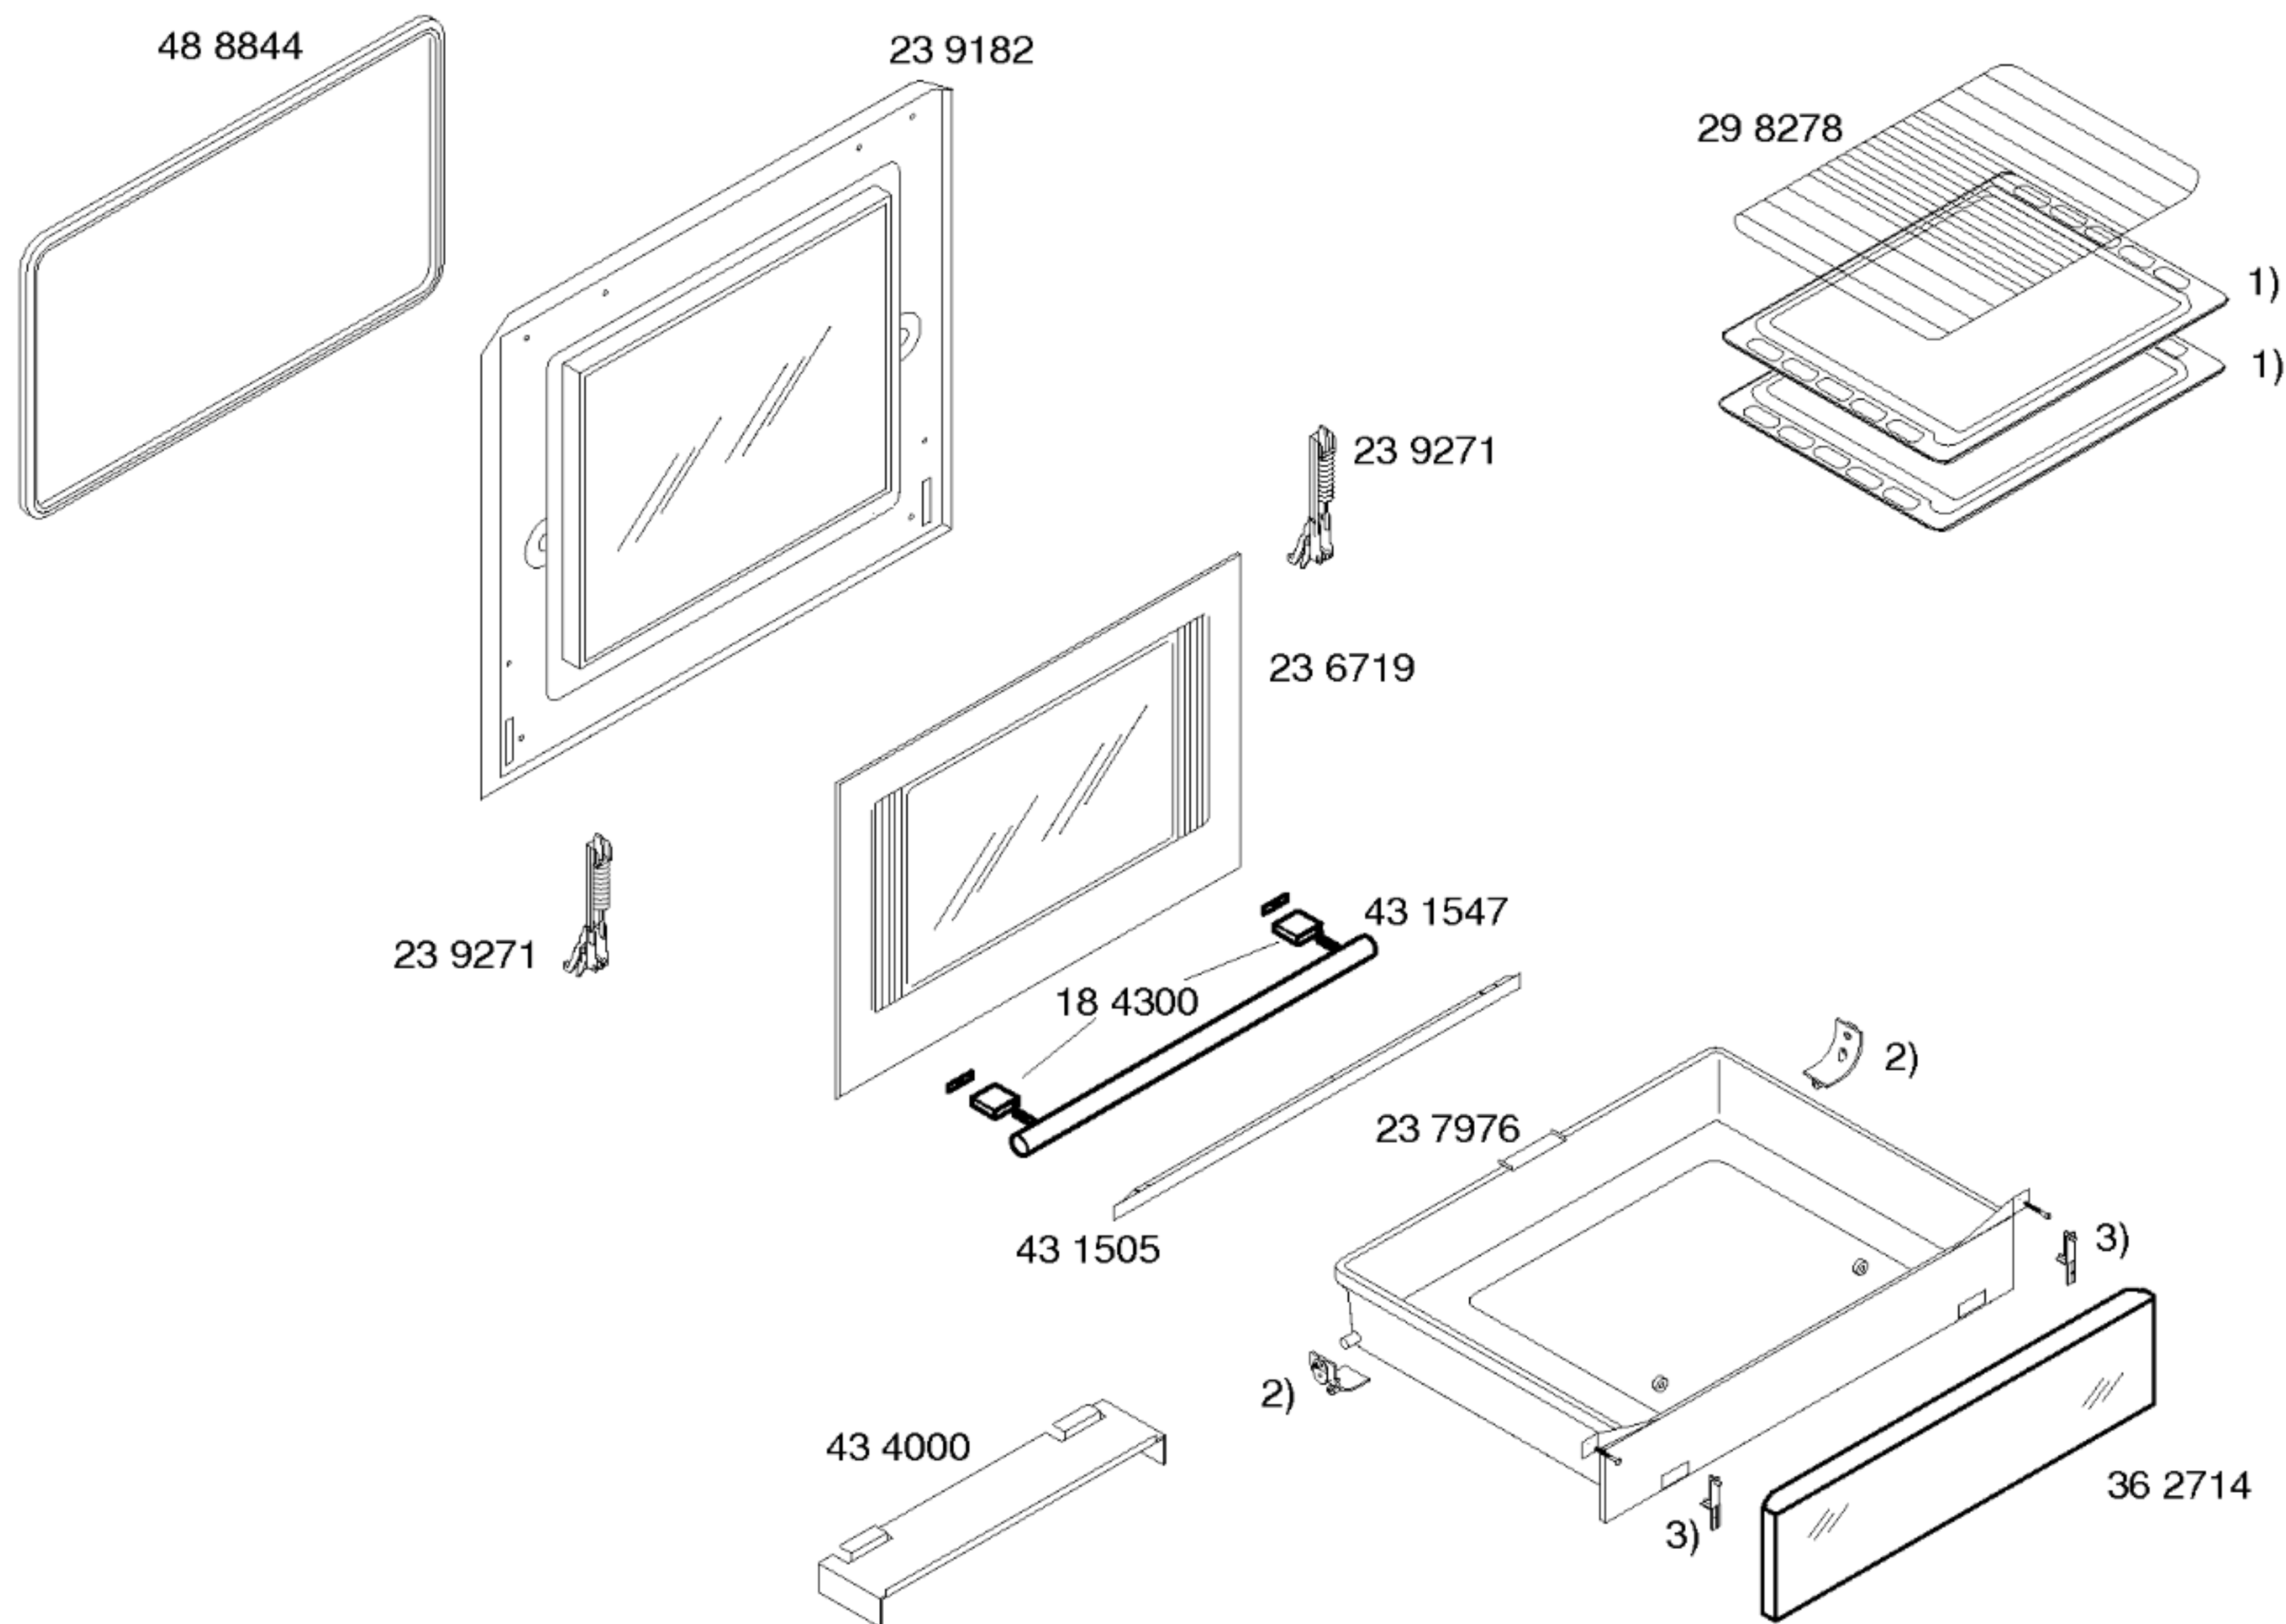


1) 35 3489

2) 41 7587

3) 41 7588

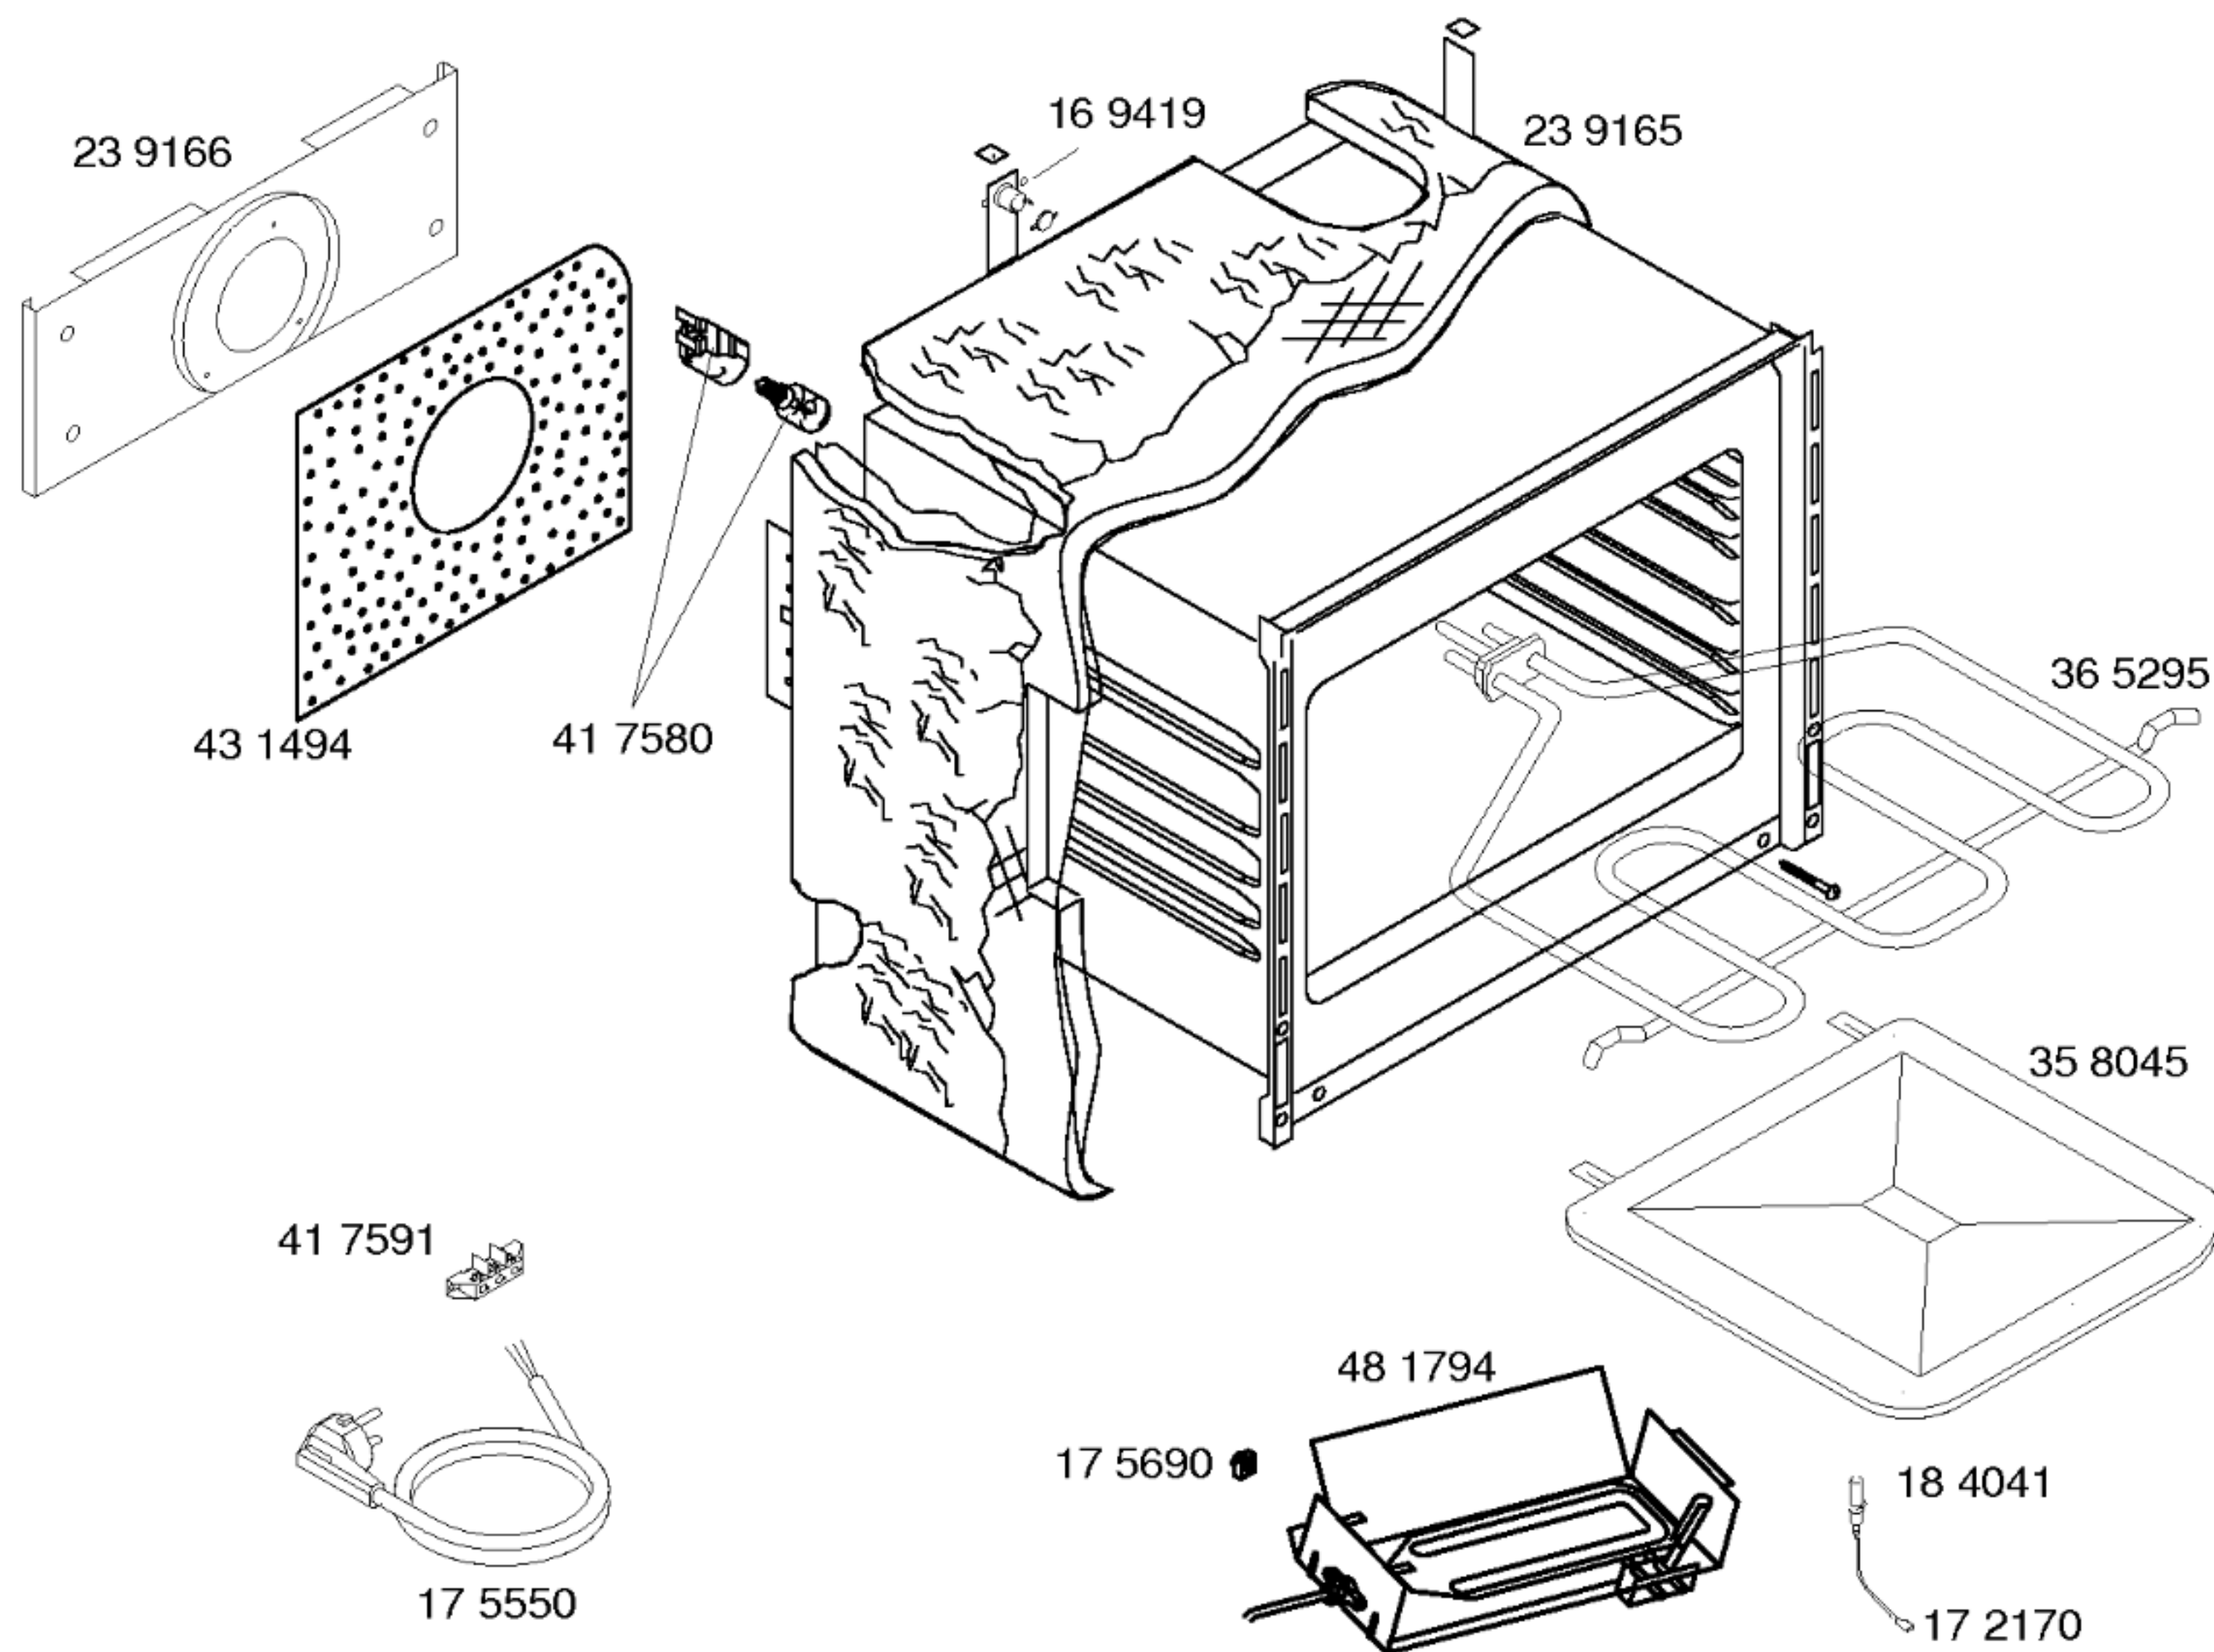

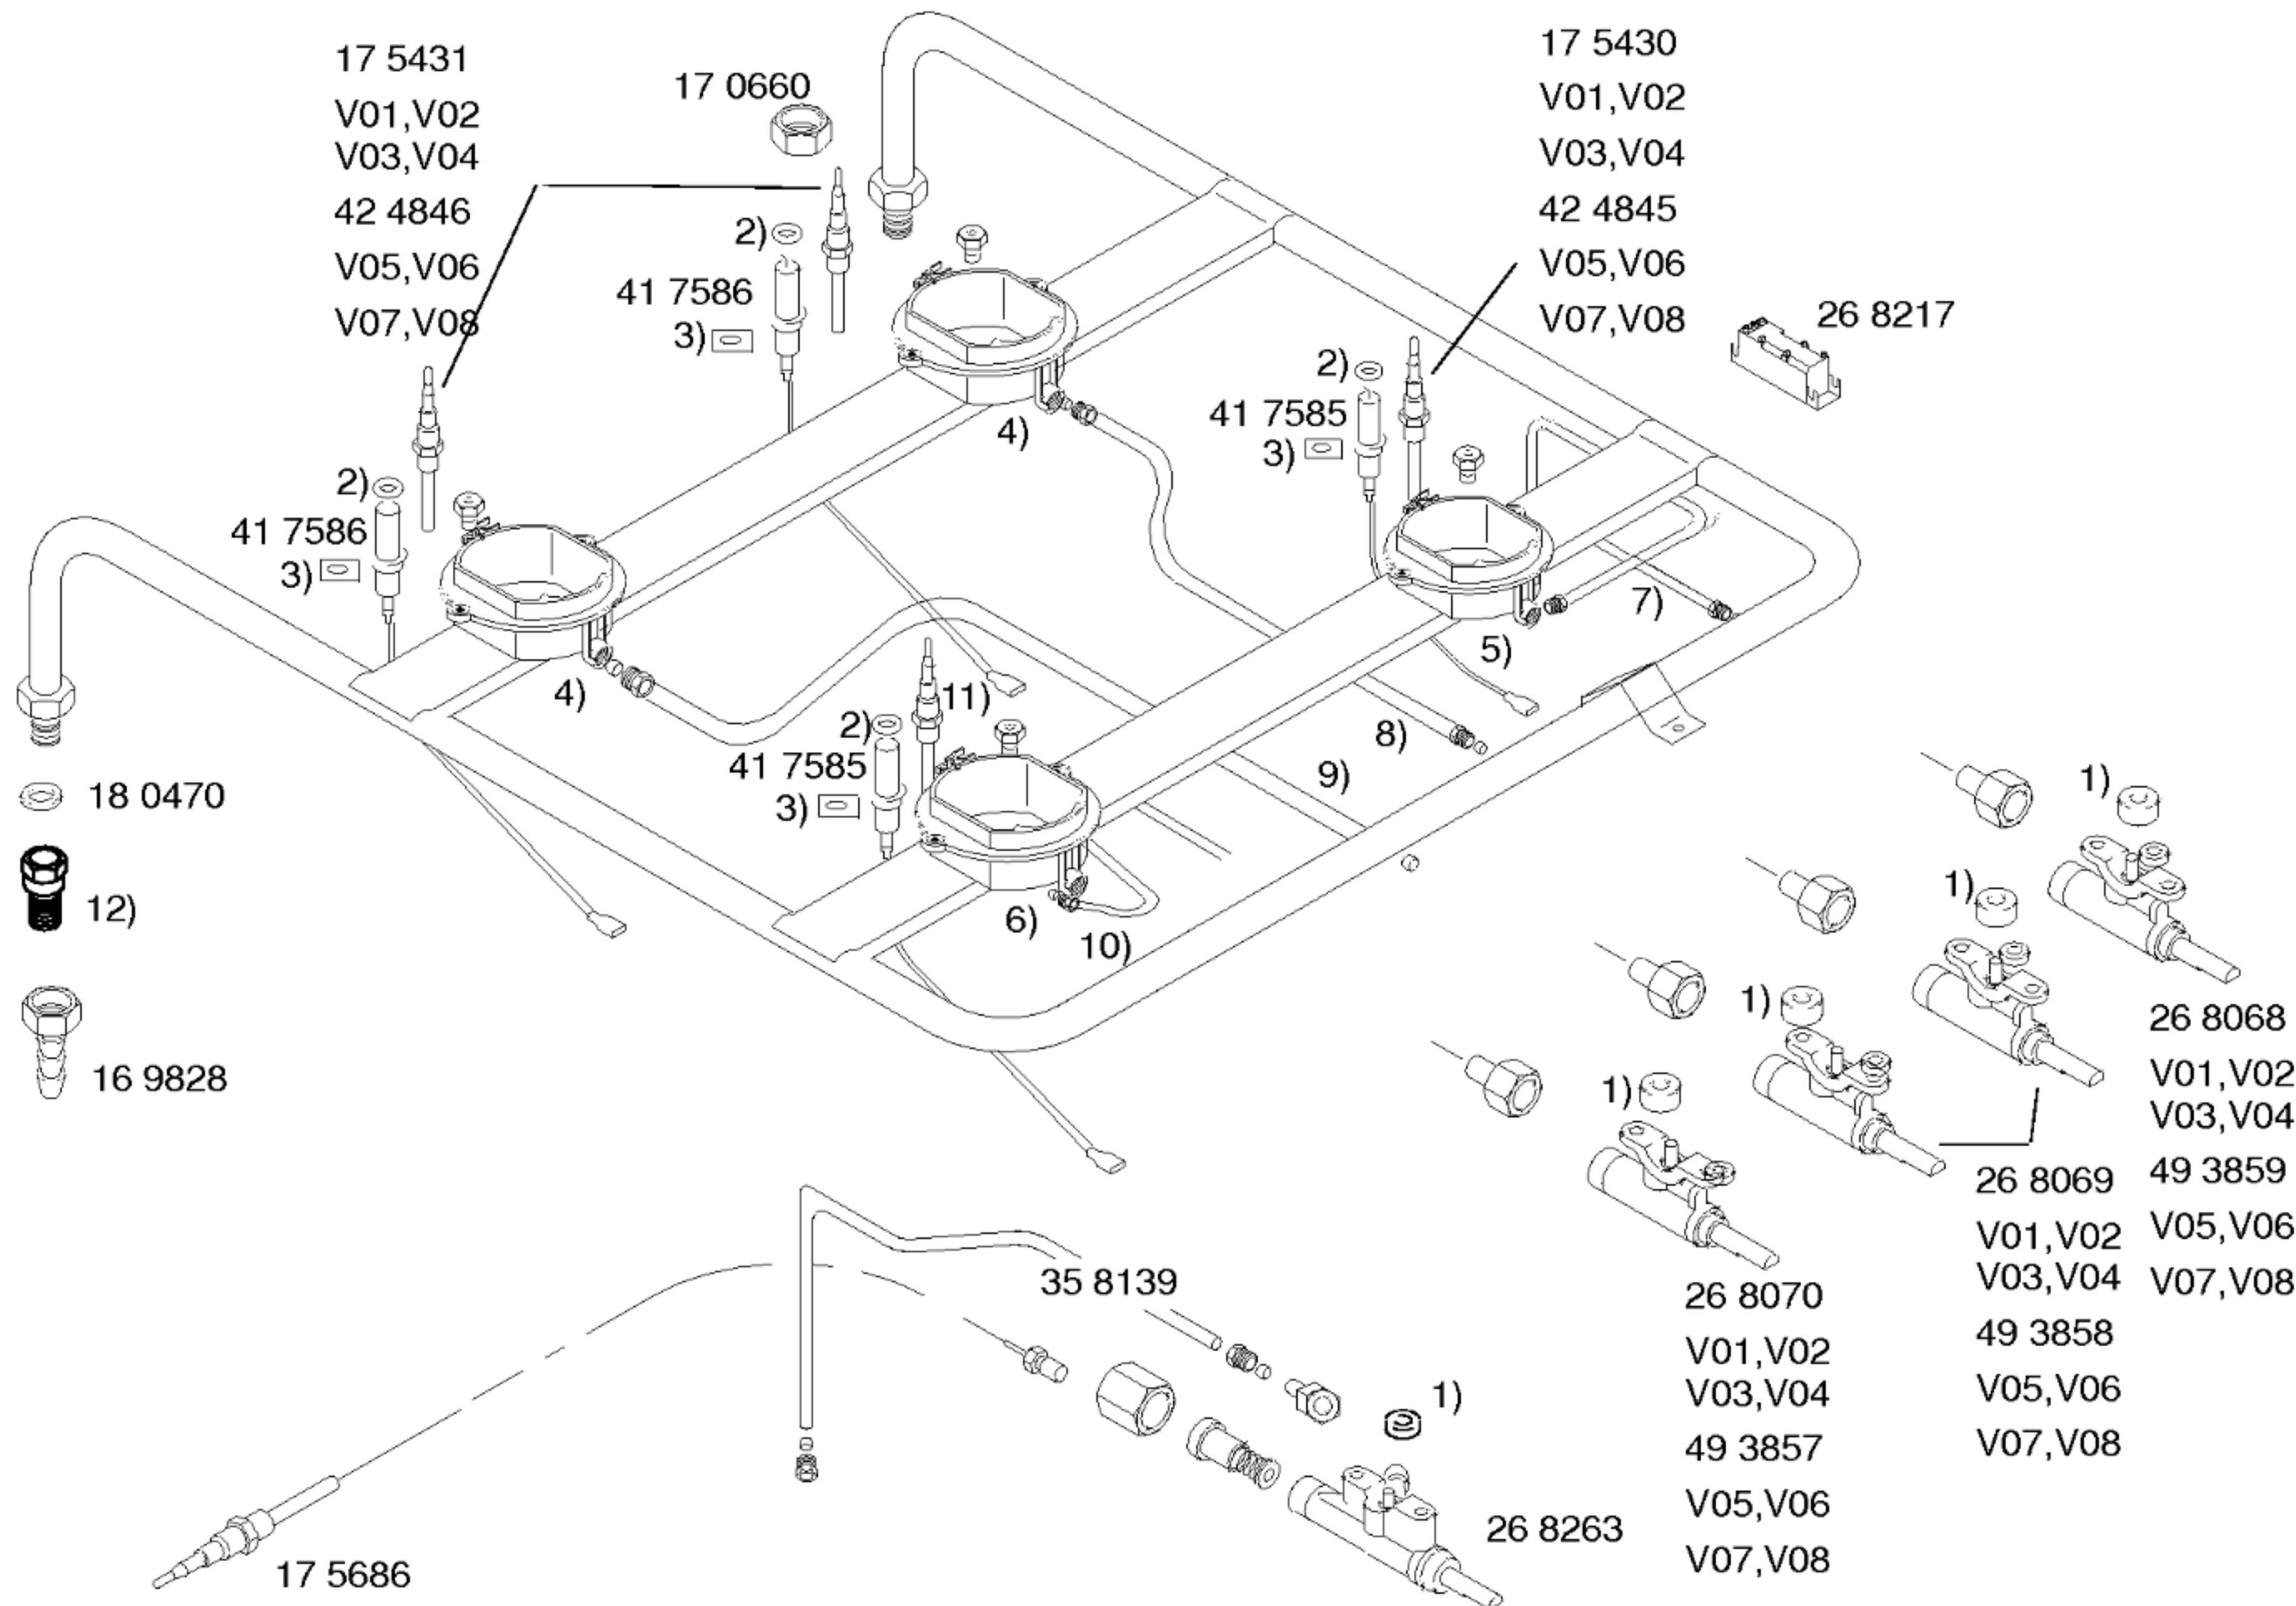

- 1) 16 9339
- 2) 17 3894
- 3) 17 3895
- 4) 26 7950
- 5) 26 7951
- 6) 26 7949
- 7) 35 8189
- 8) 35 8190
- 9) 35 8188
- 10) 35 8187
- 11) 17 5432

V01,V02,V03,V04

42 4847

V05,V06,V07

12) 18 1018-ISO8

Konisch

41 8147-ISO228

Parallel

Duesensatz
Fluelligas
50mBar (G30)
18 9042

Duesensatz Für:
EG H/E G20 20mbar
17 5535

FG G30/31 30mbar
17 5534

EG H/E G31 30mbar
(inkl.Bypass-Dusen)
41 7594

FG G30/31 30mbar
(inkl.Bypass-Dusen)
41 7843