


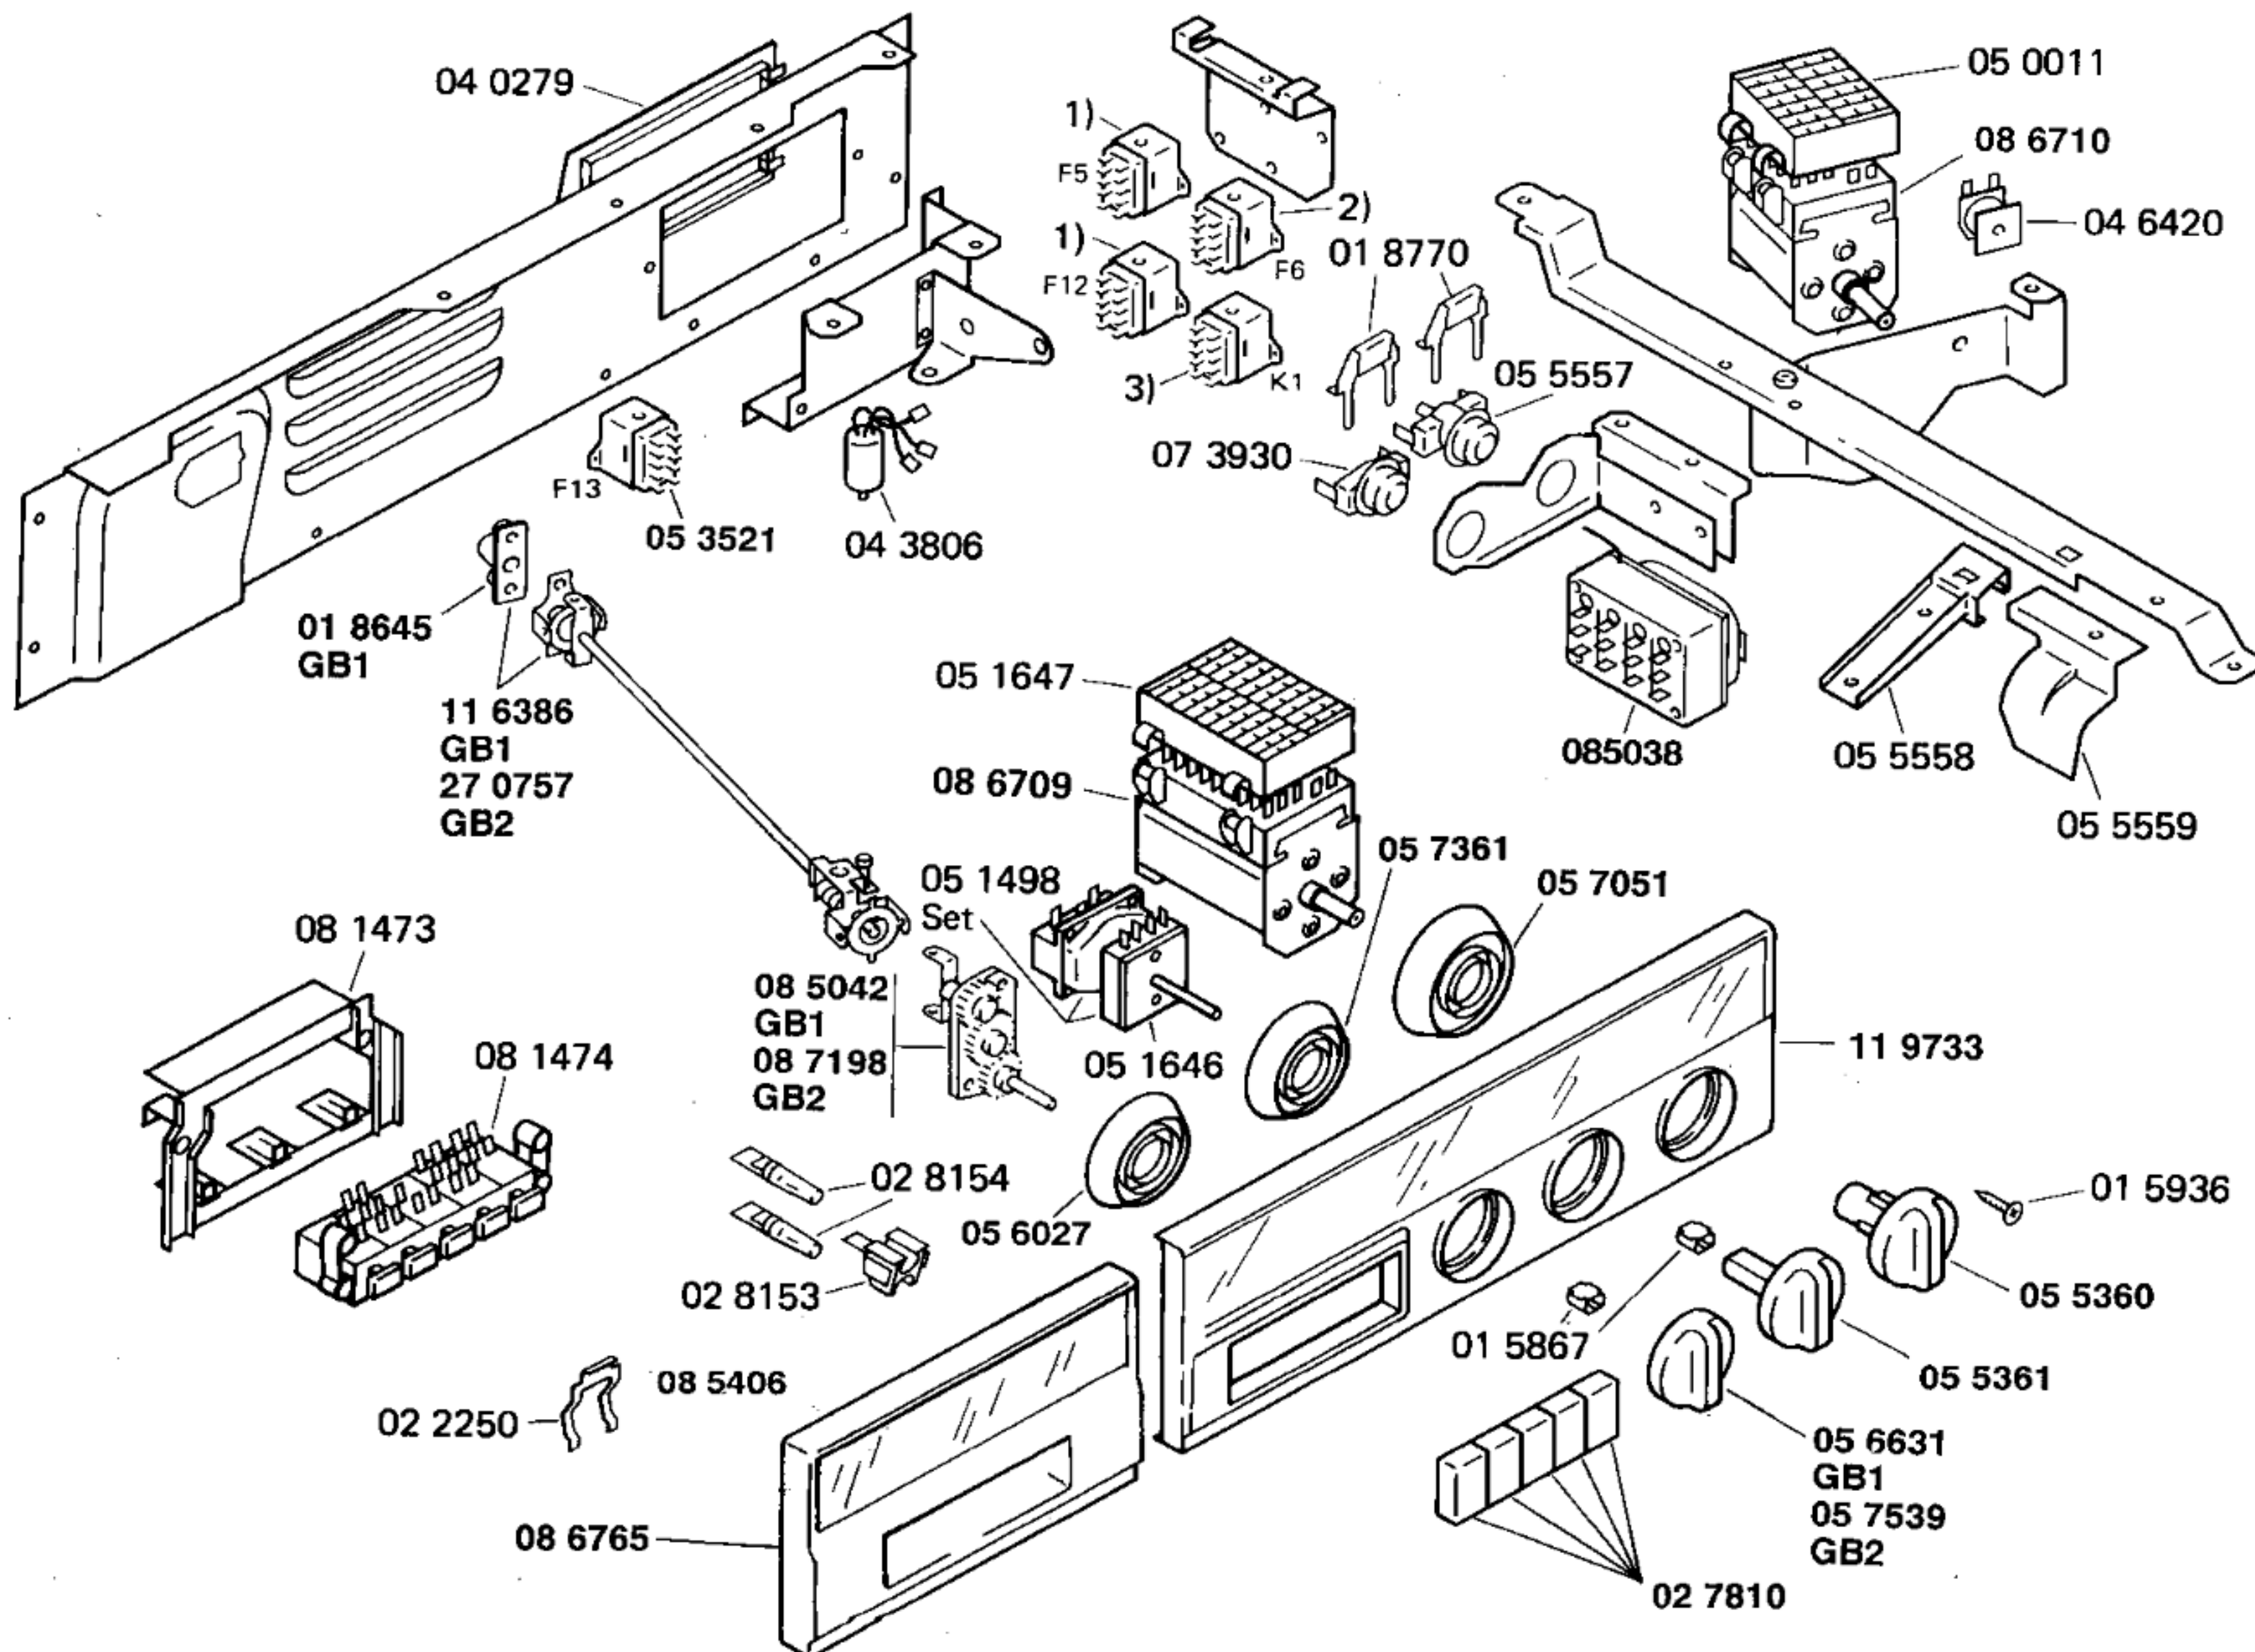



Aufstellanweisung
51 1584
(D,F,I,NL,GB)
Gebrauchsanweisung
51 3935
(GB)
Programmtabelle
51 3762
(D,F,I,NL,GB)

1) 05 3521

2) 05 5621

3) 05 3521

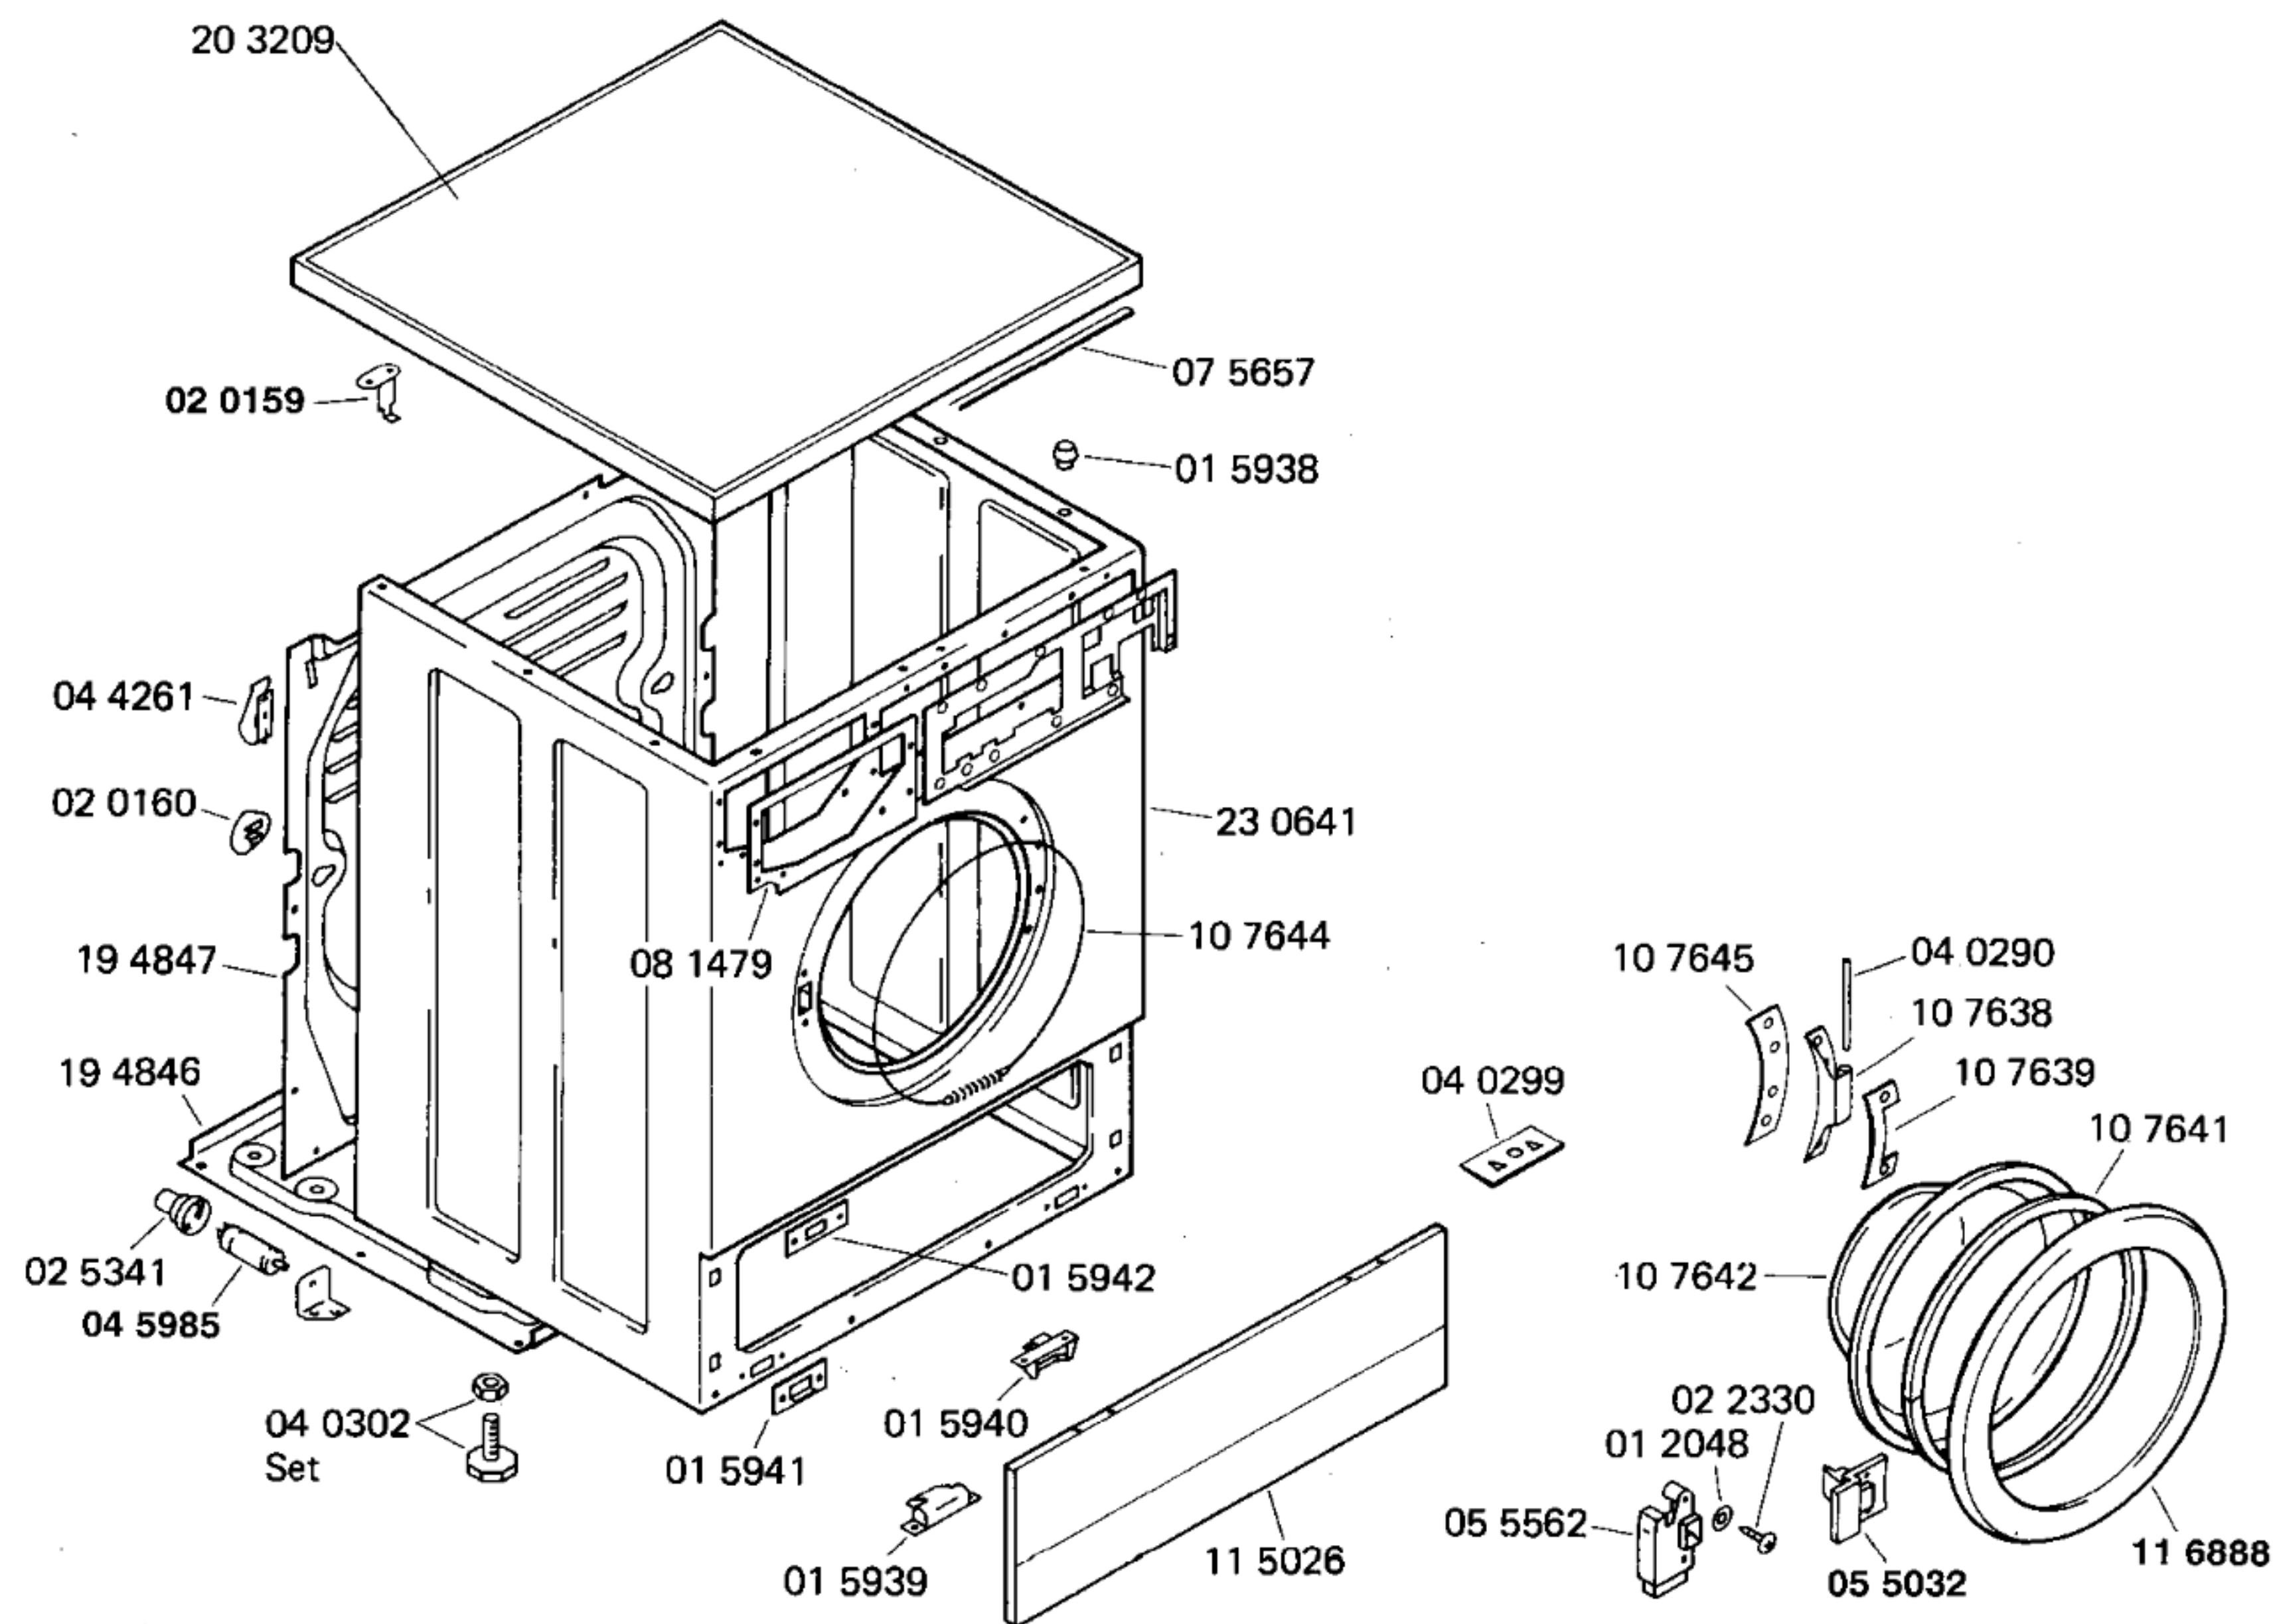

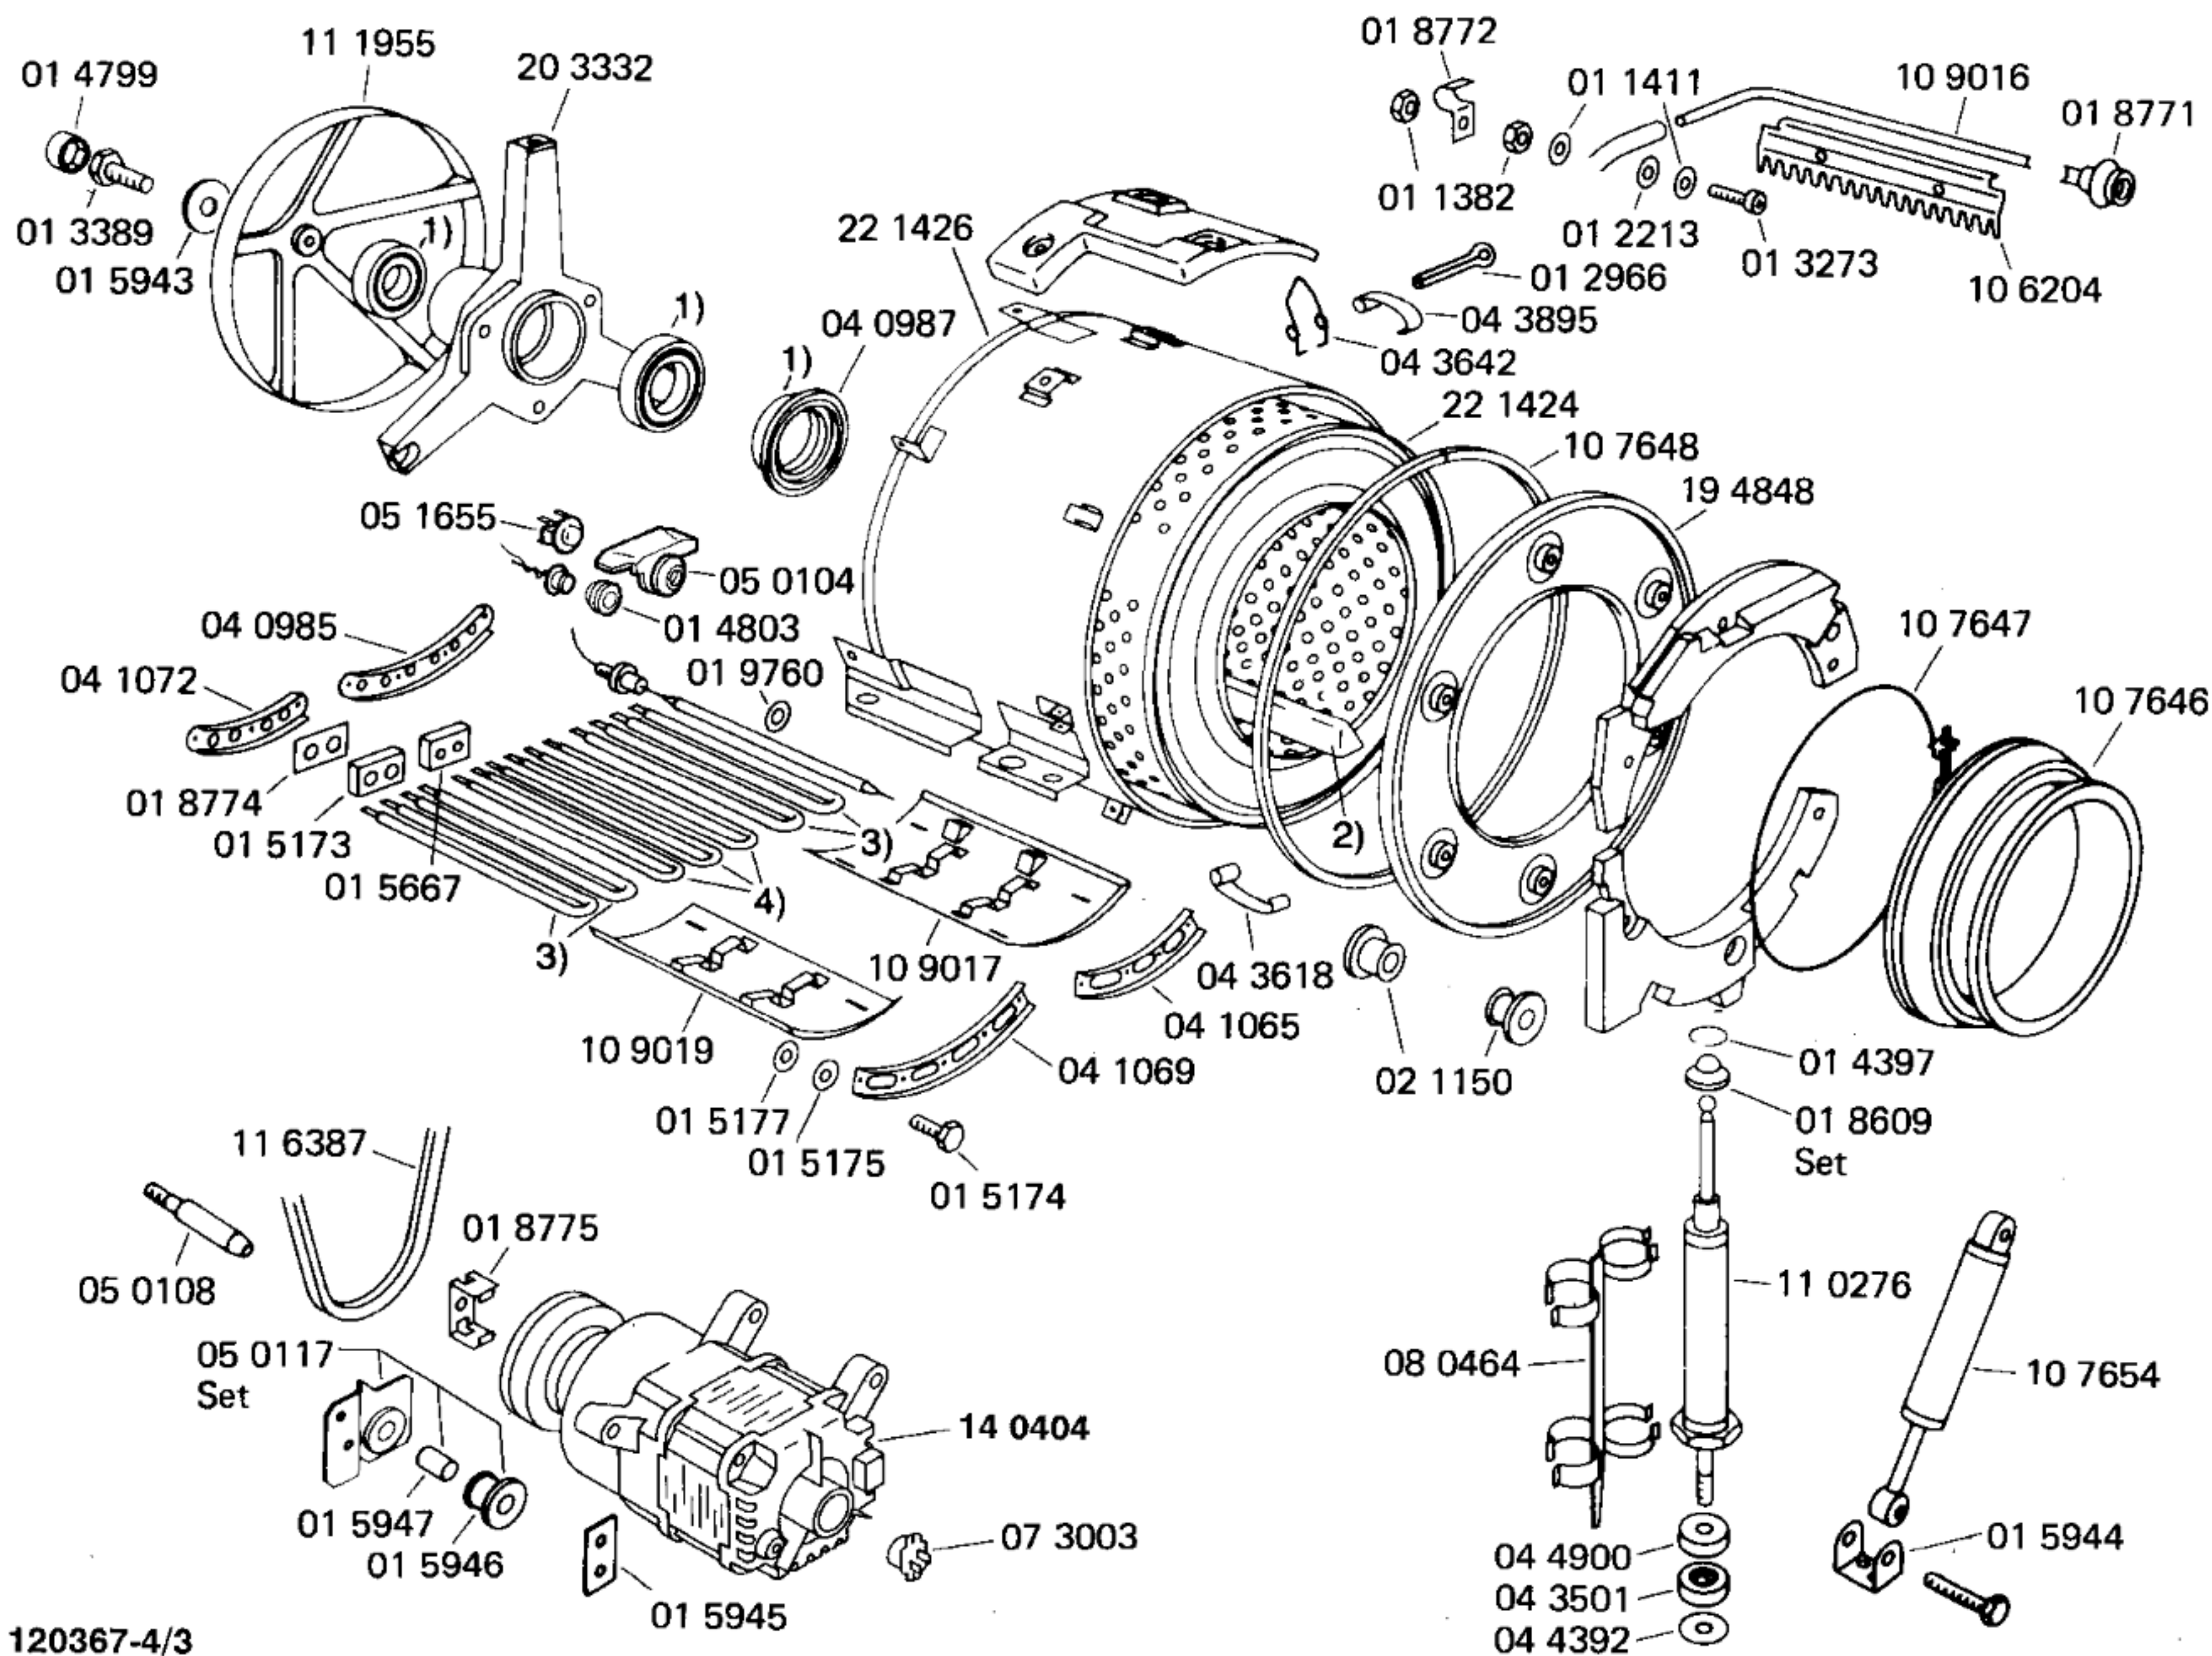

- 1) 10 8898
Set
- 2) 10 8892
- 3) 07 3925
110 V
07 5317
120 V
- 4) 08 1601
220 V
08 2898
240 V

