




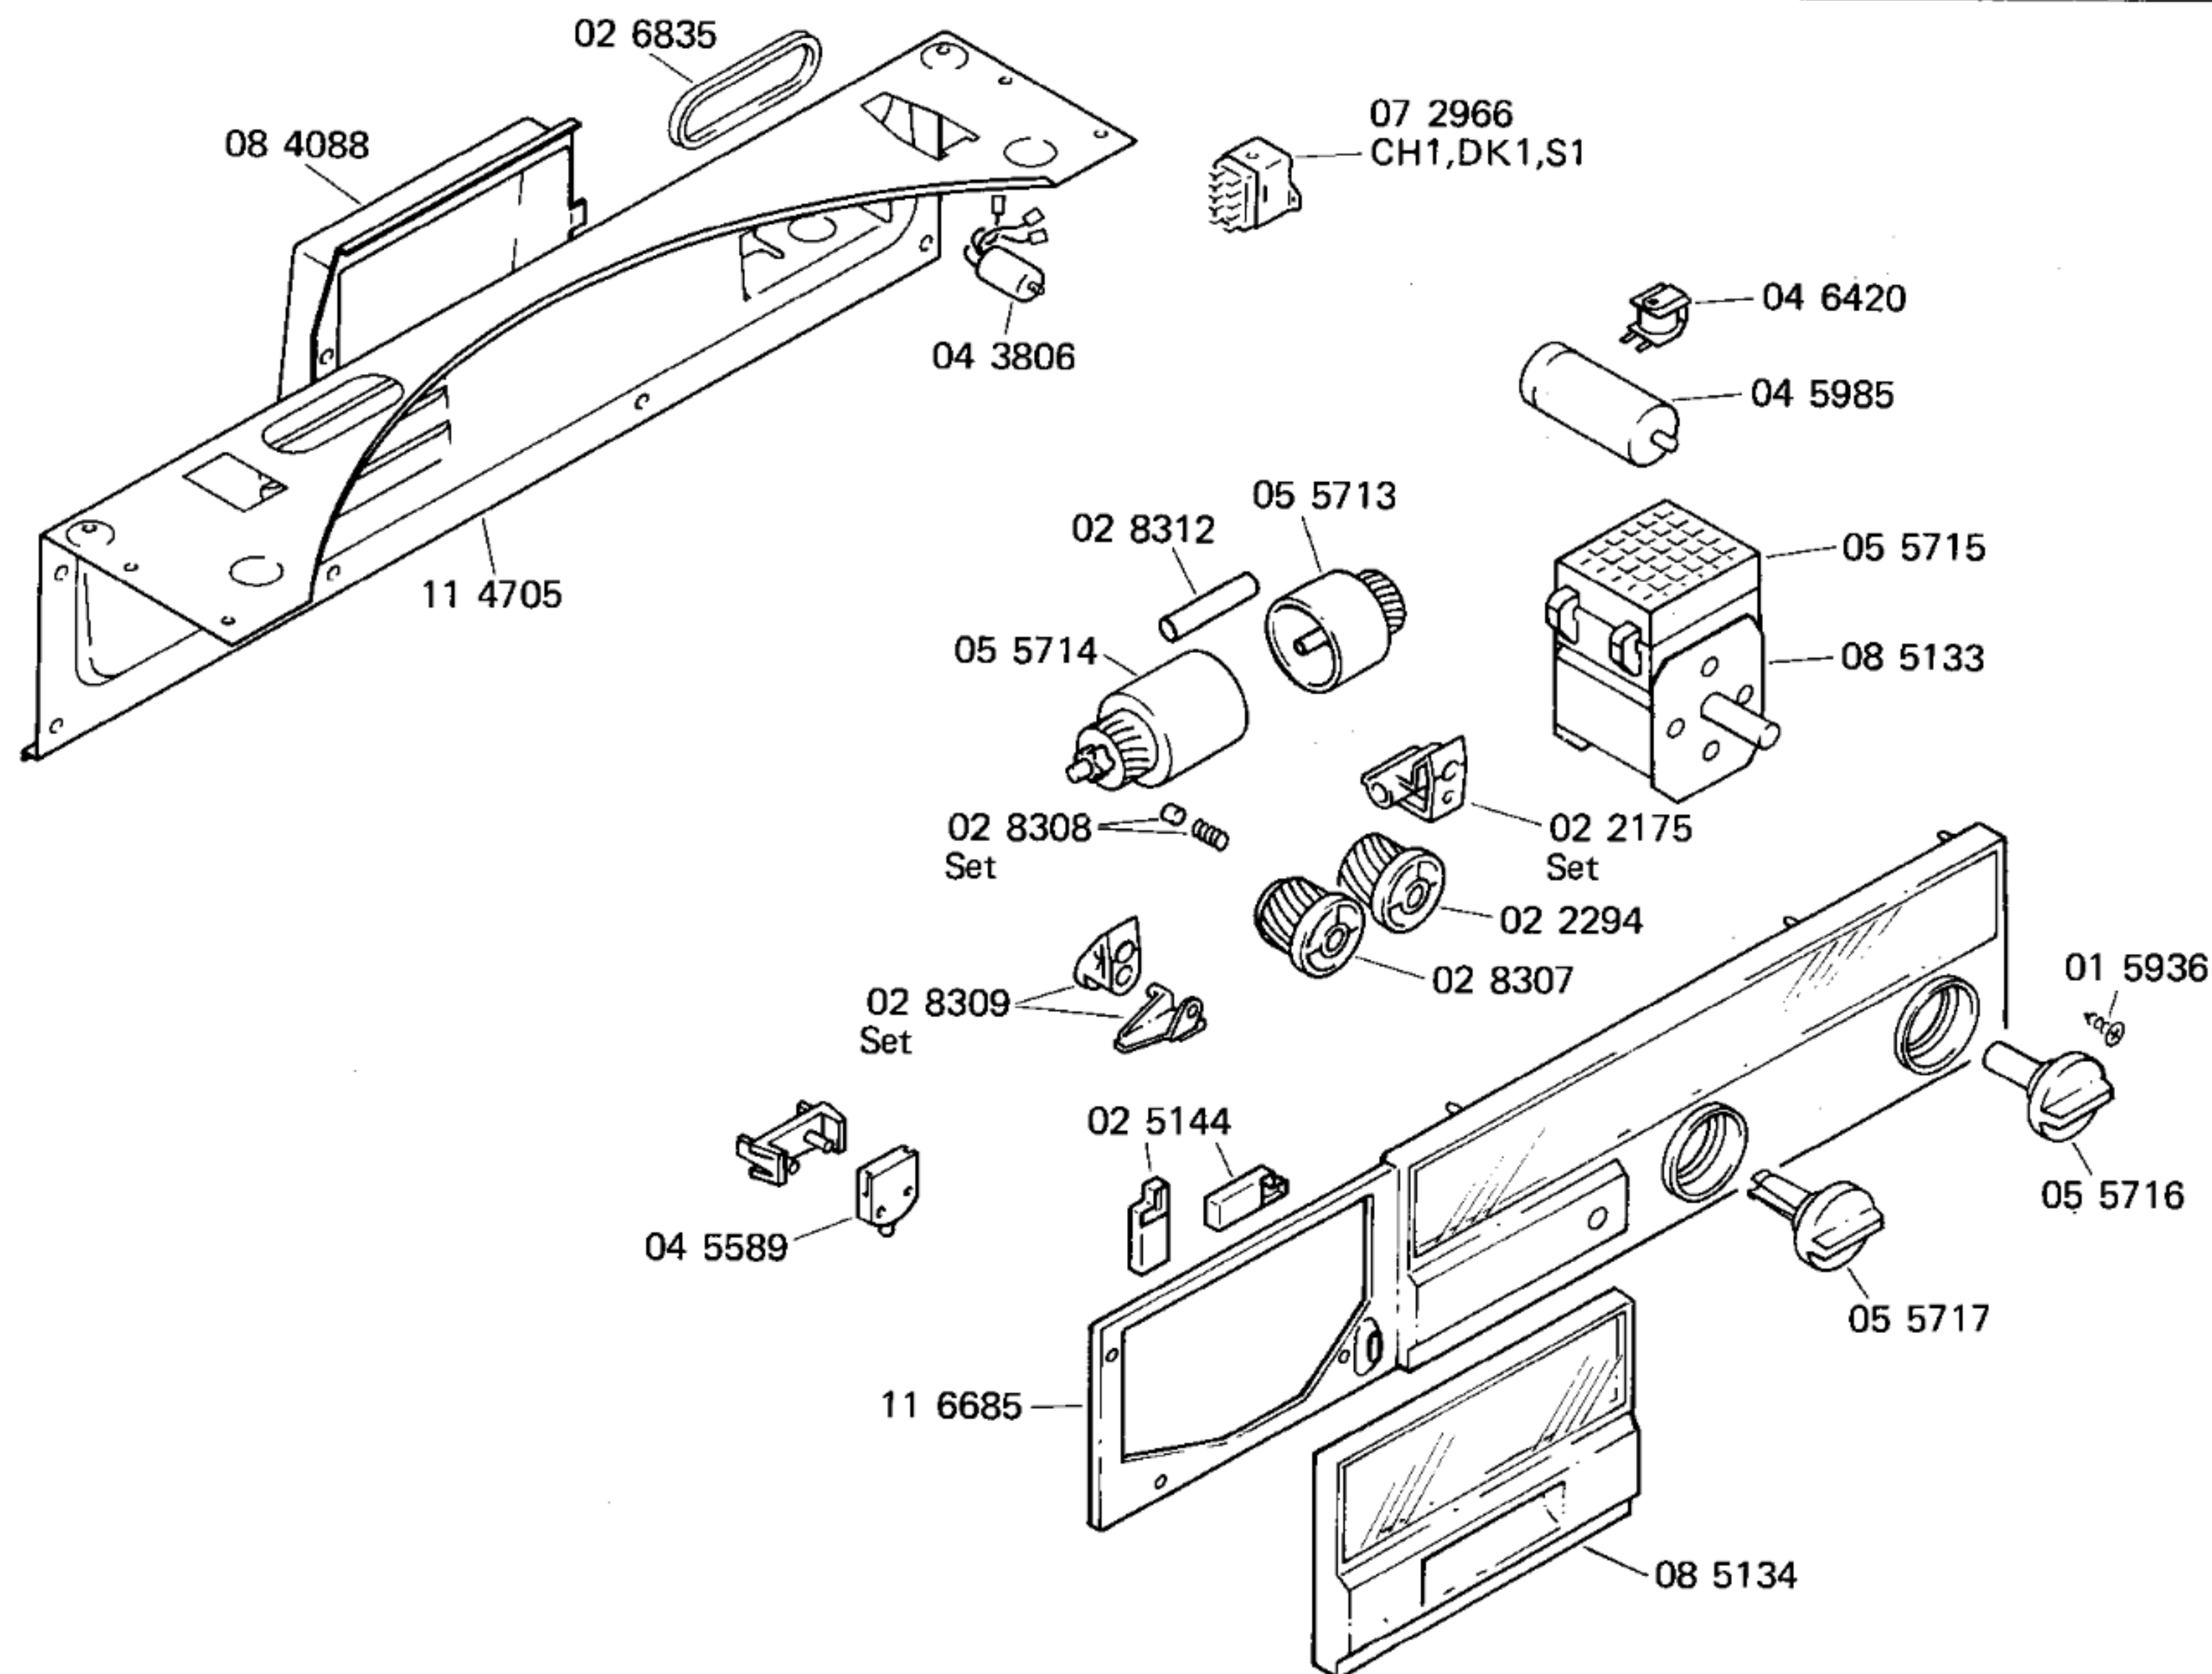


Aufstellanweisungen
51 2796
(D,GB,F,I,NL,E)
51 2797
(D,F,I,DK,S)
Gebrauchsanweisungen
51 2791
(D,GB,F,I,NL)
51 2792
(D,F,I,DK,S)

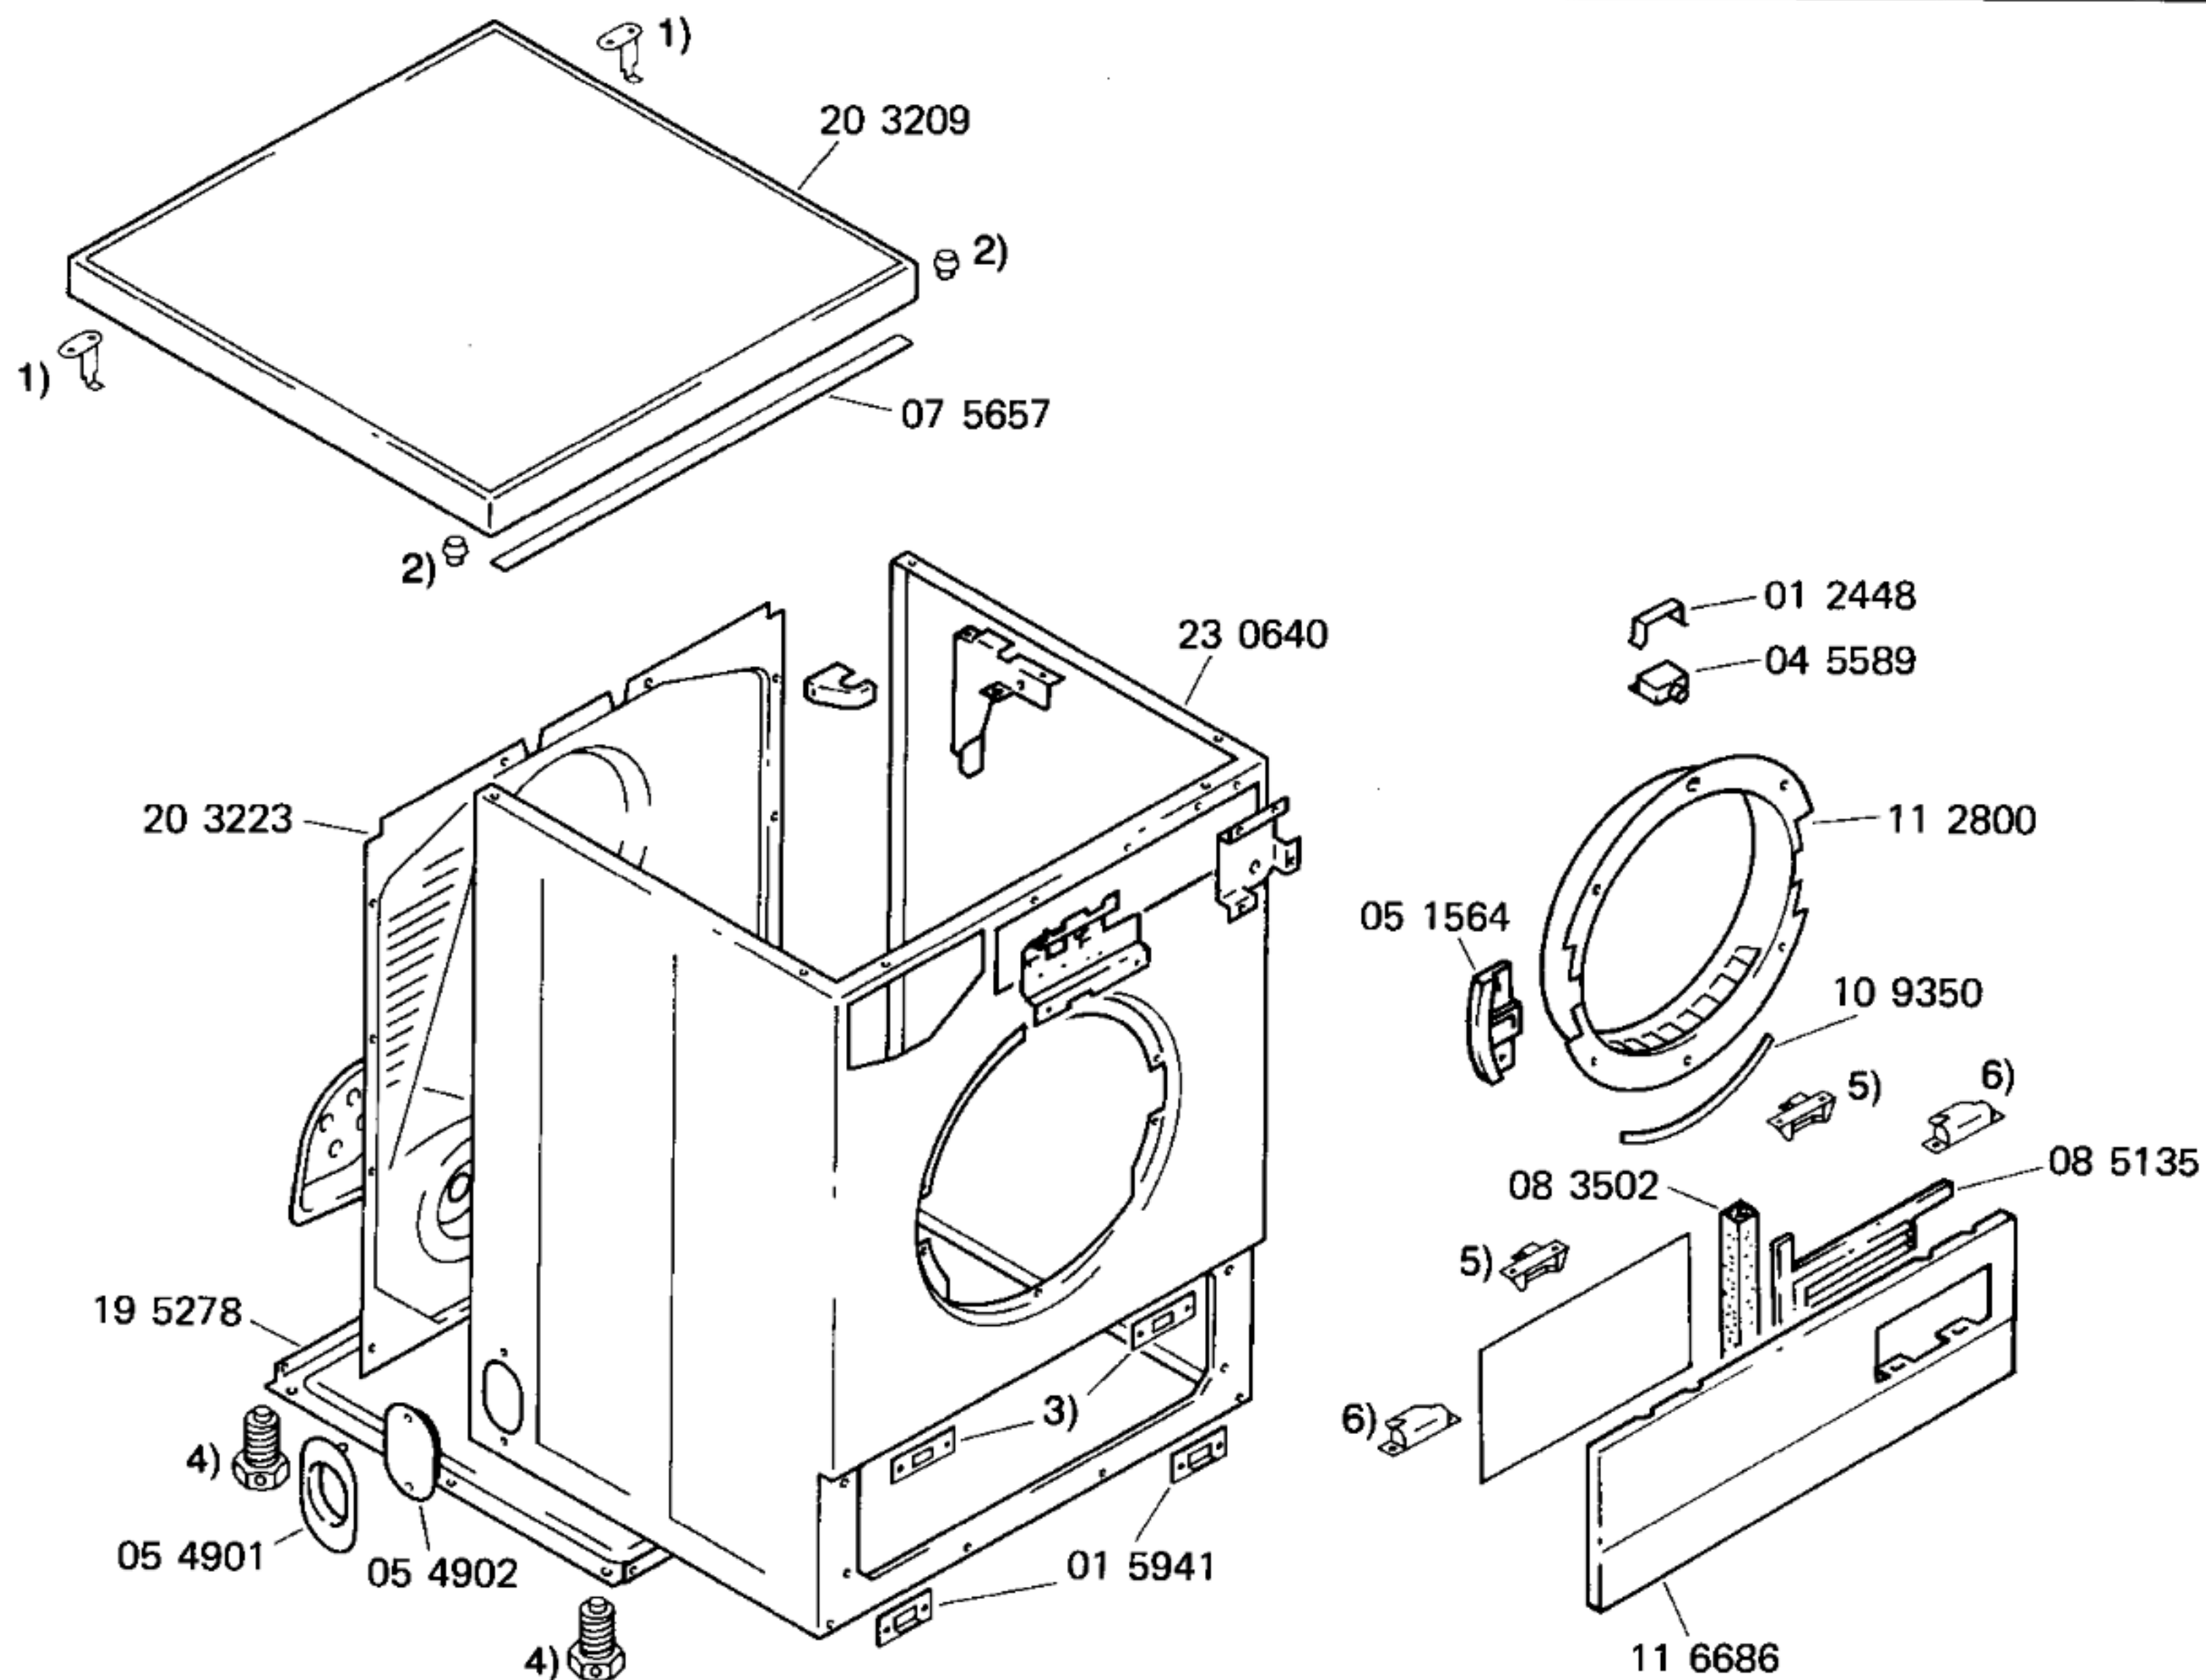


- 1) 02 2241
- 2) 01 5938
- 3) 01 5942
- 4) 05 1104
- 5) 01 5940
- 6) 02 8310

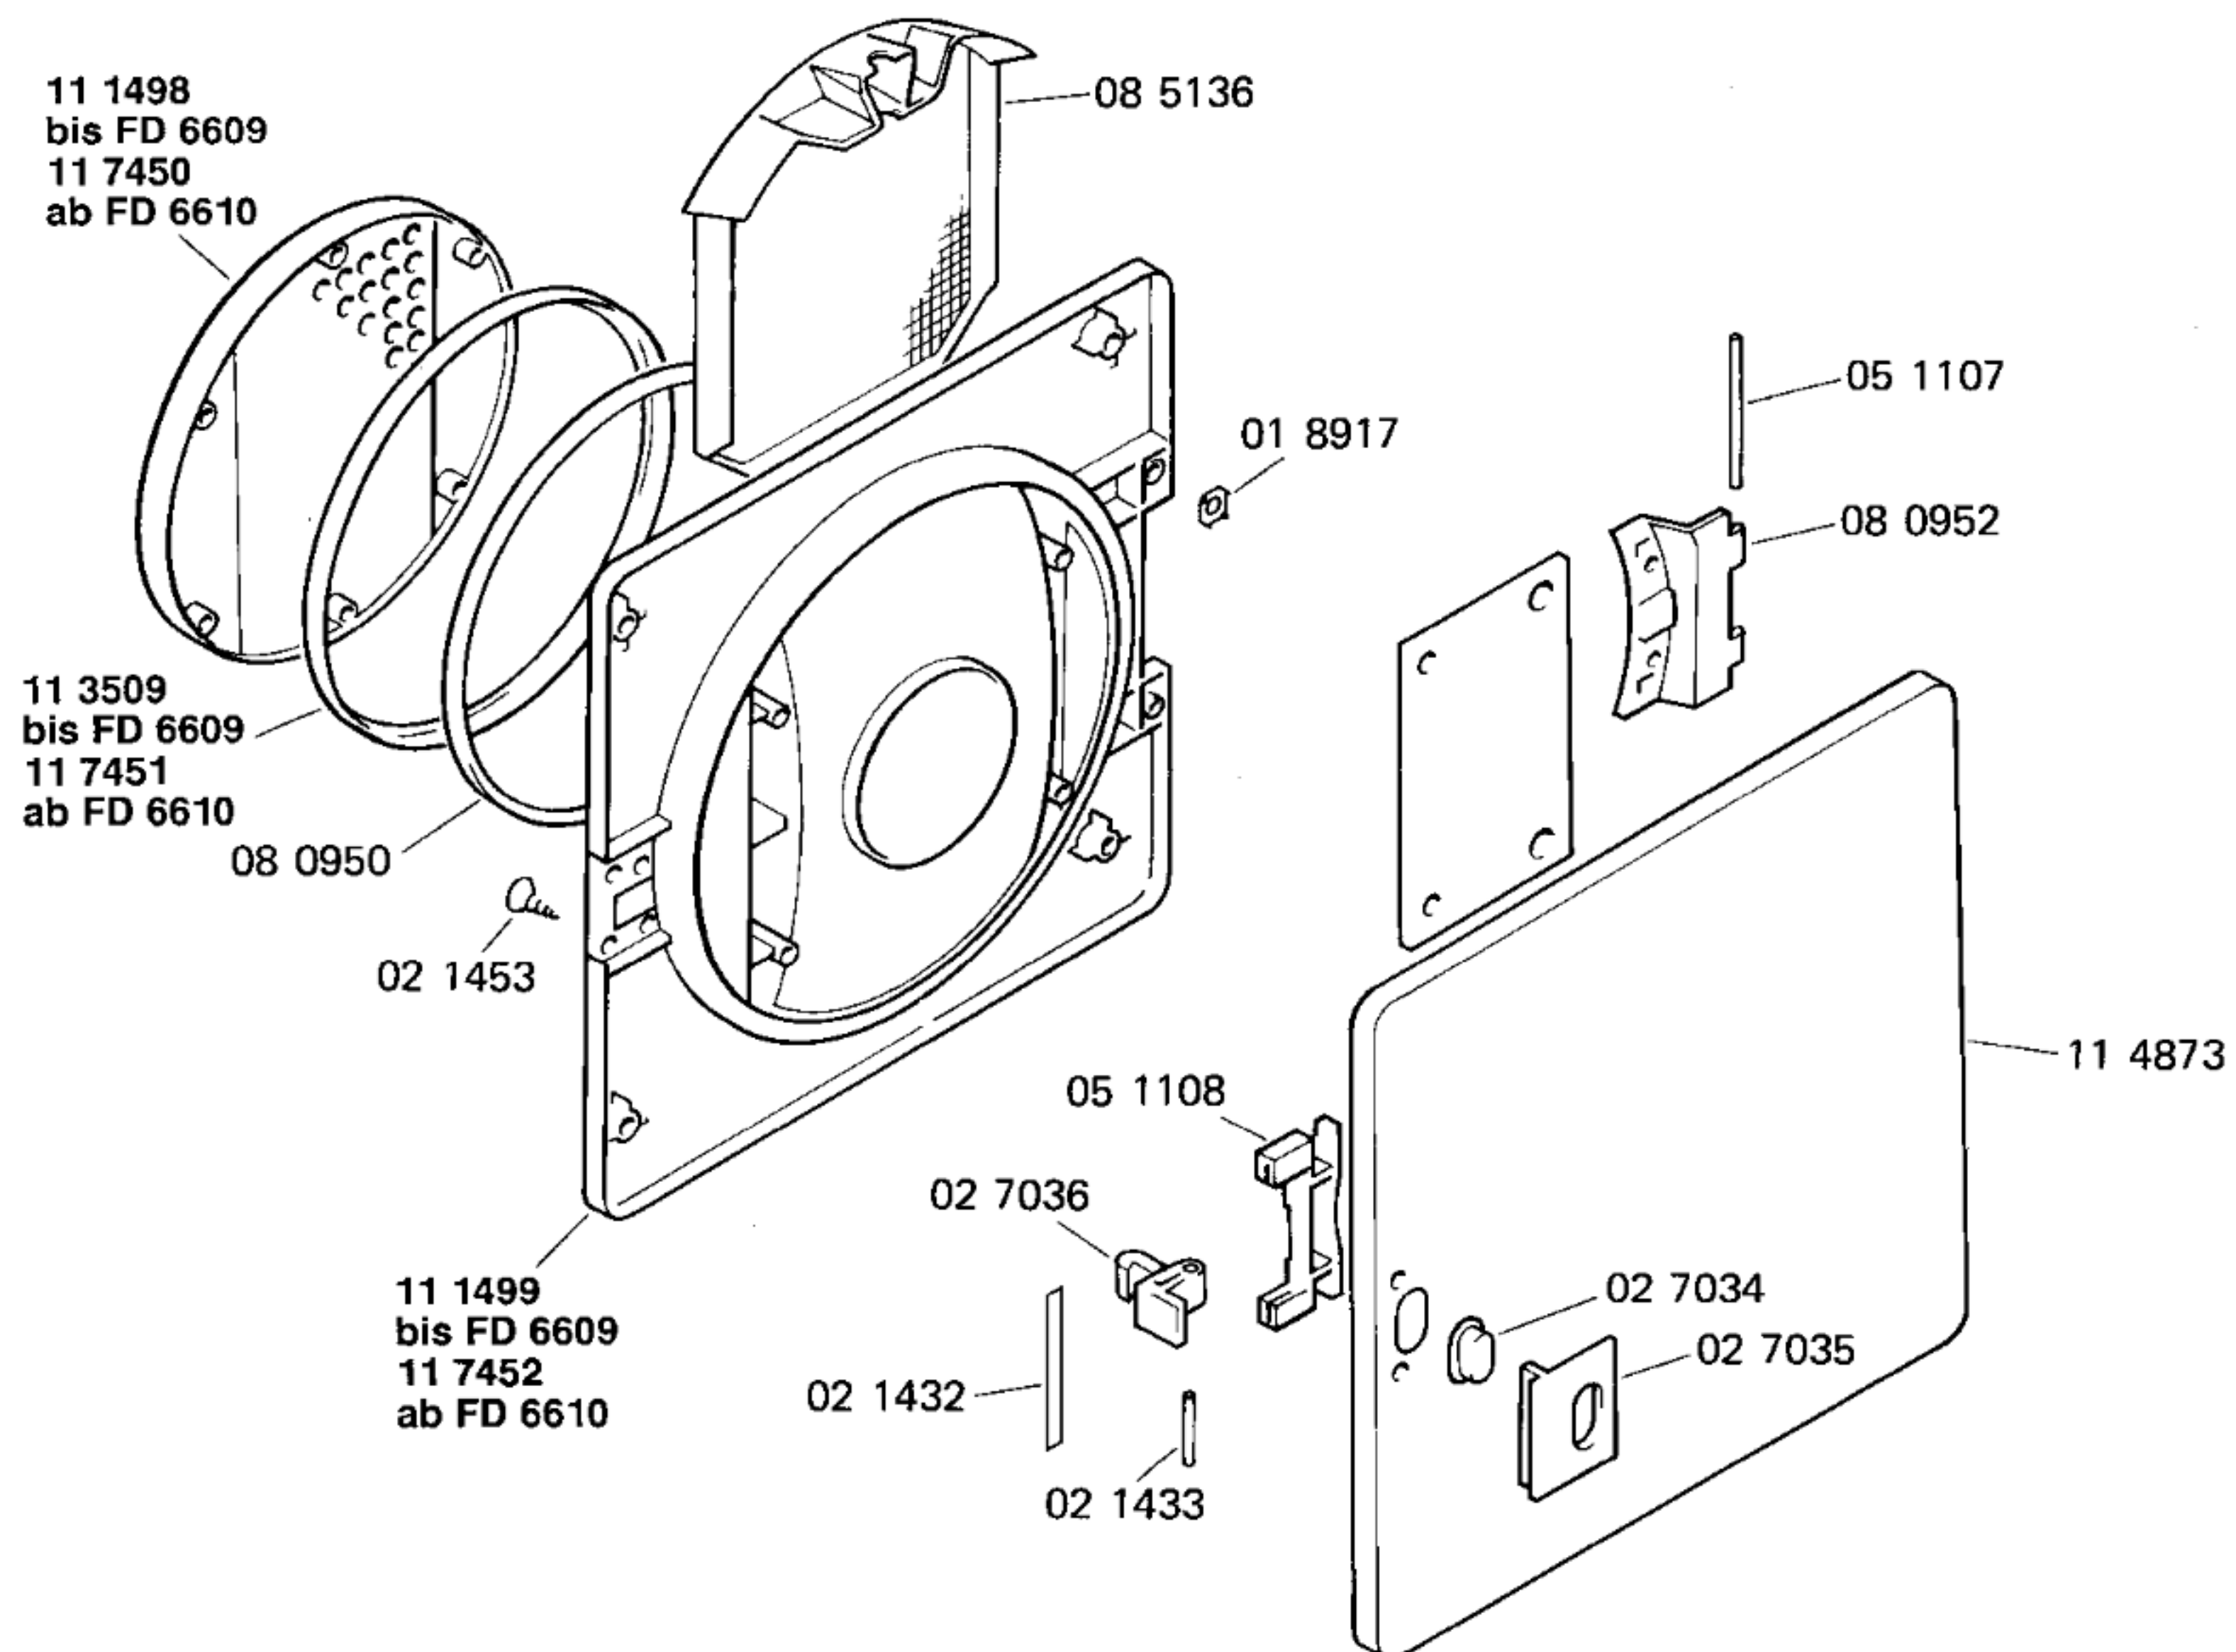

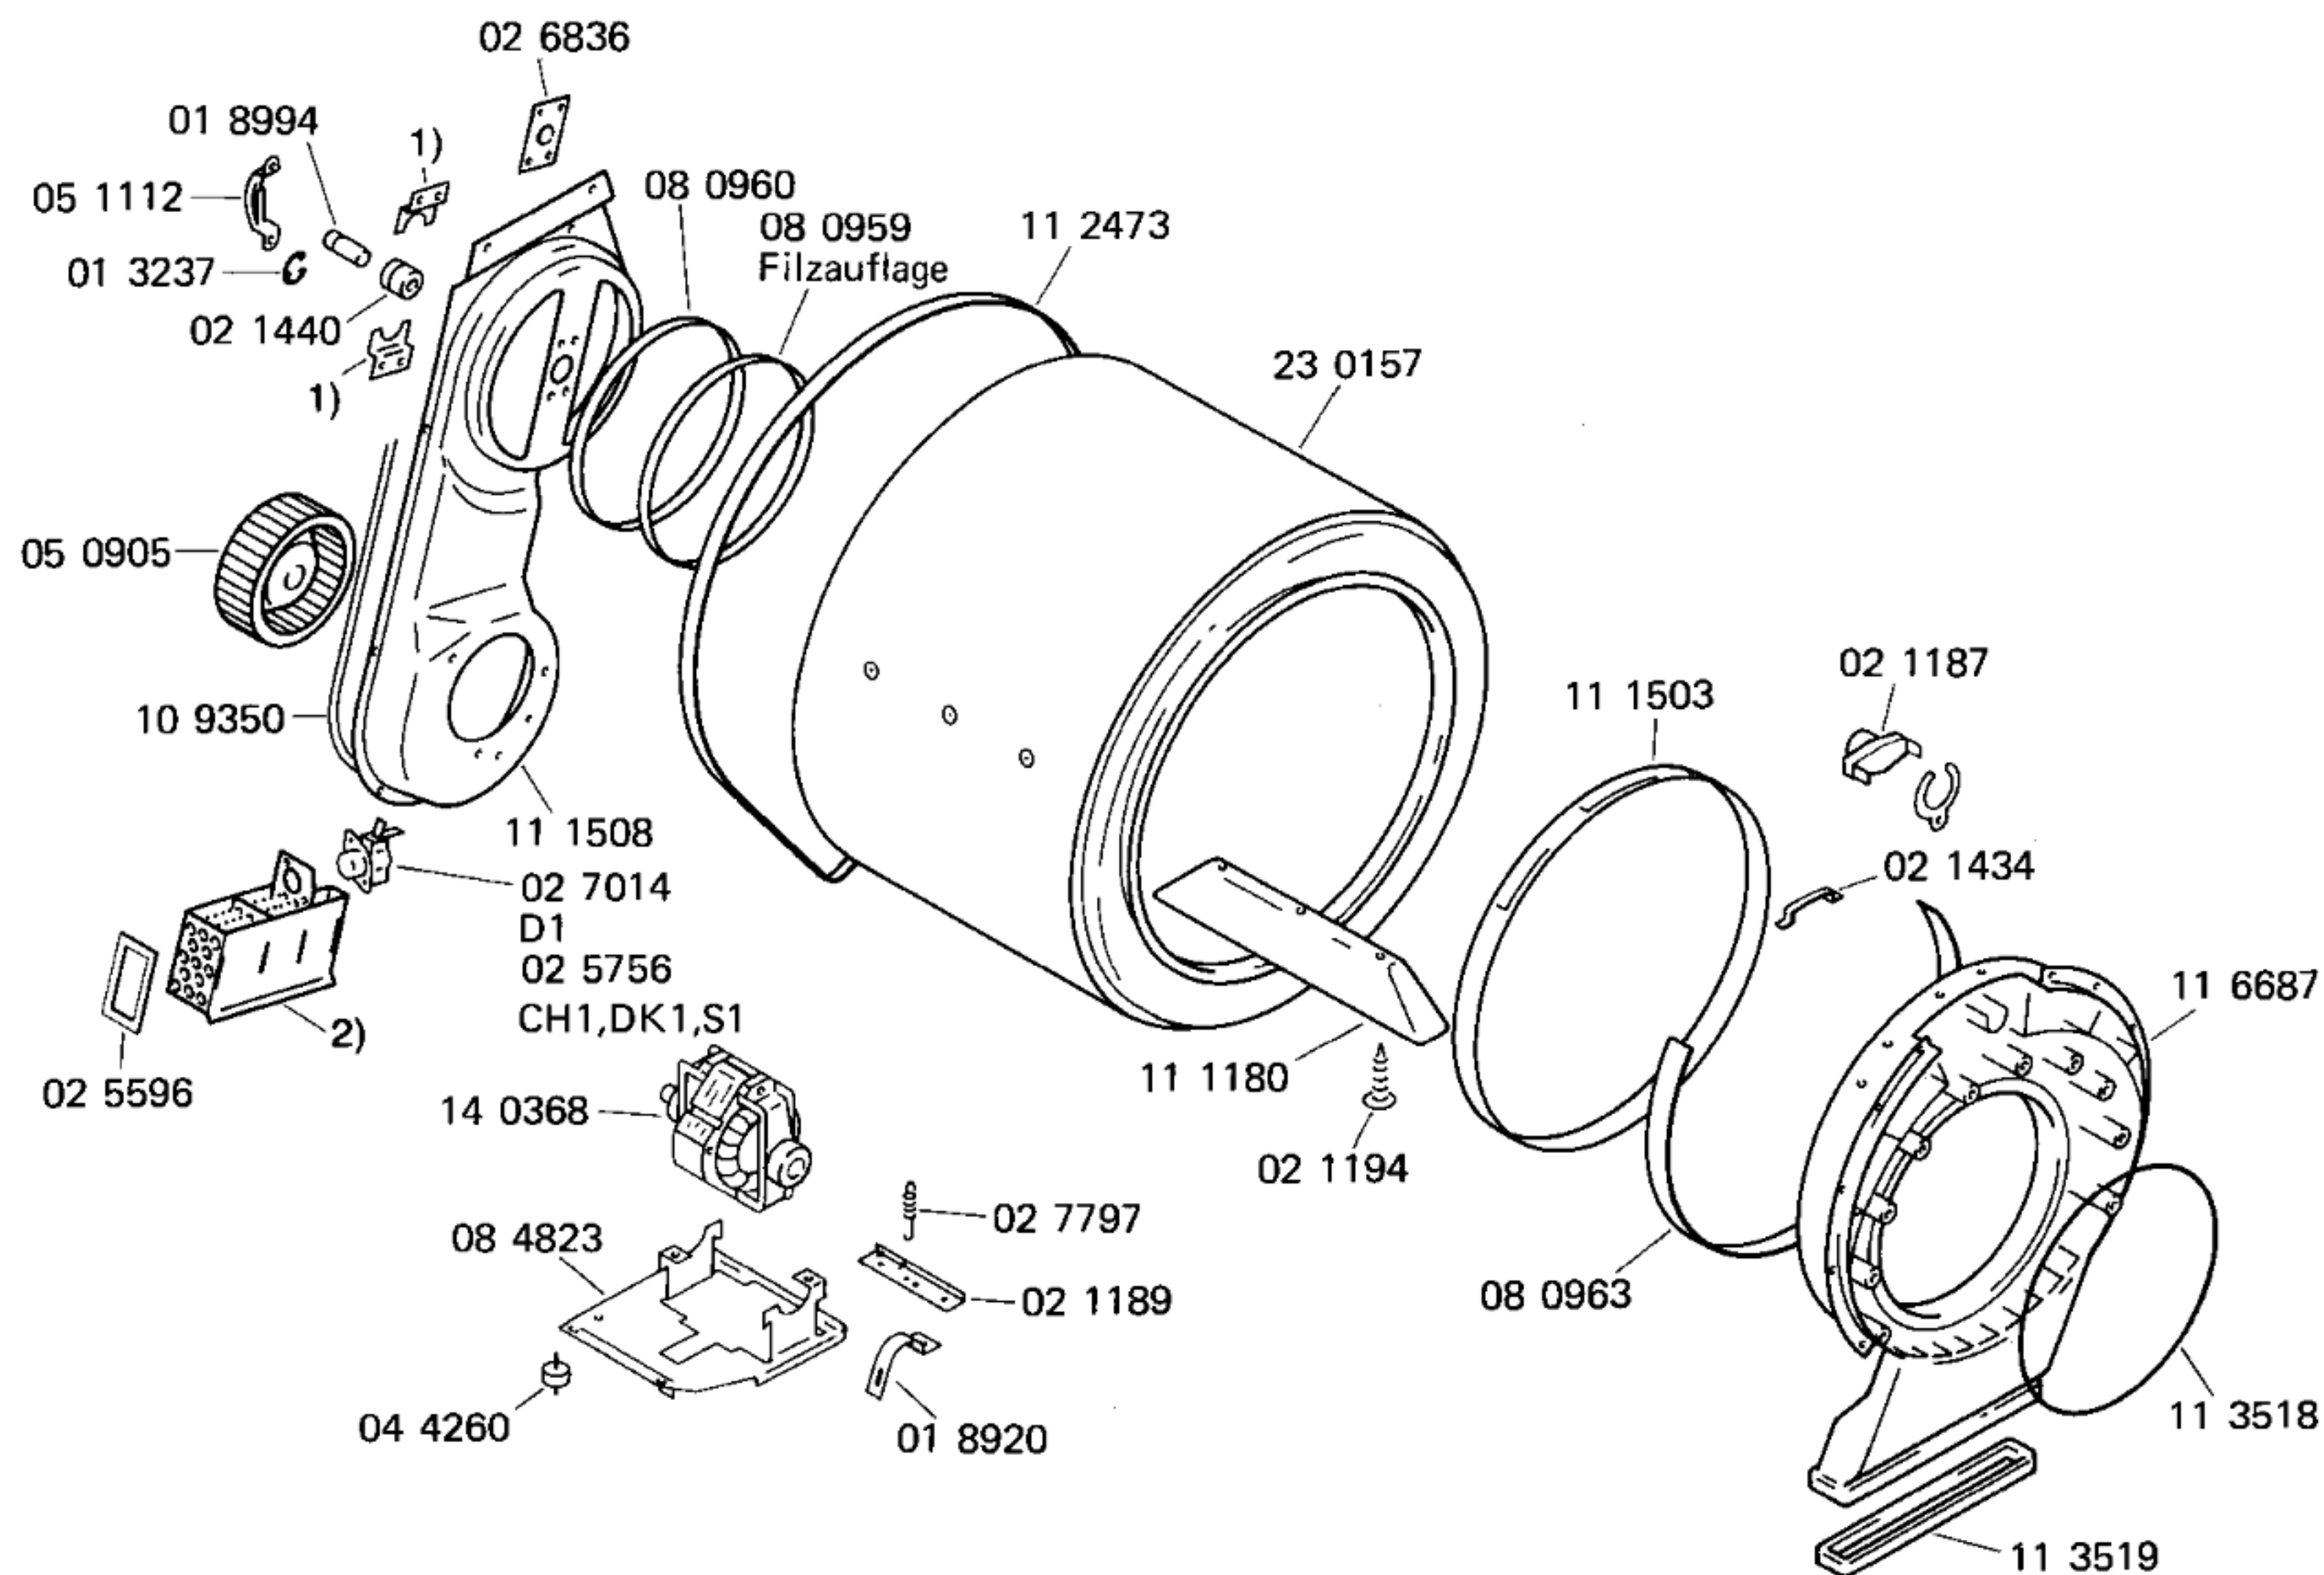

- 1) 02 1439
- 2) 08 7263
D1
08 1624
CH1,DK1,S1

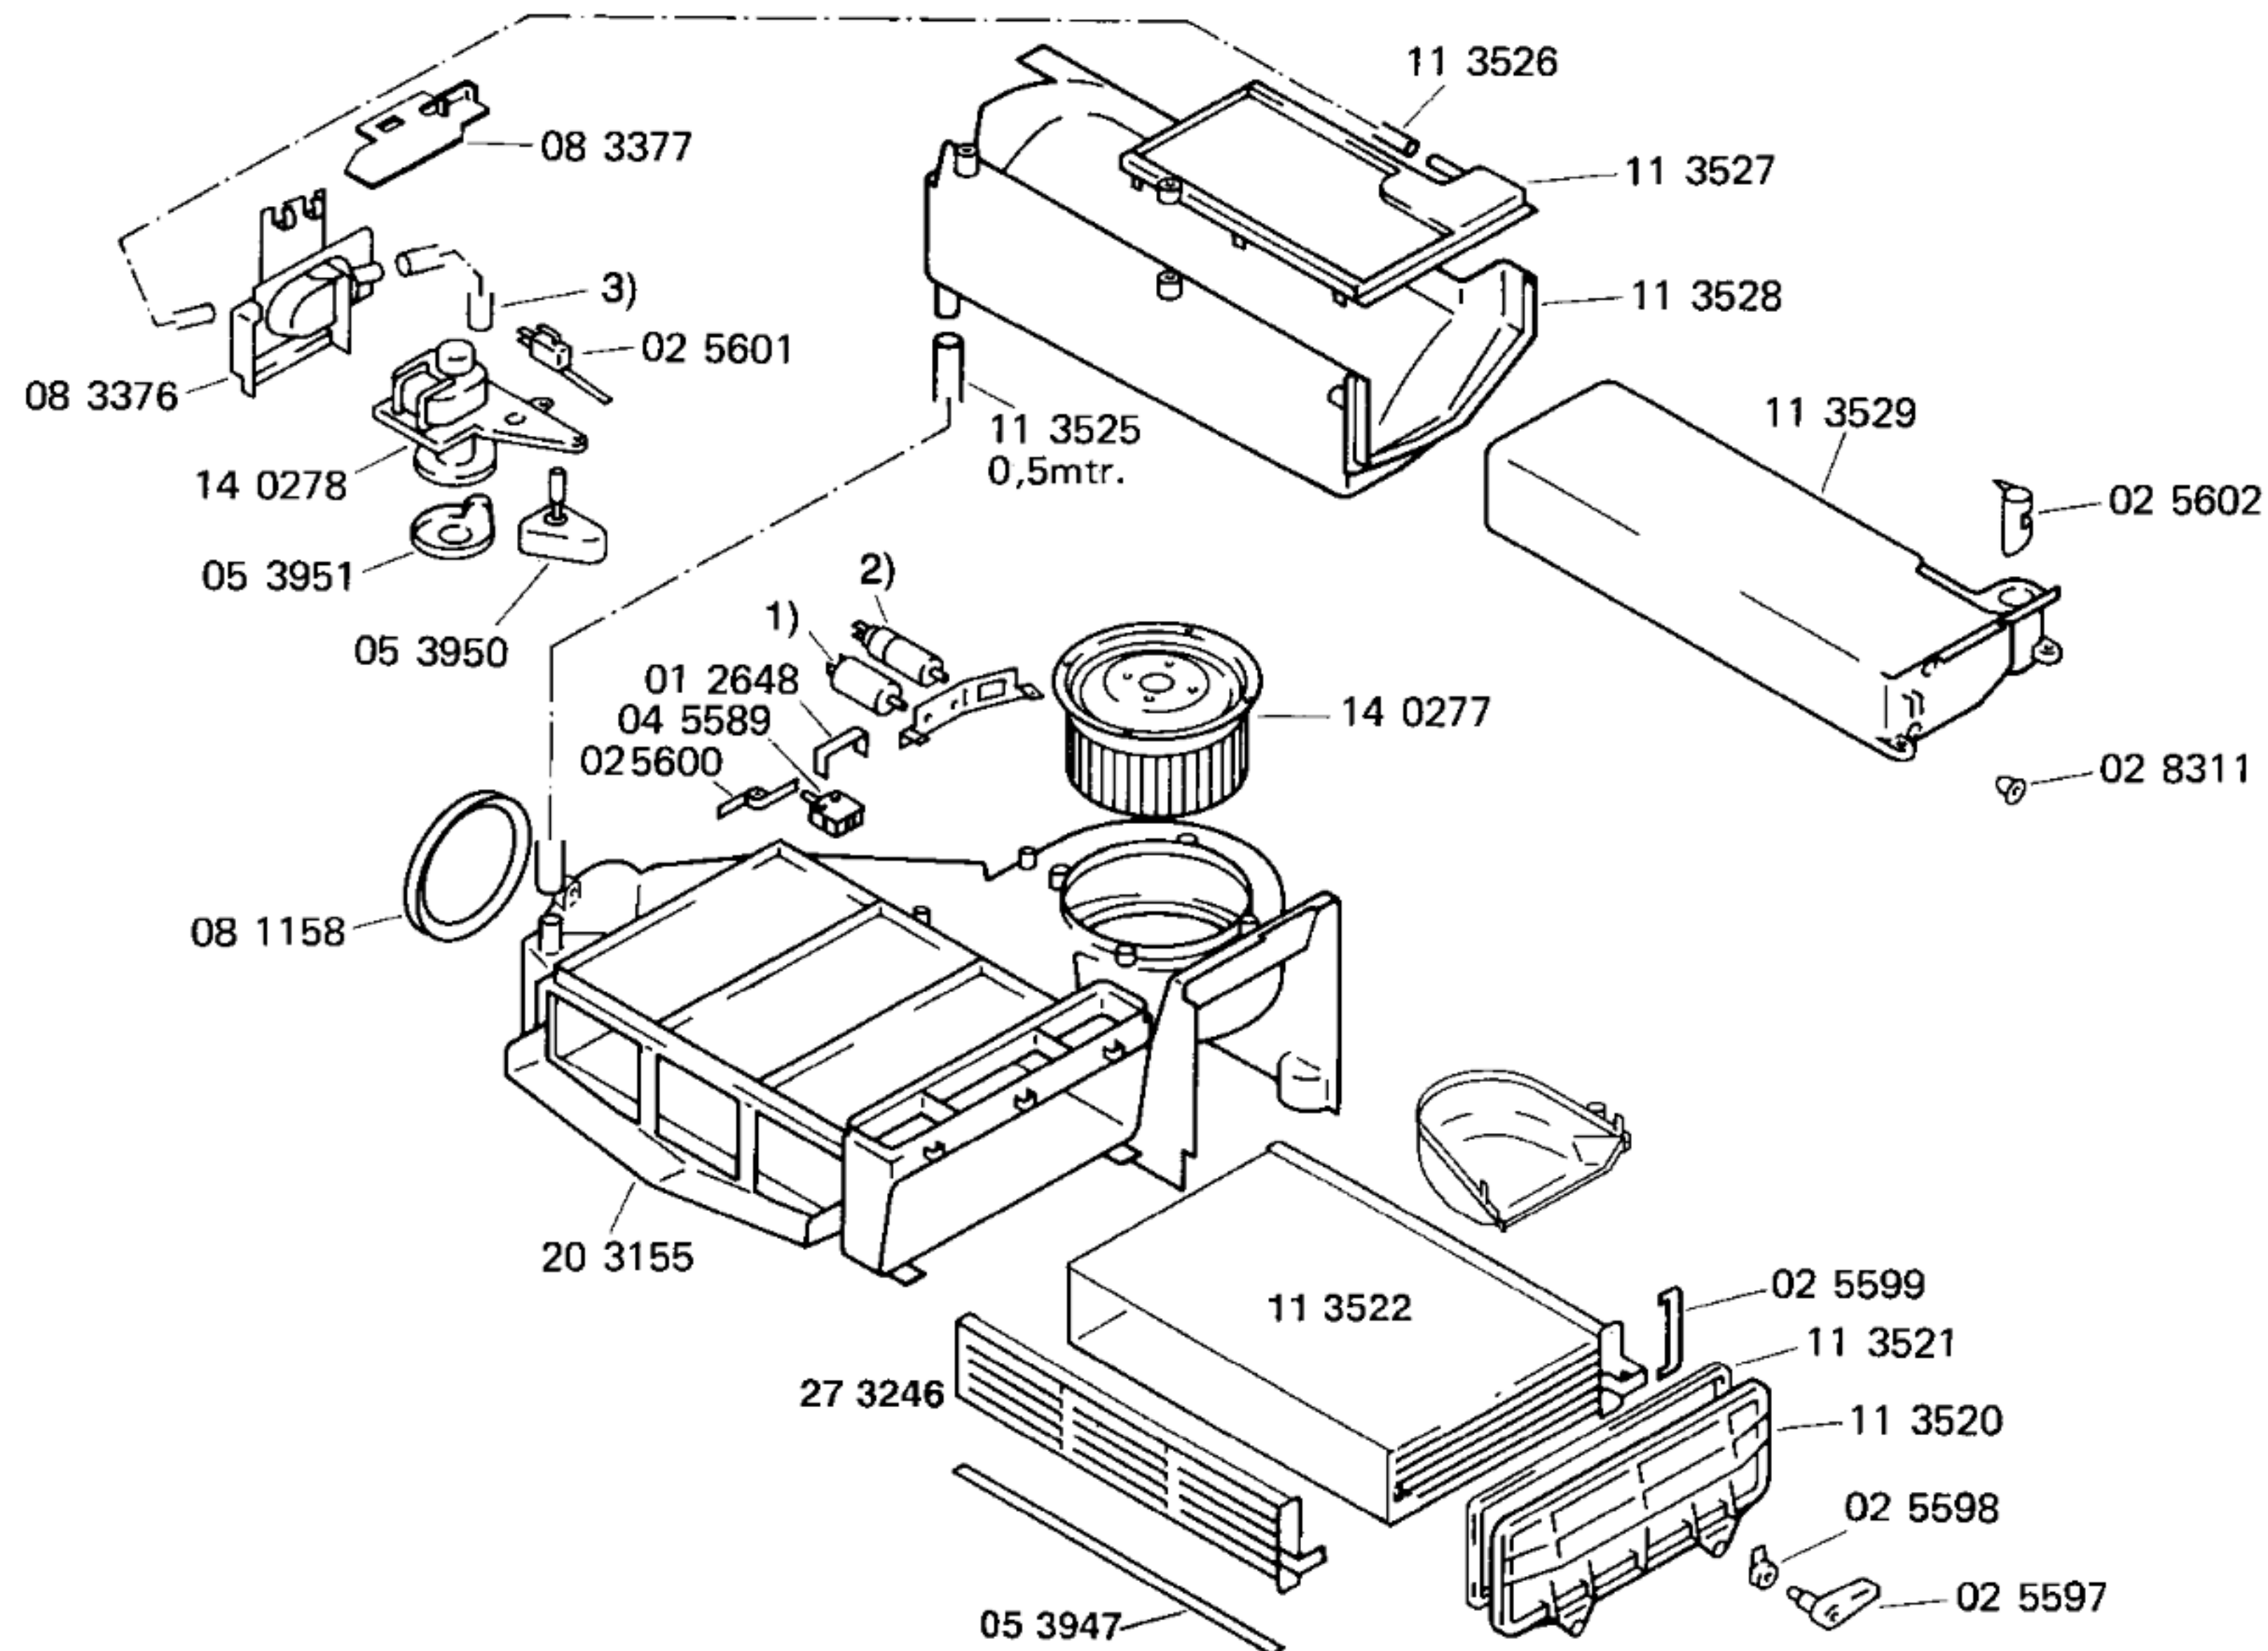

- 1) 05 3948
3uF
Kühlgebläse
- 2) 07 4627
2uF
Umluftgebläse
- 3) 08 3375
bis FD 6609
08 5679
ab FD 6610