
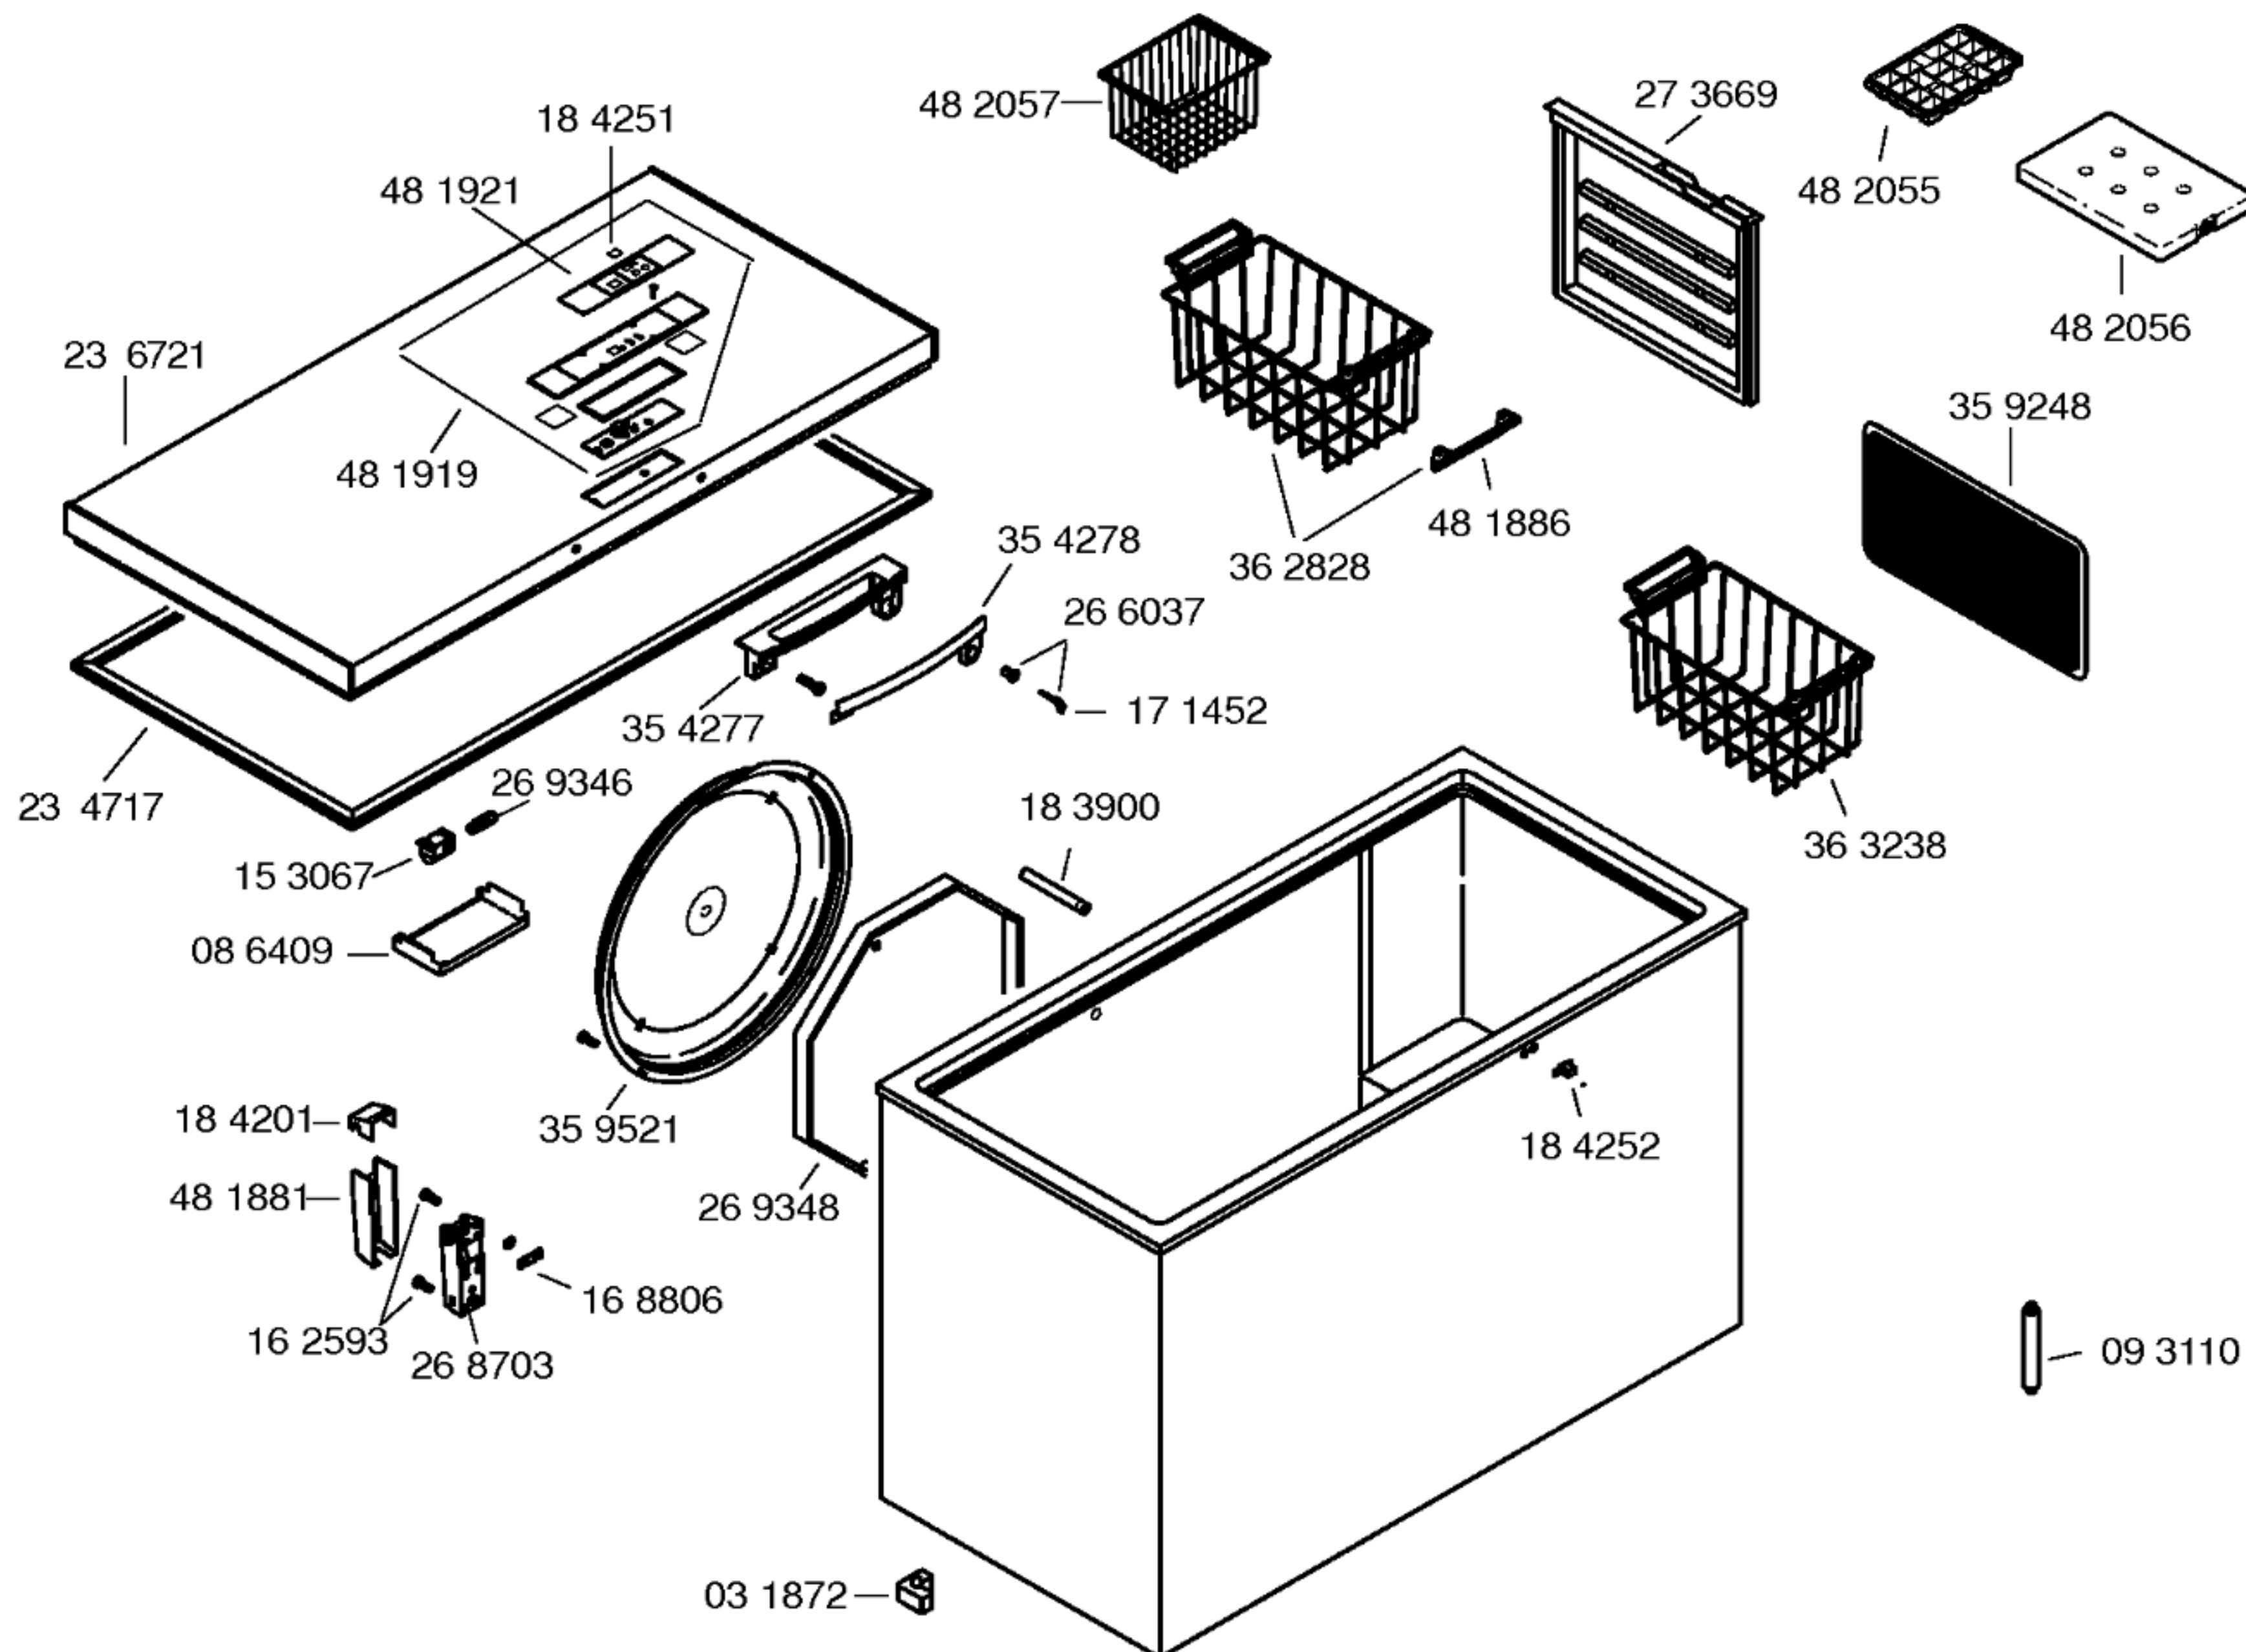


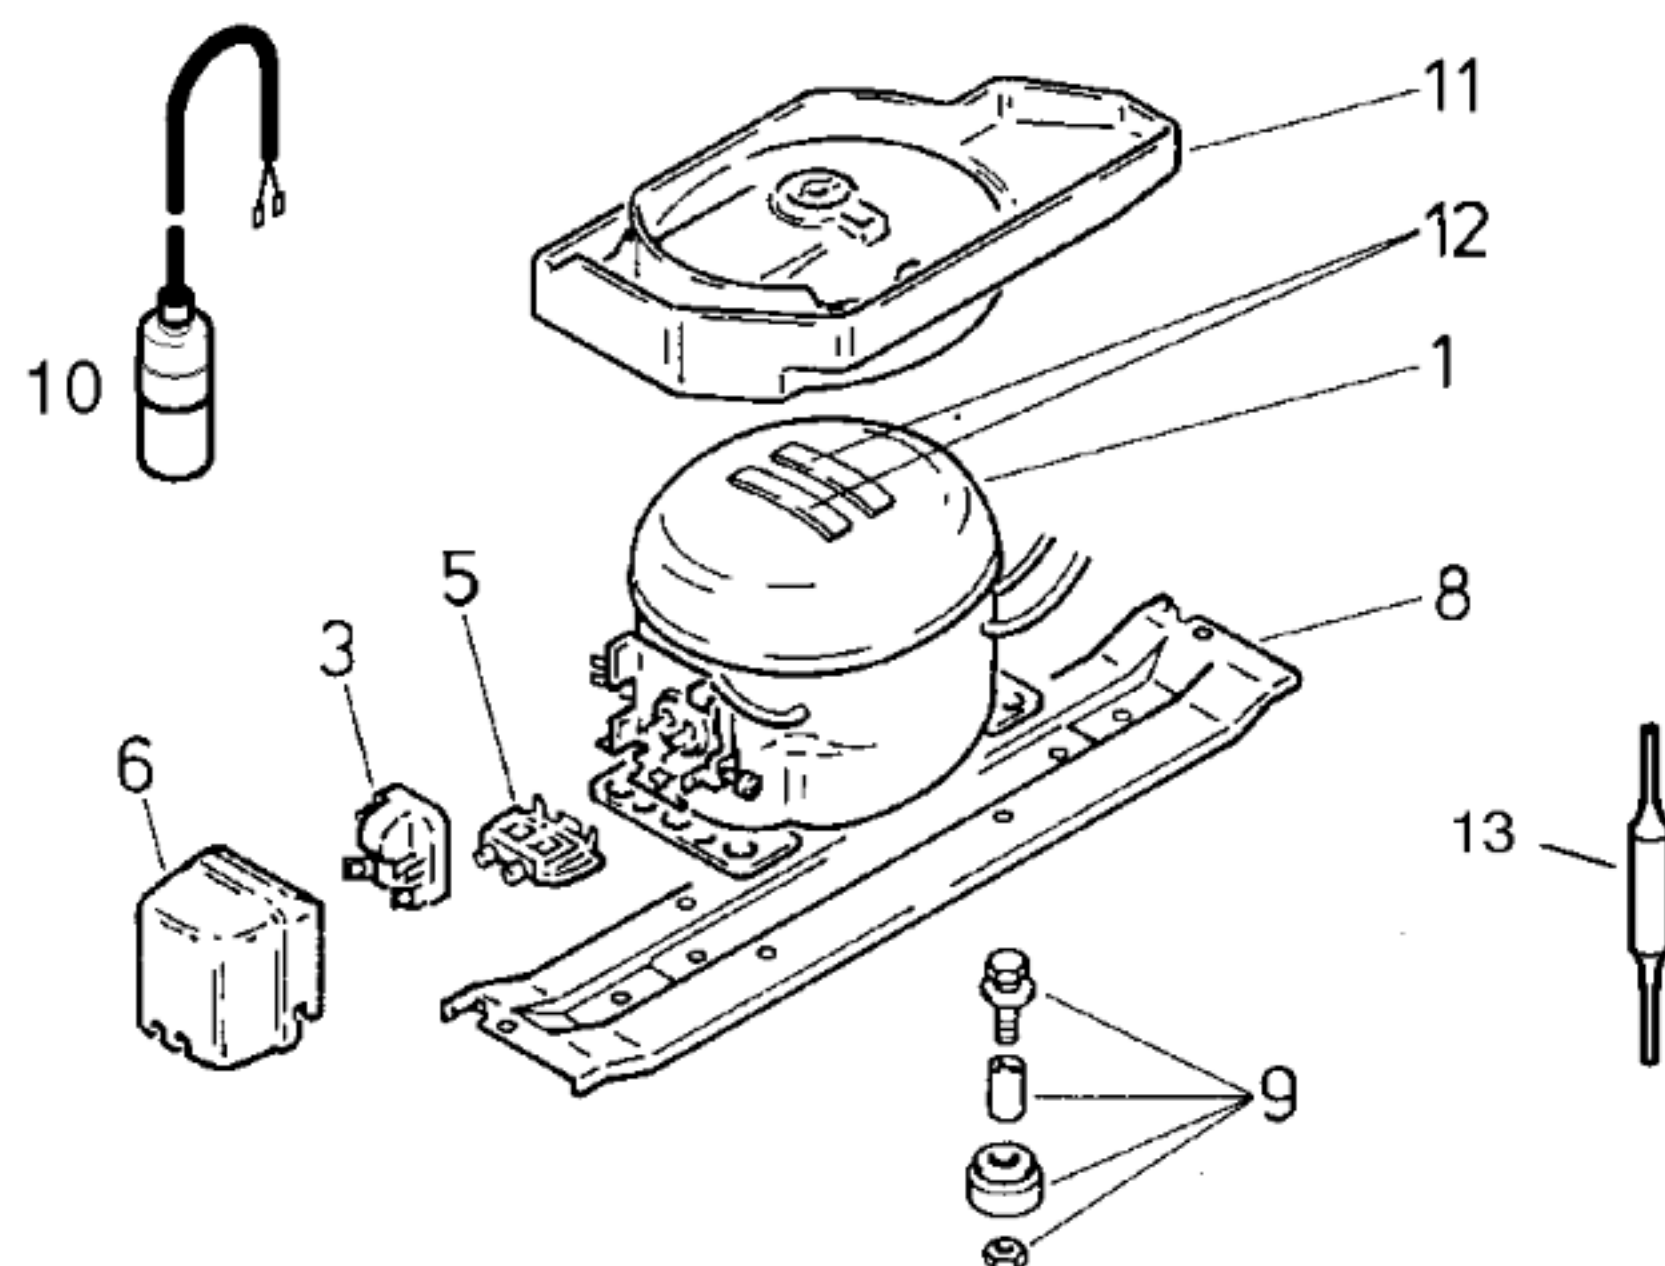

Mat. - Nr. - Konstante
3740

Gebrauchsanleitung
52 9306

Ident – Nummern – Konstante
3740

Pos.	V01	V02	
	Matsushita	Embraco	
	DA110E	HYK95AA	
1	14 1939	14 3406	
2			
3	08 8506	41 7956	
4			
5	16 2549		
6	16 6782	18 8573	
7			
8			
9	15 3069	15 3069	
10	26 8328	26 8335	
11			
12			
13			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur Typ/Type Förderleistung/Delivery/Débit Anlaufstrom/Starting current/Cour de démarrage Widerstand/Resistance/Résistance Ha/main/prin Hi/aux	l/h A Ω Ω	Matsushita DA110E 1954 8,6 14,2 12,8	Embraco HYK95AA
Temp.-Regler/Thermostat Typ/Type Regelstellung/Position Schaltwerte/Switching values Valeurs de commutation	"warm" "kalt" "alarm"		
Füllmenge/Fill.quantity/Charge	R600a		
Anschlußwert/Conn.load/Puiss. connectée	W	106	
Heizung/Heater/Chauffage Widerstand/Resistance/Résistance Leistung/Power/Puissance	Ω W		
Ventilator/Blower/Ventilateur Widerstand/Resistance/Résistance	Ω		
Temp.-Regler/Thermostat			
Magnetventil/Magnetic valve/Electrovanne Widerstand/Resistance/Résistance Spannung/Voltage/Tension	Ω V		