 
 


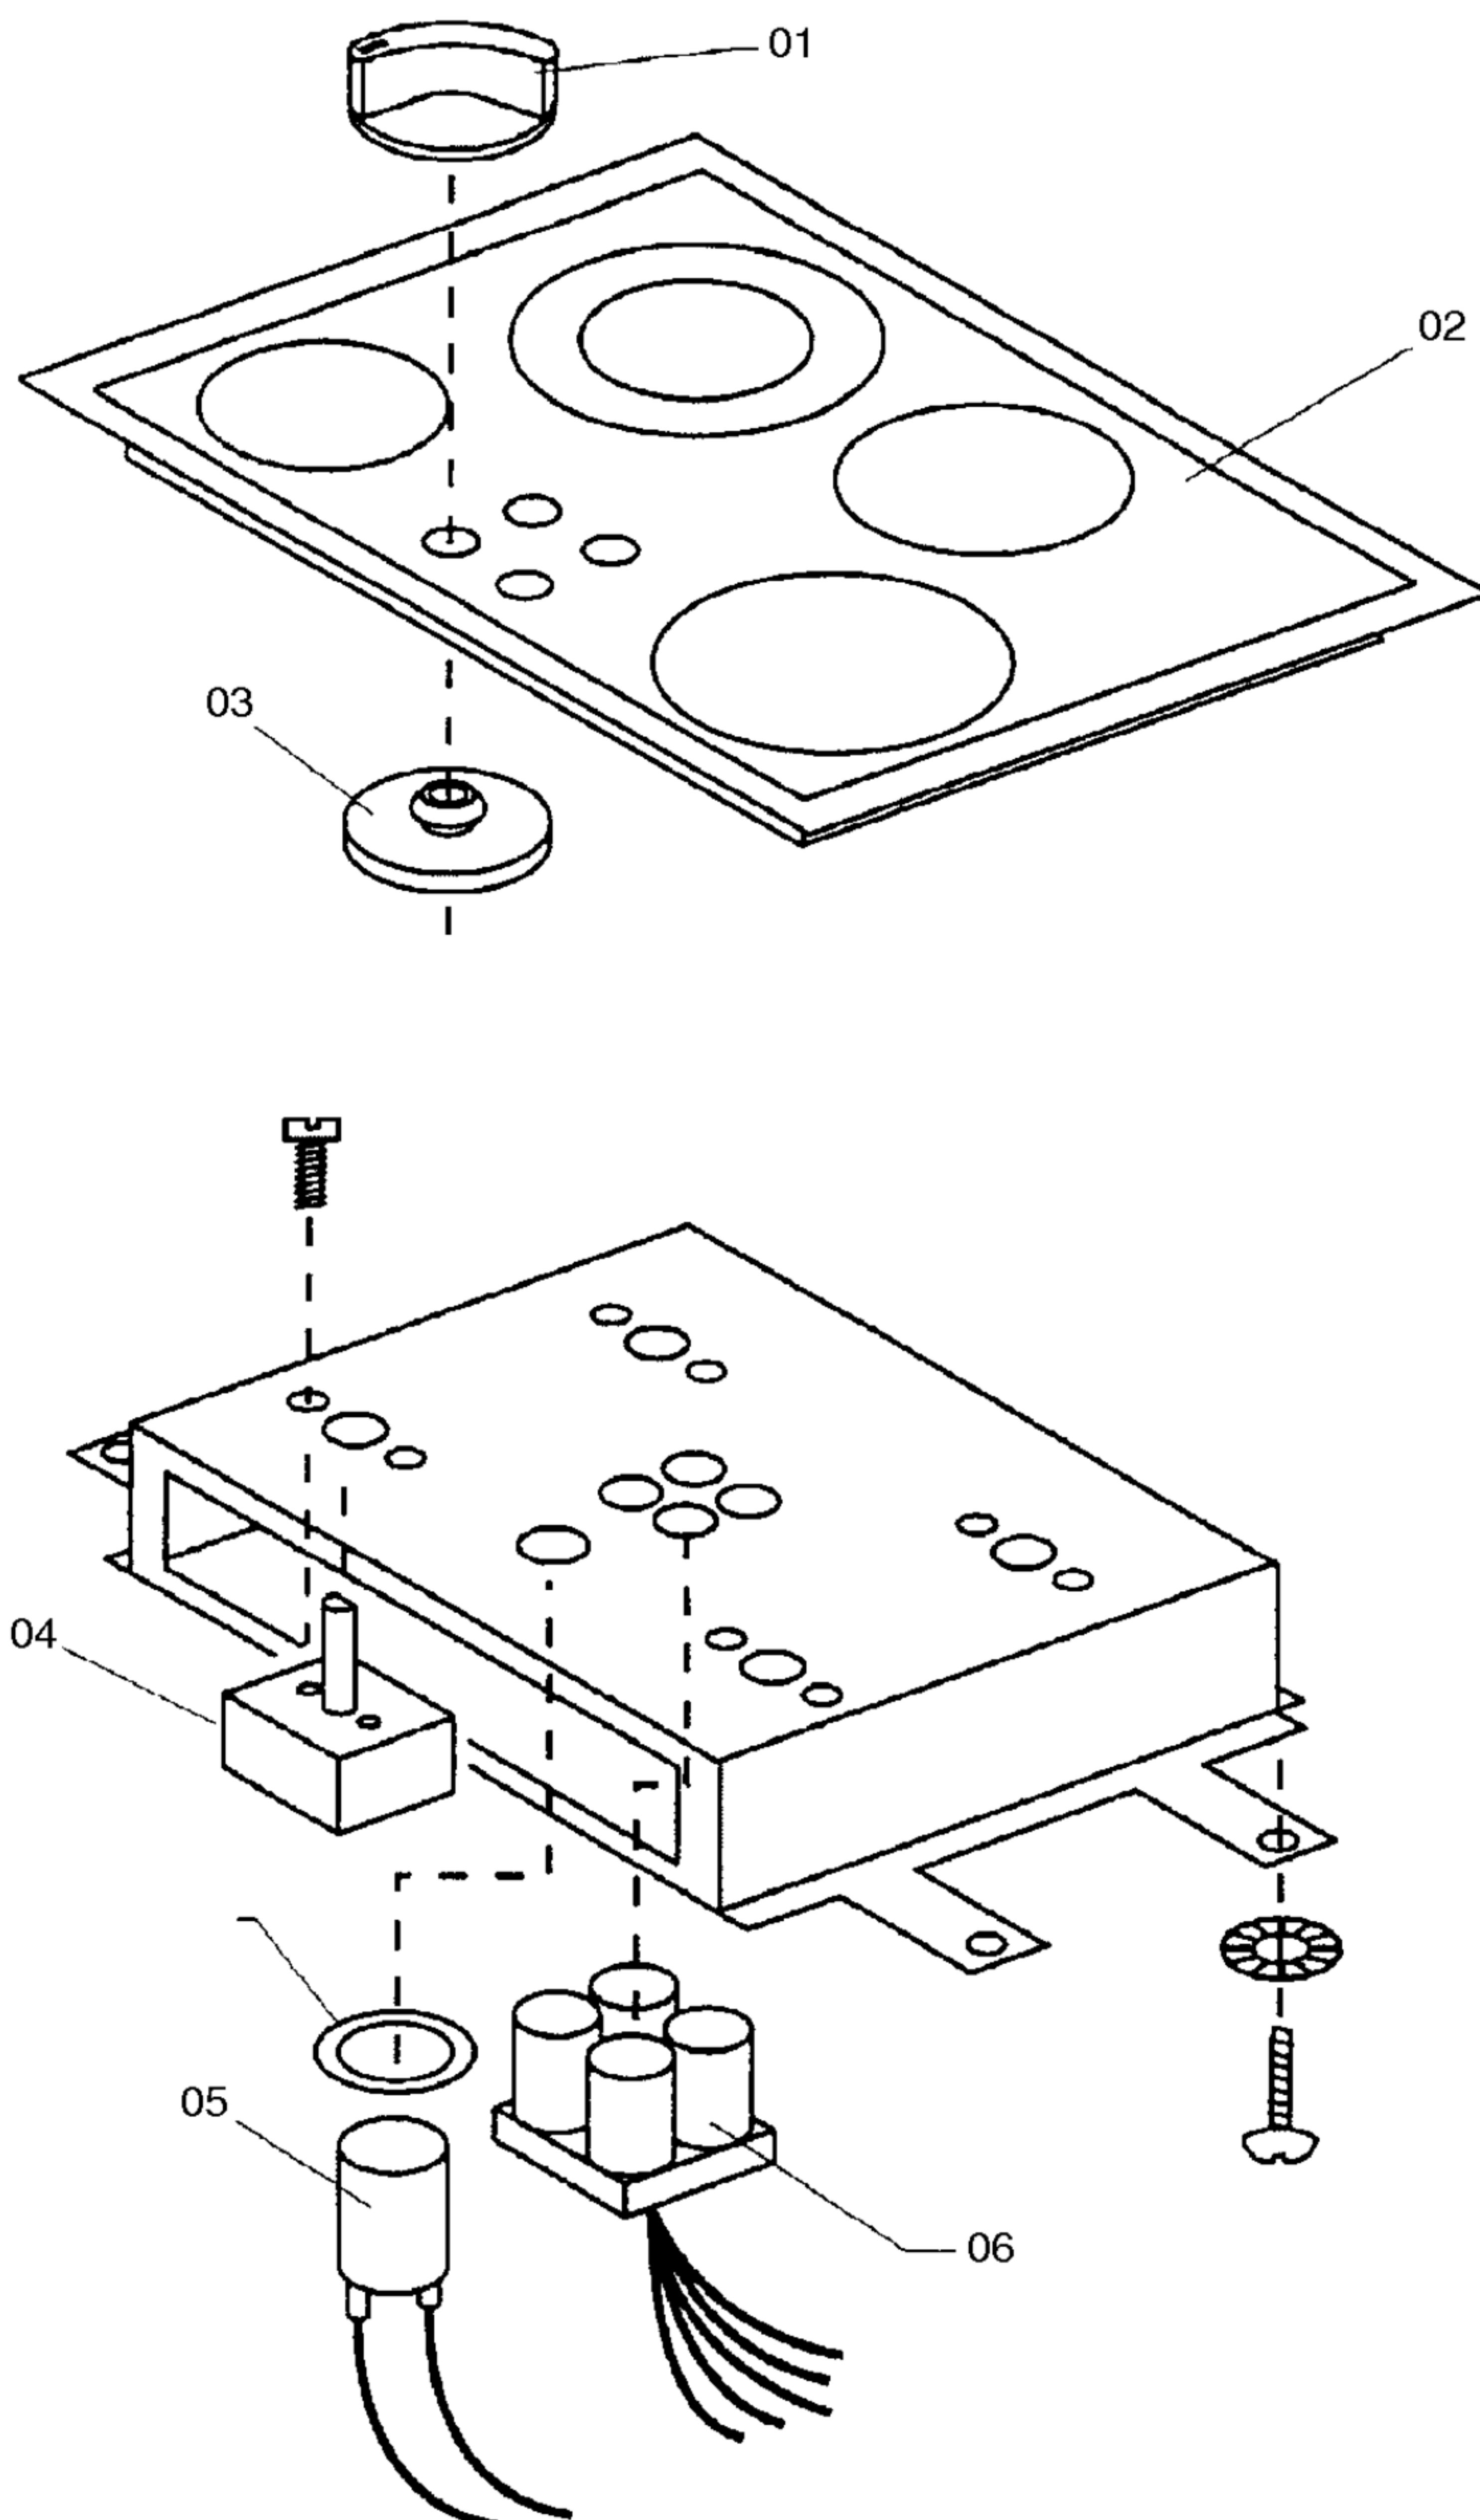

Page/Item	Part No.	Image	Part Description
01 01	414700	KNOB	KNOB, CERAN–Q BLK
01 01	V01,V02, 189843	KNOB	KNOB, CERAN–Q WHT
01 02	V03,V04, 238563	GLASS CERAMIC HOB TOP	CERAN GLUE ASSY CER36QB
01 02	V01,V02, 238564	GLASS CERAMIC HOB TOP	CERAN GLUE ASSY CER36QW
01 03	V03,V04, 421534	STRESS–RELIEF	GROMMET
01 04	414611	SWITCH	SWITCH, INF 3–10%INF–240T
01 05	189854	LAMP	LIGHT, DOUBLE INDICATOR
01 06	421521	LAMP	HEAT RESIDUAL INDICATOR

* Not illustrated

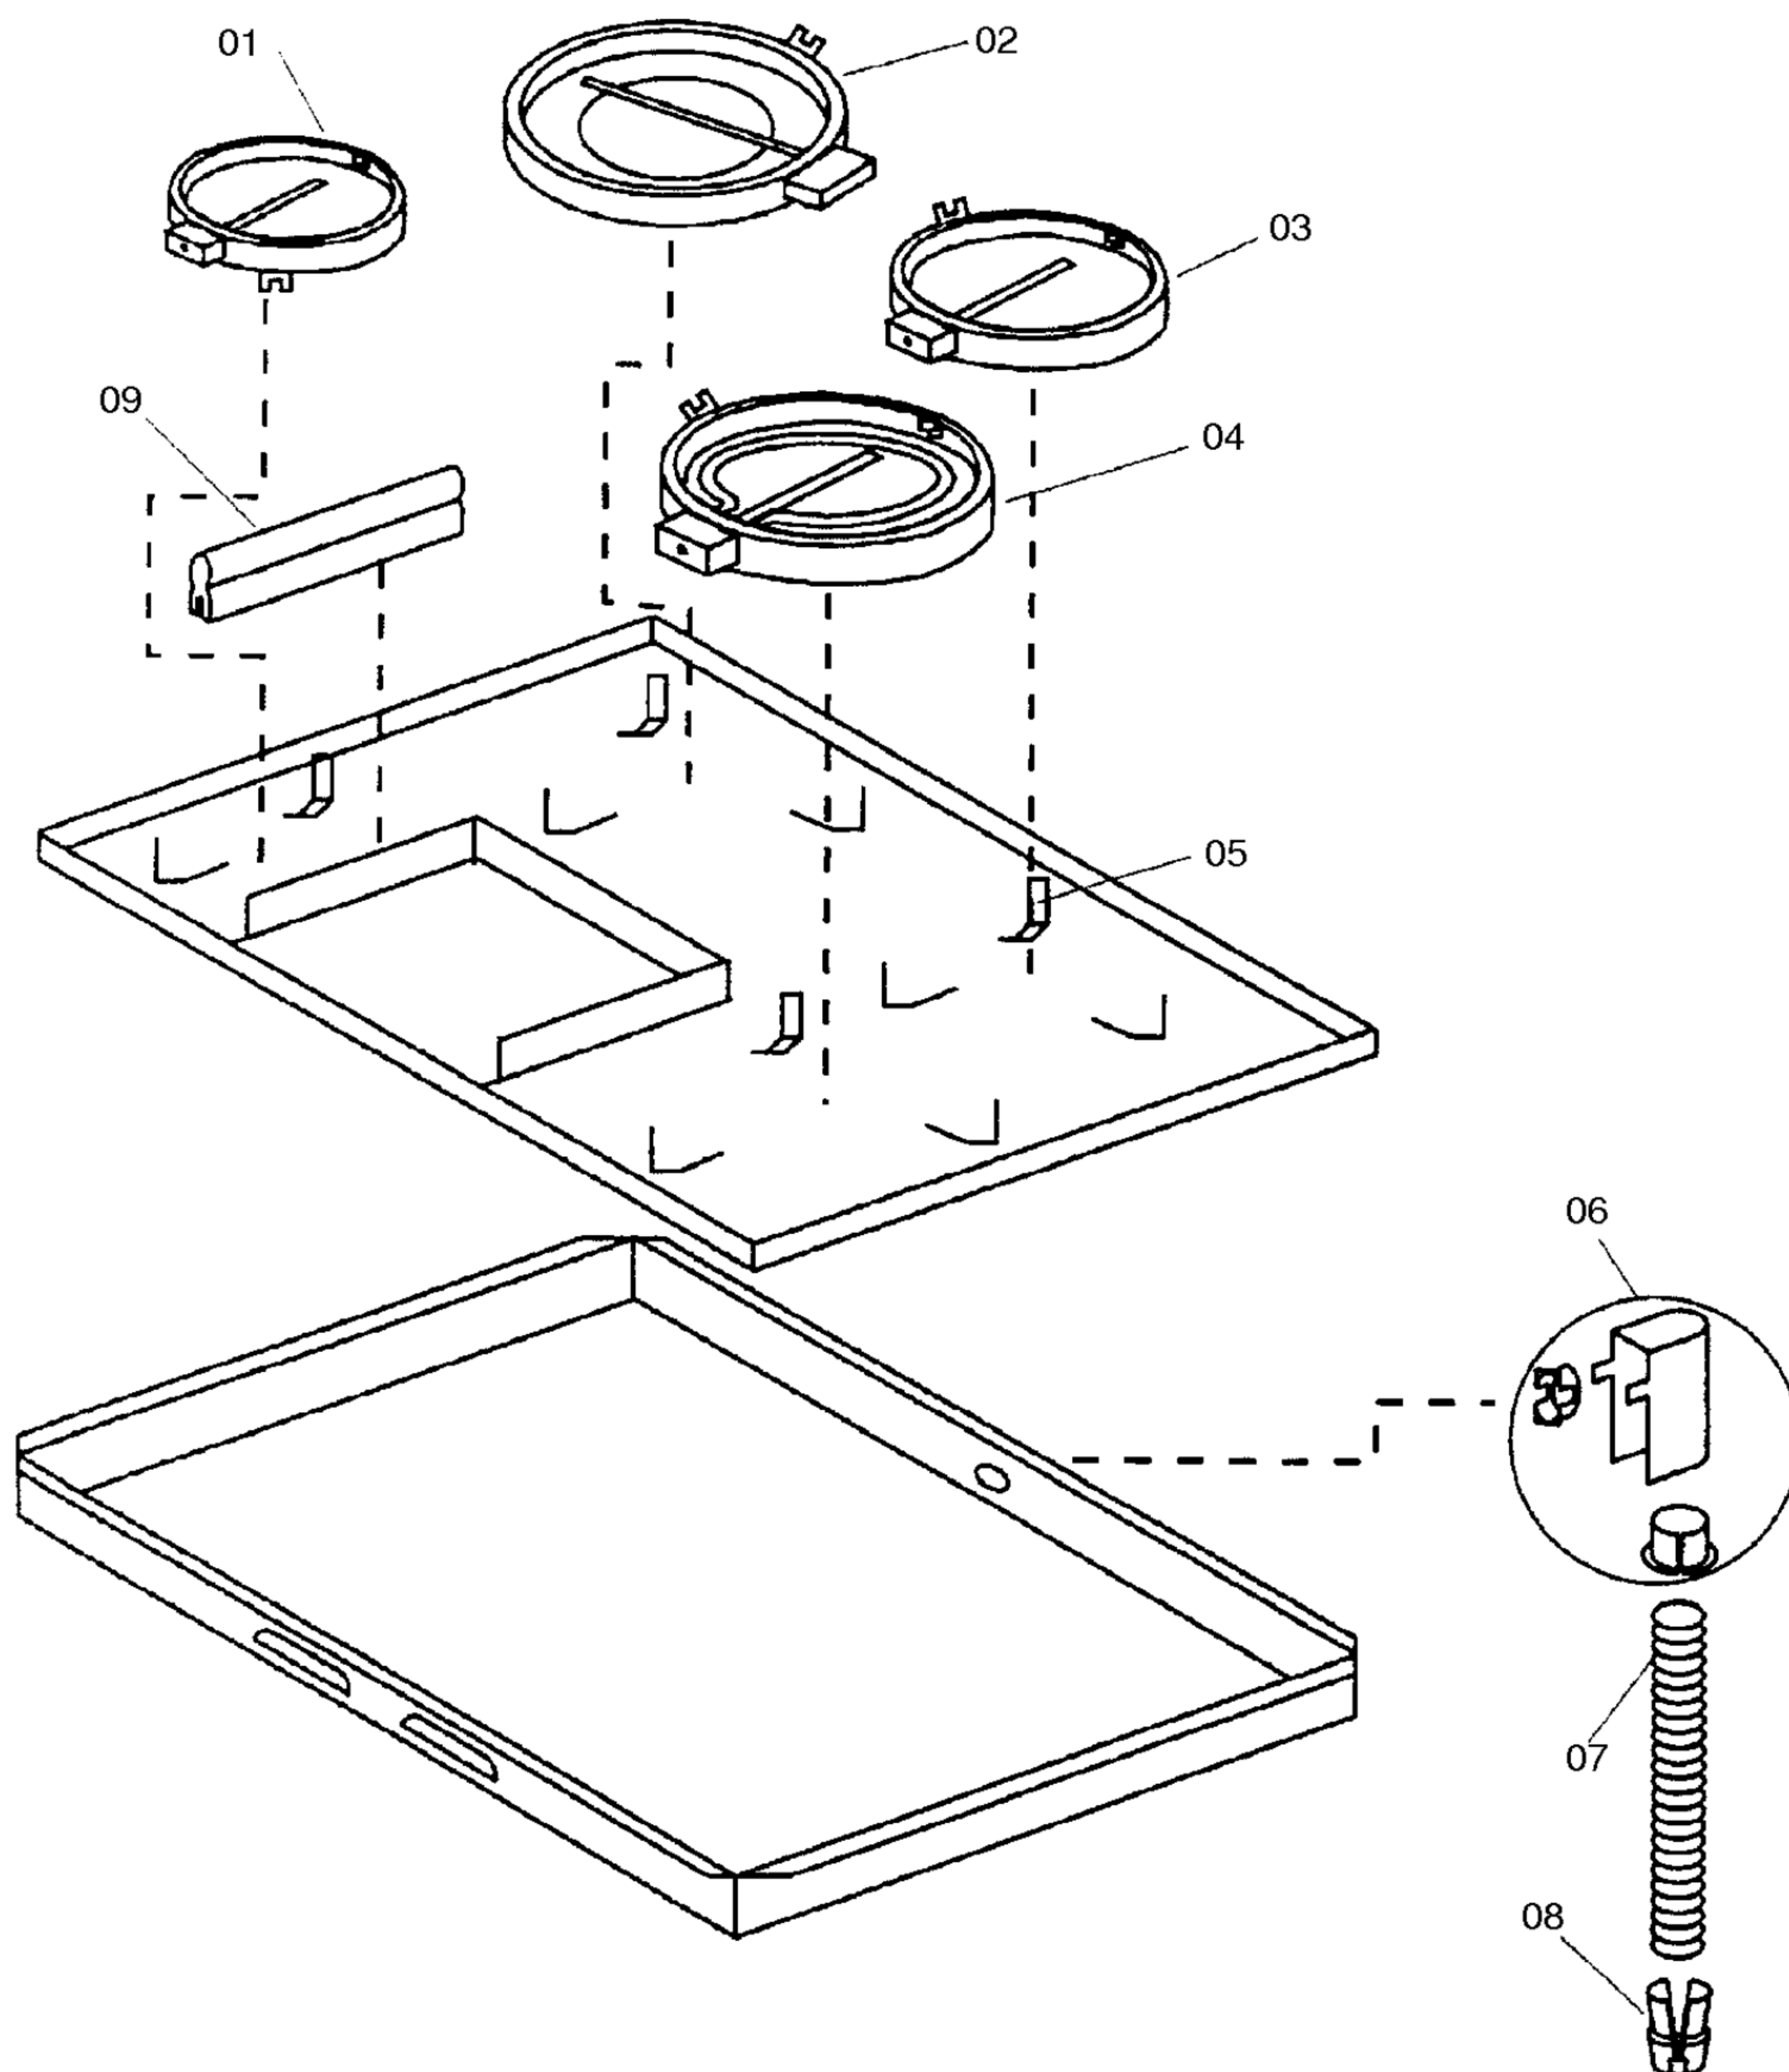

Page/Item	Part No.	Image	Part Description
03 01	486881	HEATER-ELEMENT	ELEMENT 1800W 240V
03 02	484451	HEATER-ELEMENT	RADIANT ELEM 195MM 2000W/
03 03	484454	HEATER-ELEMENT	ELEM, RADIANT 140MM 1200W
03 04	484452	HEATER-ELEMENT	RADIANT ELEM 230MM 2500W/
03 05	414703	SPRING	SPRING, SUPPORT (LEAF)
03 06	411186	CONNECTION	CONNECTOR, SNAP-ON
03 07	416279	WIRE END SLEEVE	CONDUIT, FLEX 1/2"
03 08	414691	CONNECTION	CONNECTOR, 1/2" STRAIGHT
03 09	189857	ADHESIVE	SILICONE FOAM EXTRUSION .
* 40 01	SH-30/0169E	WIRING DIAGRAM	WIRING DIAGRAM

* Not illustrated