


**BOSCH**

V344-WMV3444/02-D1
 V344-WMV3444II/02-I1
 V344-WMV344425/04-F1
 V344-WMV3444/03-D2

V344-WMV3444II/03-I2
 V344-WMV344425/05-F2

WASCHGERÄTE
 Waschvollautomaten

Ident – Nummern – Konstante
 3740

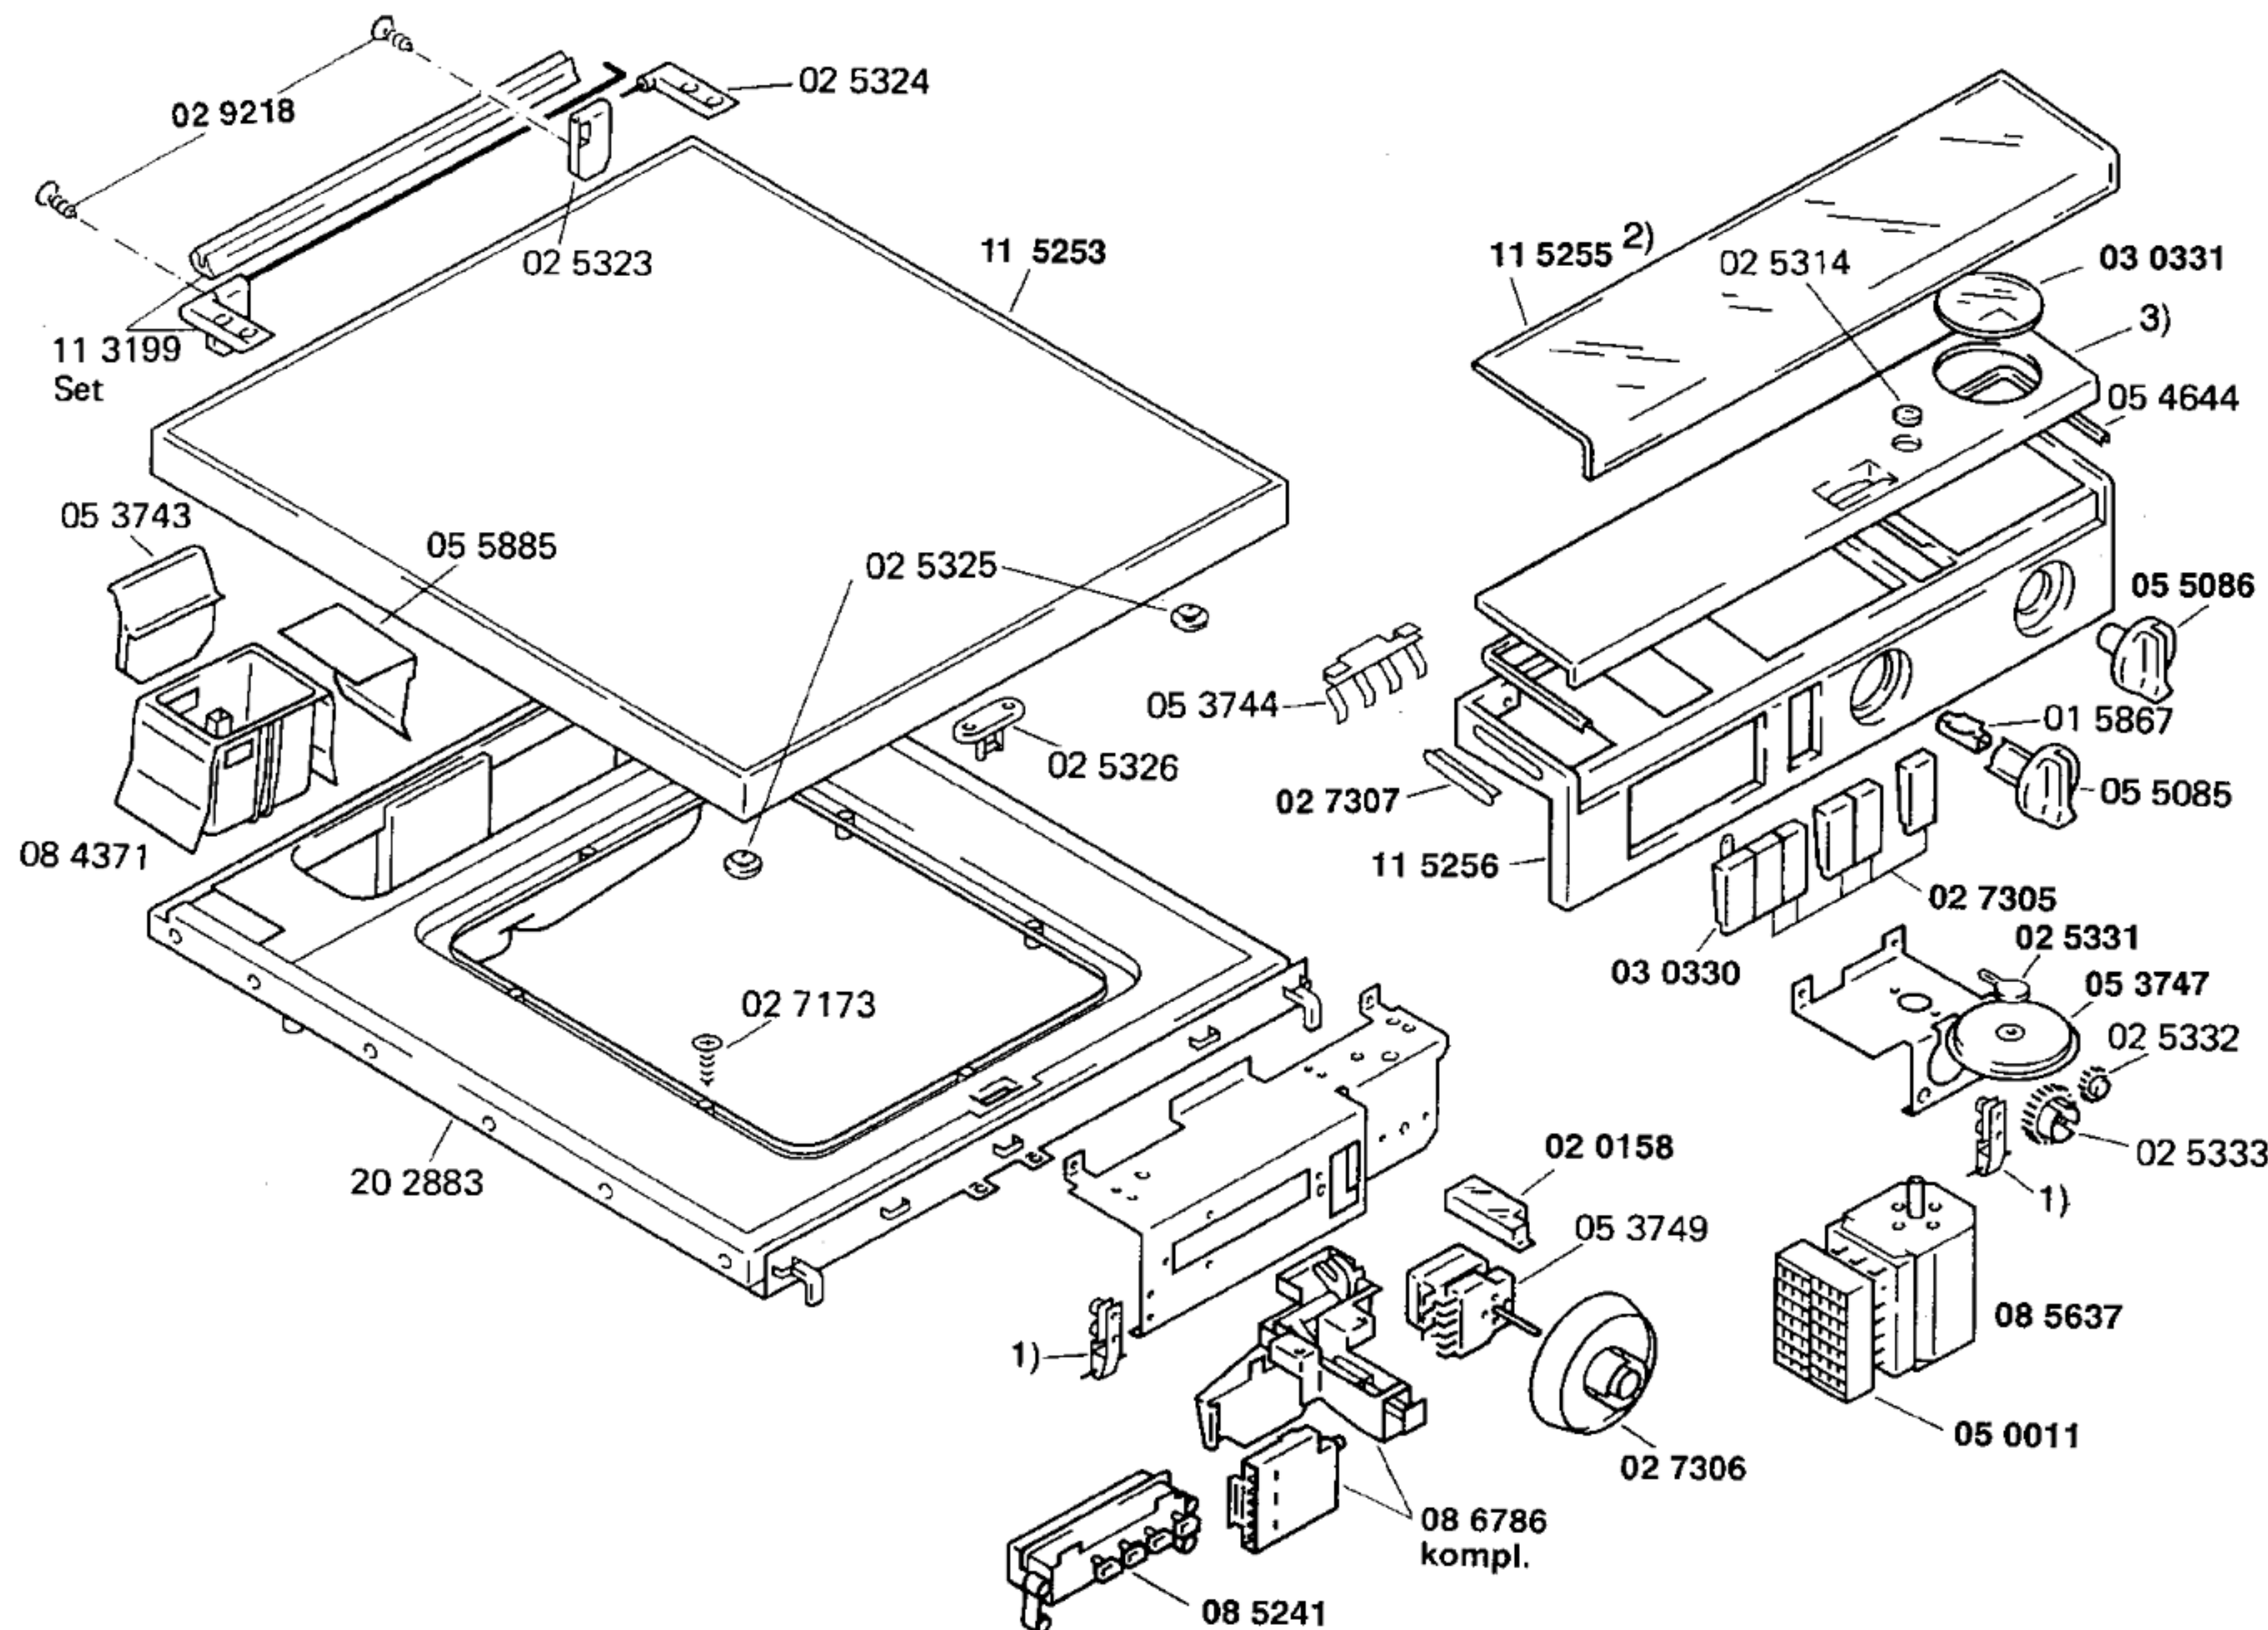**Gebrauchsanweisung**

51 4264

(D)

51 4258

(I)

51 3760

(F)

Programmtabelle

51 4263

(D)

51 4261

(I)

51 3759

(F)

1) 02 5334

2) einschl. 05 4644

3) 27 1508

D1,D2

27 1509

I1,I2

11 9712

F1,F2

Aufstellanweisung

51 3182

(D,GB,F,I,NL,E)

51 4257

(I)


**BOSCH**

V344-WMV3444/02-D1
 V344-WMV3444II/02-I1
 V344-WMV344425/04-F1
 V344-WMV3444/03-D2

V344-WMV3444II/03-I2
 V344-WMV344425/05-F2

WASCHGERÄTE
 Waschvollautomaten

Ident - Nummern - Konstante
 3740

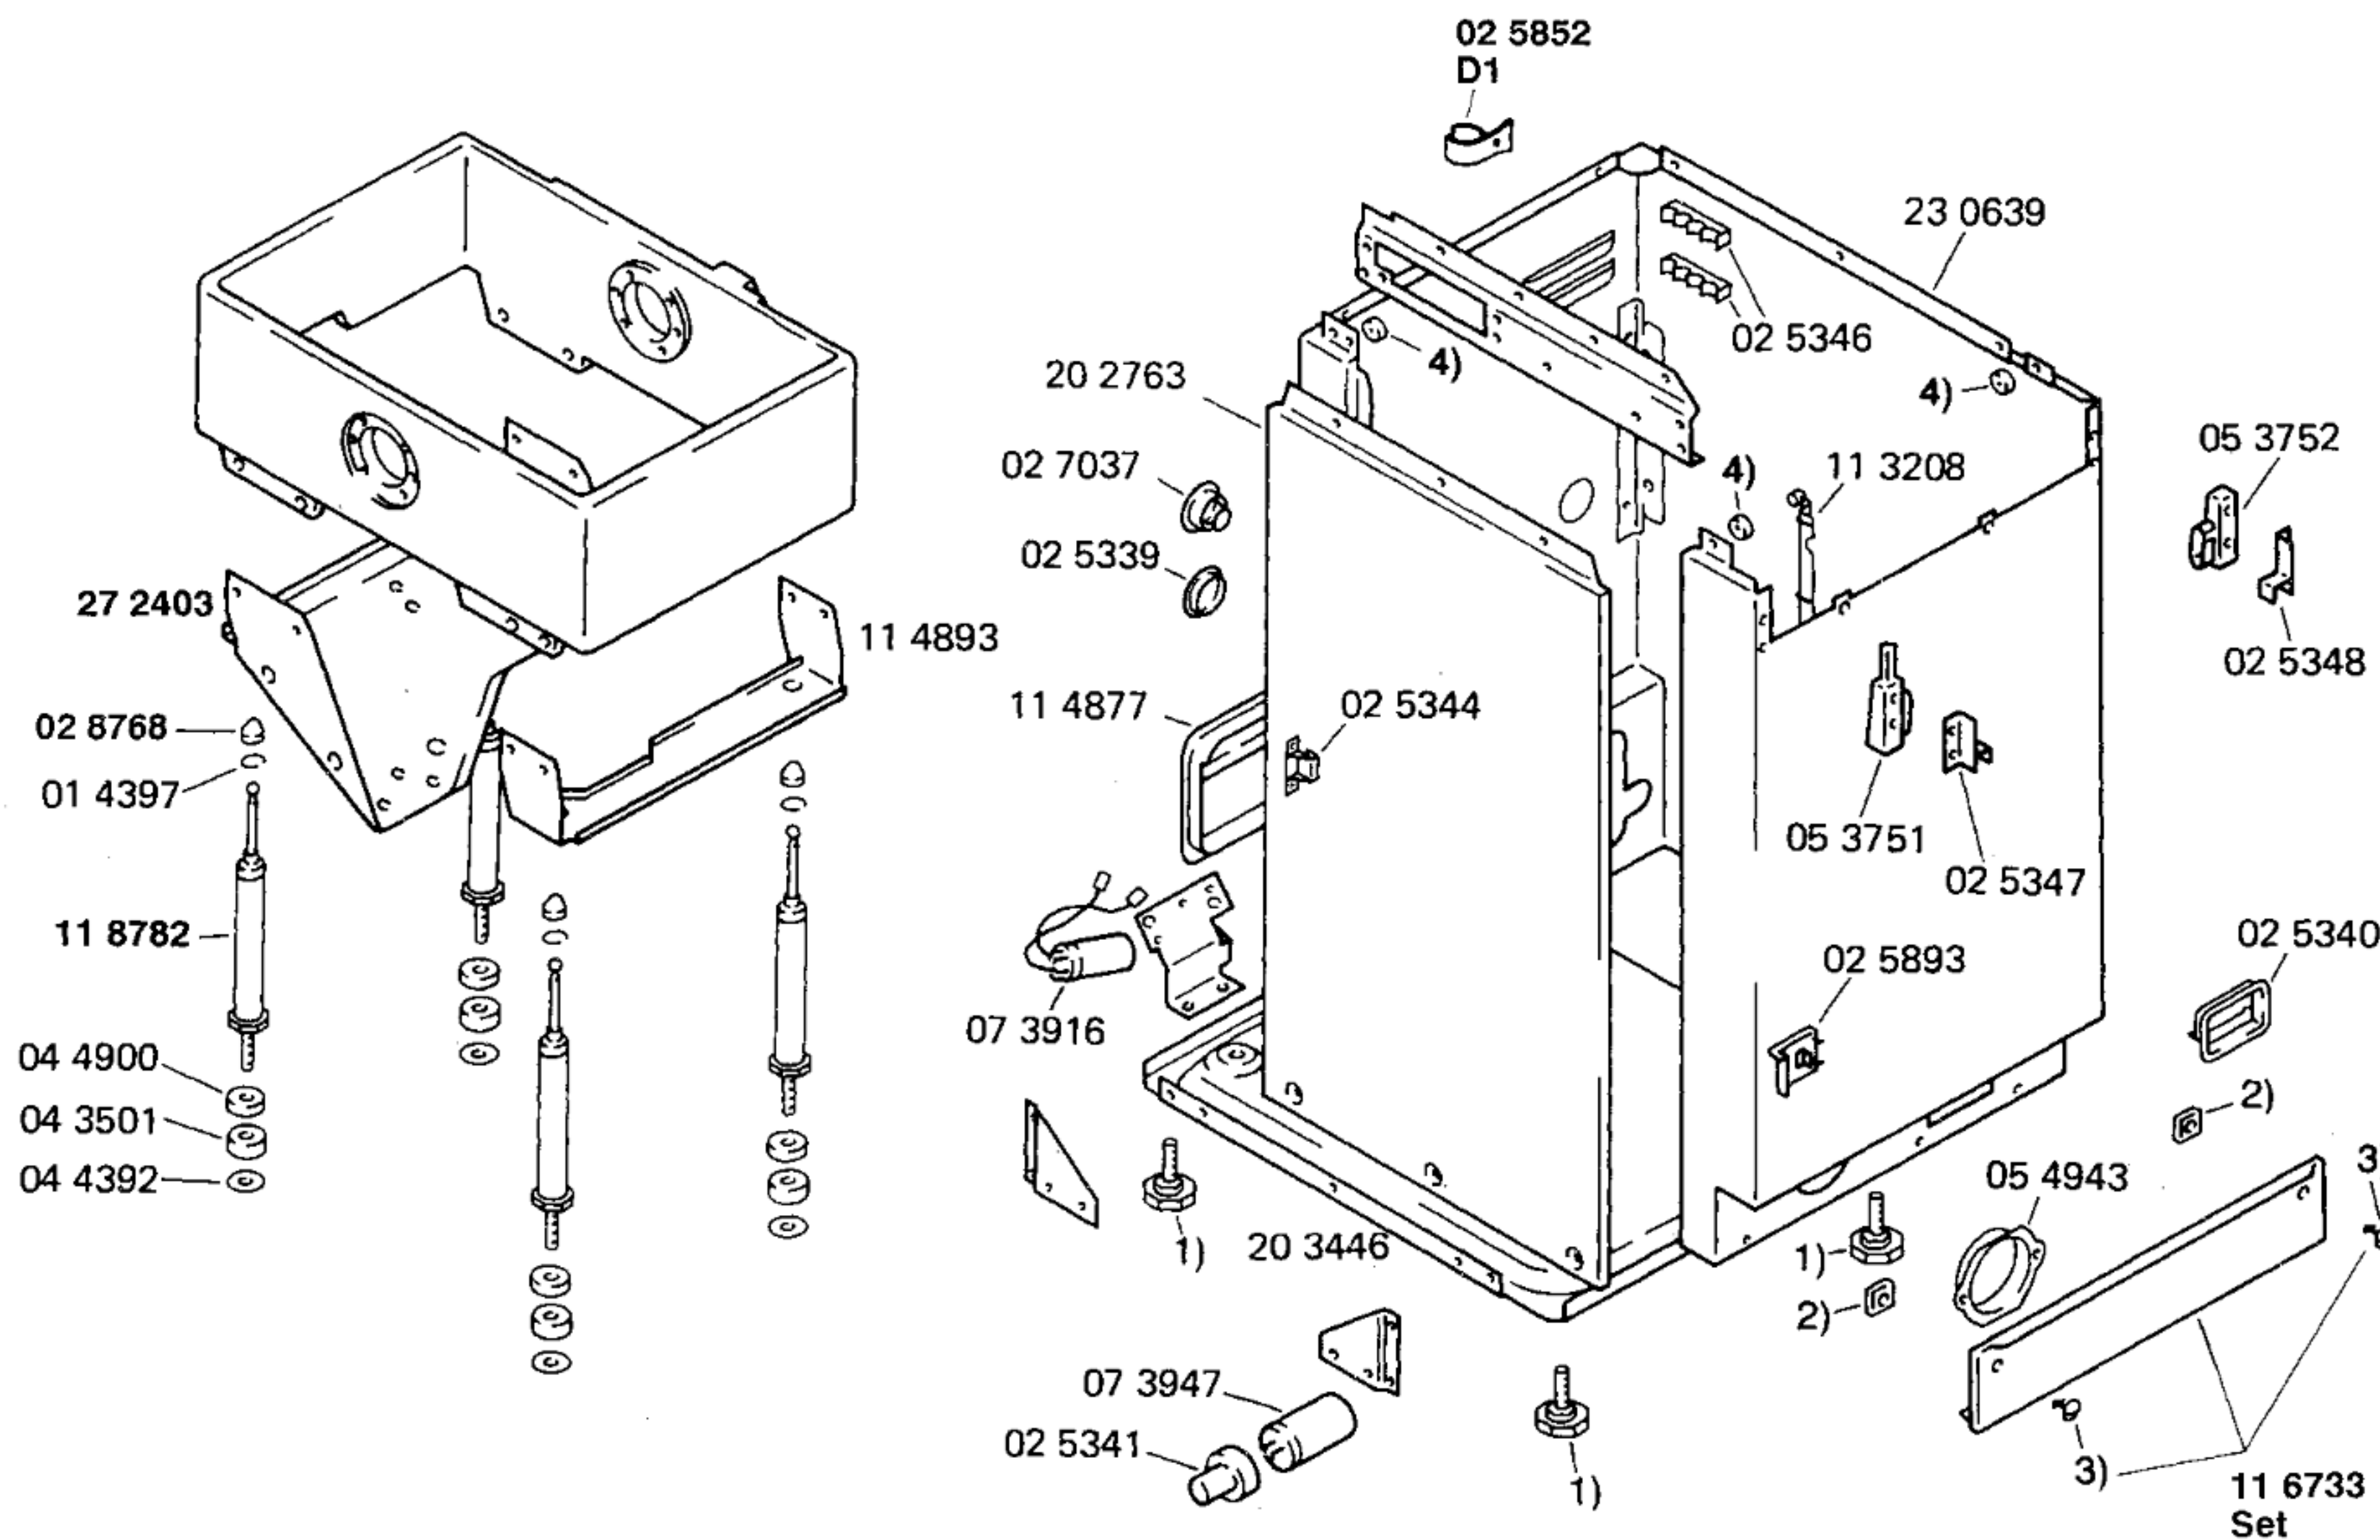

1) 04 5561

2) 01 4687

3) 02 8340

4) 02 5345




BOSCH

V344-WMV3444/02-D1
V344-WMV3444II/02-I1
V344-WMV344425/04-F1
V344-WMV3444/03-D2

V344-WMV3444II/03-I2
V344-WMV344425/05-F2

WASCHGERÄTE
Waschvollautomaten

Ident – Nummern – Konstante
3740

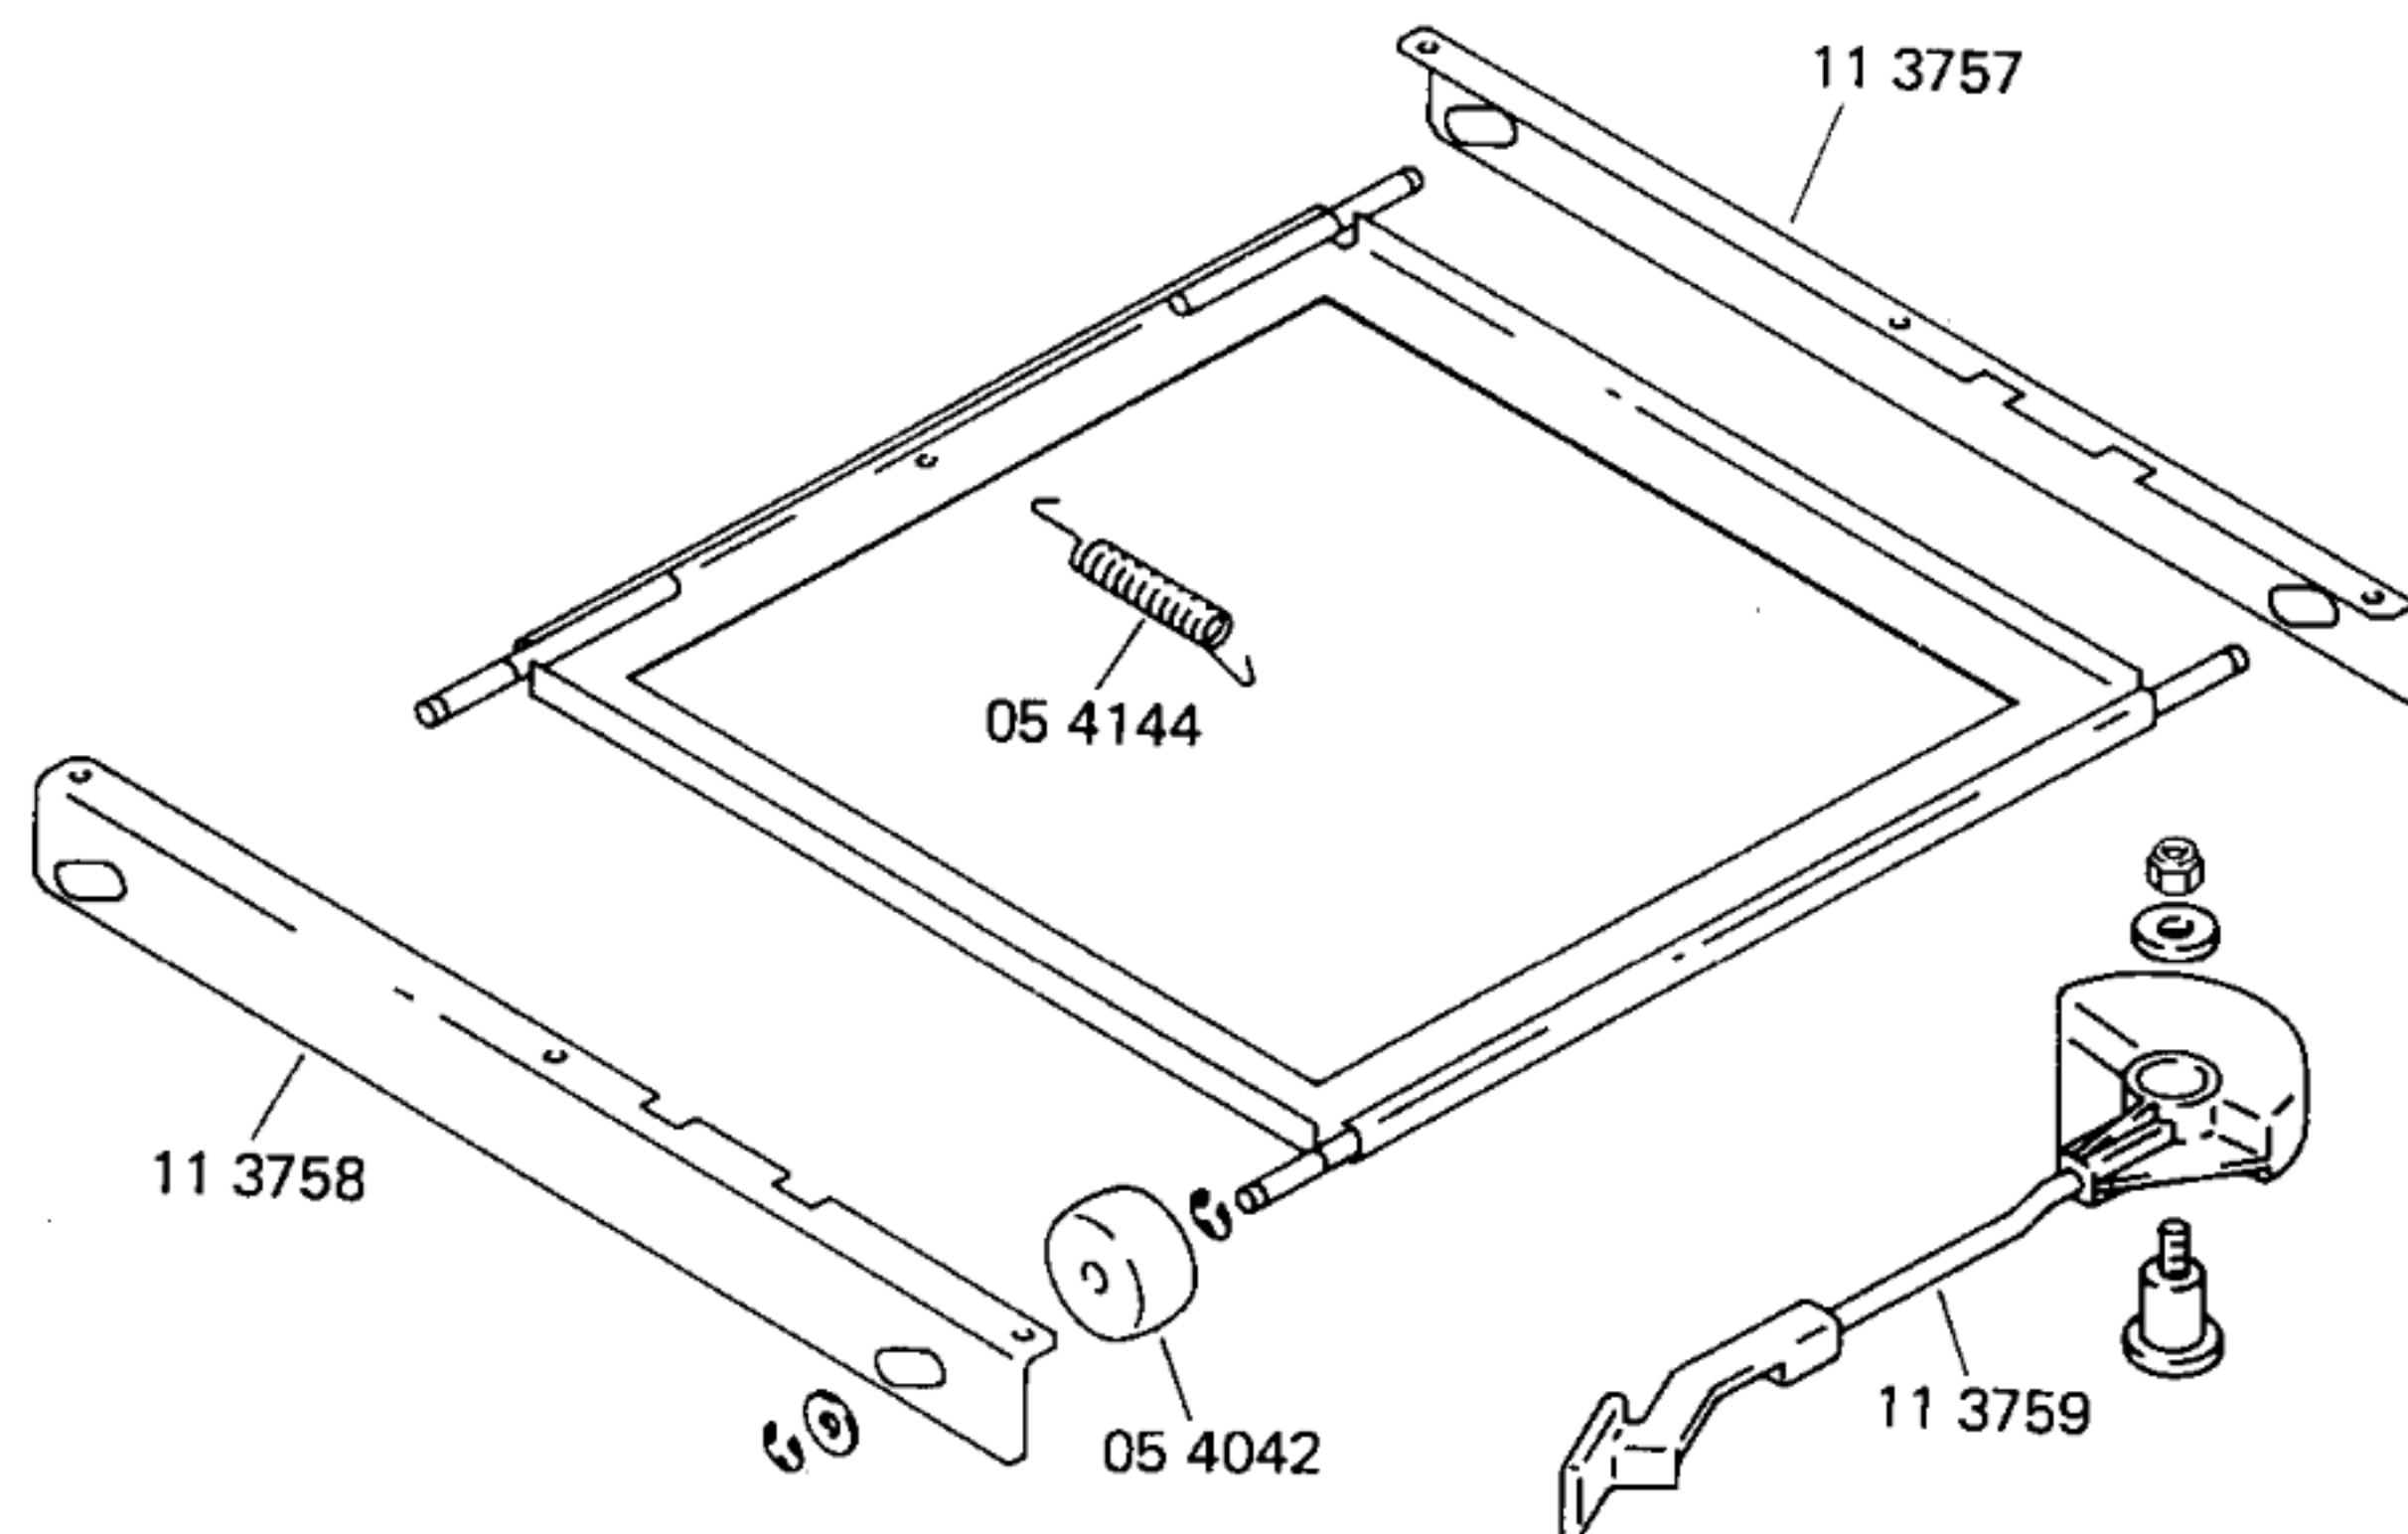


**BOSCH**

V344-WMV3444/02-D1
 V344-WMV3444II/02-I1
 V344-WMV344425/04-F1
 V344-WMV3444/03-D2

V344-WMV3444II/03-I2
 V344-WMV344425/05-F2

WASCHGERÄTE
 Waschvollautomaten

Ident – Nummern – Konstante
 3740

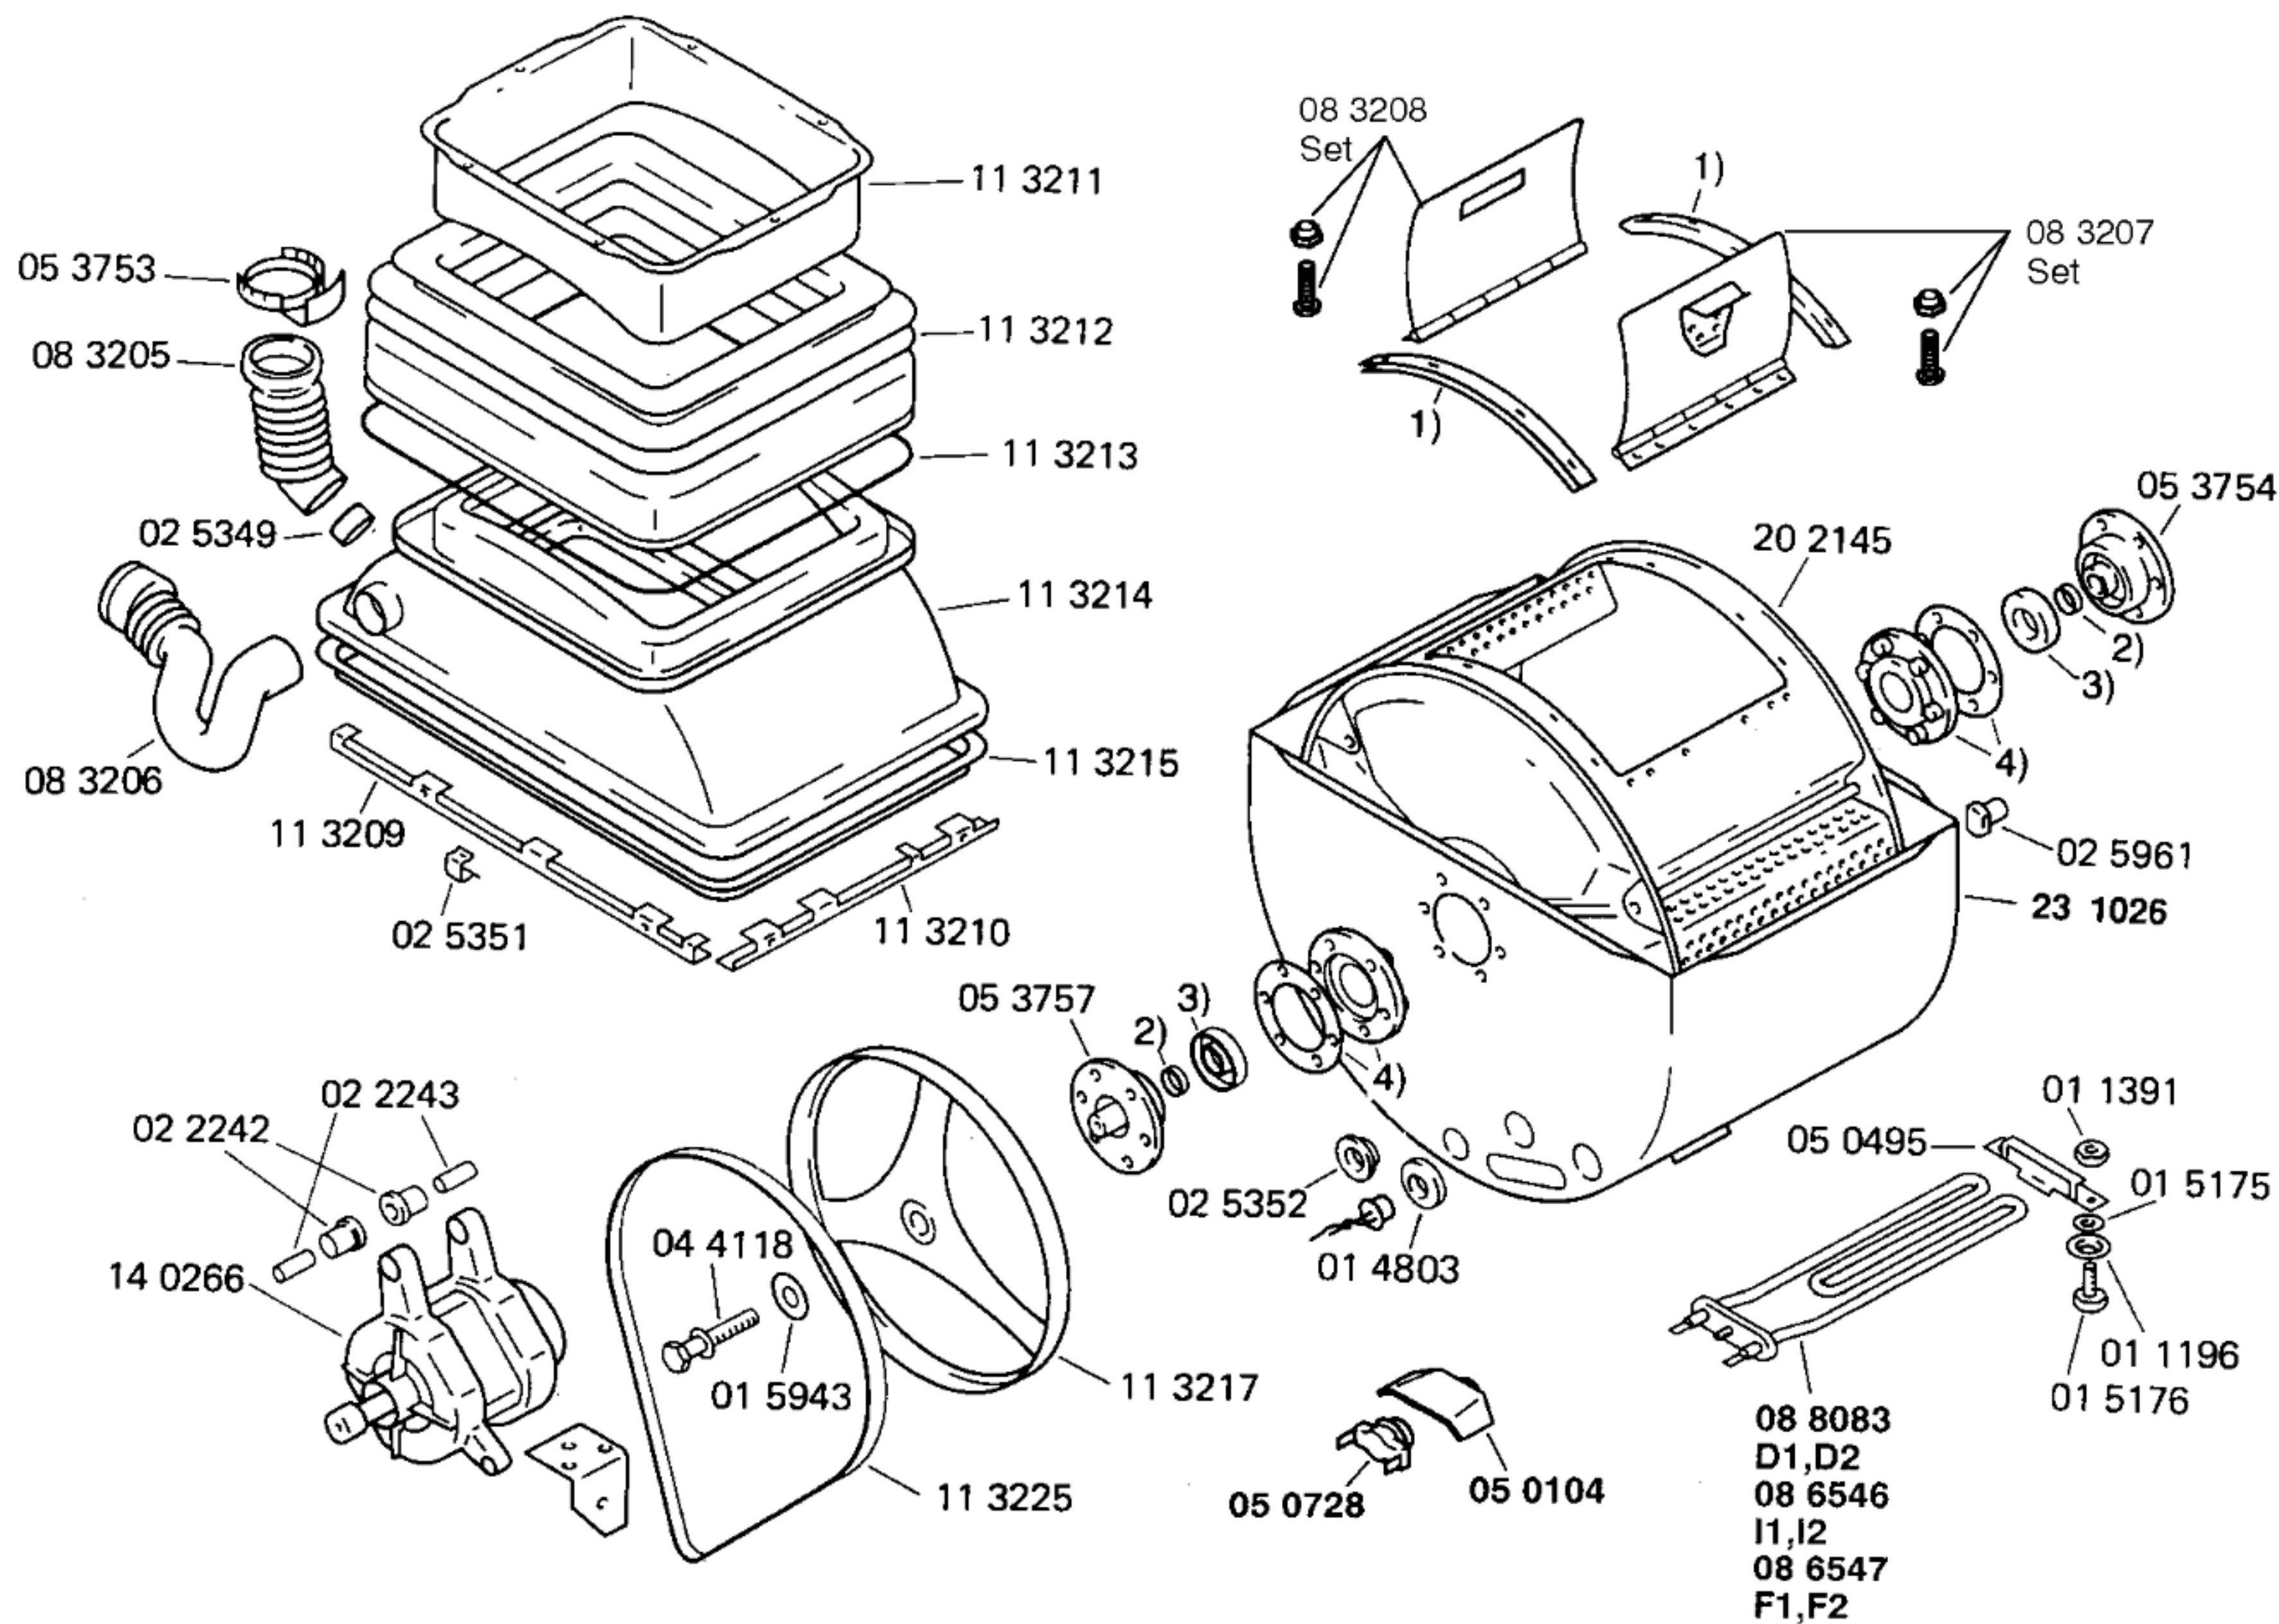

- 1) 11 3216
- 2) 04 2309
- 3) 02 5350
- 4) 05 7022

**BOSCH**

V344-WMV3444/02-D1
V344-WMV3444II/02-I1
V344-WMV344425/04-F1
V344-WMV3444/03-D2

V344-WMV3444II/03-I2
V344-WMV344425/05-F2

WASCHGERÄTE
Waschvollautomaten

Ident – Nummern – Konstante
3740

