



Gebrauchsanweisung 52 9468


- 1) 23 6654
- 2) 35 2493
- 3) 48 2070
- 4) 18 3902
- 5) 26 7357
- 6) 26 7359
- 7) 26 7356
- 8) 17 3897
- 9) 17 3898
- 10) 17 3896
- 11) 18 3455
- 12) 18 8267
- 13) 23 5805
- V01, V02
- 21 8904
- V03
- 14) 18 7489
- 15) 18 6972

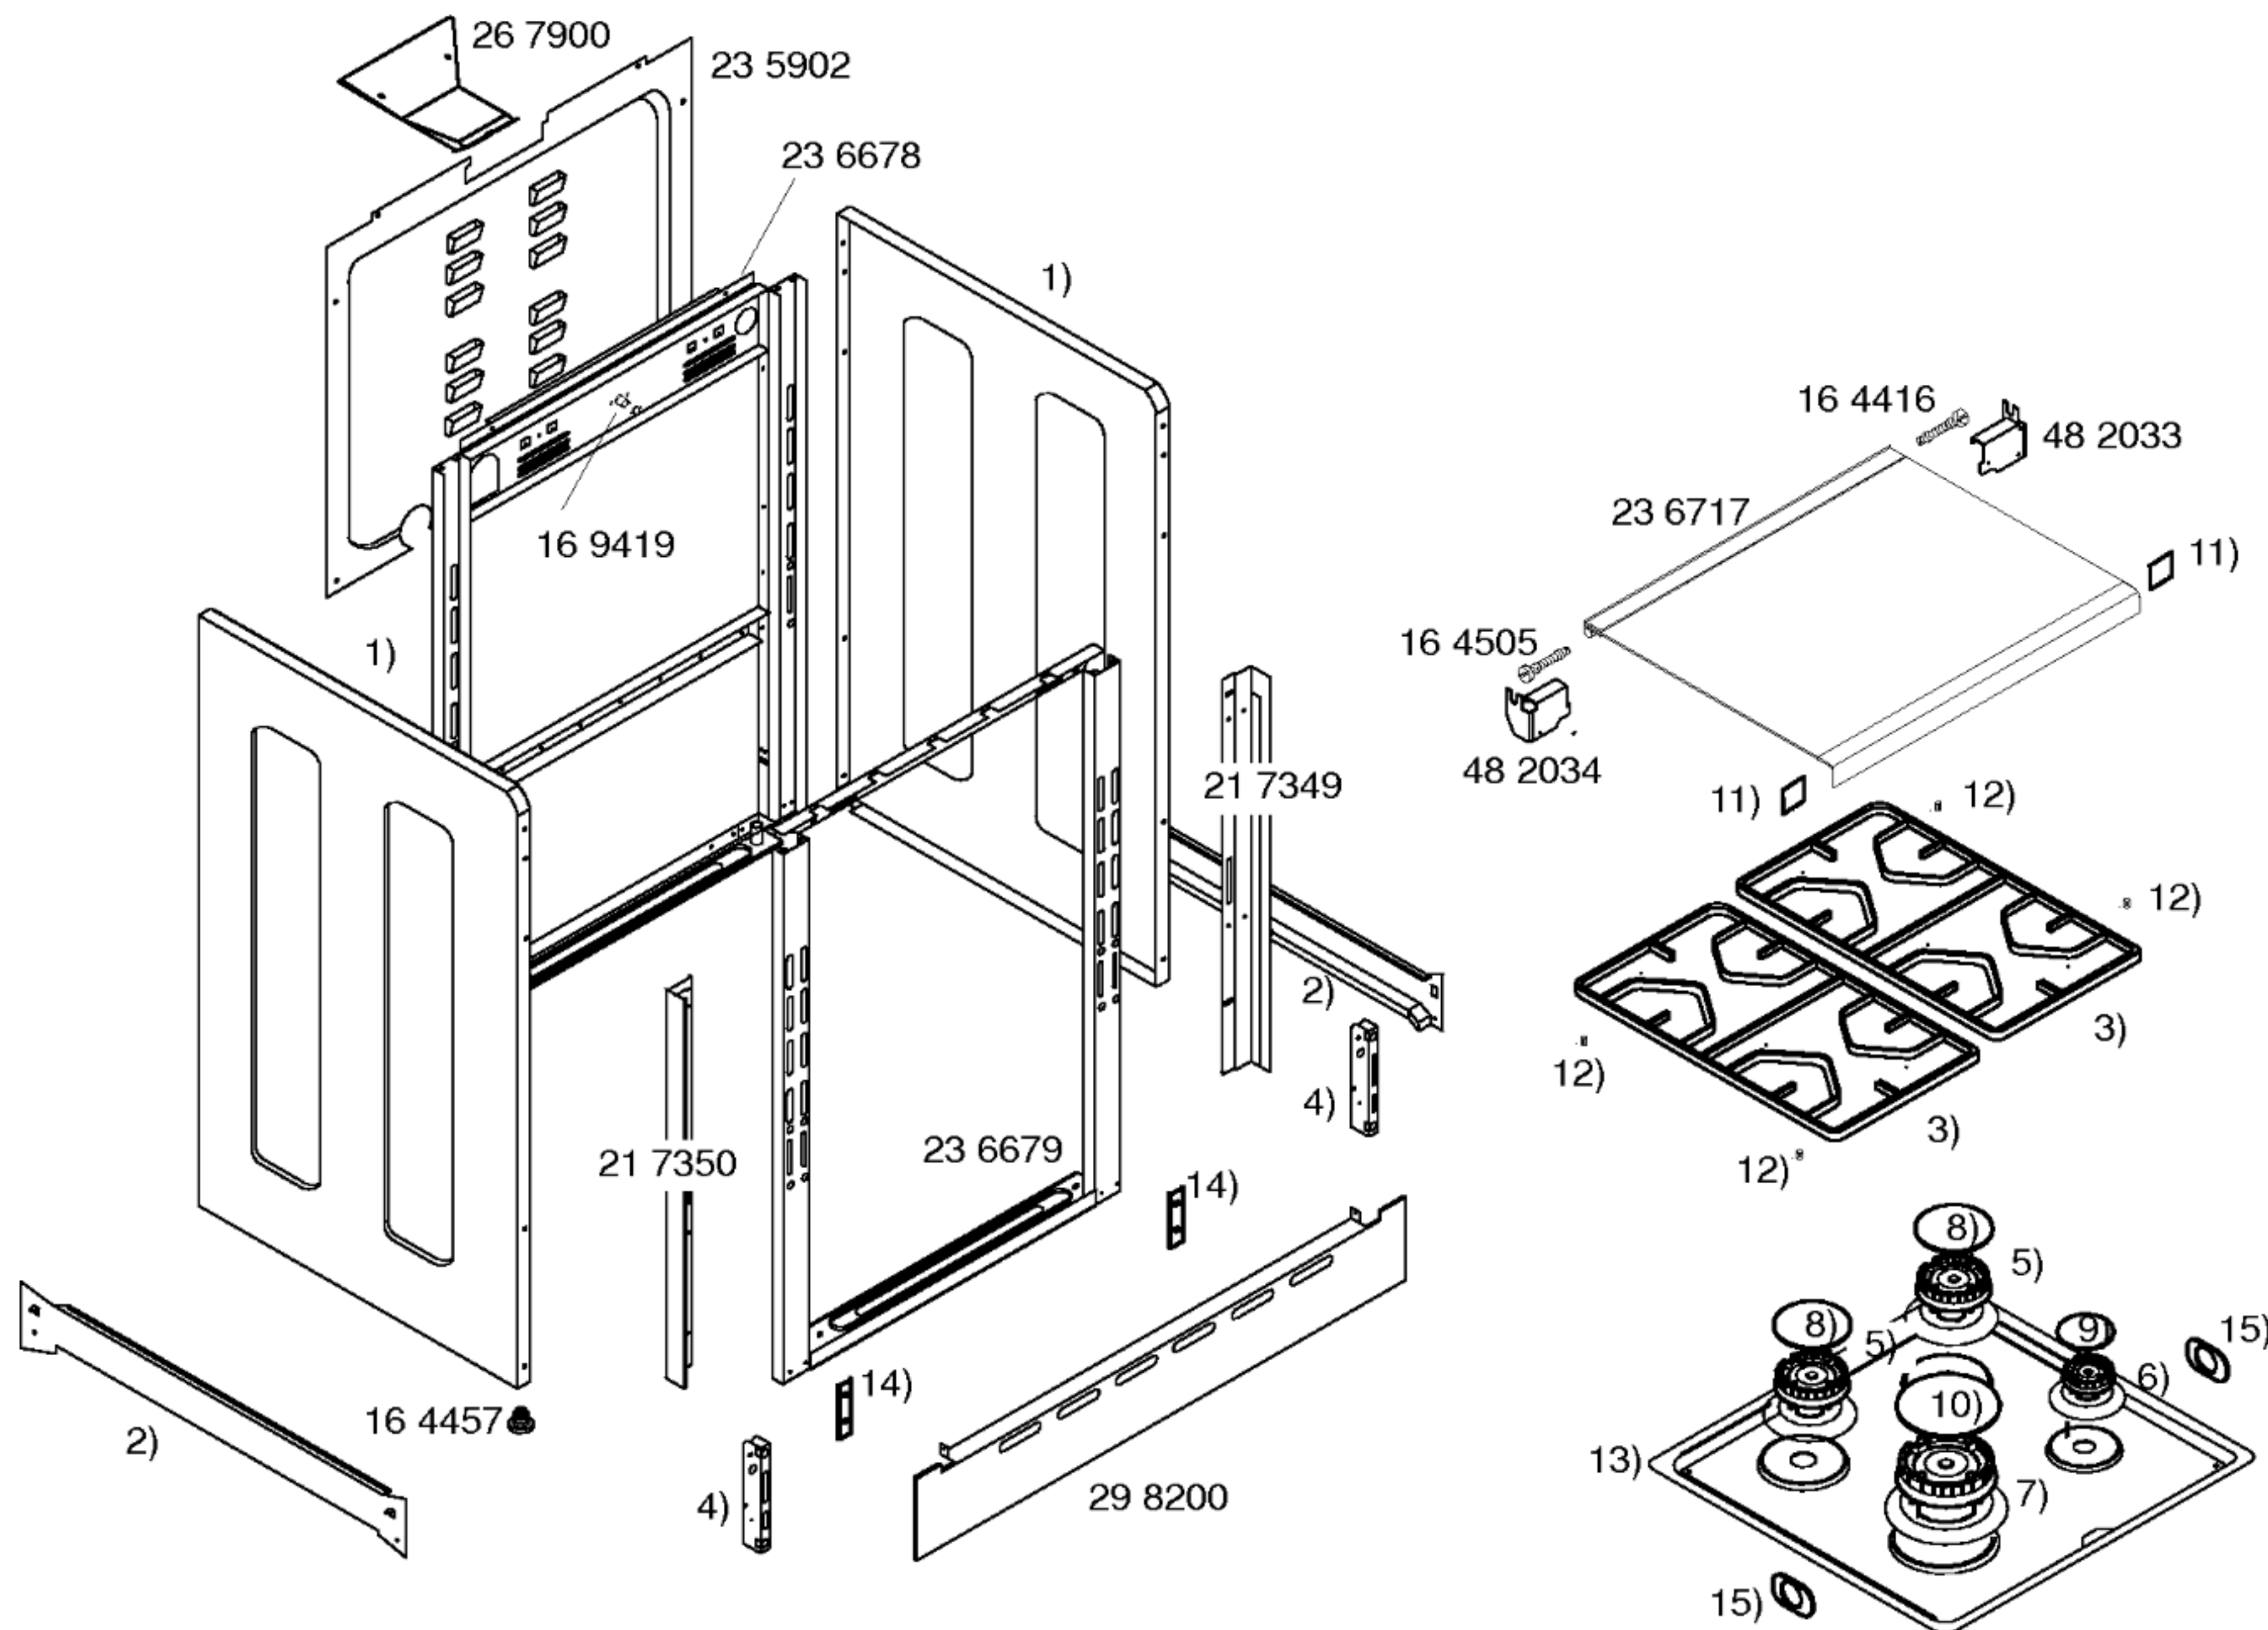


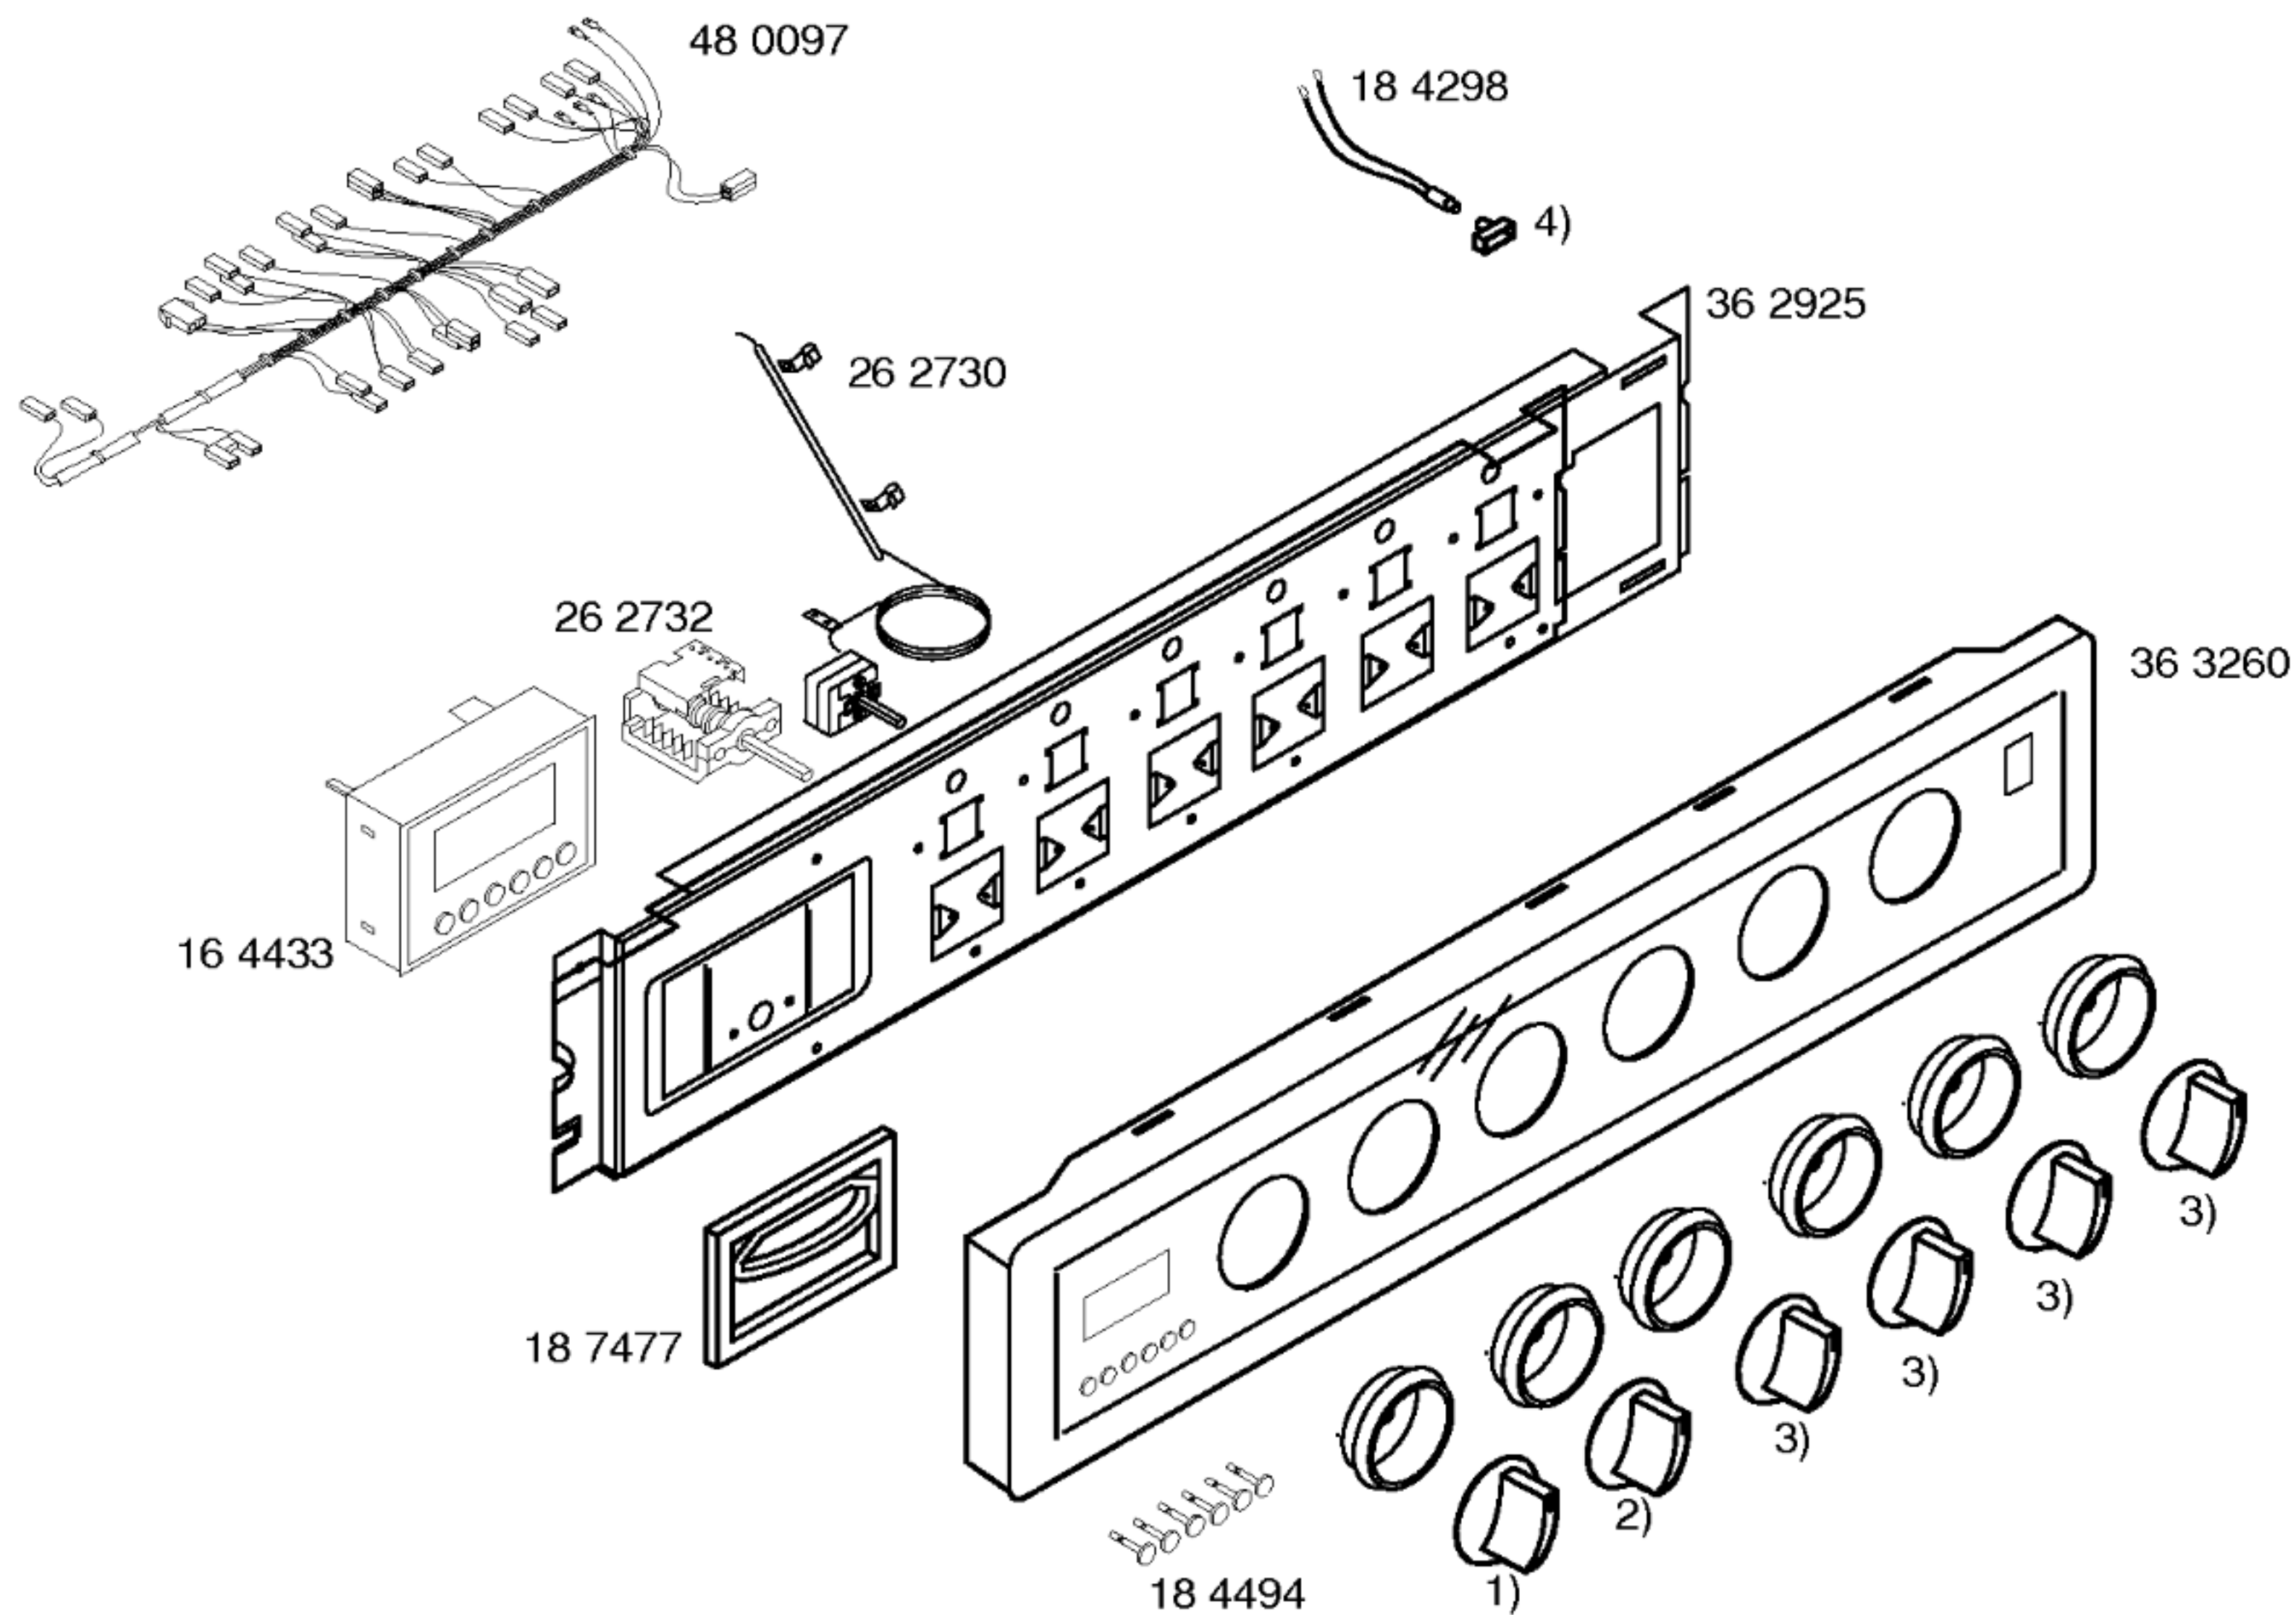

- 1) 18 4480
V01
18 8184
V02,V03
- 2) 18 4479
V01
18 8185
V02,V03
- 3) 18 4481
V01
18 8181
V02,V03
- 4) 18 4297

1) 35 3489

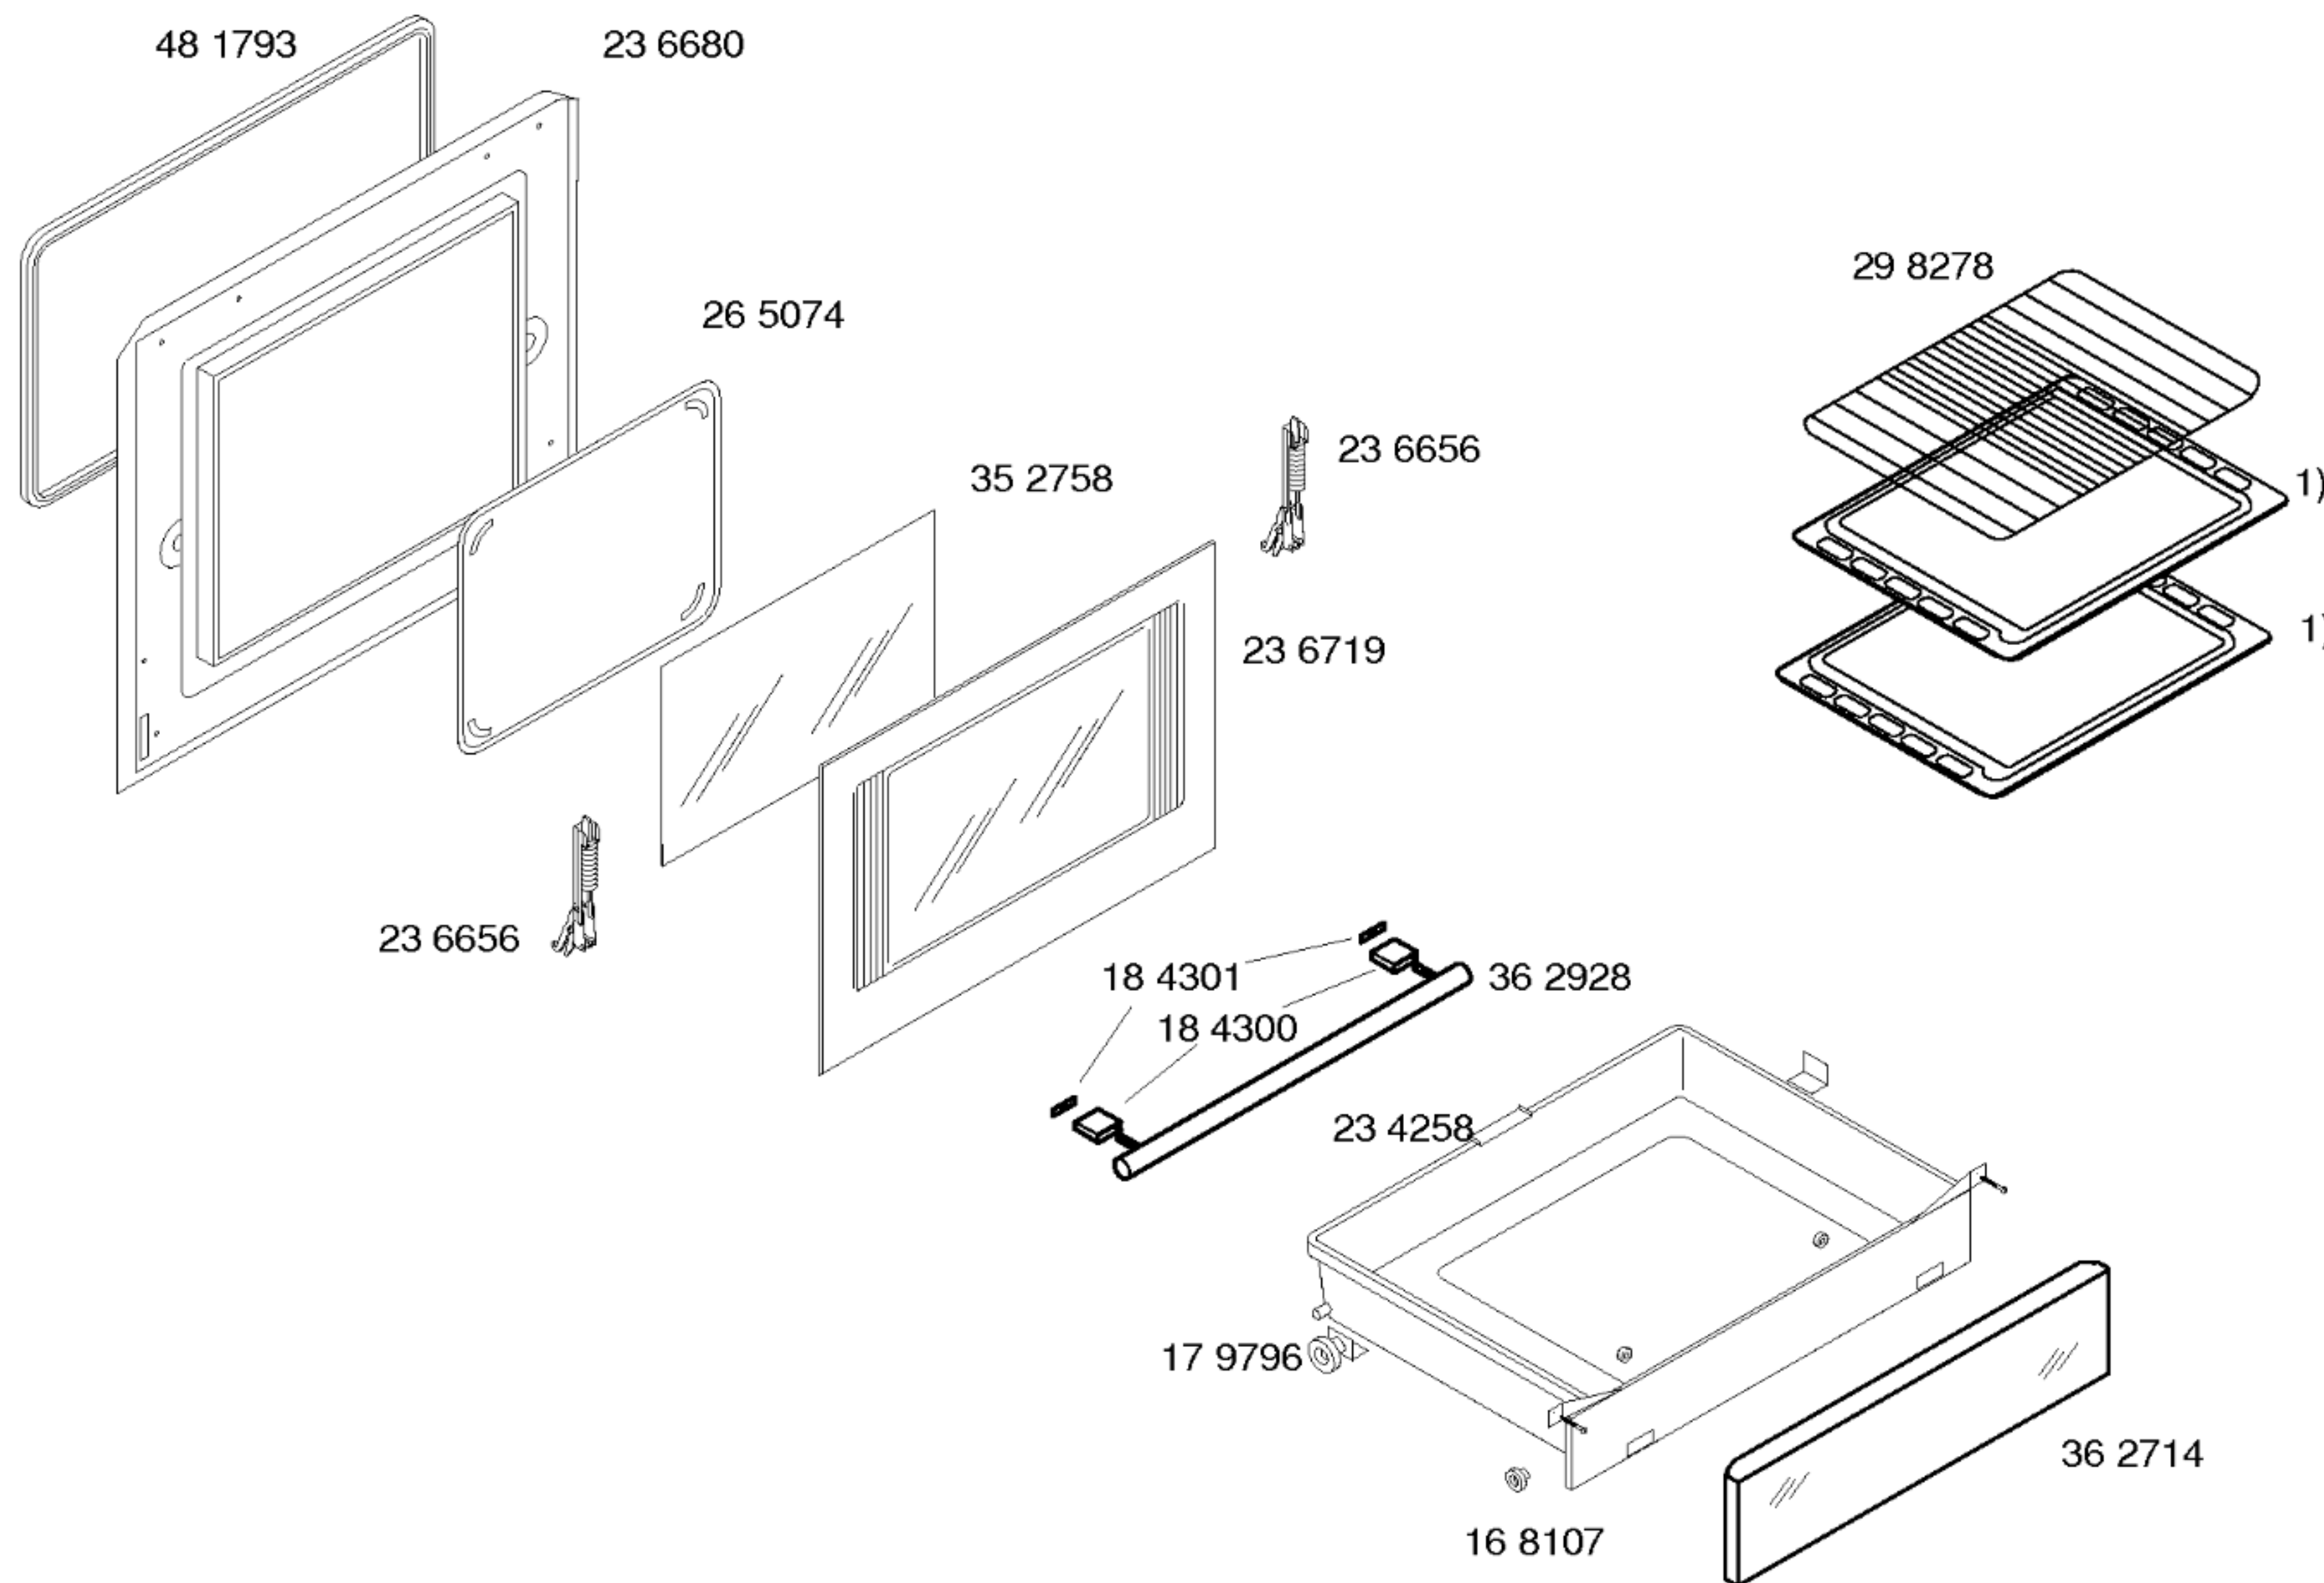

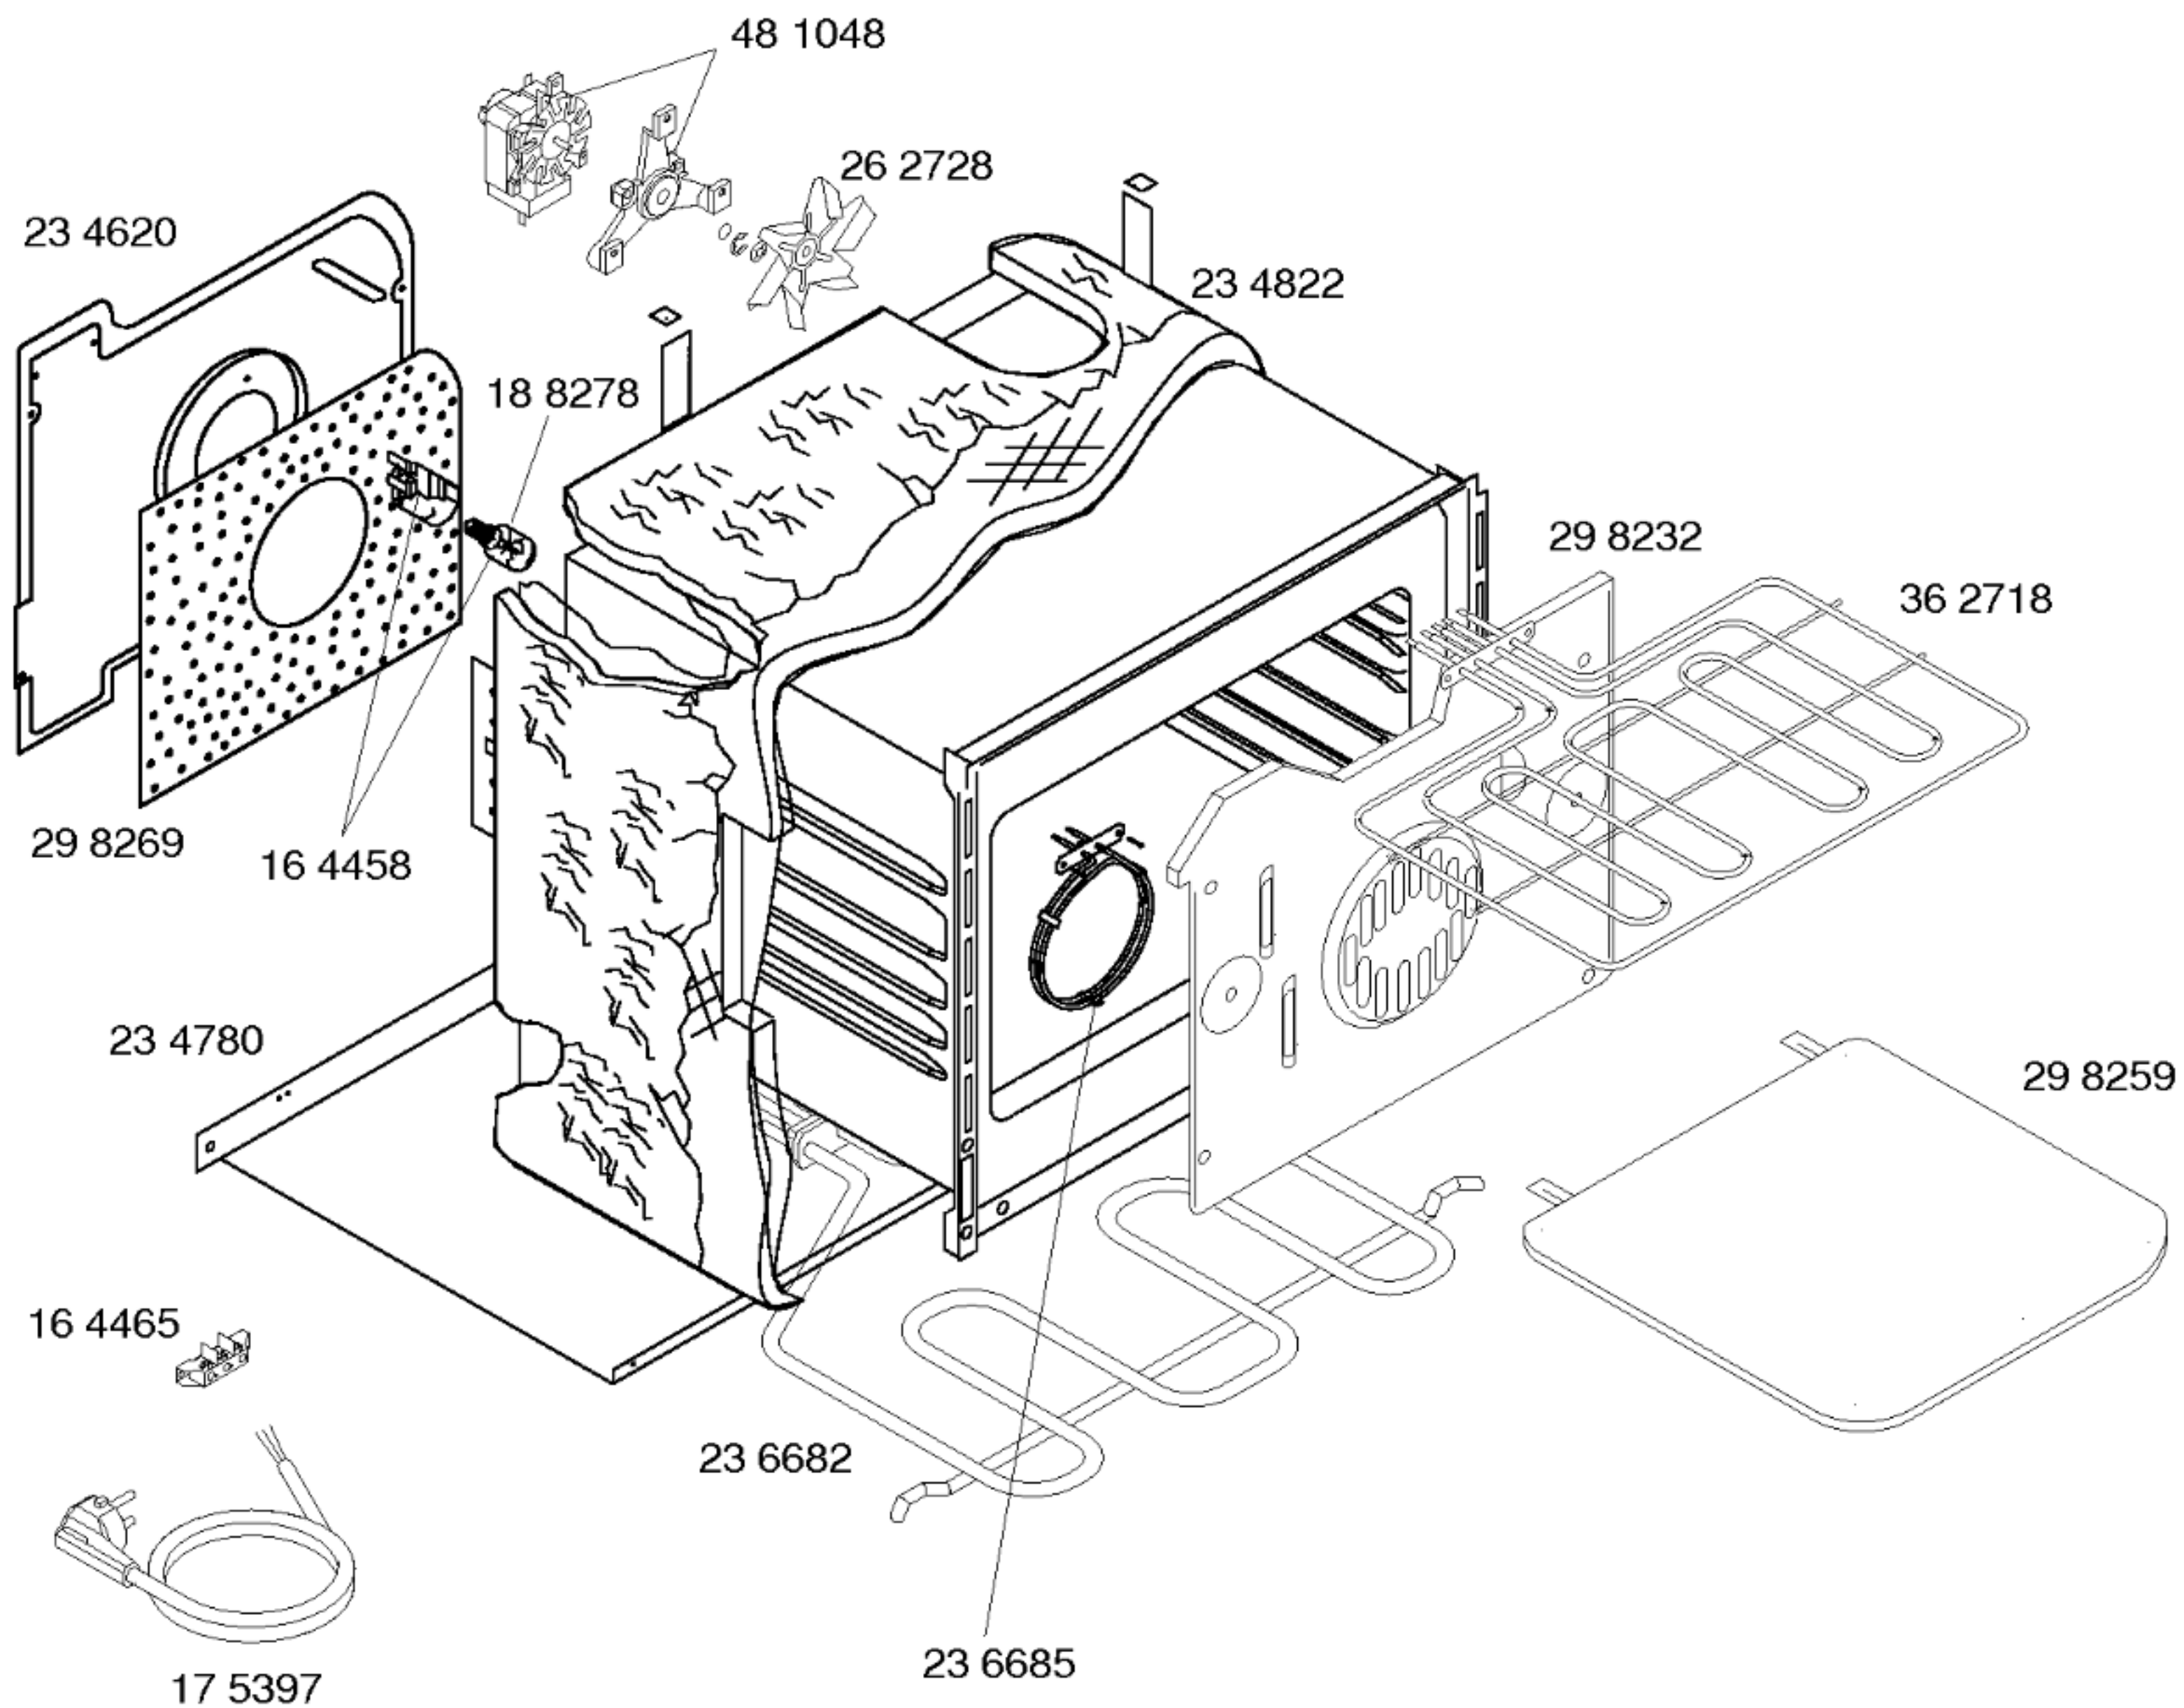

Duesensatz Erdgas
17 5527
Duesensatz
Fluessiggas
17 4048

