



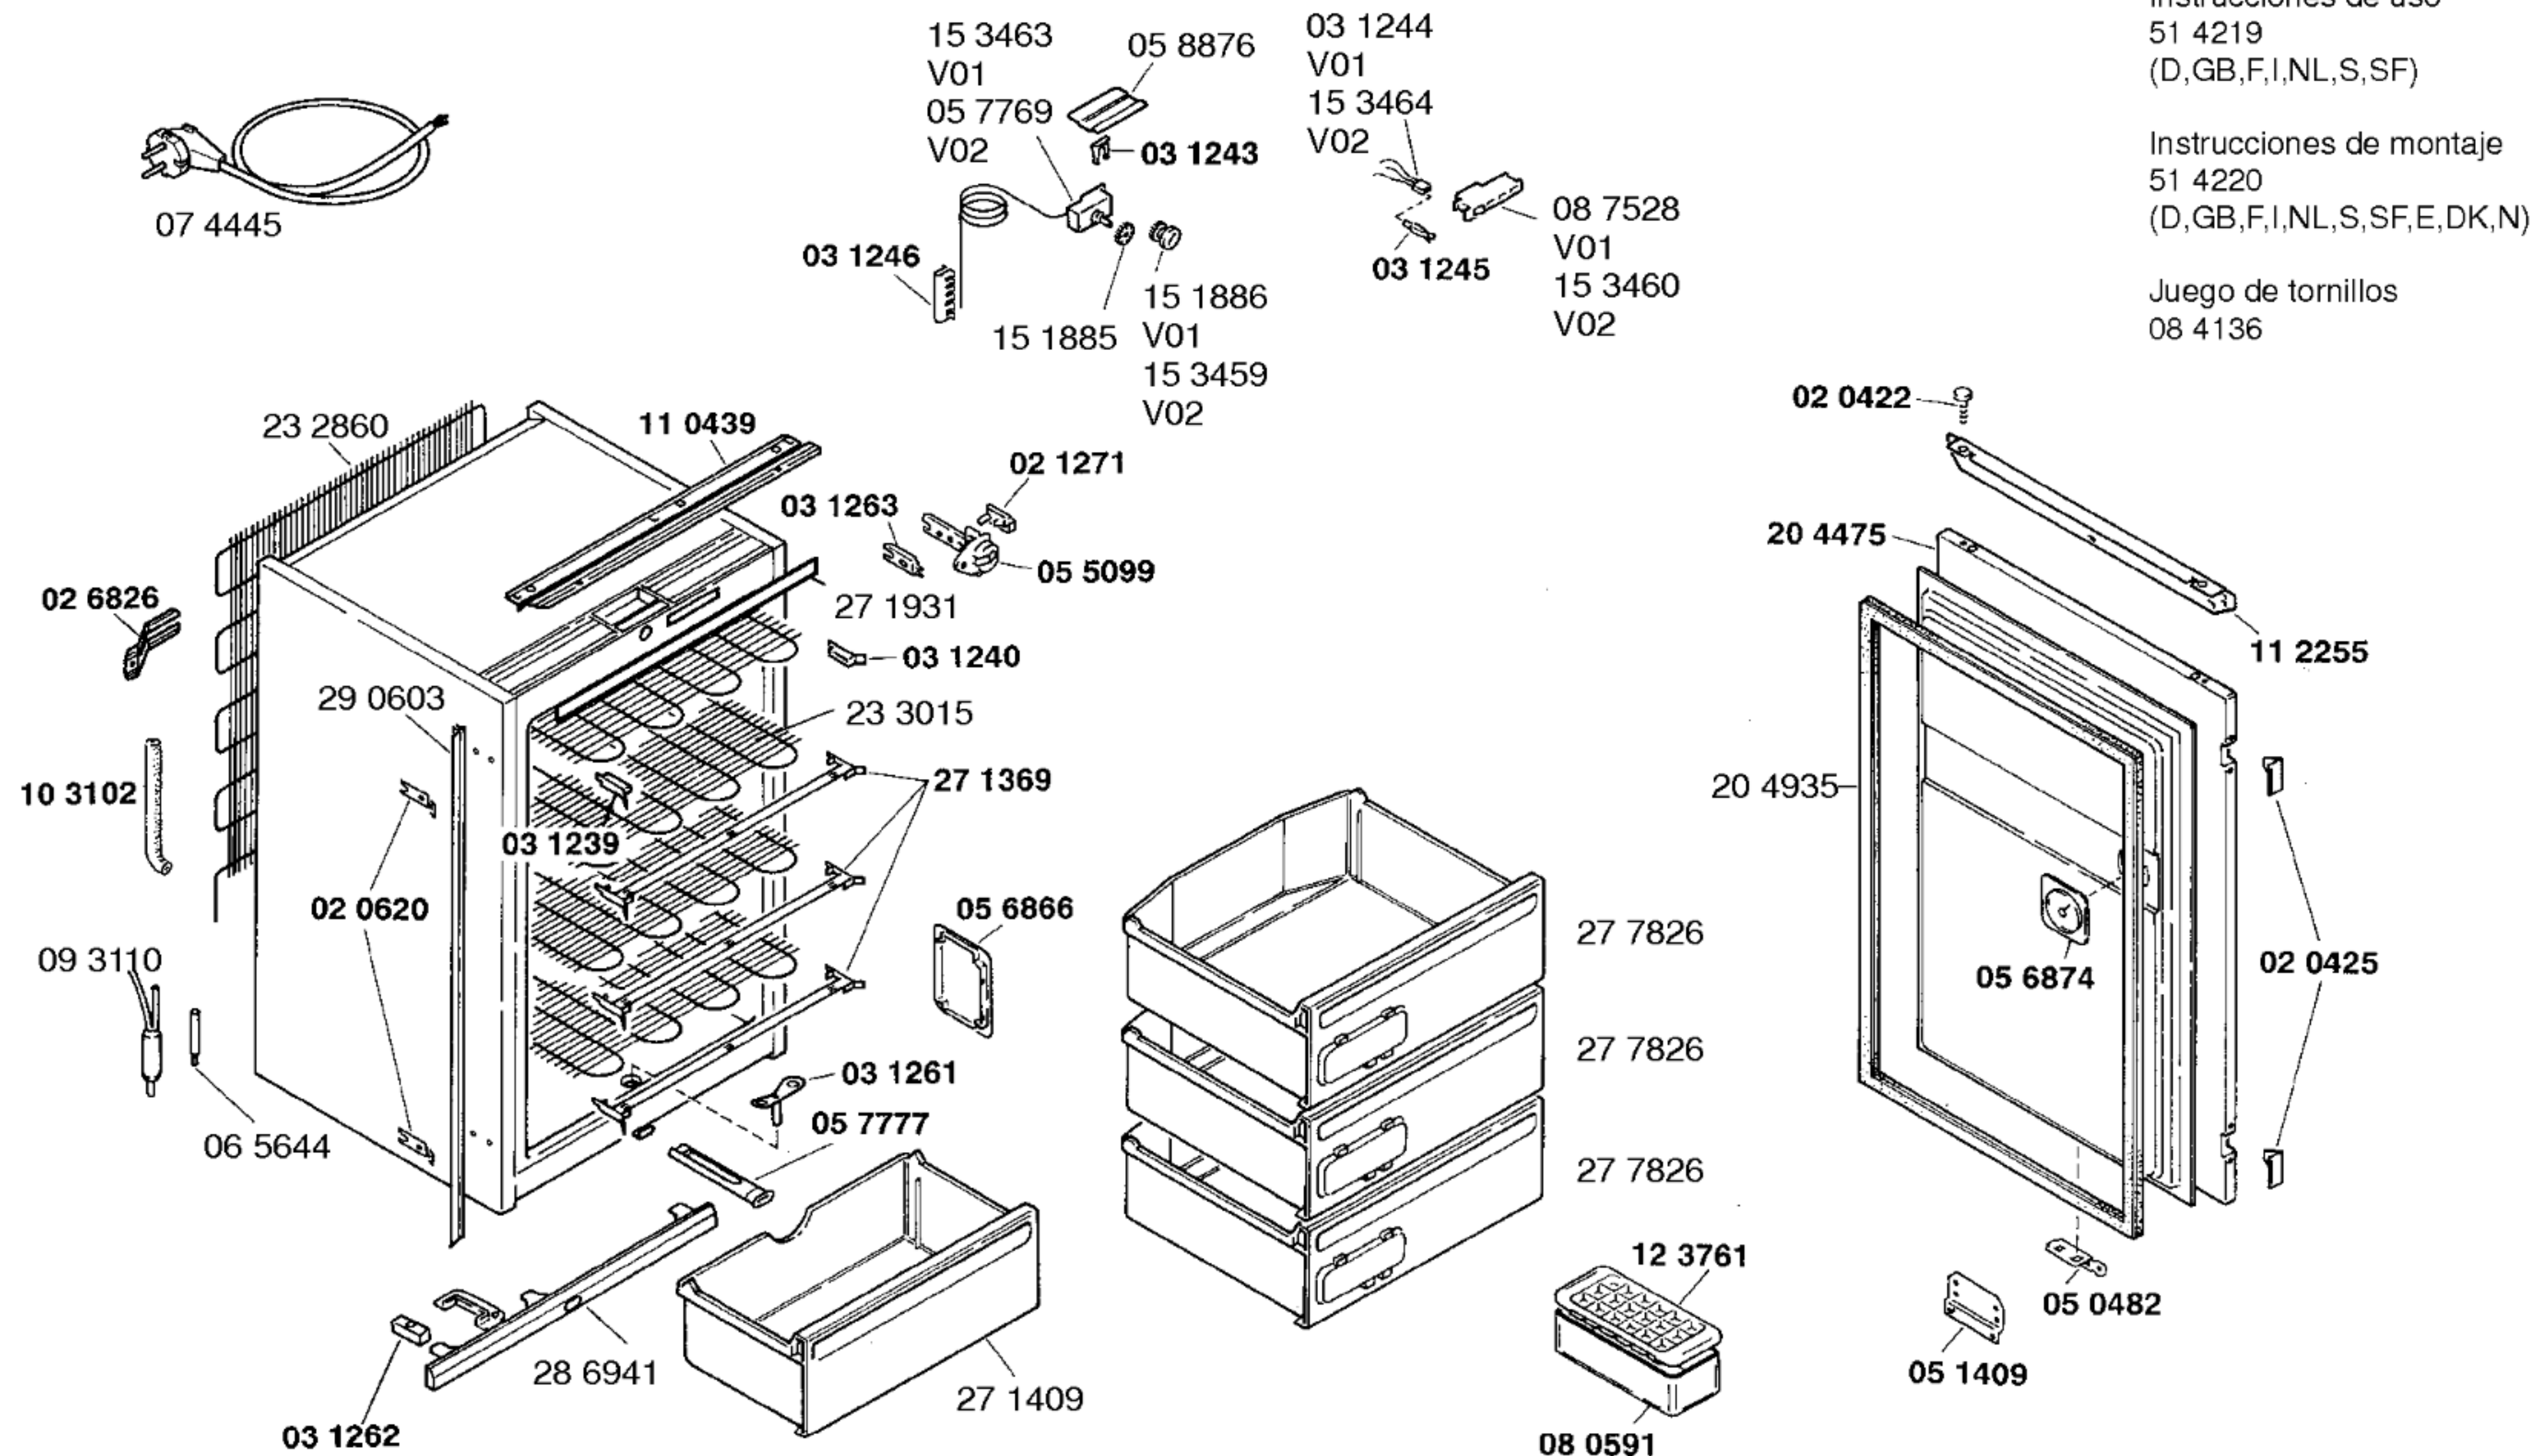

Instrucciones de uso
 51 4219
 (D,GB,F,I,NL,S,SF)

Instrucciones de montaje
 51 4220
 (D,GB,F,I,NL,S,SF,E,DK,N)

Juego de tornillos
 08 4136

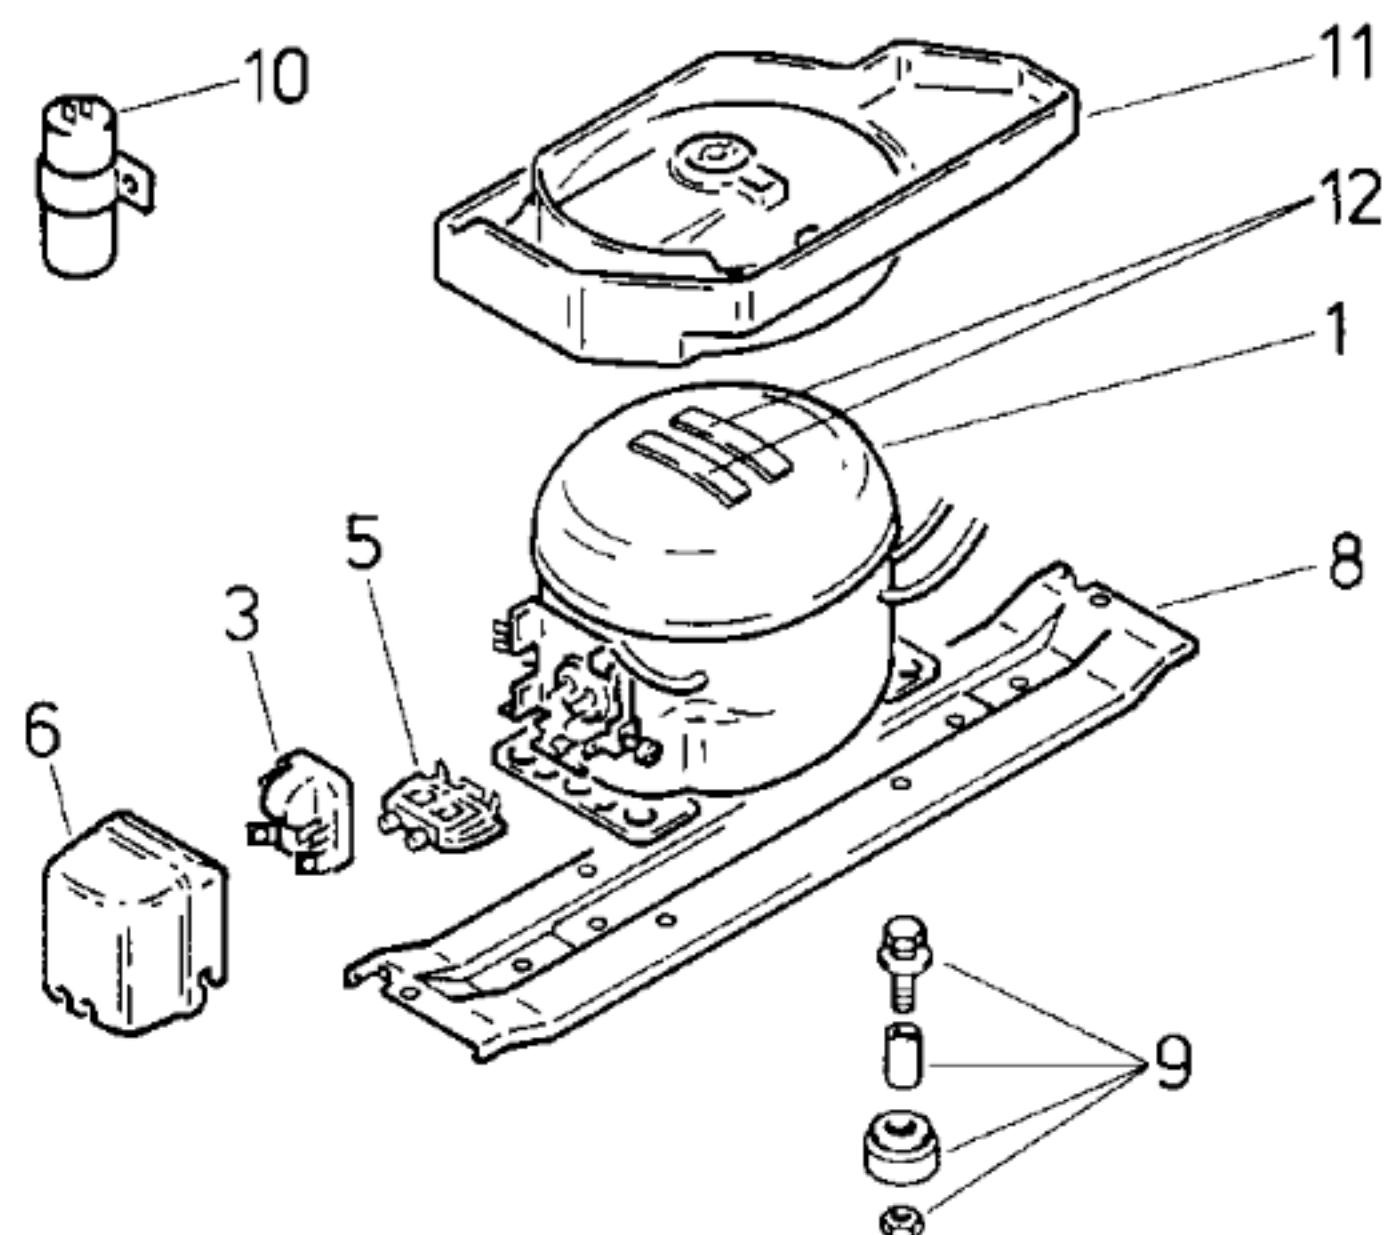

Pos.			
	Danfoss		
	TLES 9 K		
1	14 1308		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7			
8	27 1375		
9	05 0166		
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLES 9 K		
Förderleistung/Delivery/Débit		I/h	1589	
Anlaufstrom/Starting current/Cour de démarrage		A		
Widerstand/Resistance/Résistance		Ha/main/prin. Ω		
		Hi/aux Ω		
Temp.-Regler/Thermostat		Danfoss		
Typ/Type				
Reglerstellung/Position		max	min	
Schaltwerte/Switching values/		„ein“ $^{\circ}\text{C}$	-25	-17
Valeurs de commutation		„aus“	-33	-23
		(„abtauen“ od.) „alarm“	-19,5	-13
Füllmenge/Fill.quantity/Charge		R600a	g	45
Anschlußwert/Conn.load/Puiss. connectée		W		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		