



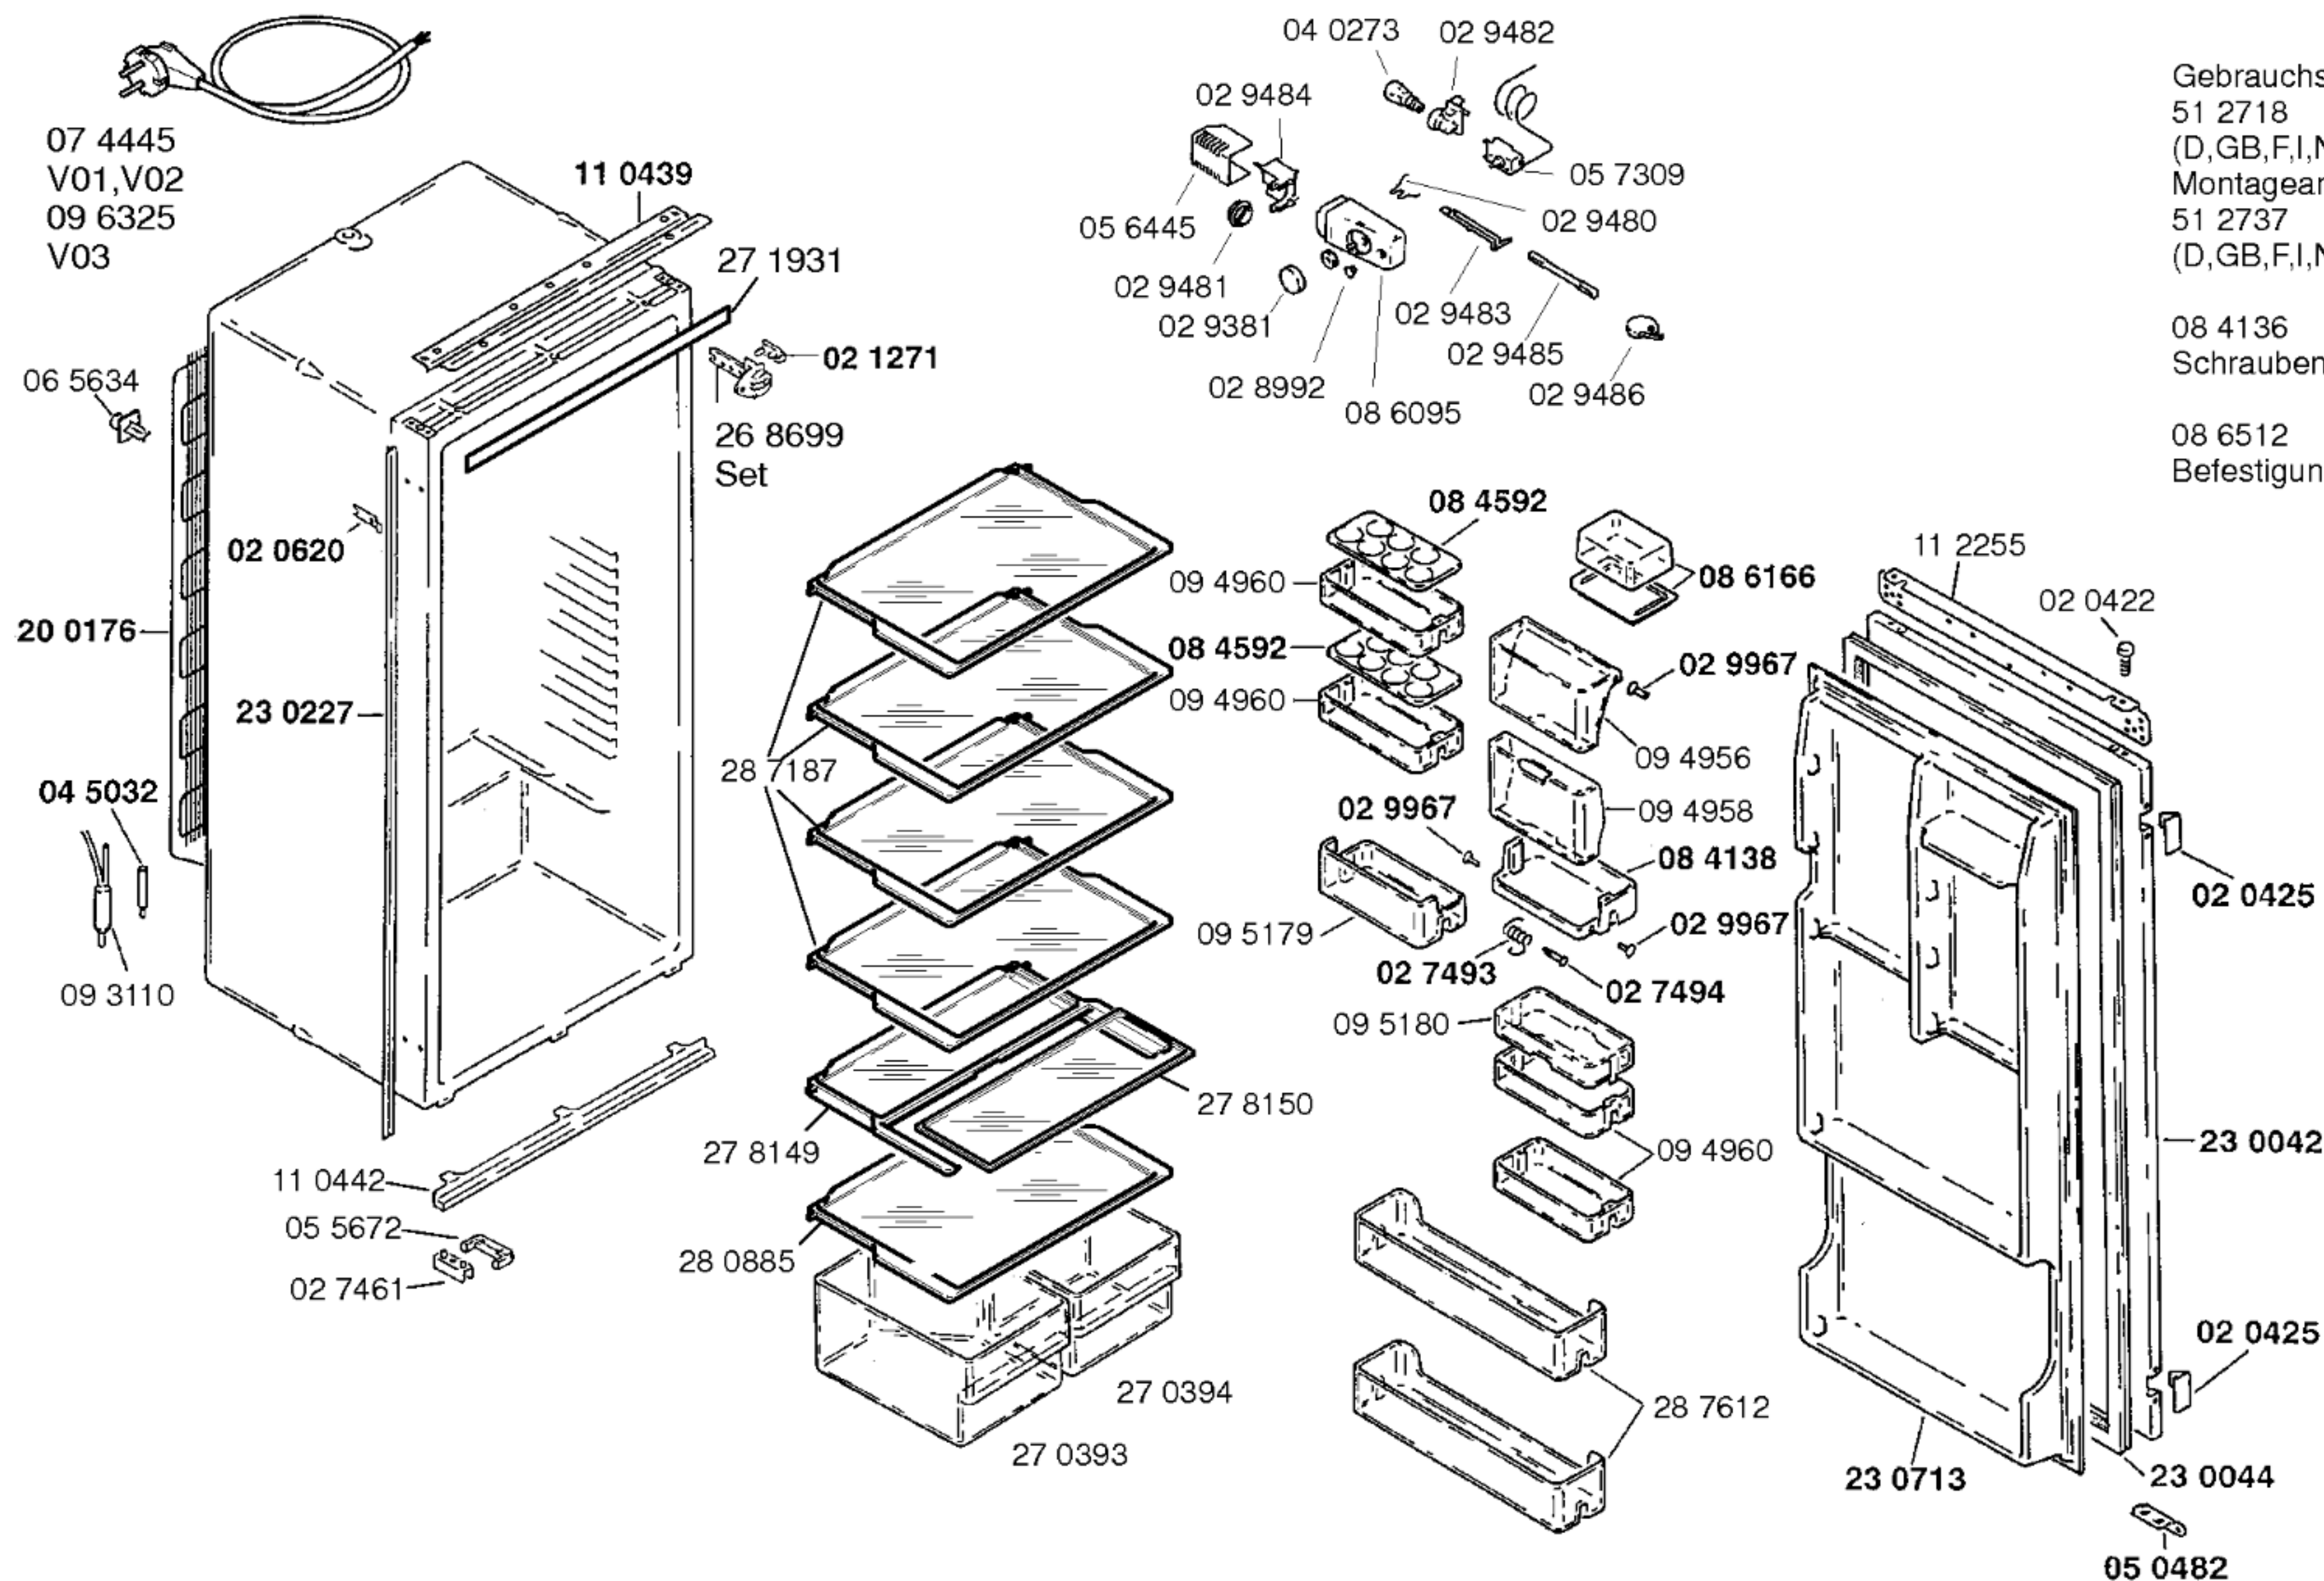

Gebrauchsanweisung
51 2718
(D,GB,F,I,NL,N,SF)
Montageanweisung
51 2737
(D,GB,F,I,NL,DK,N,S,SF,E)

08 4136
Schraubensatz

08 6512
Befestigungssatz

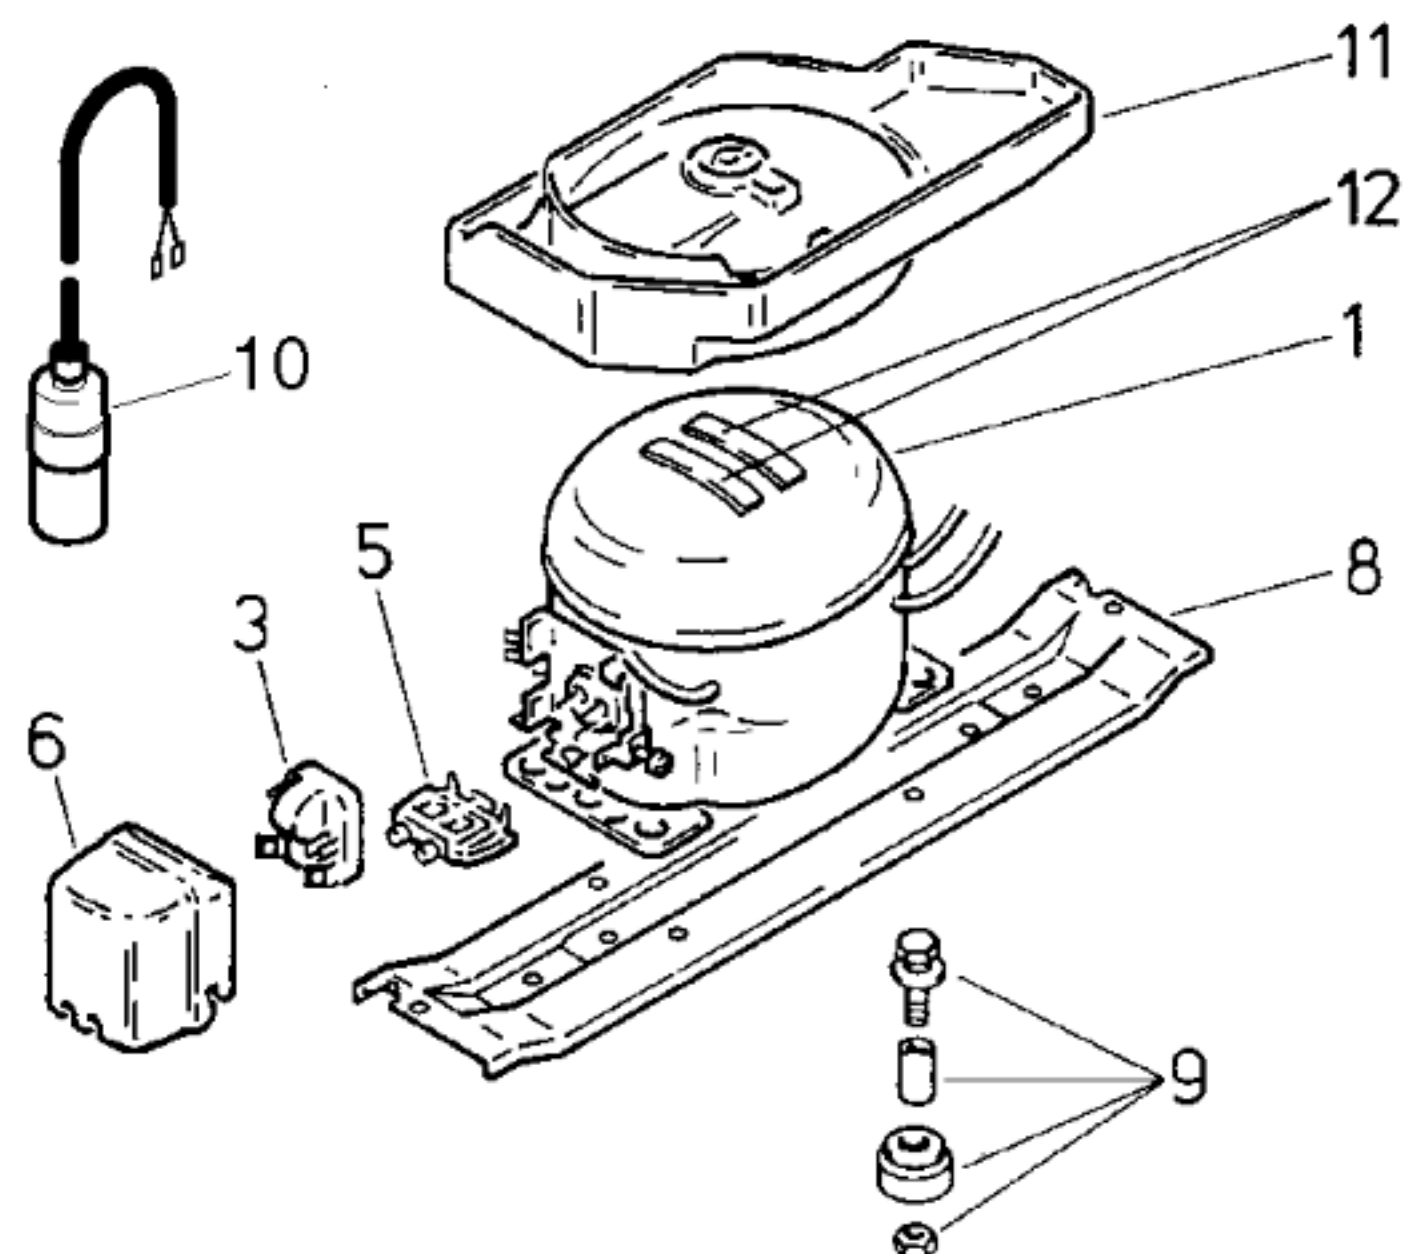

	V01	V02,V03	
Pos.	Danfoss	Danfoss	
	TLES 7 K	TLES 6 K	
1	14 1239	14 1306	
2			
3	15 1055	15 1055	
4			
5	15 0760	15 0760	
6	15 1072	15 1072	
7			
8	27 8207	27 8207	
9	05 0166	05 0166	
10			
11	08 4744	08 4744	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss	Danfoss	
Typ/Type		TLES 7 K	TLES 6 K	
Förderleistung/Delivery/Débit		l/h	1168	1026
Anlaufstrom/Starting current/Cour de démarrage		A	4,5	4,0
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	16,5	18,9
		Hi/aux Ω	16,9	15,3
Temp.-Regler/Thermostat				
Typ/Type				
Reglerstellung/Position				
Schaltwerte/Switching values/		„ein“ $^{\circ}\text{C}$		
Valeurs de commutation		„aus“		
(„abtauen“ od.)		„alarm“		
Füllmenge/Fill.quantity/Charge		R600a g	*	26
Anschlußwert/Conn.load/Puiss. connectée		W	120	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

* siehe Typenschild