


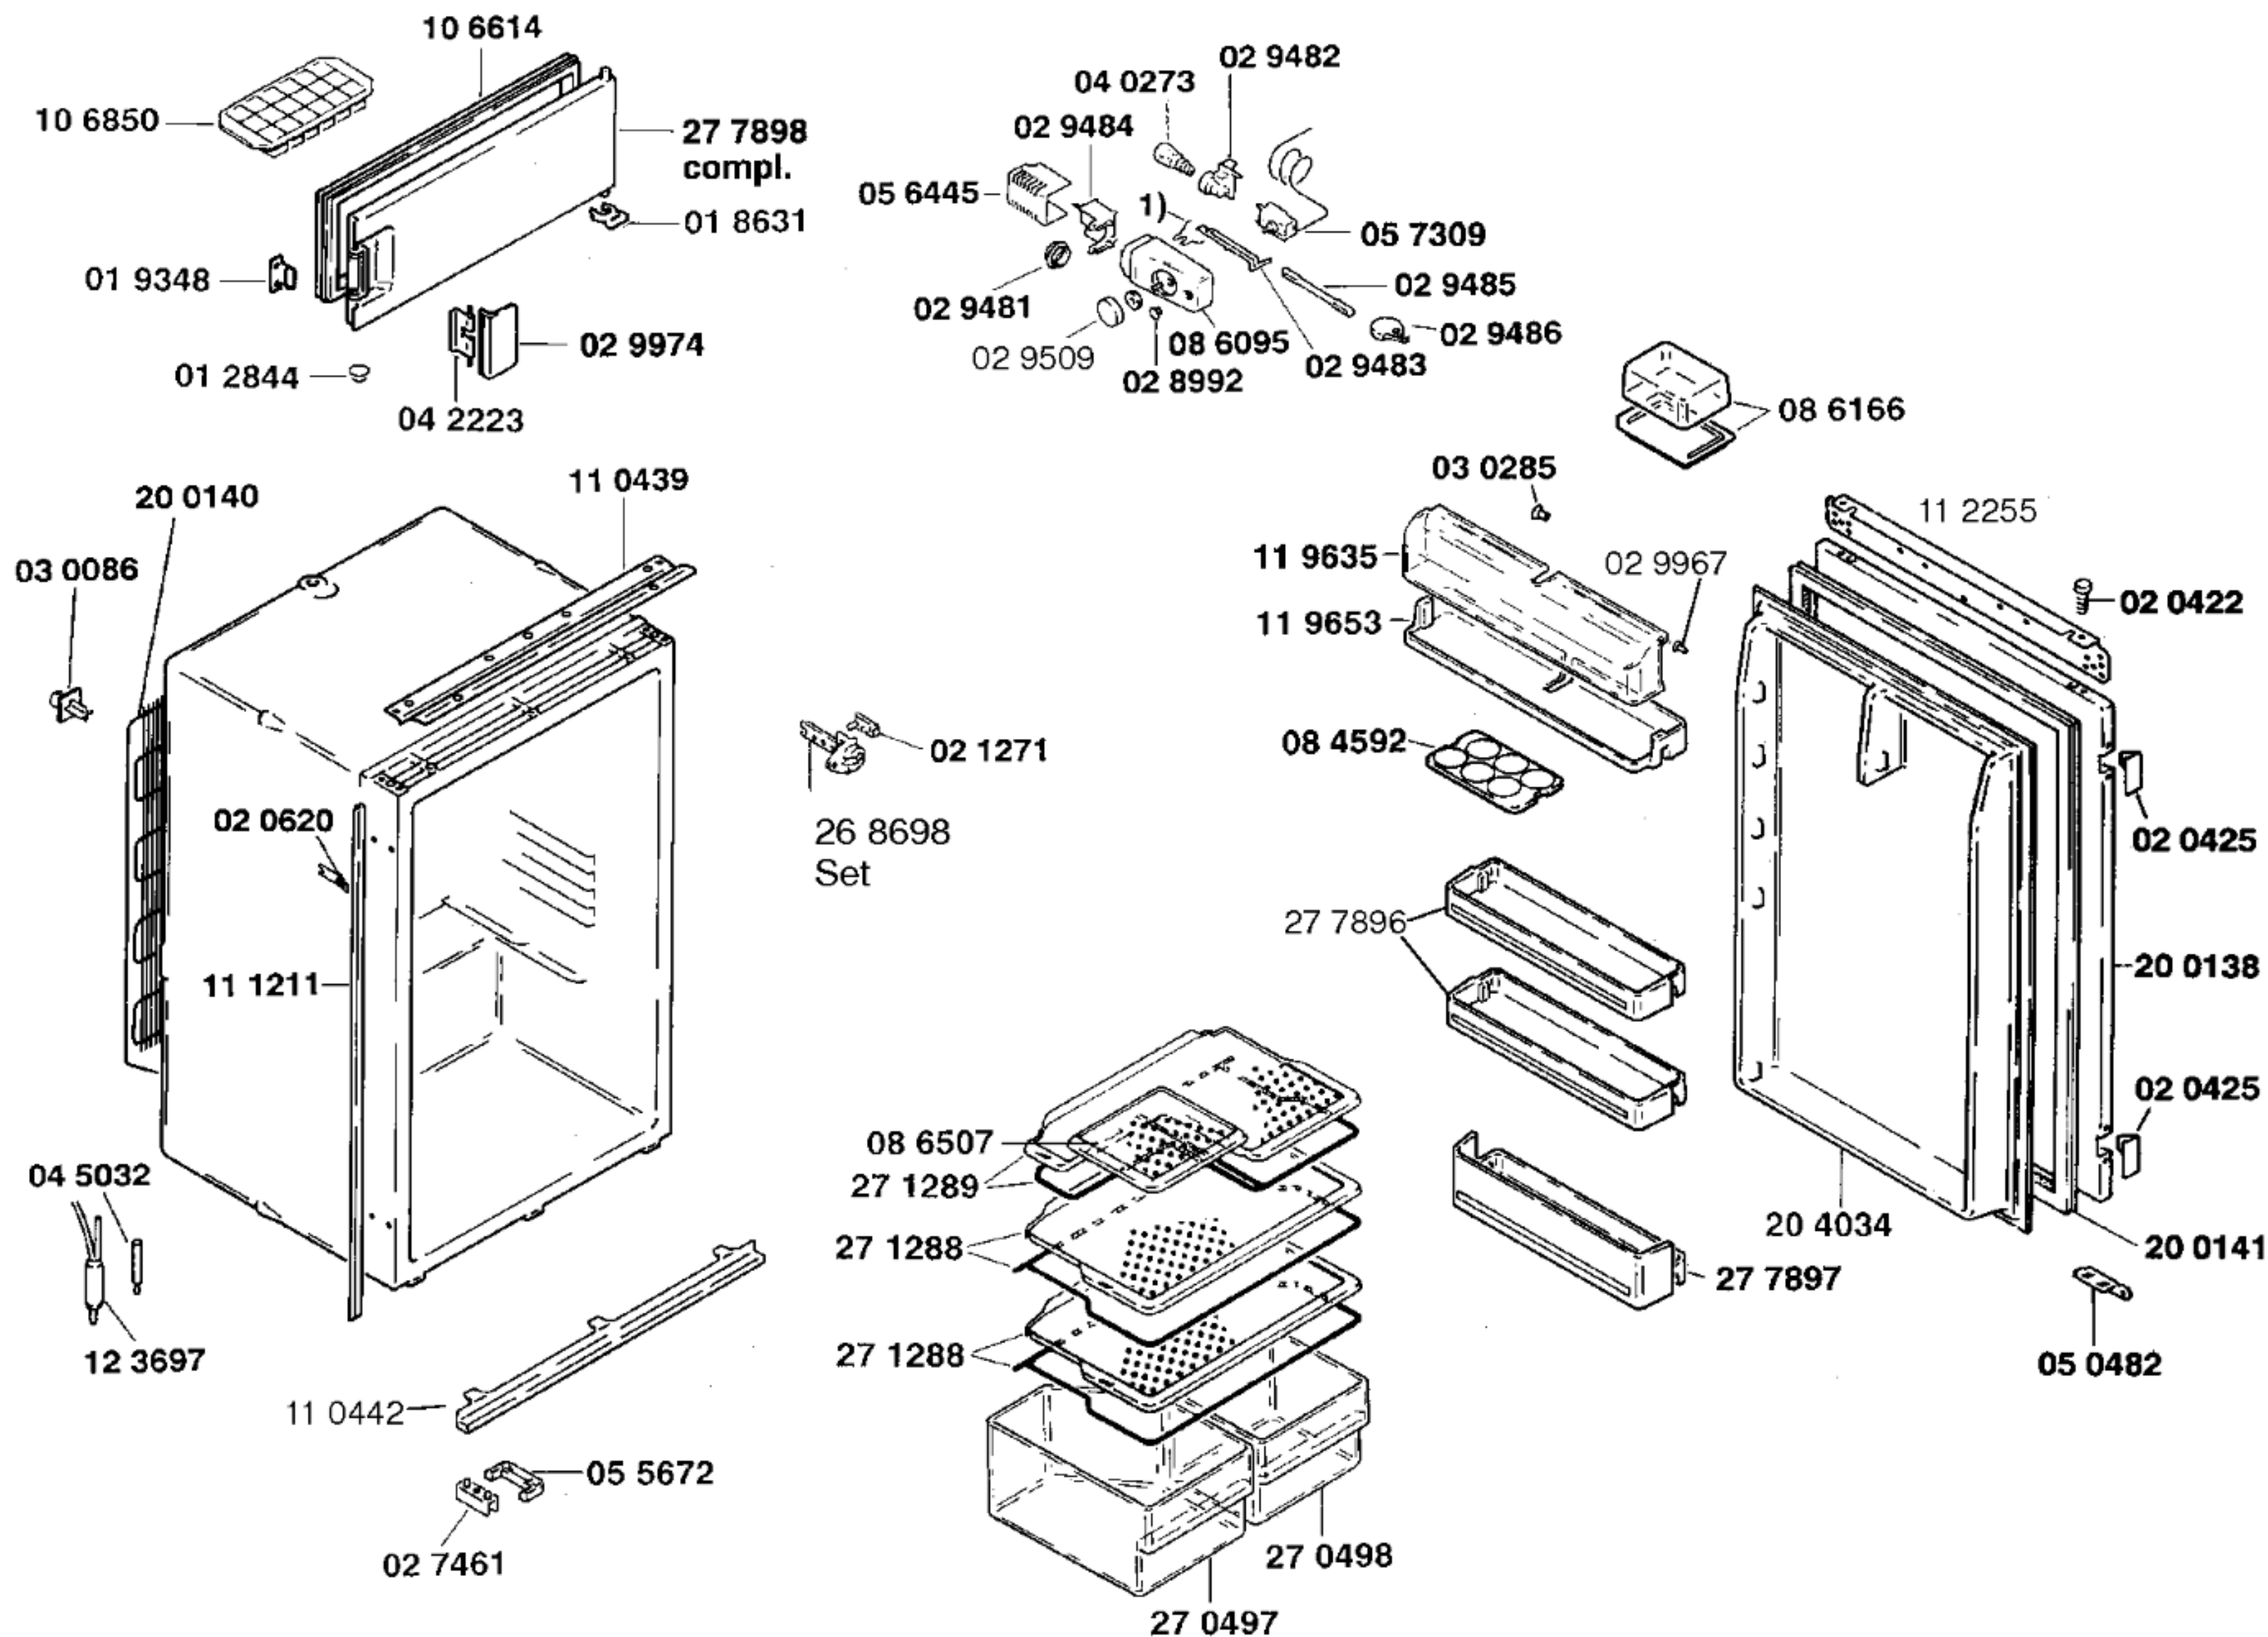


Gebrauchsanweisung
51 3750
(D,GB,F,I,NL)

Montageanleitung
512737
(D,GB,F,I,NL,DK,N,S,SF,E)

Schraubensatz
08 4136

Befestigungssatz
08 6512

1) 02 9480

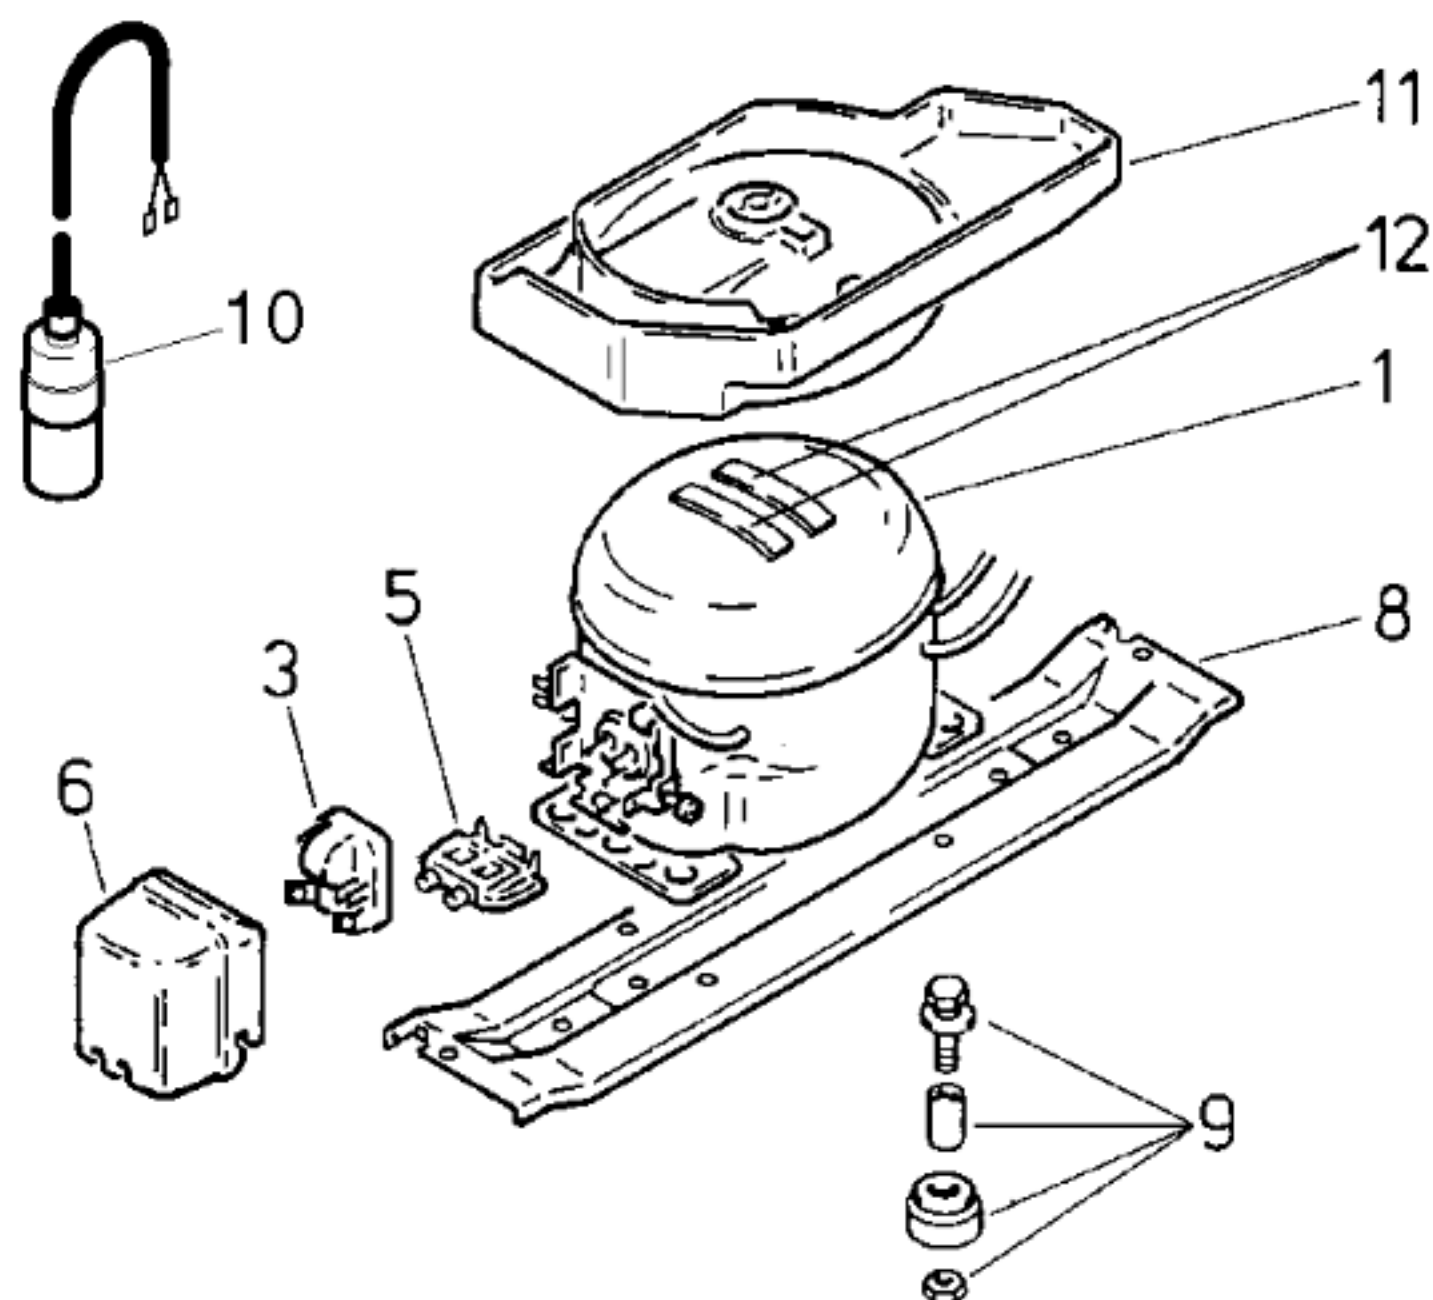

Pos.			
	Danfoss		
	TL 4 A		
1	13 1064		
2			
3	05 9191		
4			
5	02 7310		
6	05 1413		
7			
8	27 8207		
9	05 0166		
10	05 9467		
11	08 4744		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TL 4 A		
Förderleistung/Delivery/Débit		l/h	695	
Anlaufstrom/Starting current/Cour de démarrage		A	8,3	
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	23,4	
		Hi/aux Ω	15,5	
Temp.-Regler/Thermostat		WHF		
Typ/Type		TF 57 F1		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/		+5 +5		
Valeurs de commutation		-27 -12		
		(„abtauen“ od.) „alarm“		
Füllmenge/Fill.quantity/Charge		R12 g	80	
Anschlußwert/Conn.load/Puiss. connectée		W	110	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		