 
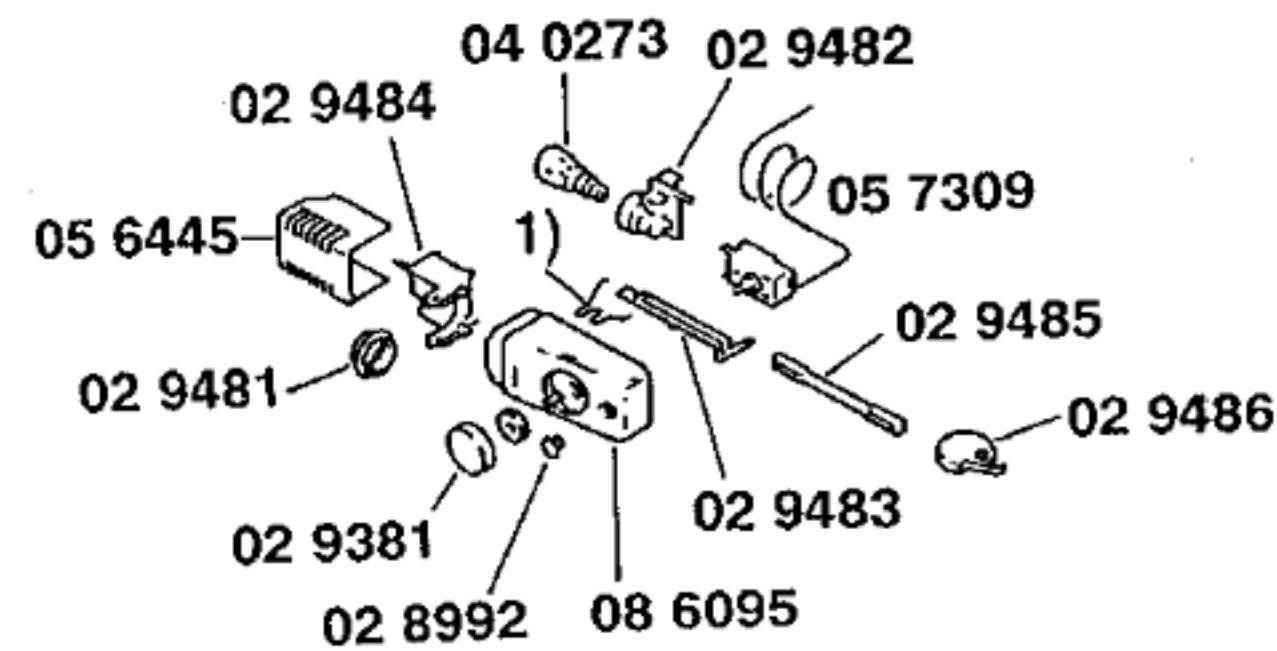 


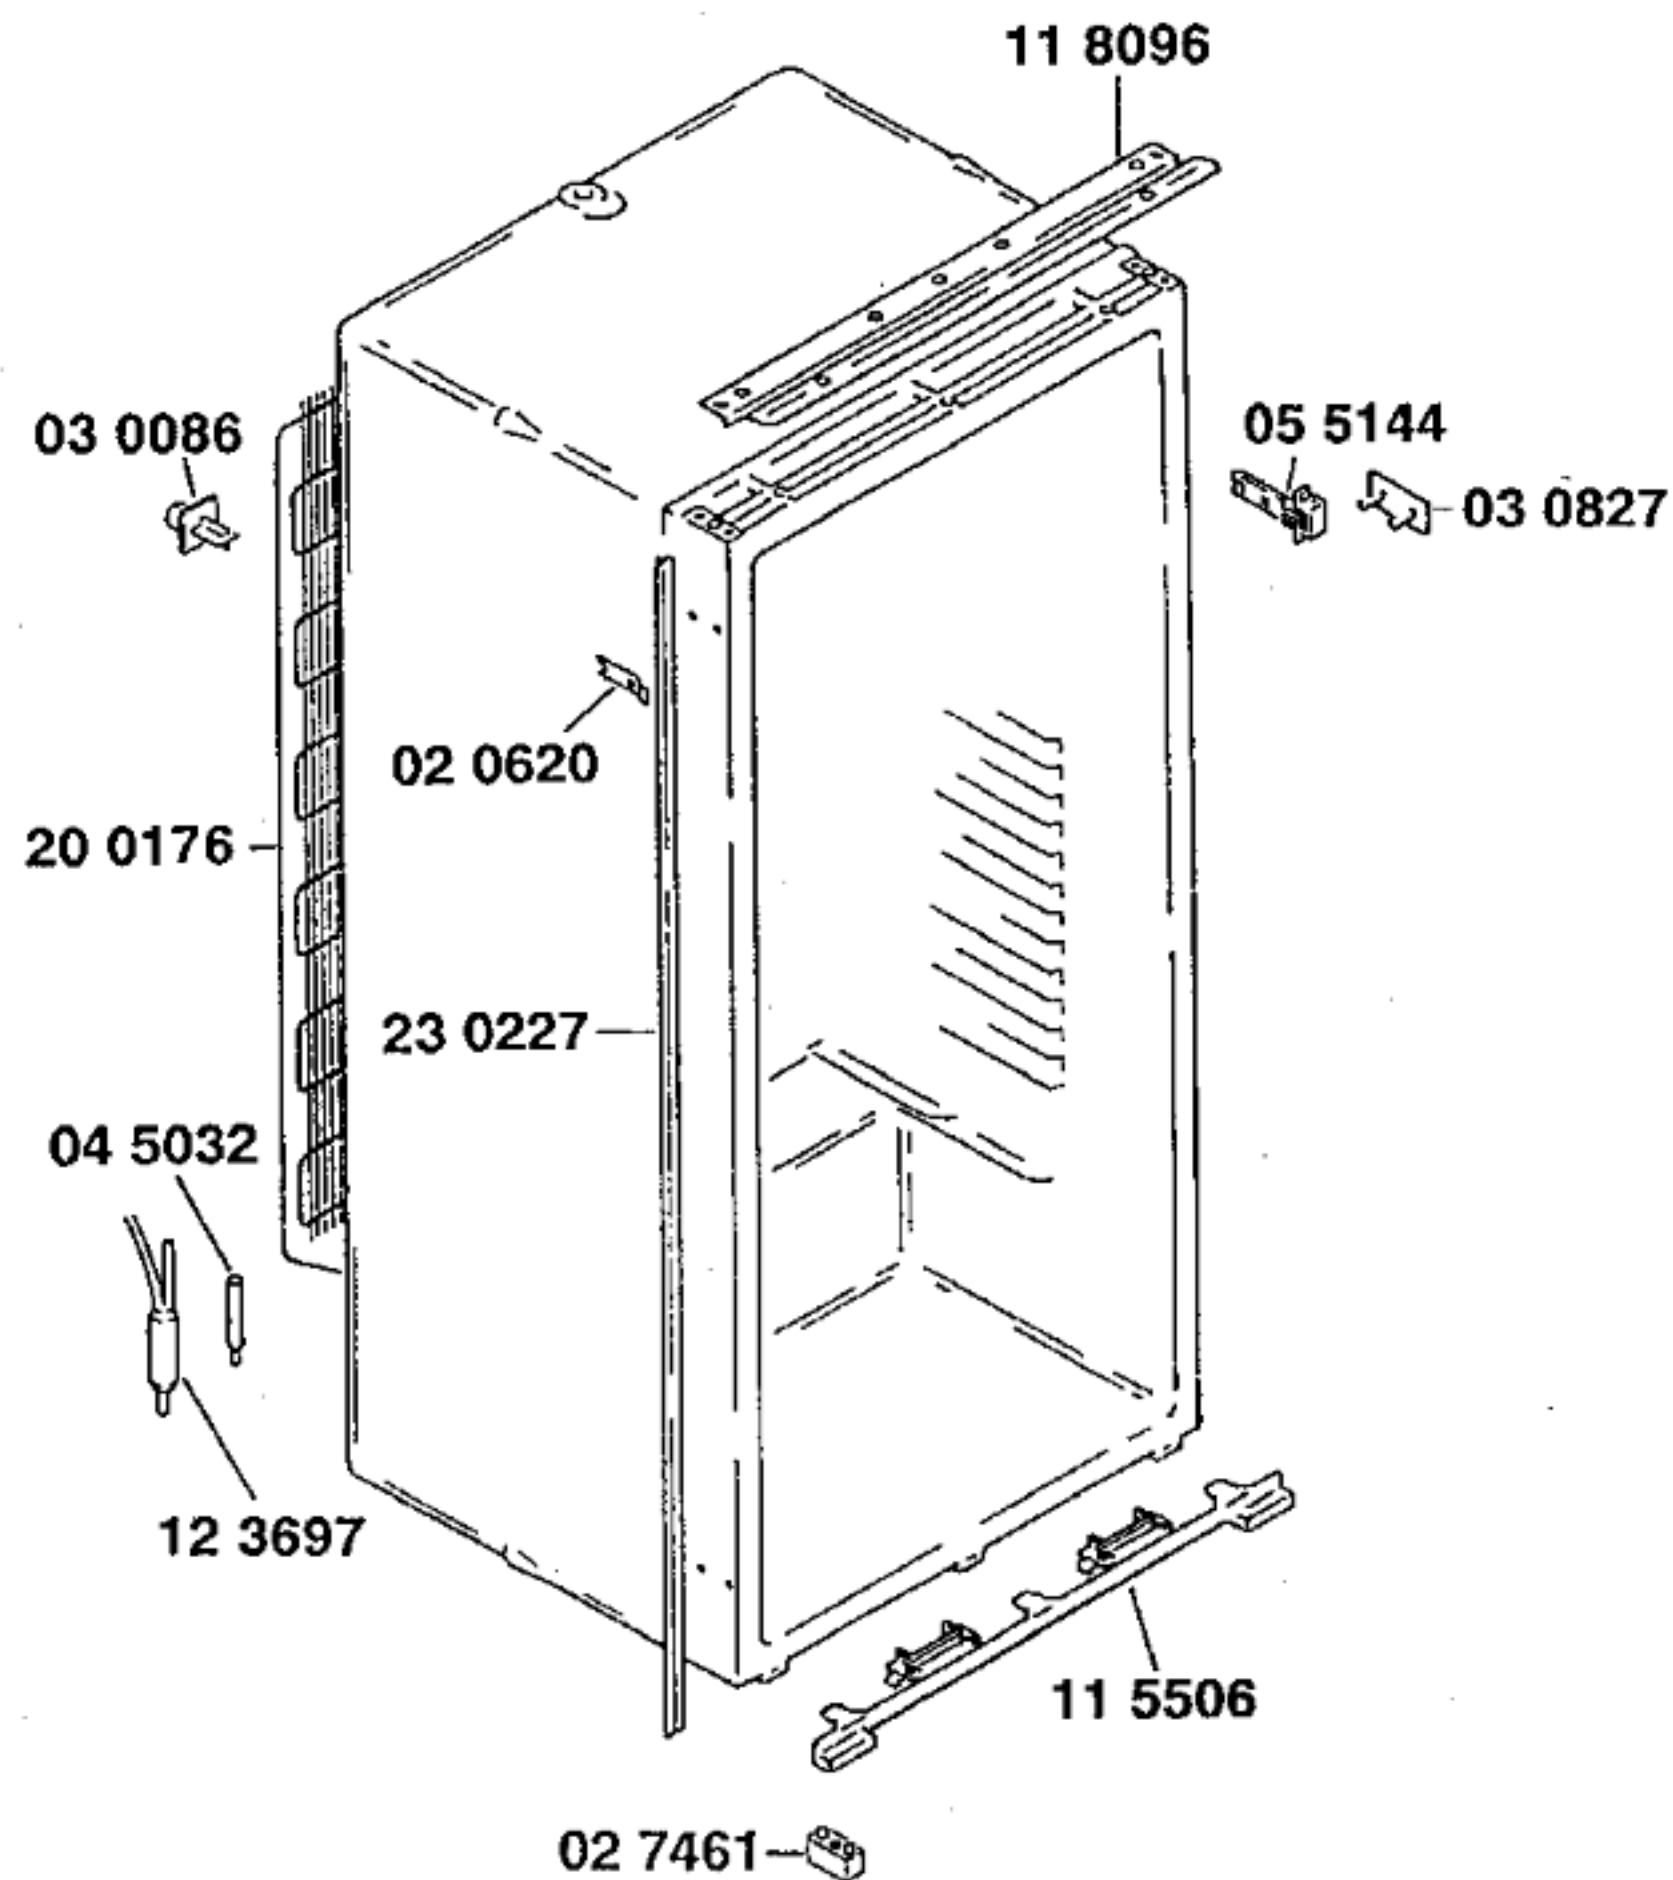

51 3619
Gebrauchsanweisung
(D,GB,F,I,NL)
51 4779
Montageanleitung
(D,GB,F,I,NL,DK,N,S,SF,E,P)
08 4136
Schraubensatz

 
 
1) 02 9480

 
Zubehör:

Dekorrahmen
KZ12070, weiss
KZ12180, braun

Ausgleichs-
blenden
braun:
KZ12080, 37mm
KZ12090, 41mm
KZ12100, 56mm

Alu:
KZ12110, 37mm
KZ12120, 41mm
KZ12130, 56mm

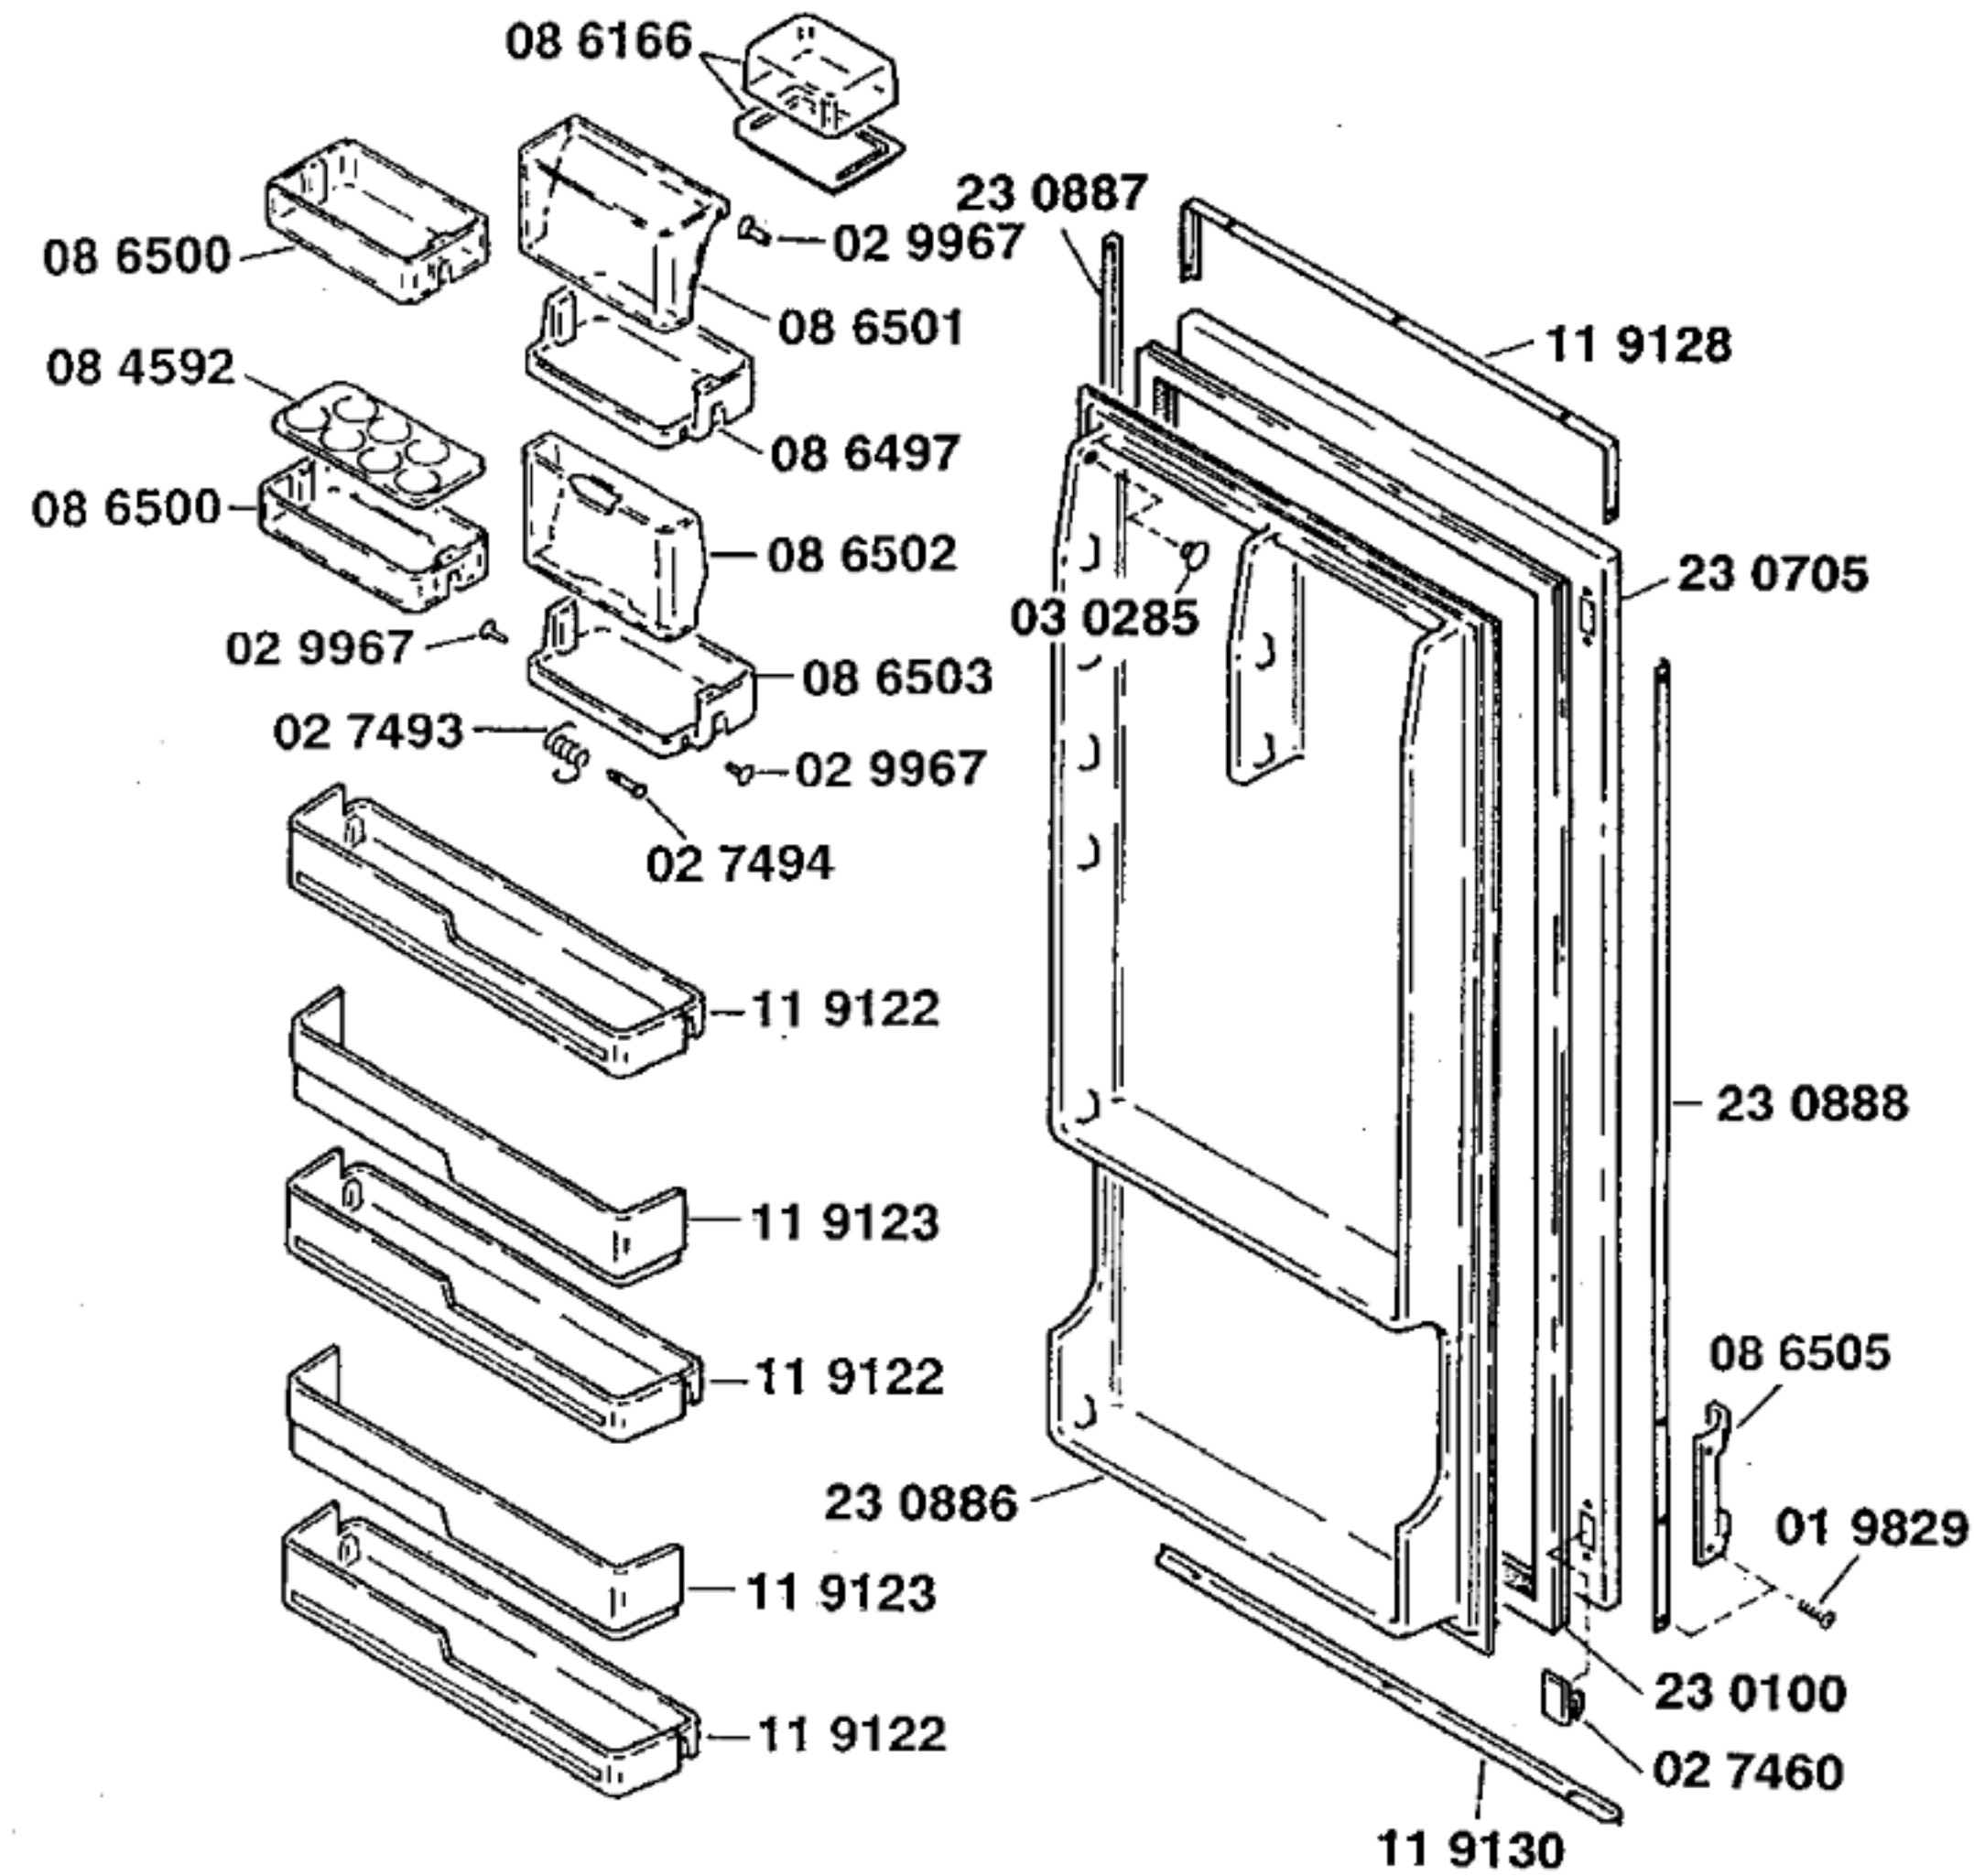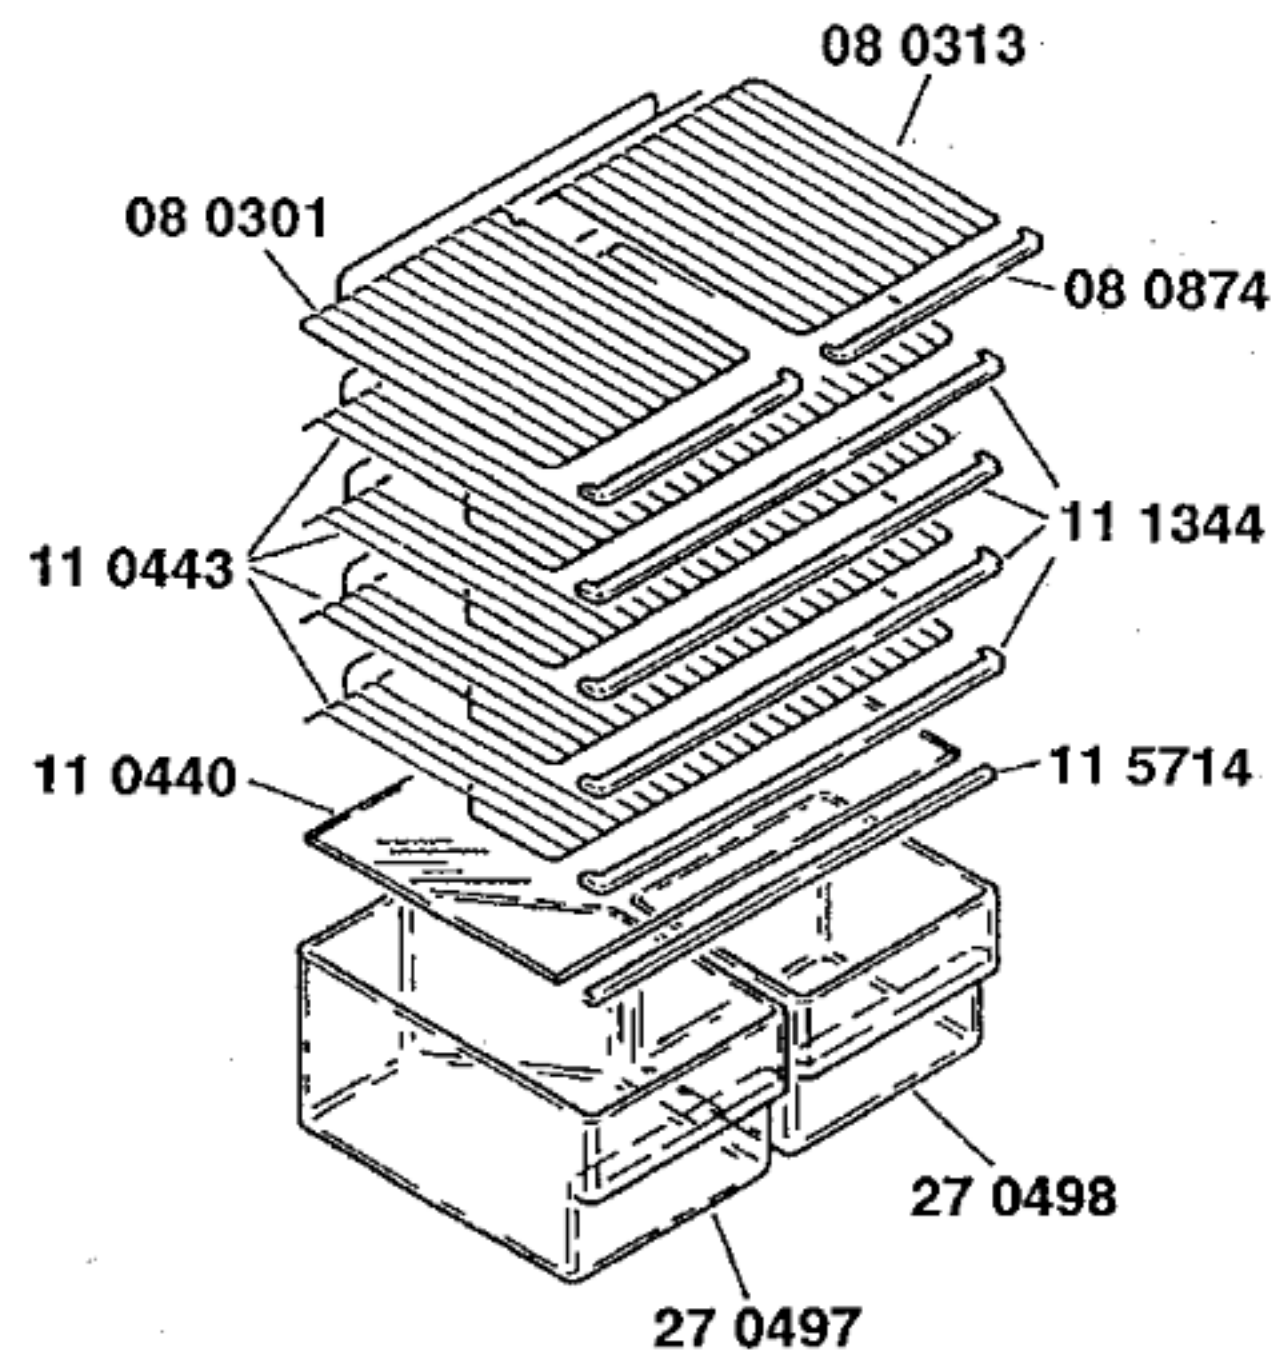

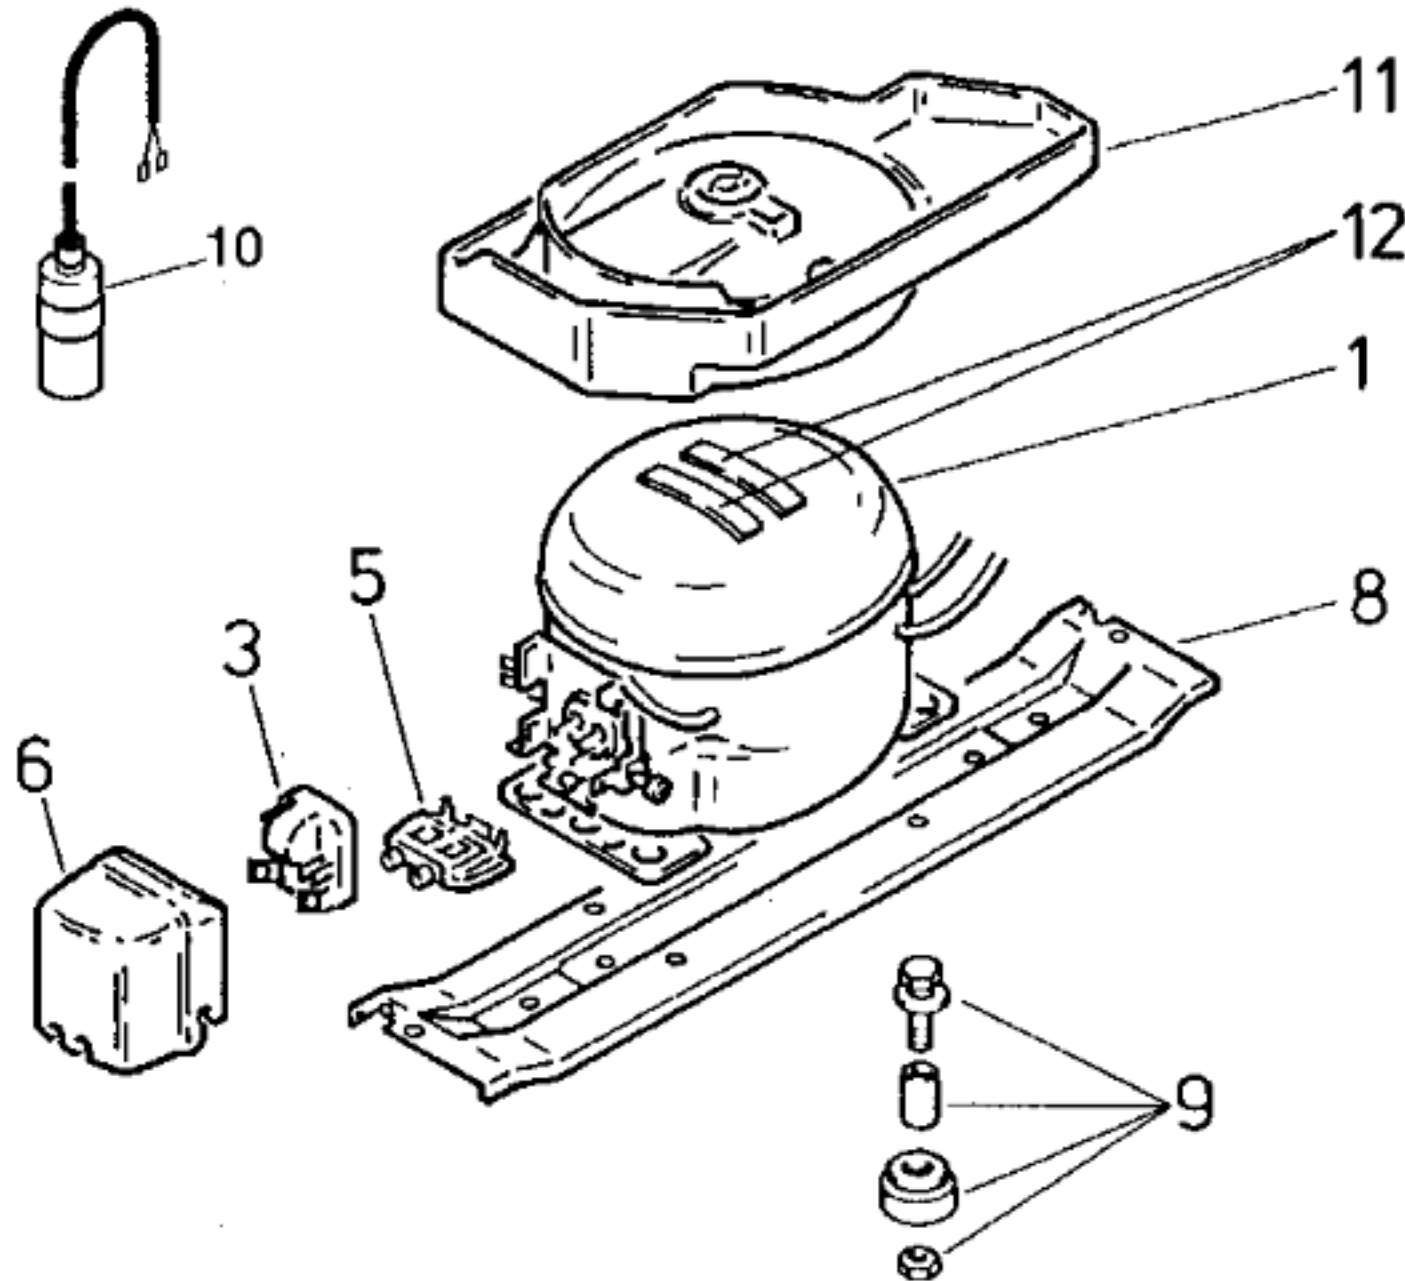

Pos.	Danfoss		
	TL 5 A		
1	14 0065		
2			
3	05 9191		
4			
5	02 7310		
6	05 1413		
7			
8	27 8207		
9	05 0166		
10	05 9128		
11	08 4744		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	
Typ/Type		TL 5 A	
Förderleistung/Delivery/Débit	l/h	914	
Anlaufstrom/Starting current/Cour. de démarrage	A	9,0	
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	15,5	
	Hi/aux Ω	16,8	
Temp.-Regler/Thermostat		Ranco	
Typ/Type		K 59	
Reglerstellung/Position		kalt	warm
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	+ 5	+ 5
Valeurs de commutation	„aus“	- 26	- 12
(„abtauen“ od.)	„alarm“		
Füllmenge/Fill.quantity/Charge	R12	g	80
Anschlußwert/Conn.load/Puiss. connectée	W	120	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		