


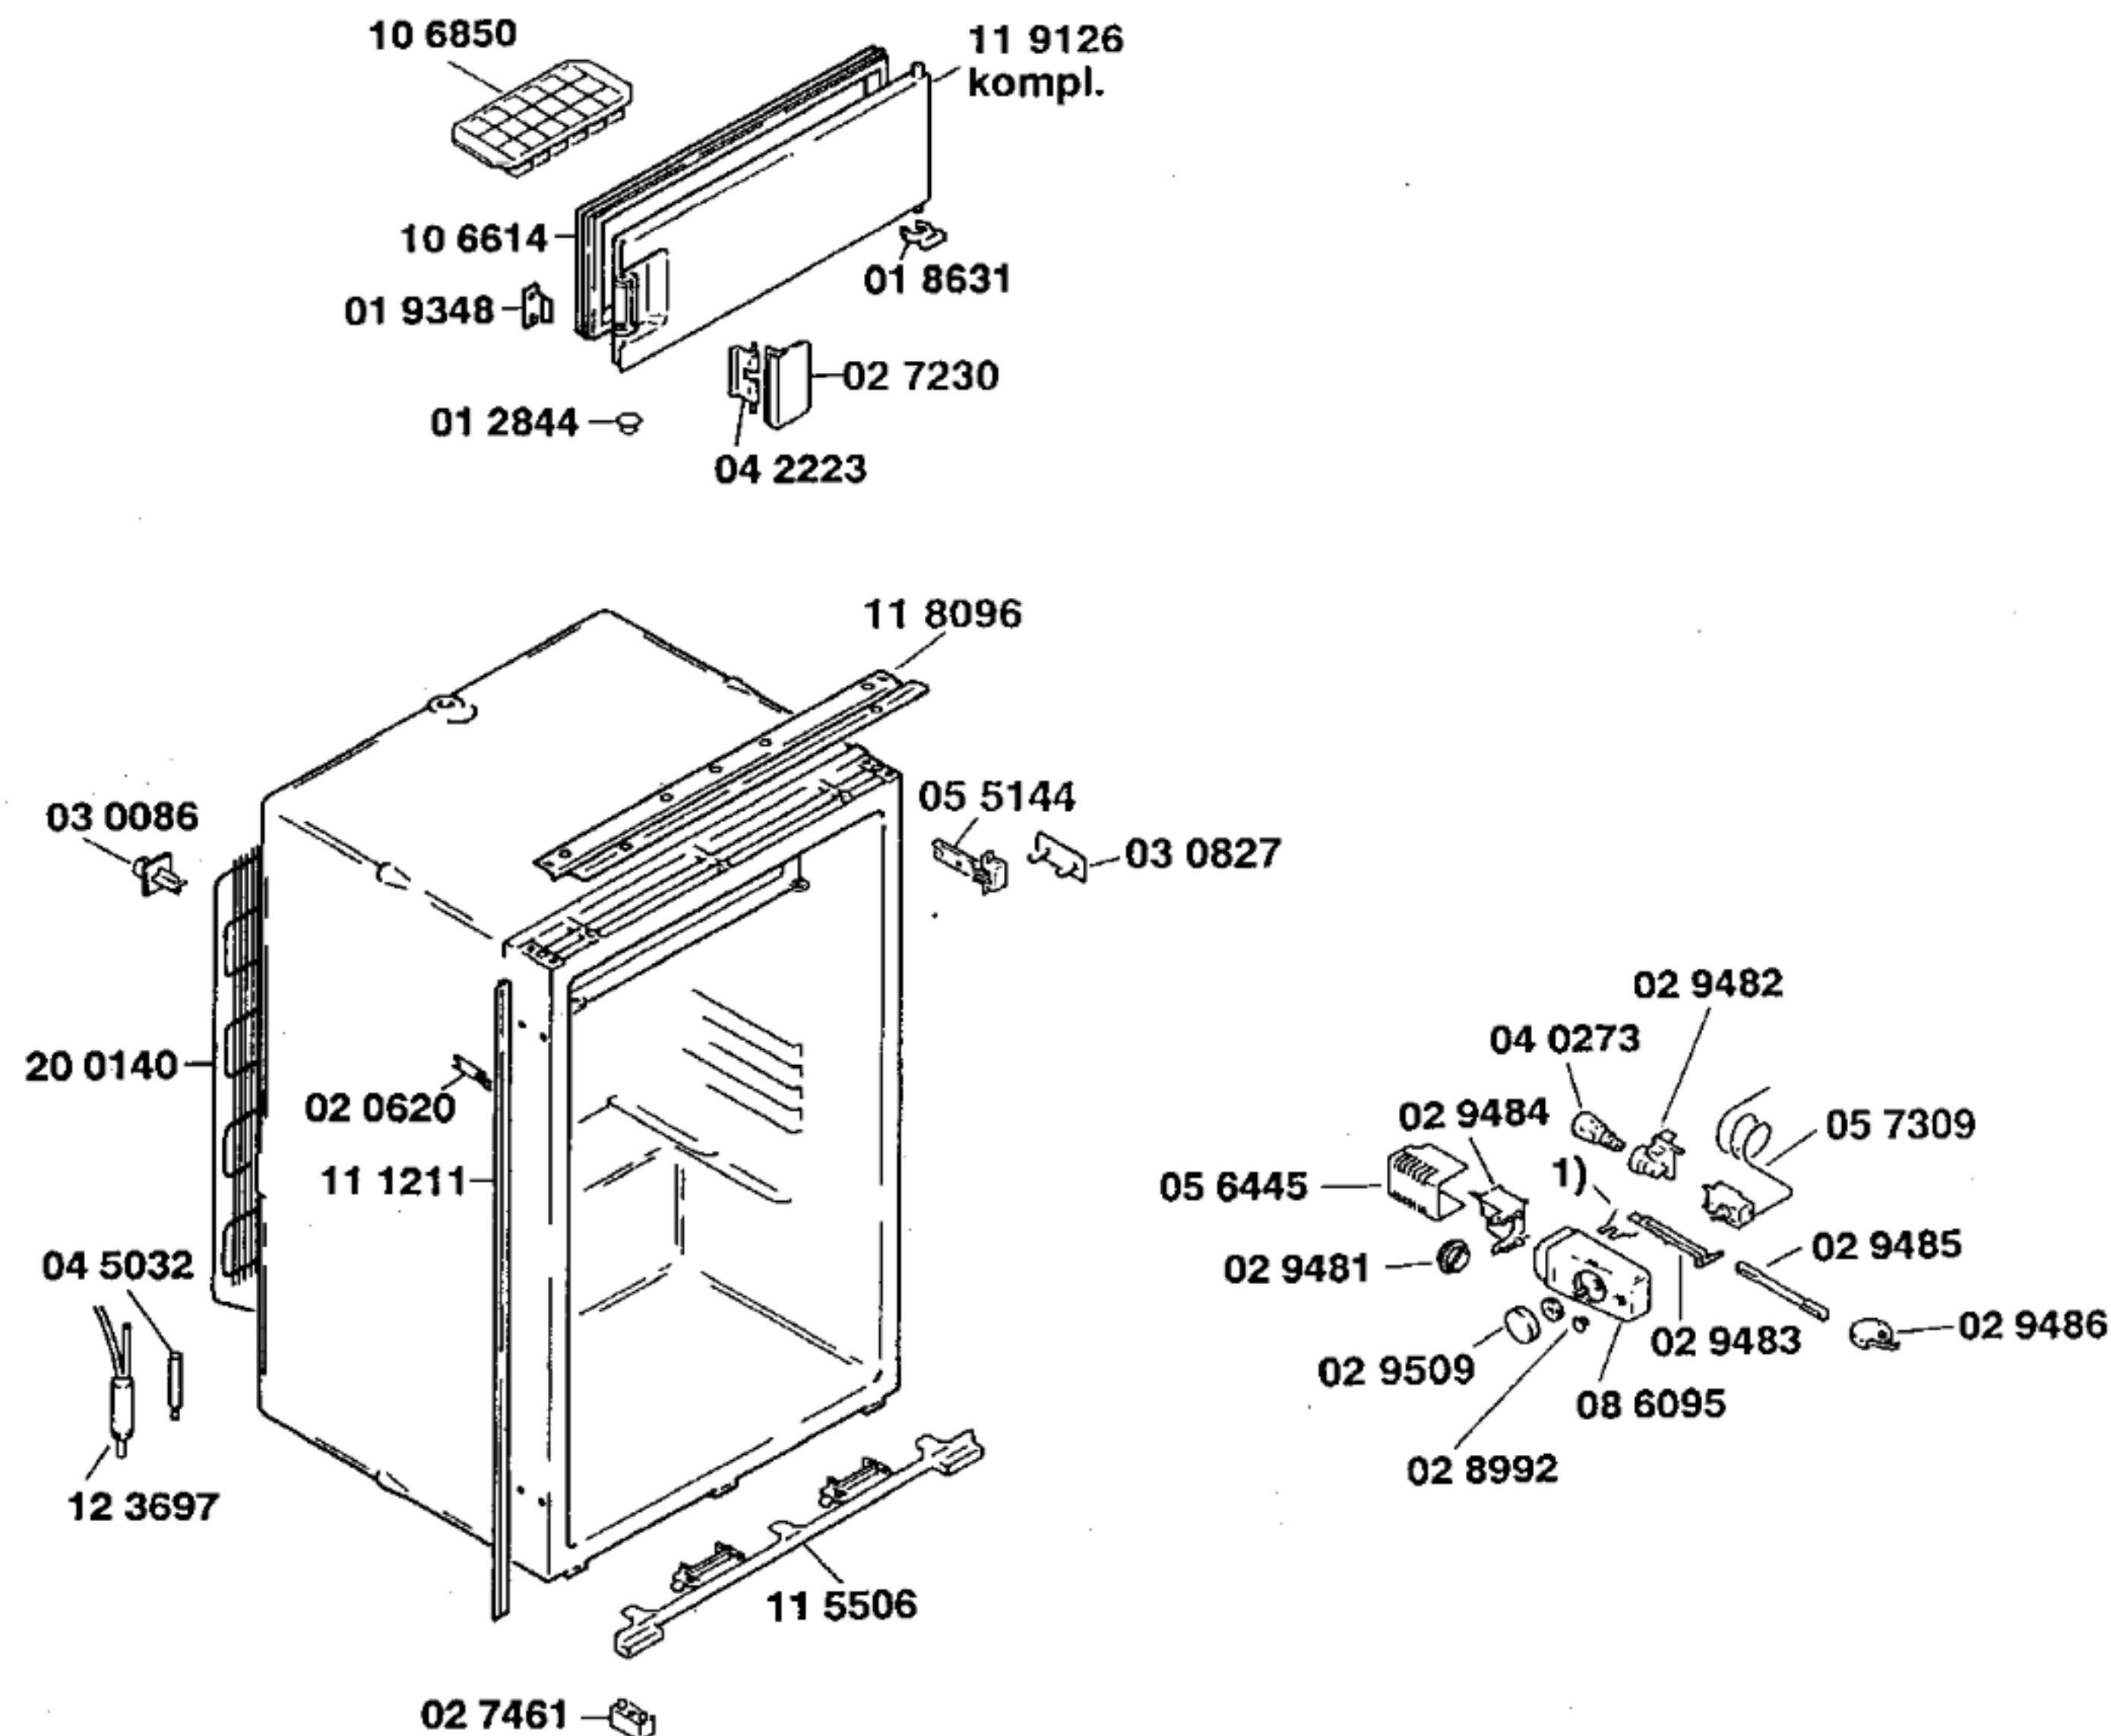

51 3620
Gebrauchsanweisung
(D,GB,F,I,NL,E,N)

51 4779
Montageanleitung
(D,GB,F,I,NL,DK,N,
S,SF,E,P)

08 4136
Schraubensatz



1) 02 9480


Zubehör:

Dekorrahmen
KZ12060, weiss
KZ12170, braun

Ausgleichs-
blenden
braun:
KZ12080, 37mm
KZ12090, 41mm
KZ12100, 56mm

Alu:
KZ12110, 37mm
KZ12120, 41mm
KZ12130, 56mm

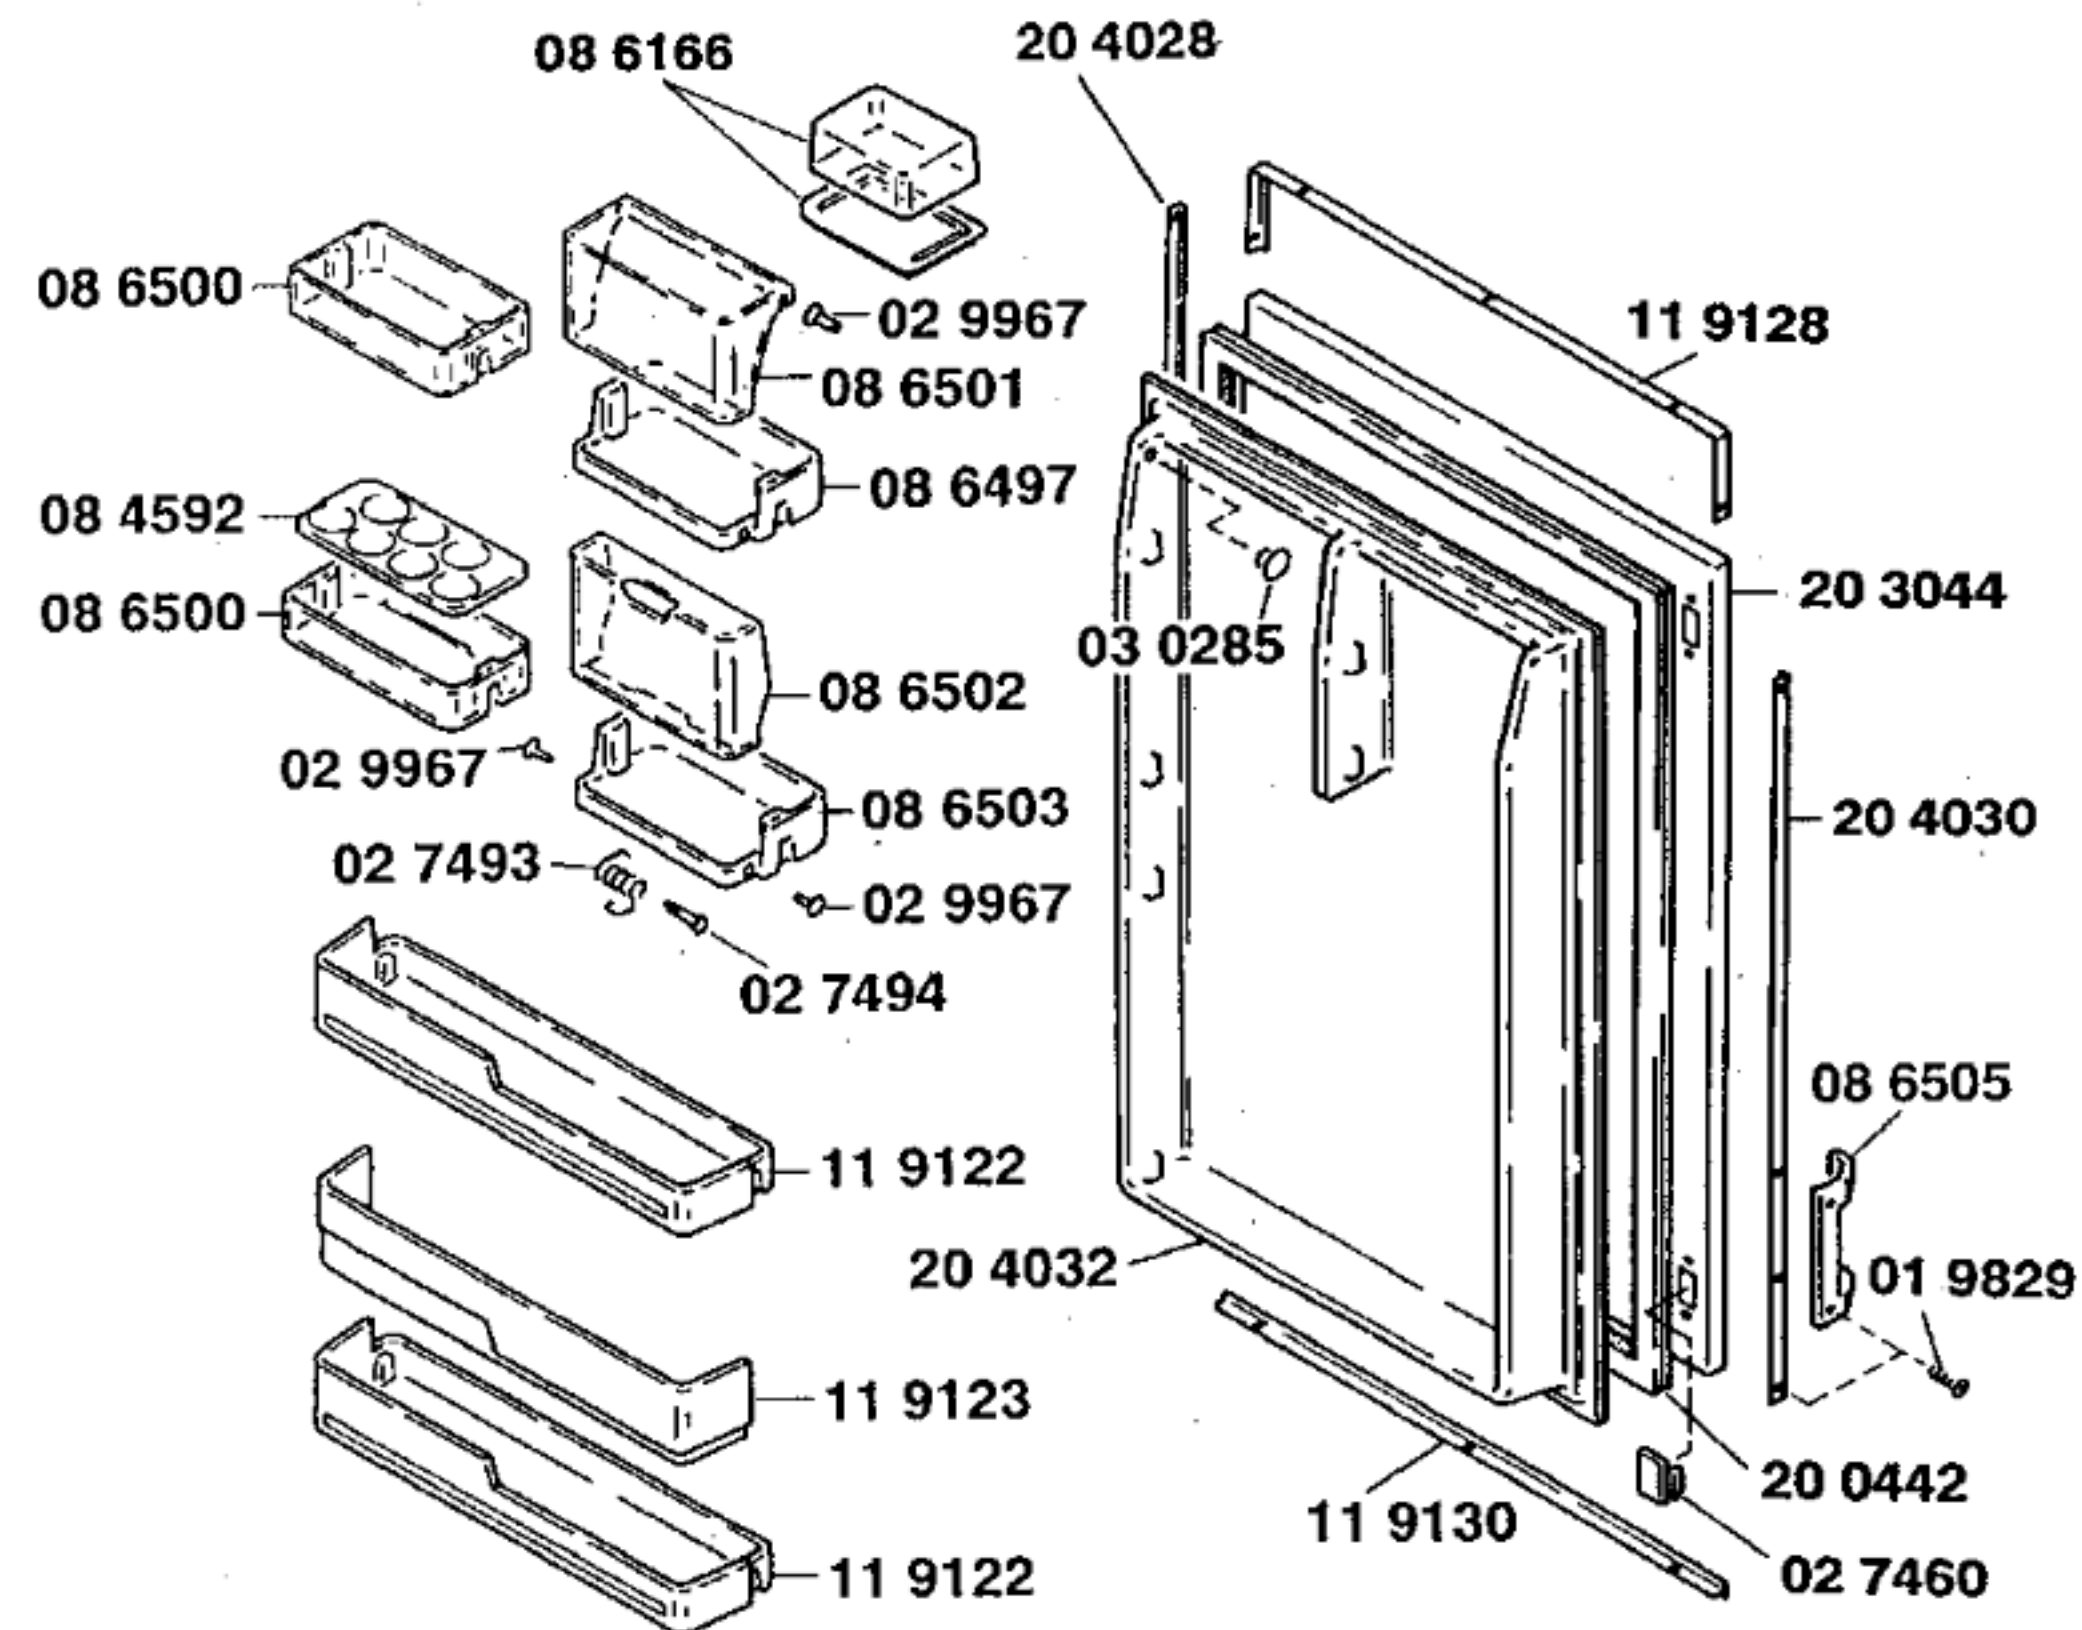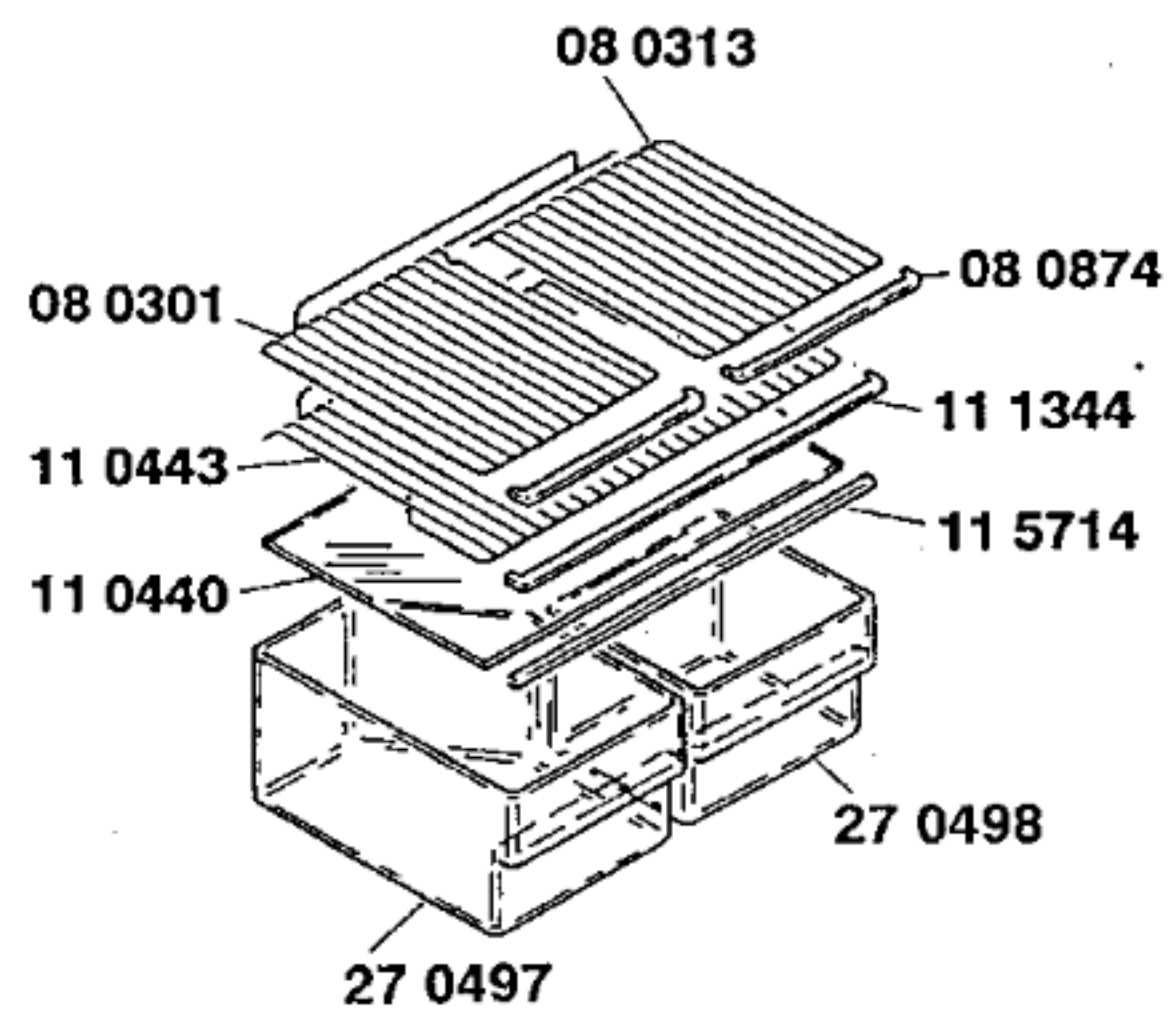

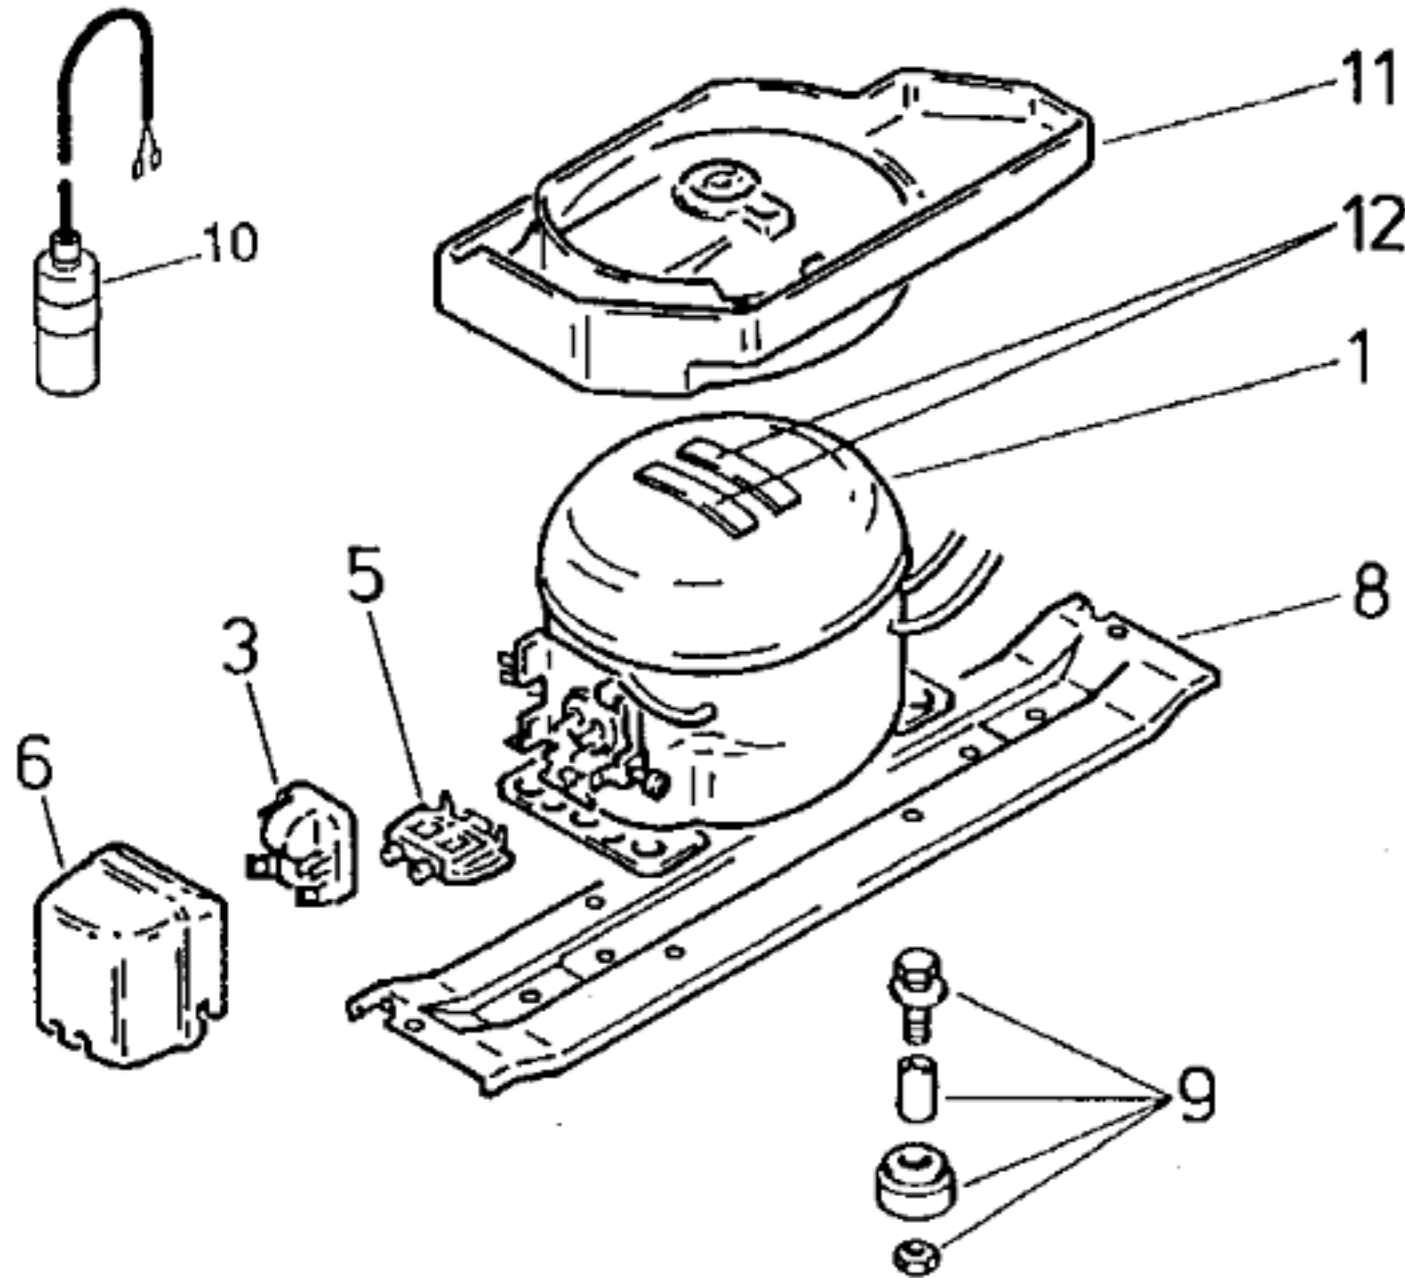

Pos.	Danfoss		
	TL 4 A		
1	13 1064		
2			
3	05 9191		
4			
5	02 7310		
6	05 1413		
7			
8	27 8207		
9	05 0166		
10	05 9128		
11	08 4744		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TL 4 A		
Förderleistung/Delivery/Débit		l/h	695	
Anlaufstrom/Starting current/Cour. de démarrage		A	8,3	
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω 23,4	
		Hi/aux	Ω 15,5	
Temp.-Regler/Thermostat		WHF		
Typ/Type		TF 57 F1		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/		„ein“	+ 5	
Valeurs de commutation		„aus“	- 27	
(„abtauen“ od.)		„alarm“	- 12	
Füllmenge/Fill.quantity/Charge		R12	g	80
Anschlußwert/Conn.load/Puiss. connectée		W	110	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		