



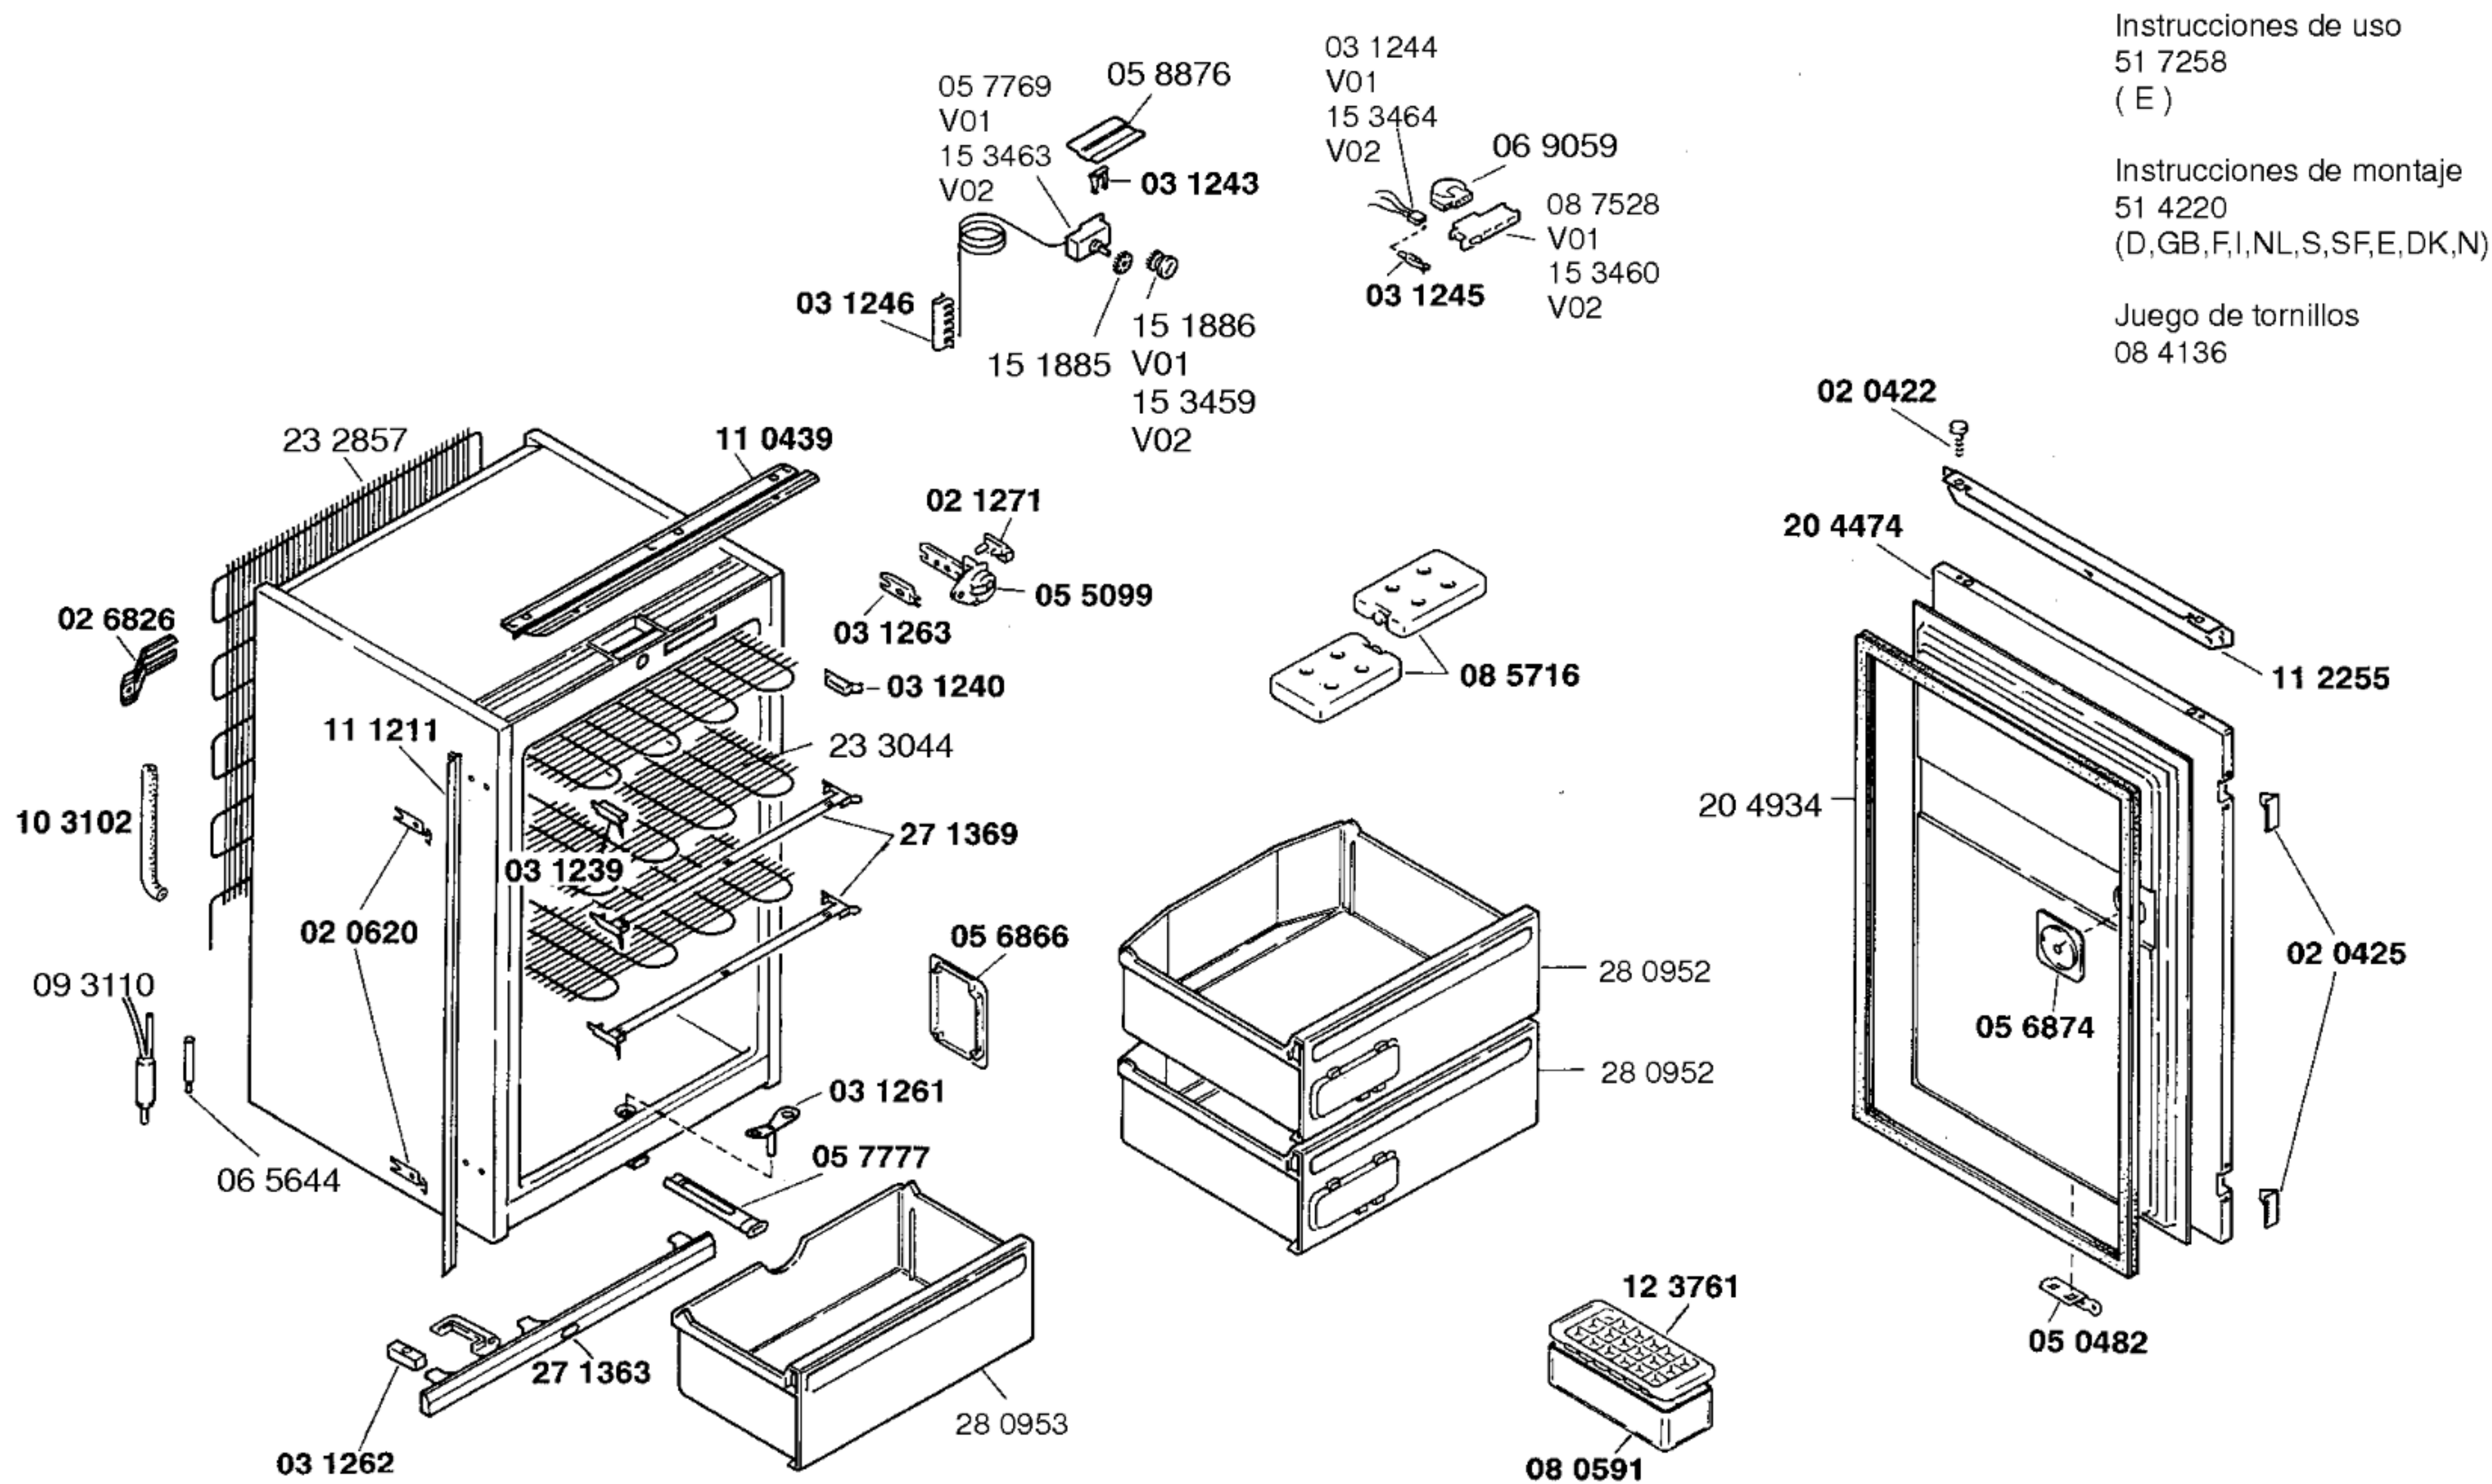

Instrucciones de uso
51 7258
(E)

Instrucciones de montaje
51 4220
(D,GB,F,I,NL,S,SF,E,DK,N)

Juego de tornillos
08 4136

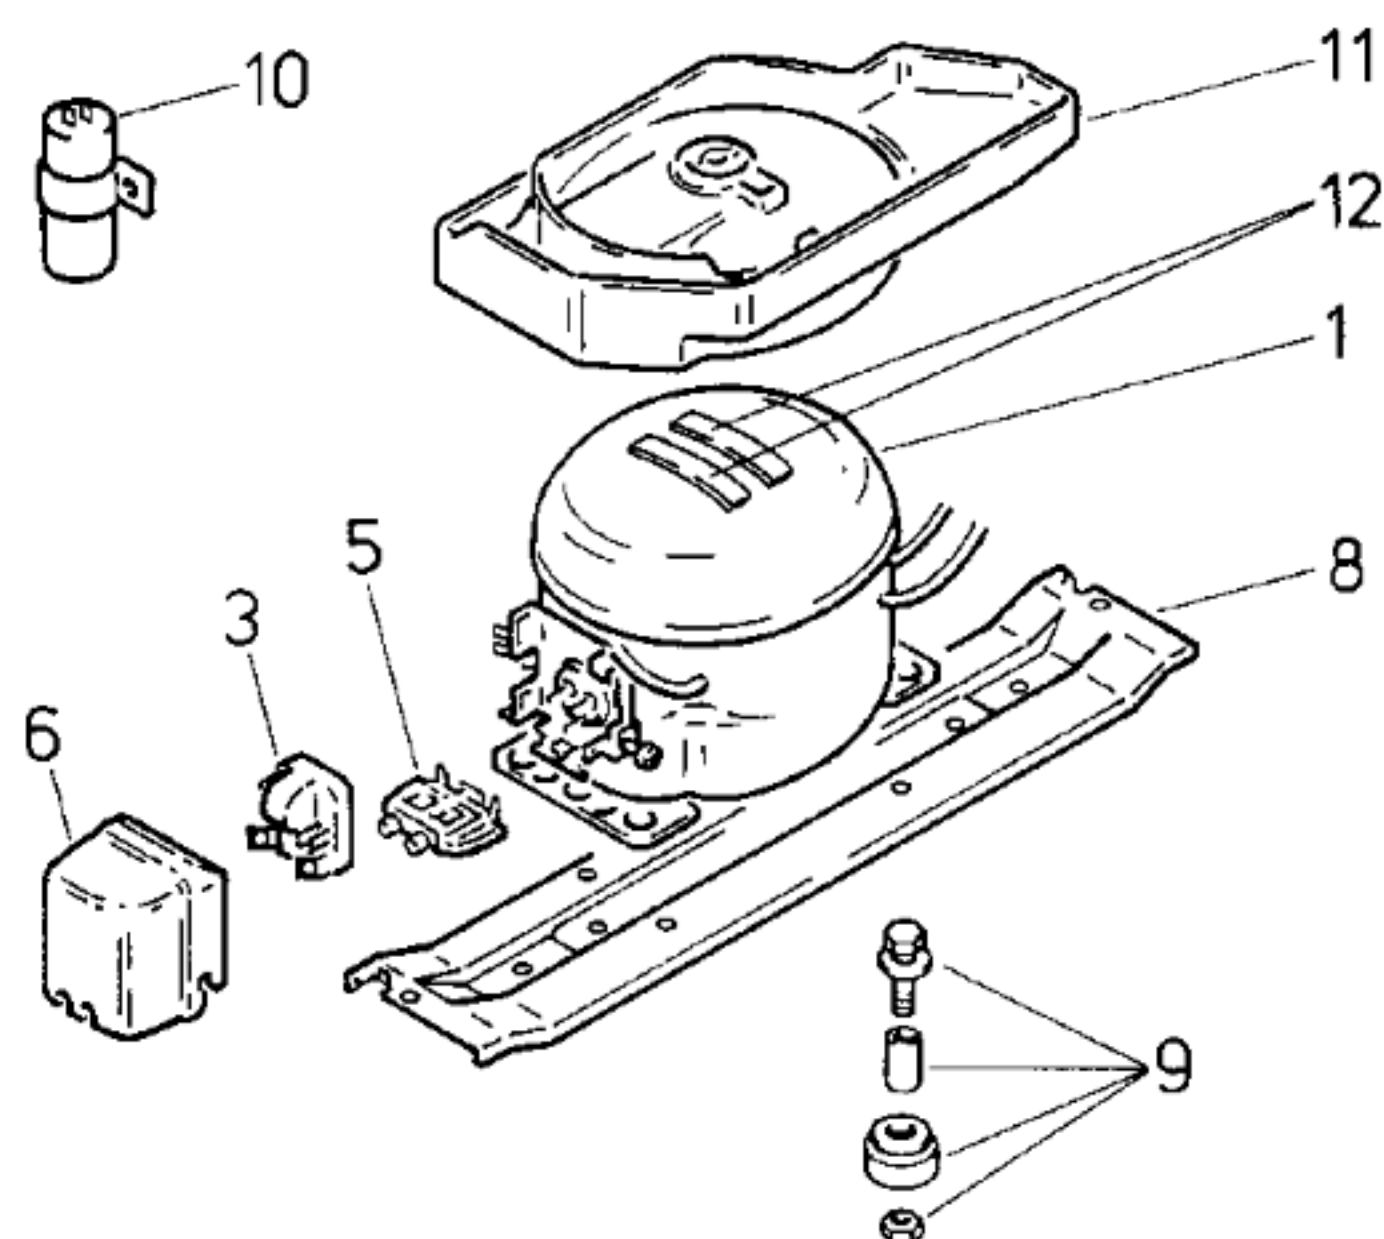

	V01	V02	
Pos.	Danfoss	Danfoss	
	TLES 7 K	TLES9K	
1	14 1239	14 1308	
2			
3	15 1055	15 1055	
4			
5	15 0760	15 0760	
6	15 1072	15 1072	
7			
8	27 1375	27 1375	
9	05 0166	05 0166	
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLES 7 K		
Förderleistung/Delivery/Débit		1168		
Anlaufstrom/Starting current/Cour de démarrage		A 4,5		
Widerstand/Resistance/Résistance		Ha/main/prin. Ω 16,5		
		Hi/aux Ω 16,9		
Temp.-Regler/Thermostat		WHF		
Typ/Type		TF 57 SF2		
Reglerstellung/Position		frío caliente		
Schaltwerte/Switching values/		-25 -17		
Valeurs de commutation		-33 -23		
(„abtauen“ od.)		-19,5 -13		
Füllmenge/Fill.quantity/Charge		R600a g 40		
Anschlußwert/Conn.load/Puiss. connectée		W 79		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		