


**BOSCH**

V 360-0722044366-D1,A1  
 V 360-0722044384-GB1  
 V 360-0722044385-F1  
 V 360-0722044389-N1,SF1

WASCHGERÄTE  
 Waschvollautomaten

Ident - Nummern - Konstante  
 3740 . . . . .

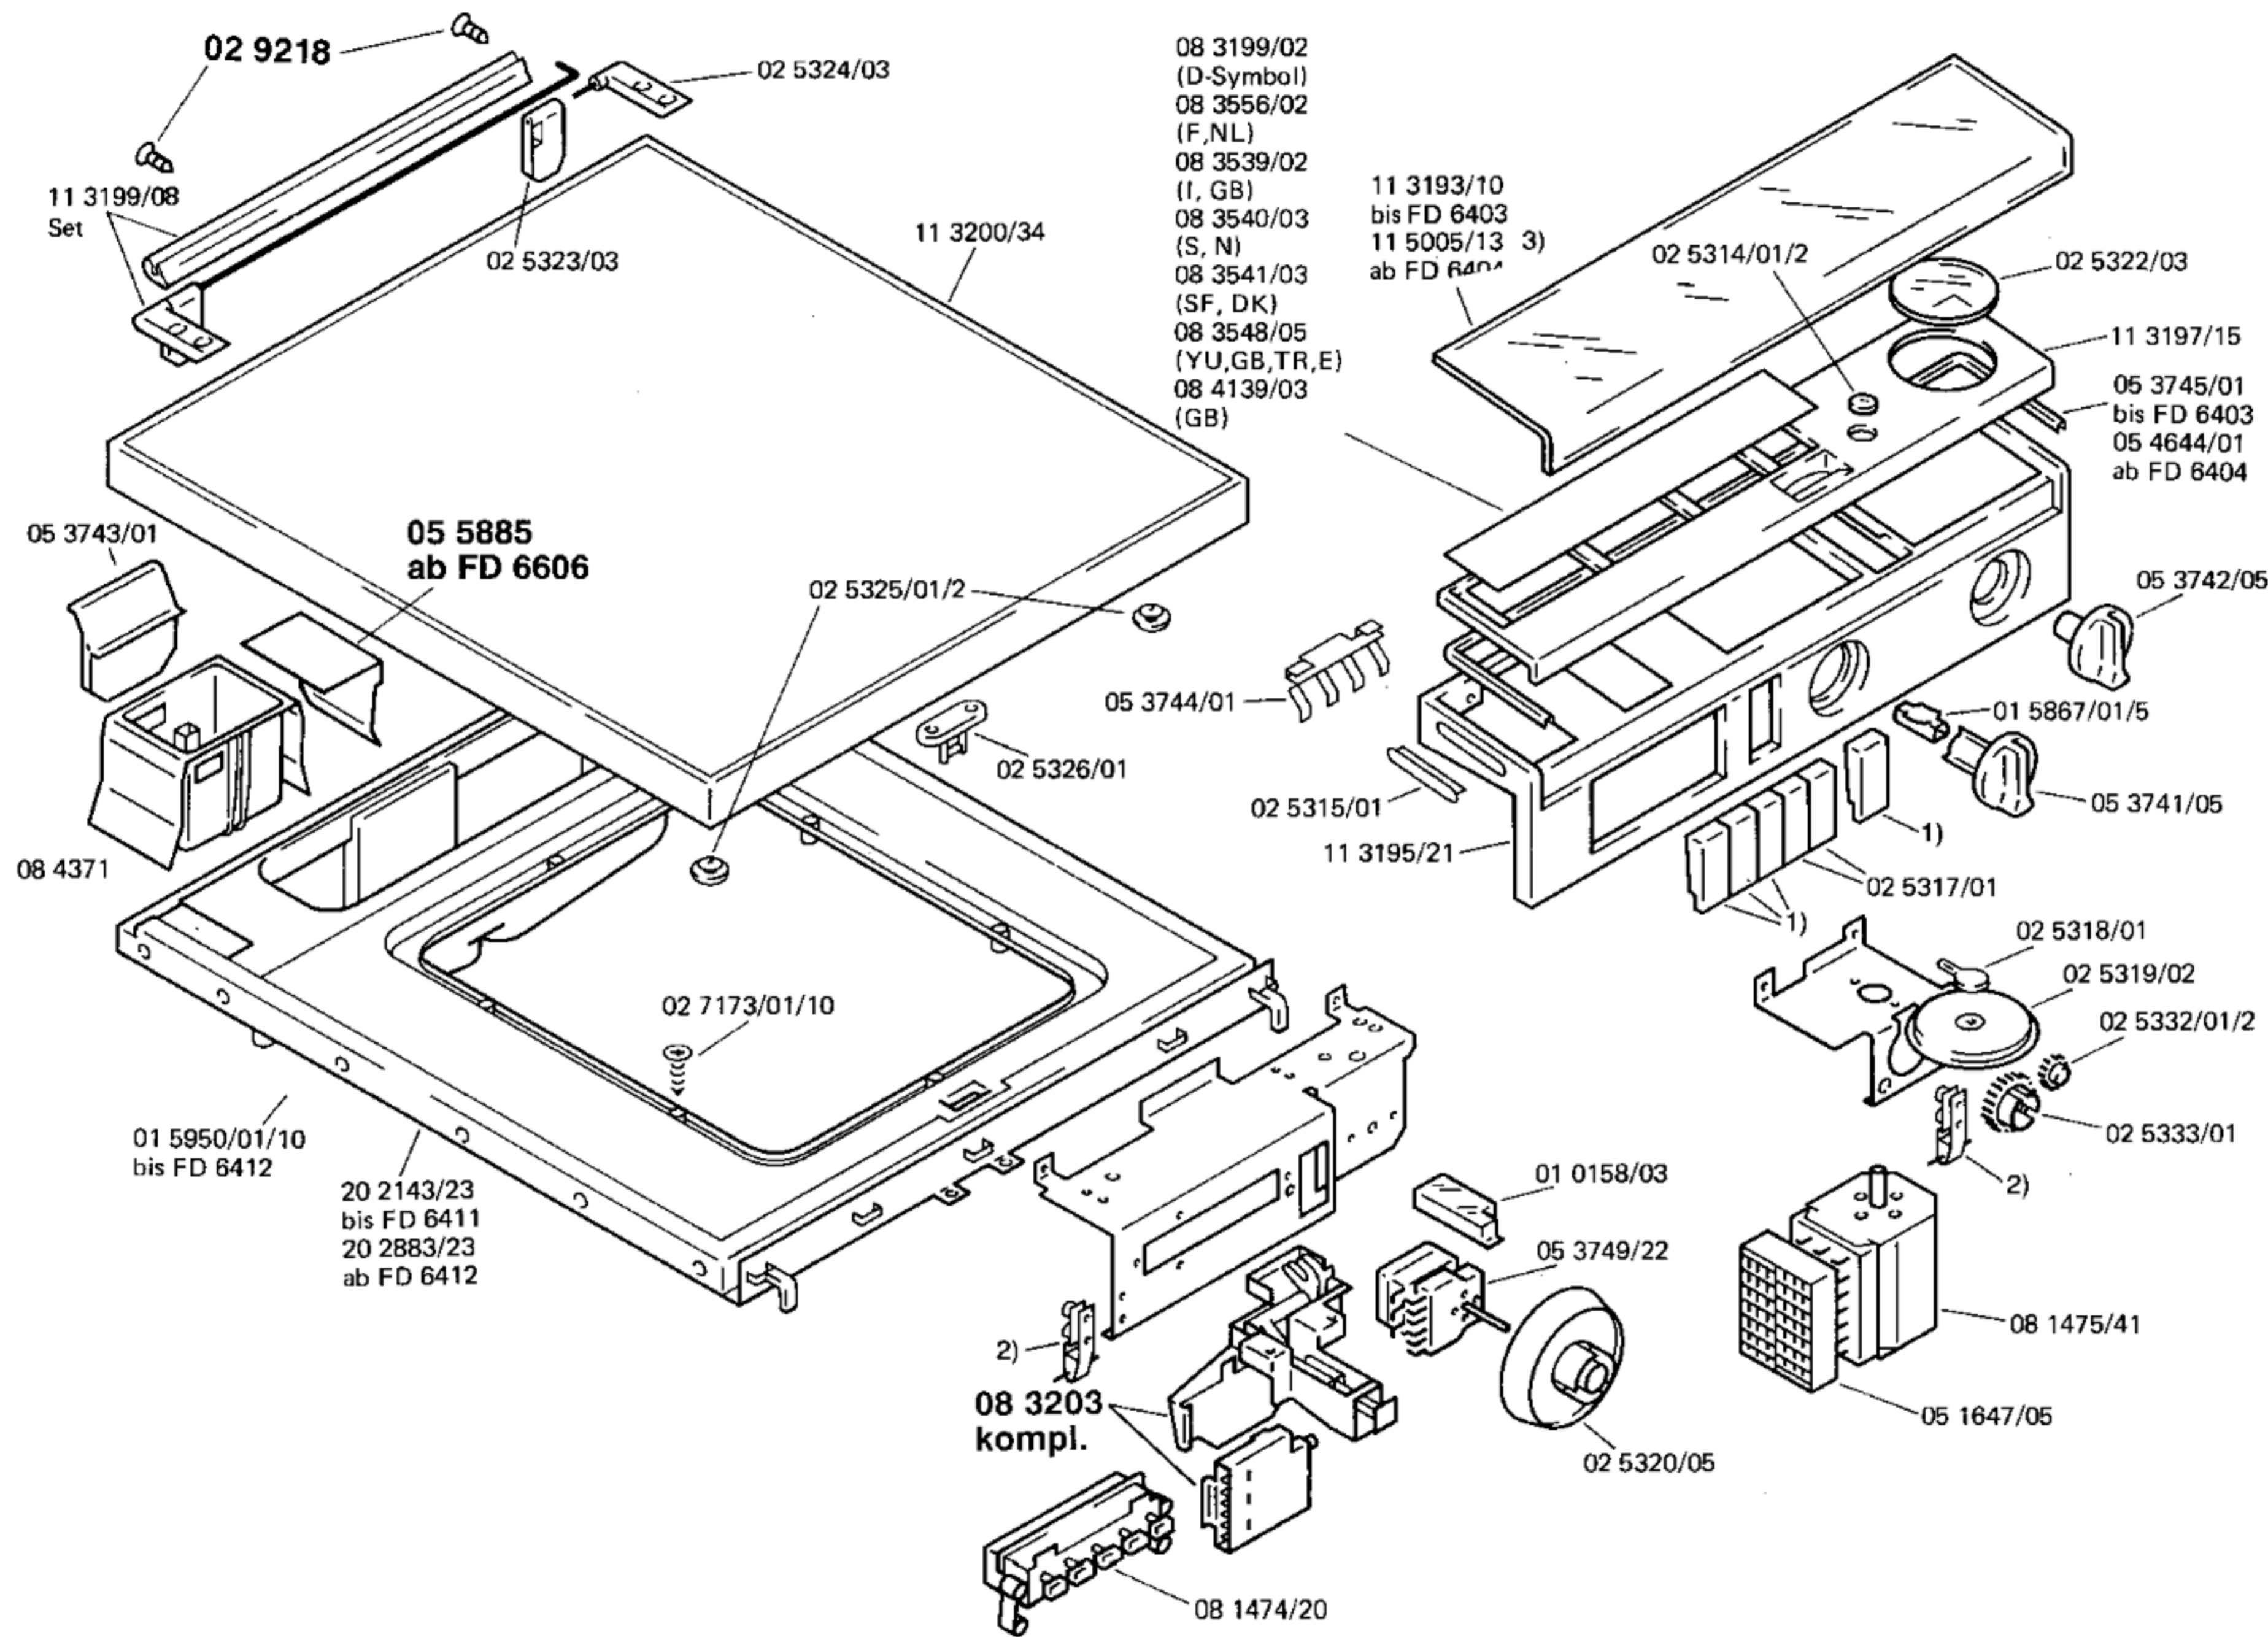



Aufstellanweisungen:  
 51 1497/00 (D,GB,F,I,NL)  
 51 1674/00 (D,I,S,DK,N,SF)


Gebrauchsanweisungen:  
 51 1496/00 (D,GB,F,I,NL)  
 51 1690/00 (F)  
 51 1691/00 (D,I,S,DK,N,SF)

Programmtabellen:  
 51 1492/00 (D,GB,F,I,NL)  
 51 1689/00 (D,I,S,DK,N,SF)  
 51 2018/00 (GB)

1) 02 5321/01  
 2) 02 5334/01/2  
 3) einschl. 05 4644

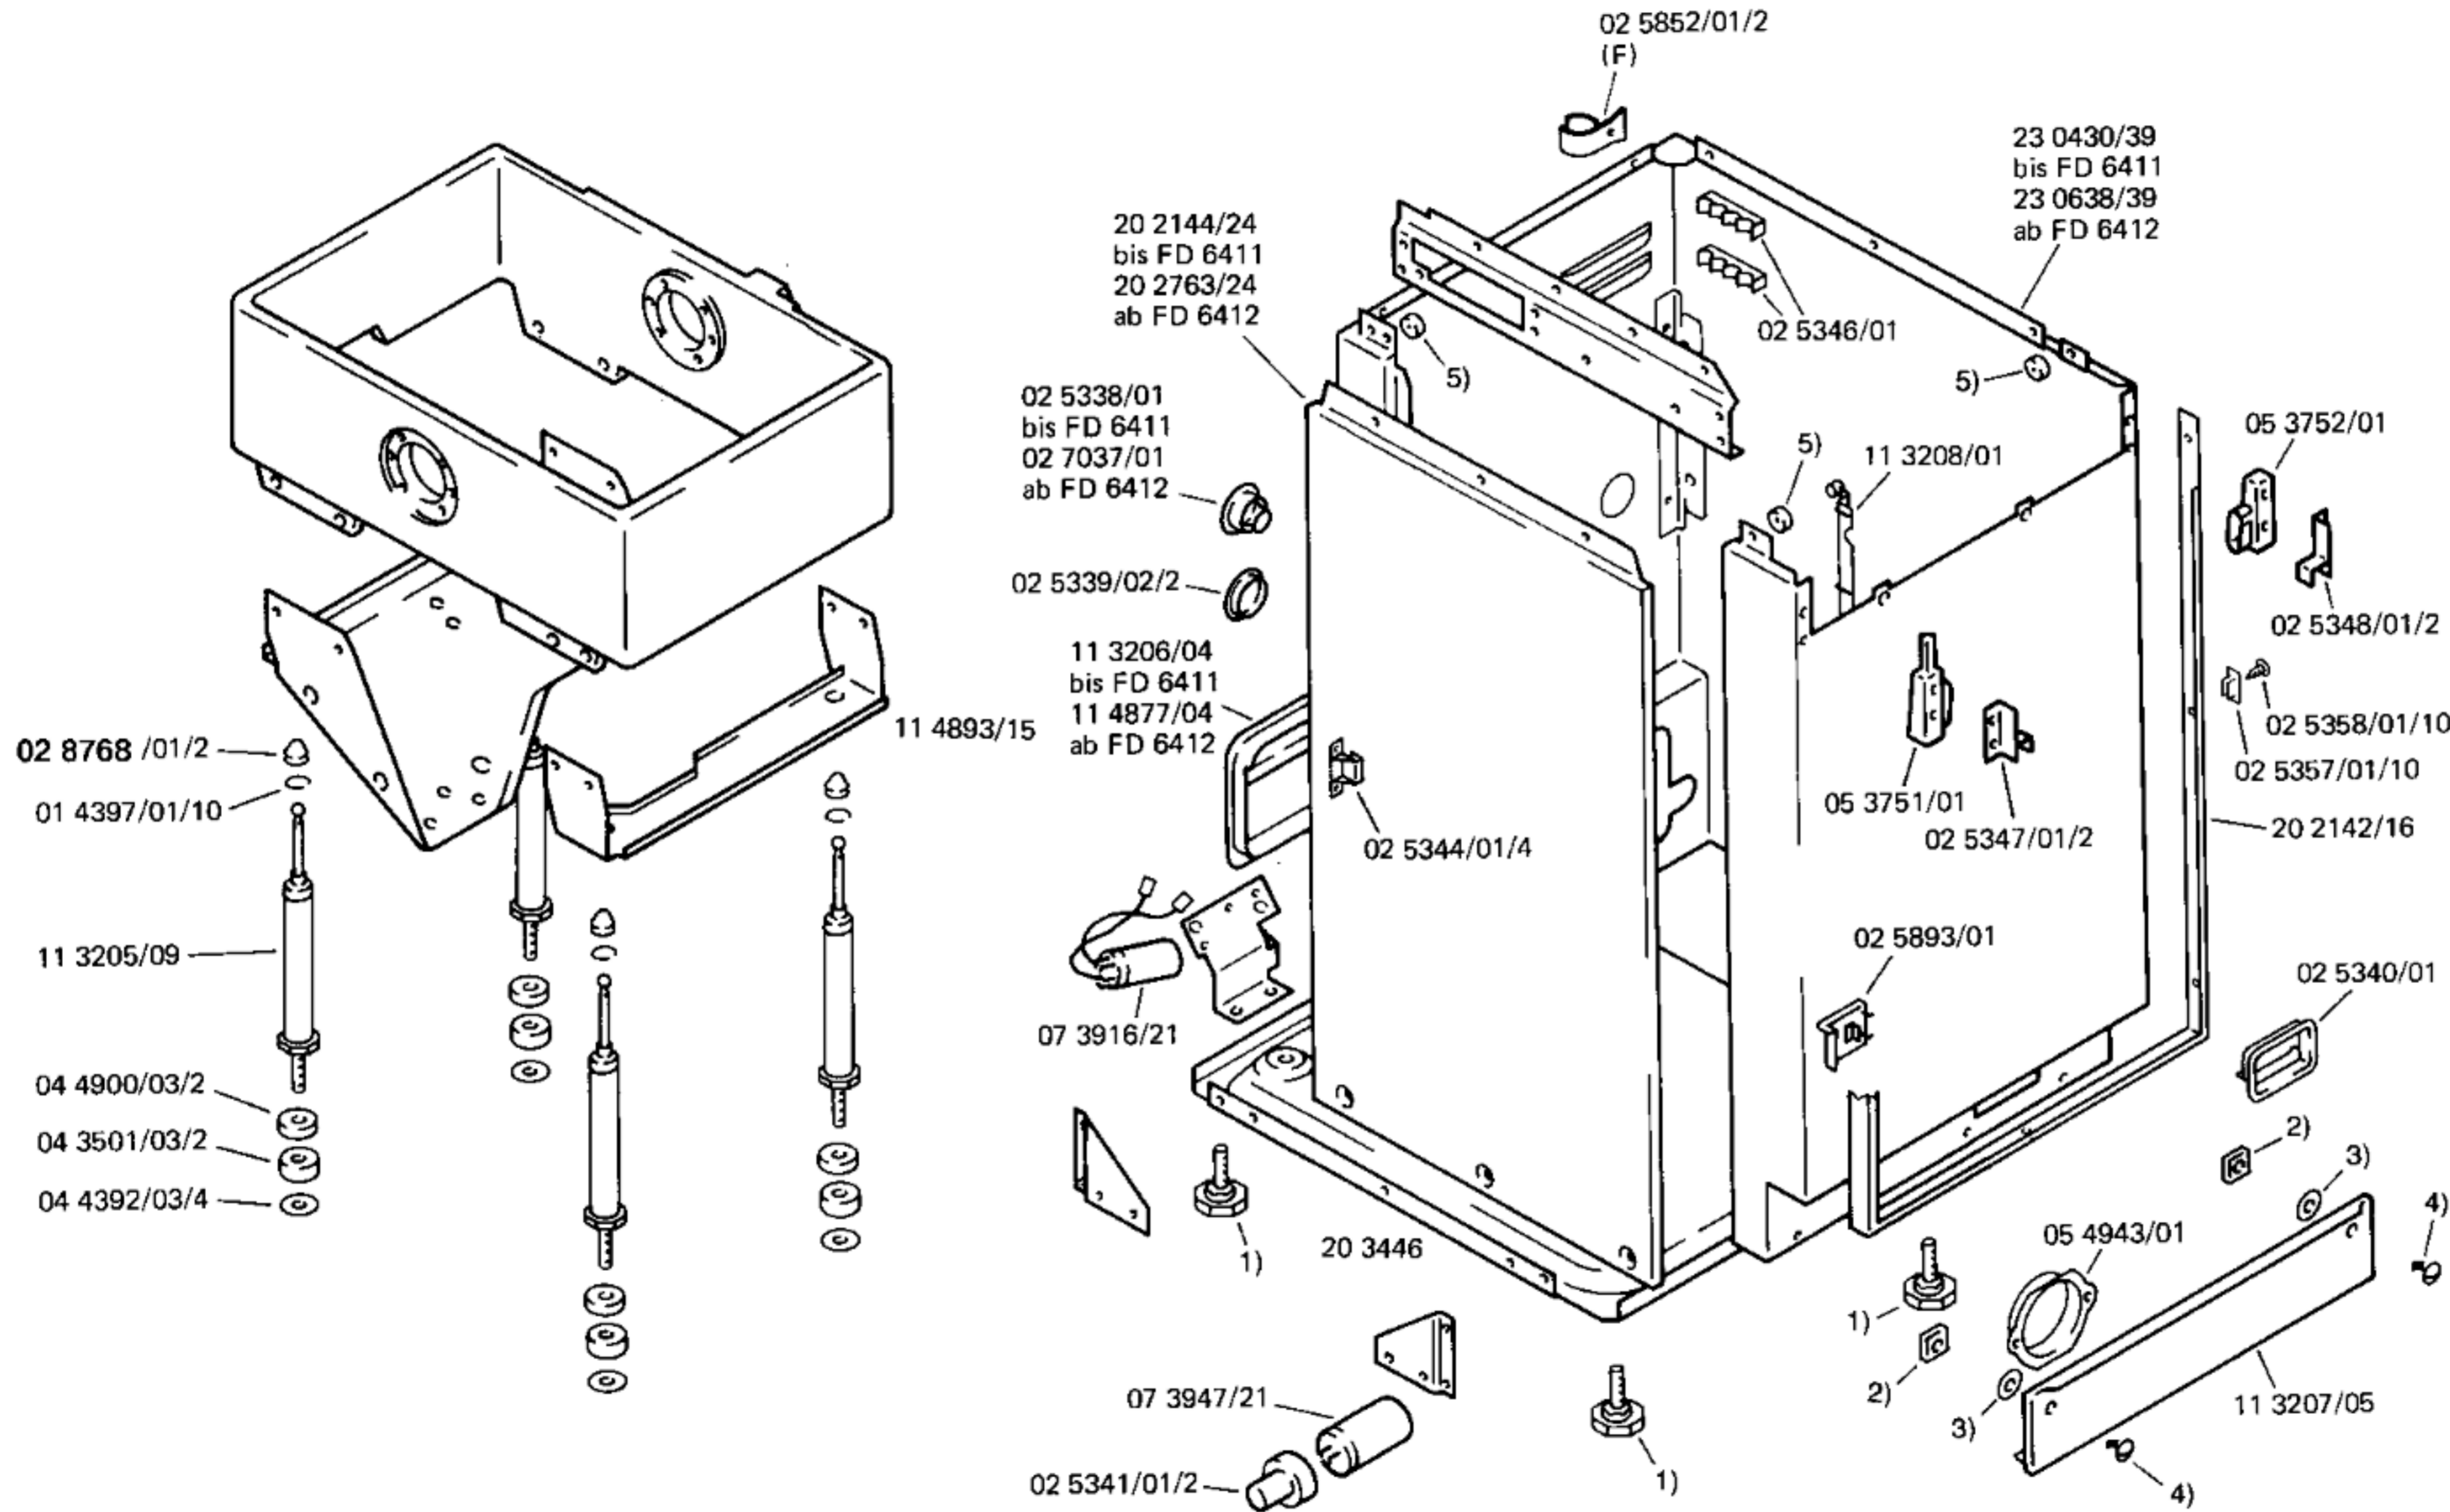

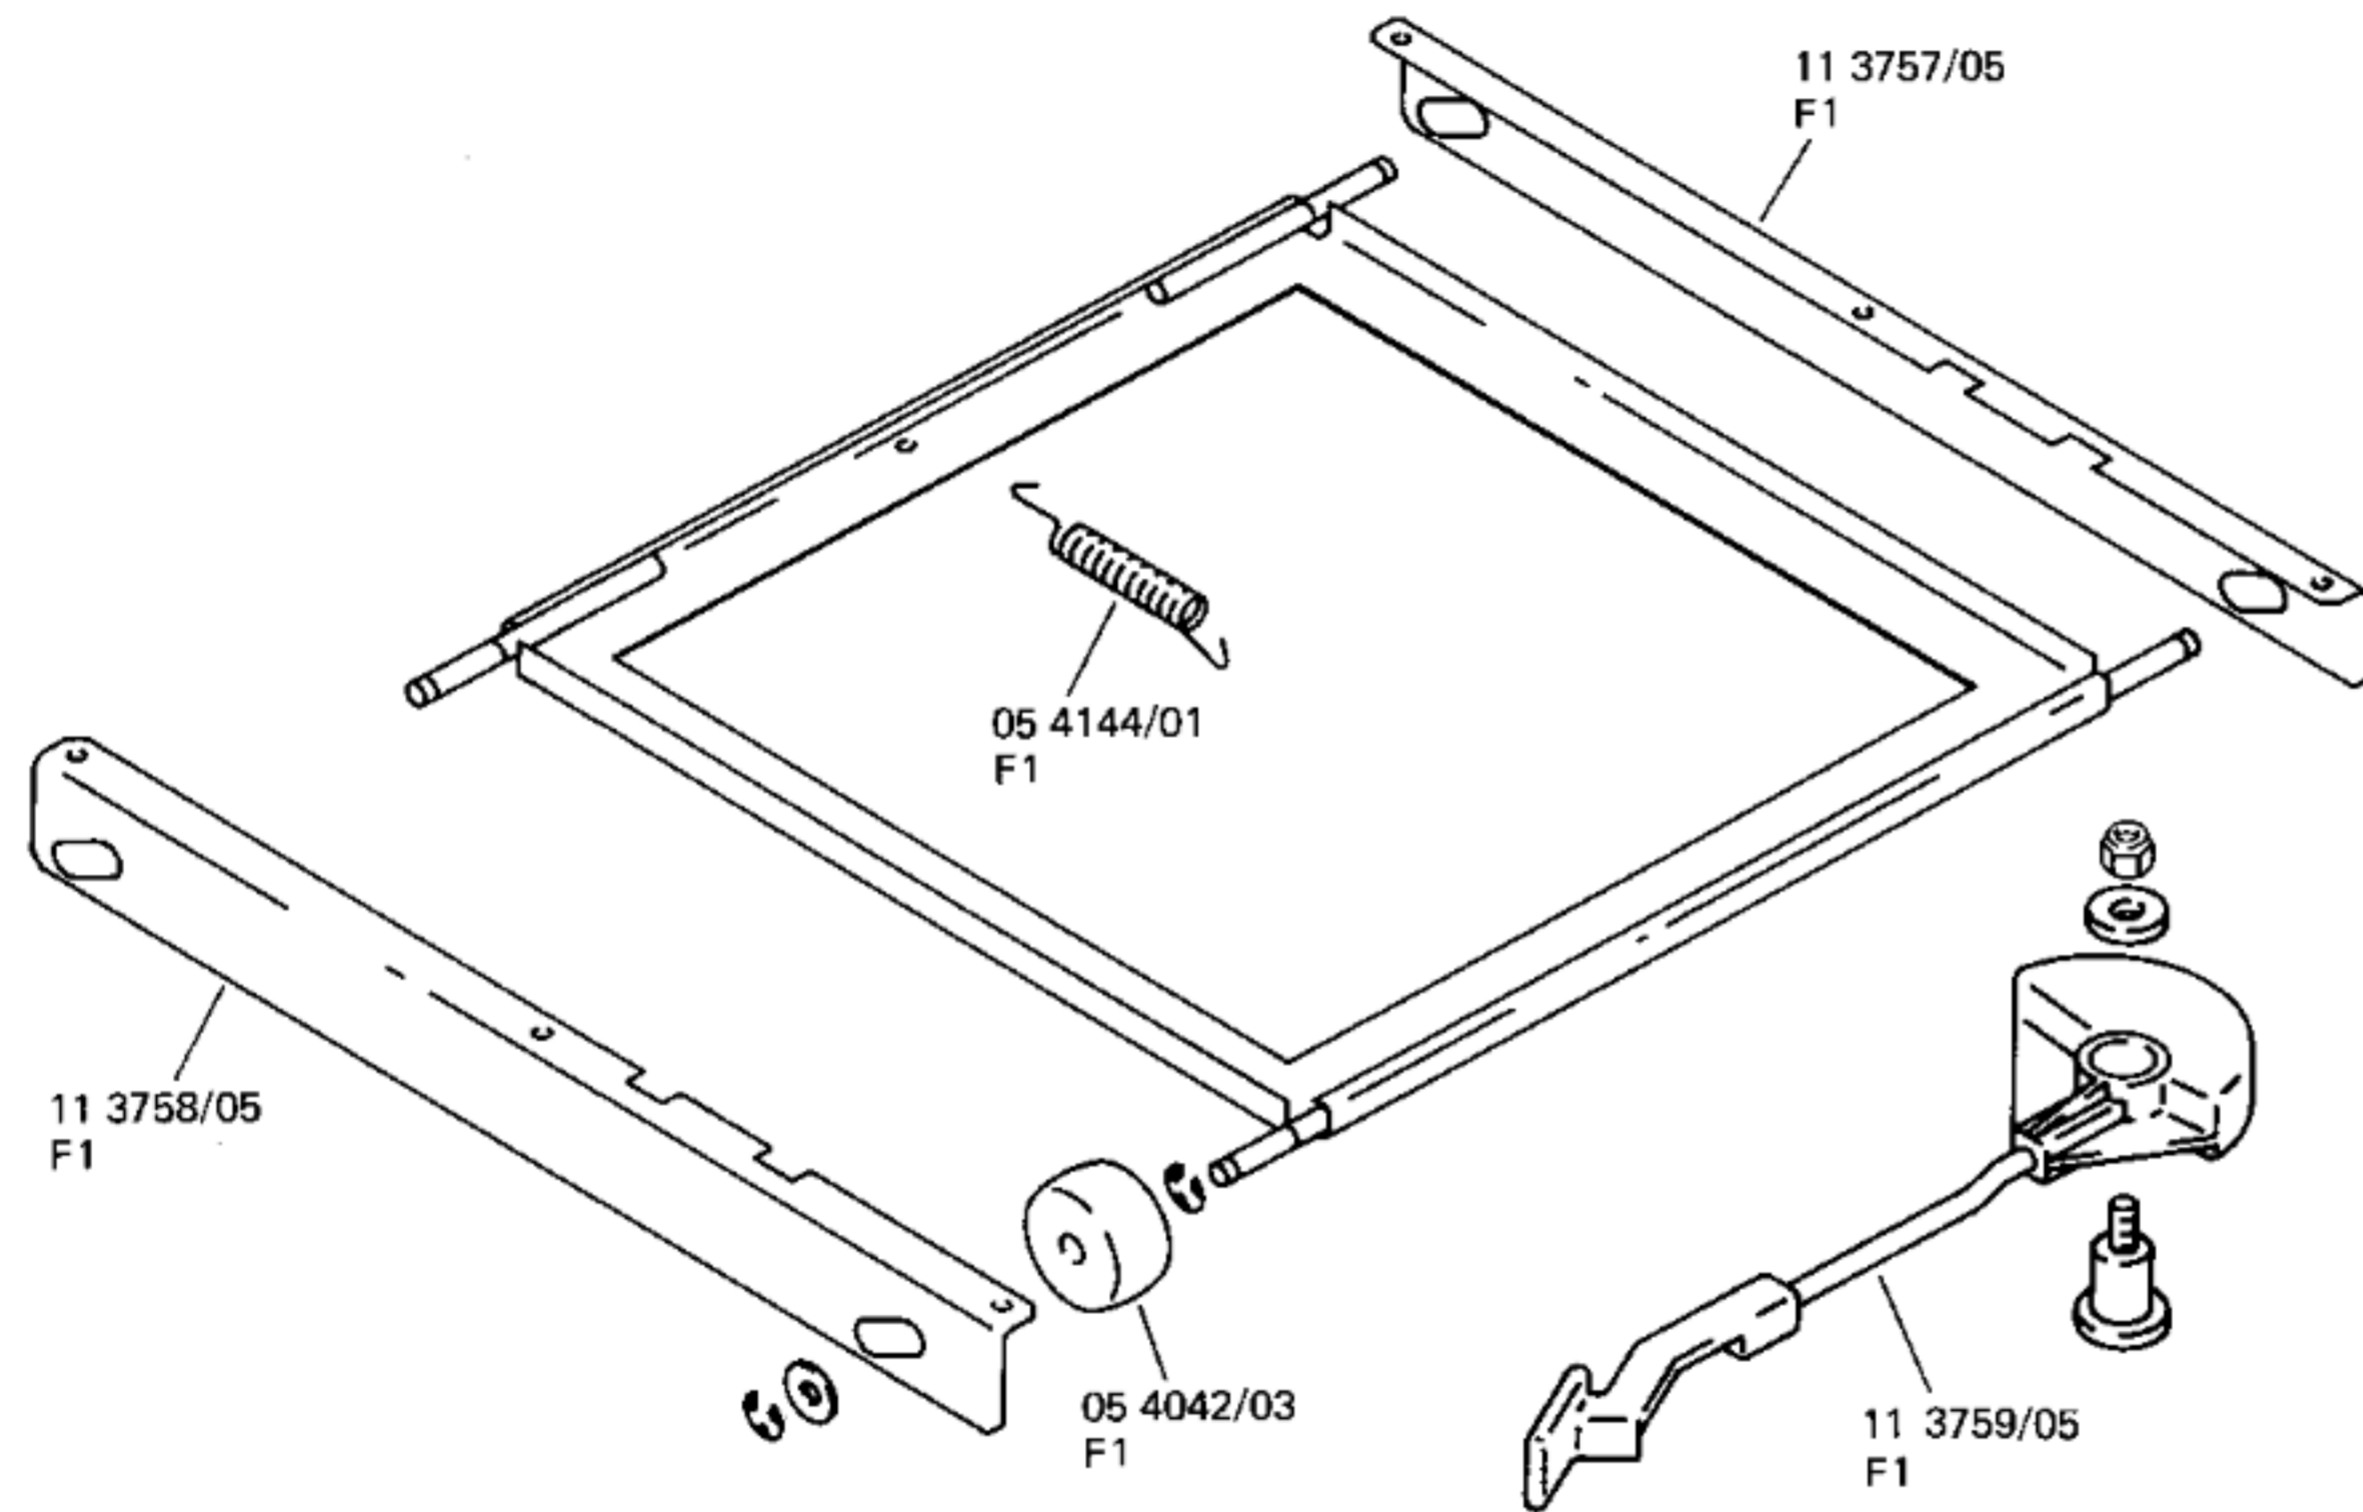

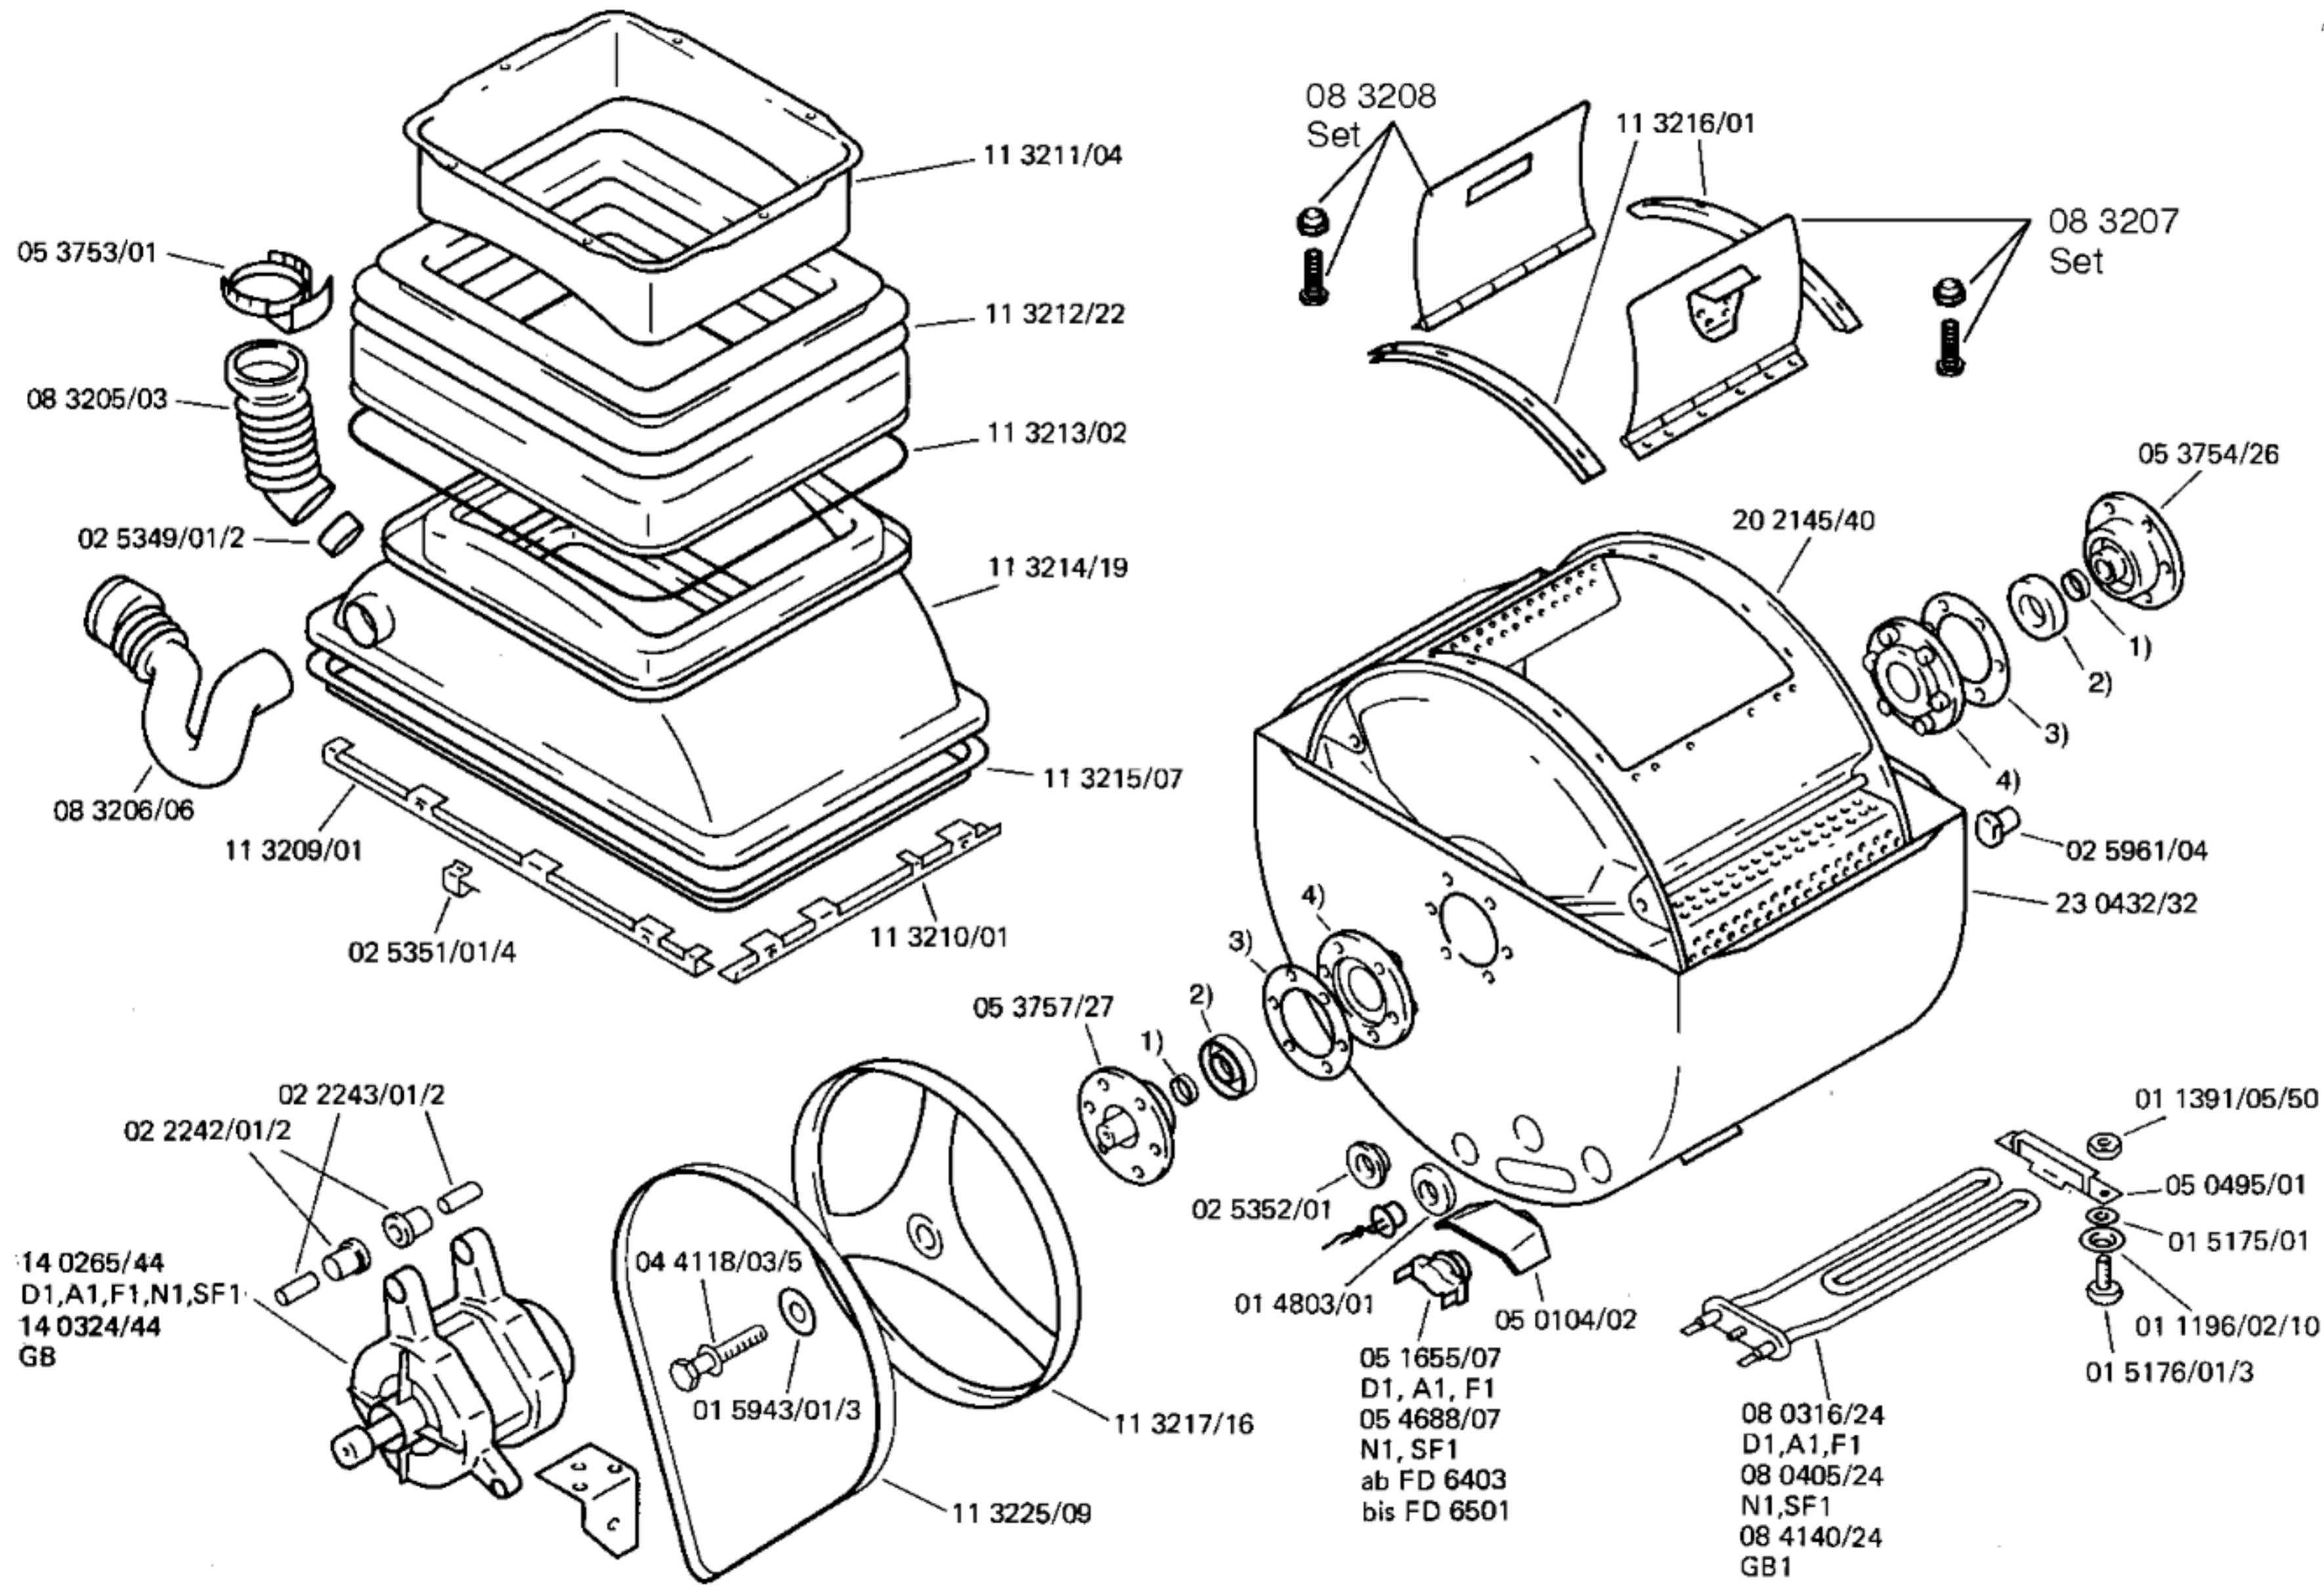

Ident - Nummern - Konstante  
 3740 . . . . .

- 1) 04 2309/03/10
- 2) 02 5350/04
- 3) 05 3755/01
- 4) 05 3756/03

14 0265/44  
 D1,A1,F1,N1,SF1  
 14 0324/44  
 GB

05 1655/07  
 D1, A1, F1  
 05 4688/07  
 N1, SF1  
 ab FD 6403  
 bis FD 6501

08 0316/24  
 D1,A1,F1  
 08 0405/24  
 N1,SF1  
 08 4140/24  
 GB1



**BOSCH**

V 360-0722044366-D1,A1  
V 360-0722044384-GB1  
V 360-0722044385-F1  
V 360-0722044389-N1,SF1

WASCHGERÄTE  
Waschvollautomaten

Ident - Nummern - Konstante  
3740 . . . . .

