



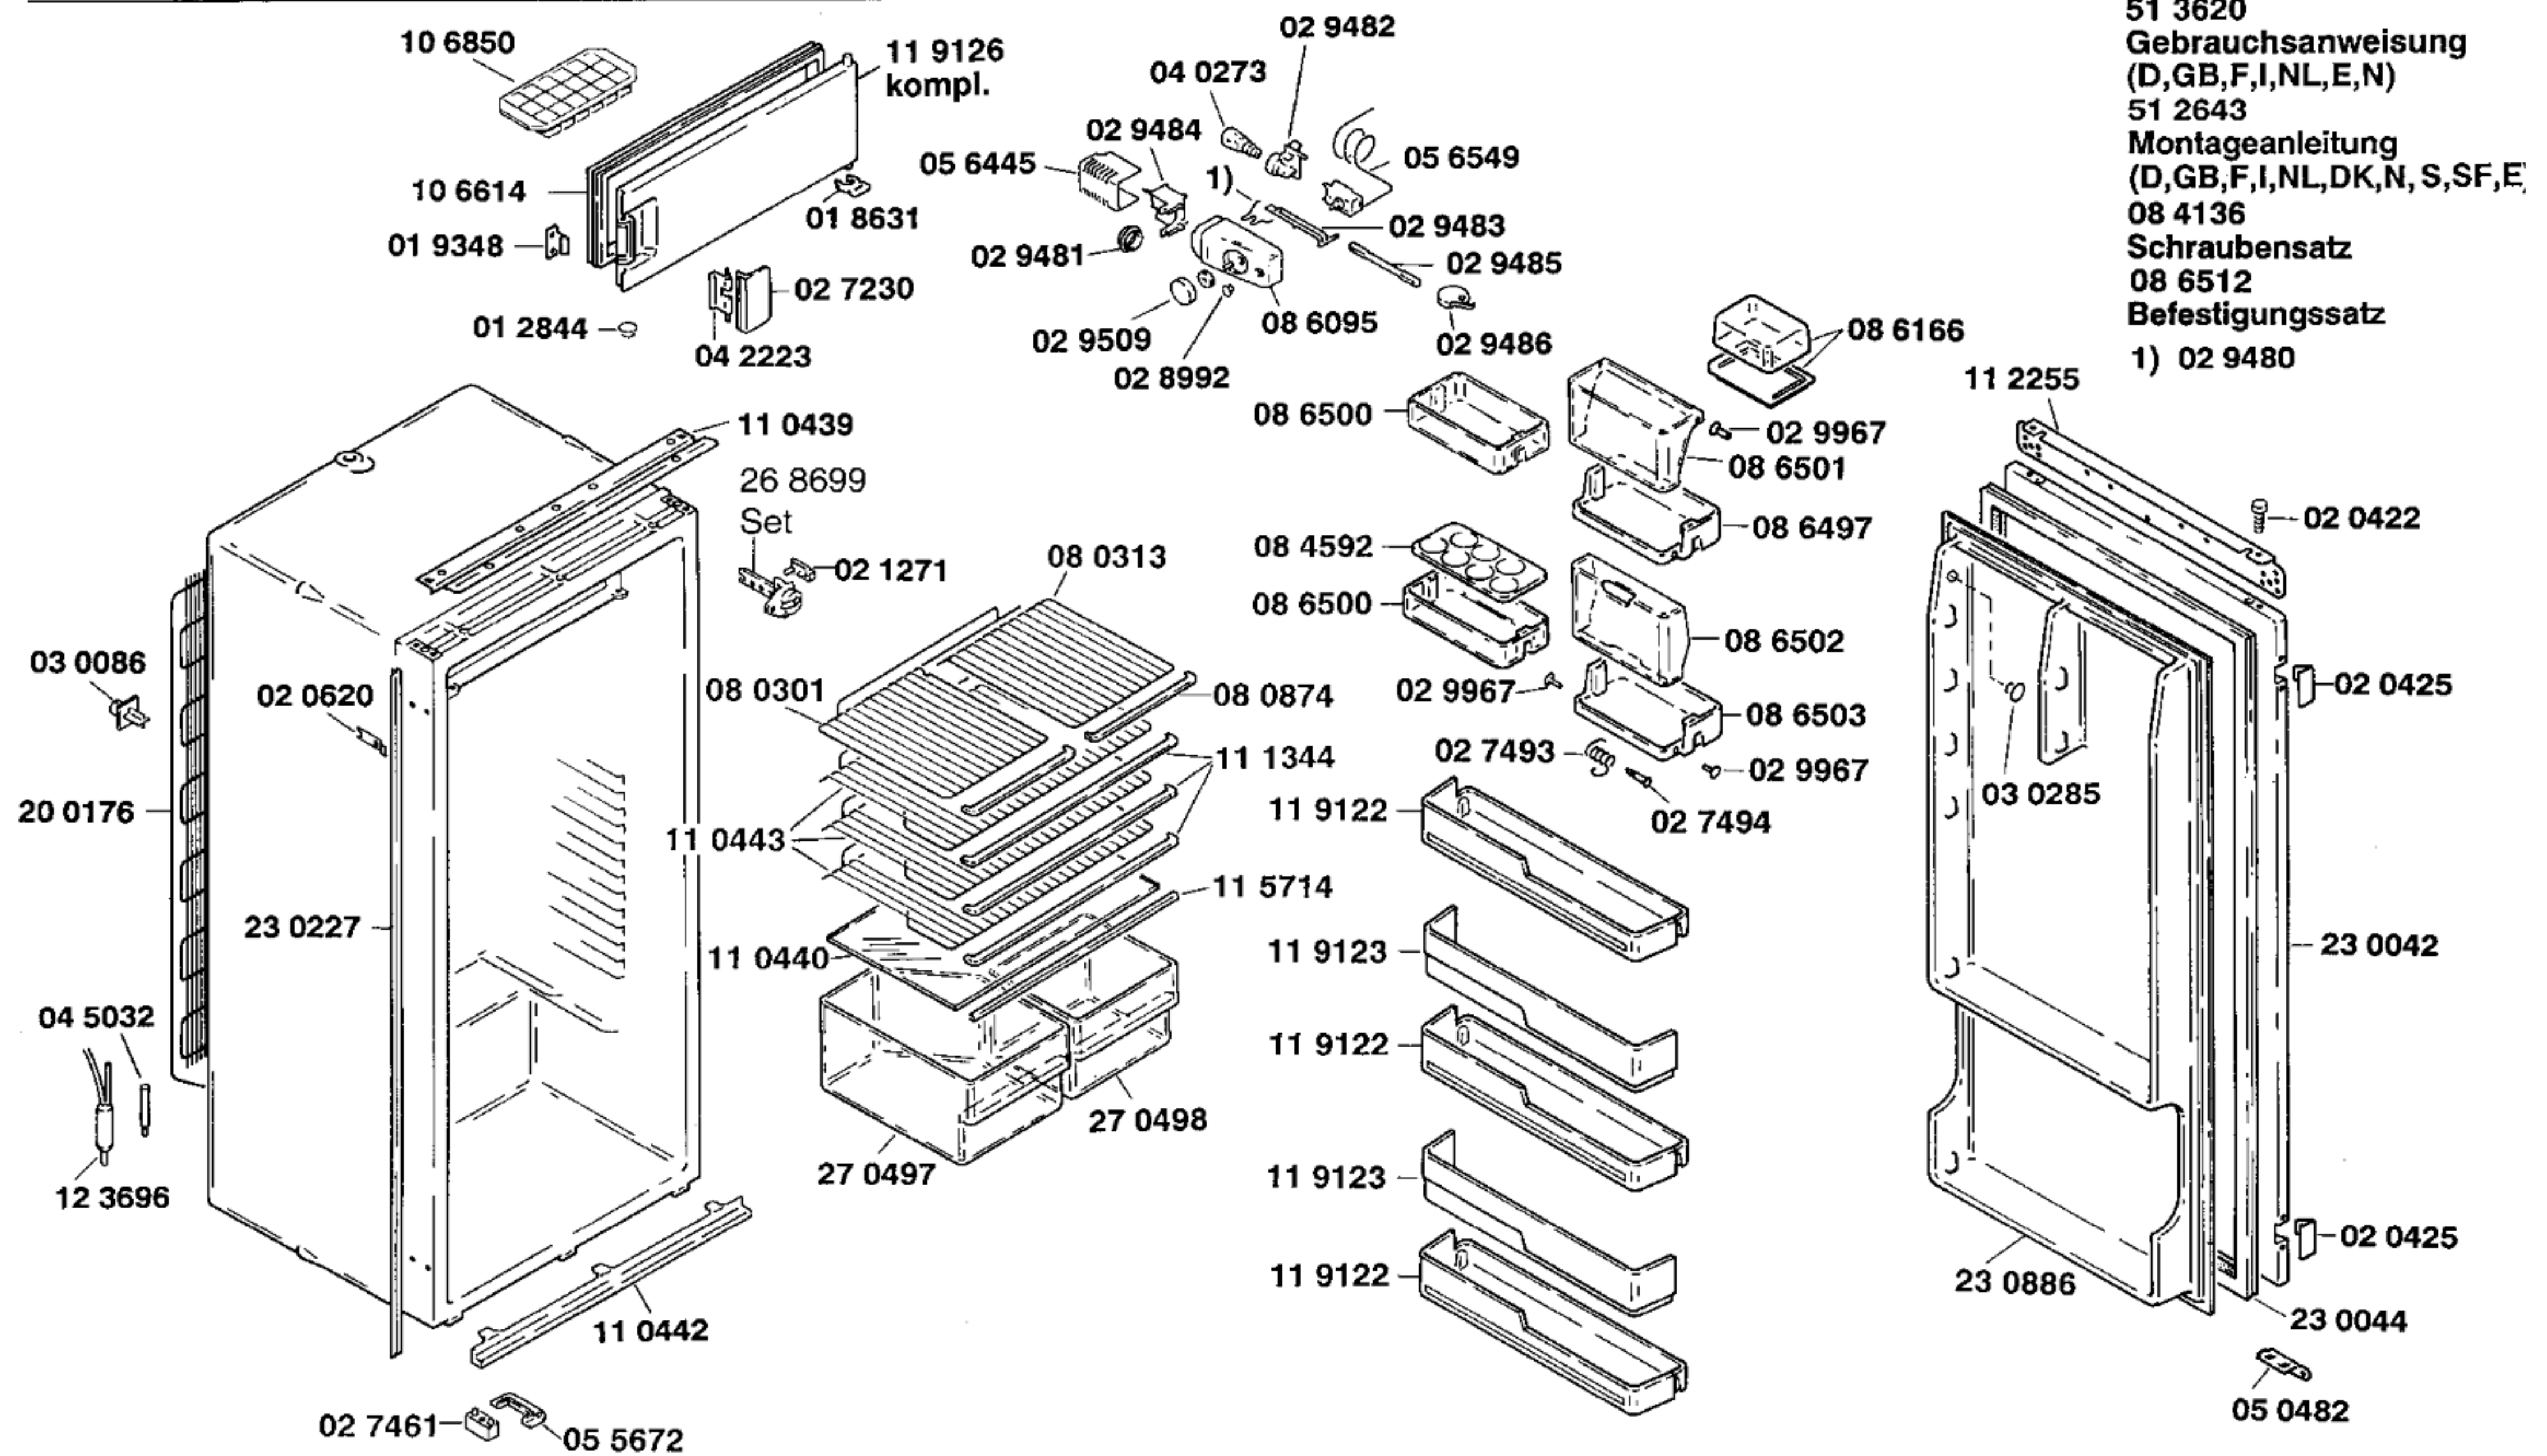

51 3620
Gebrauchsanweisung
(D,GB,F,I,NL,E,N)
51 2643
Montageanleitung
(D,GB,F,I,NL,DK,N,S,SF,E)
08 4136
Schraubensatz
08 6512
Befestigungssatz
1) 02 9480

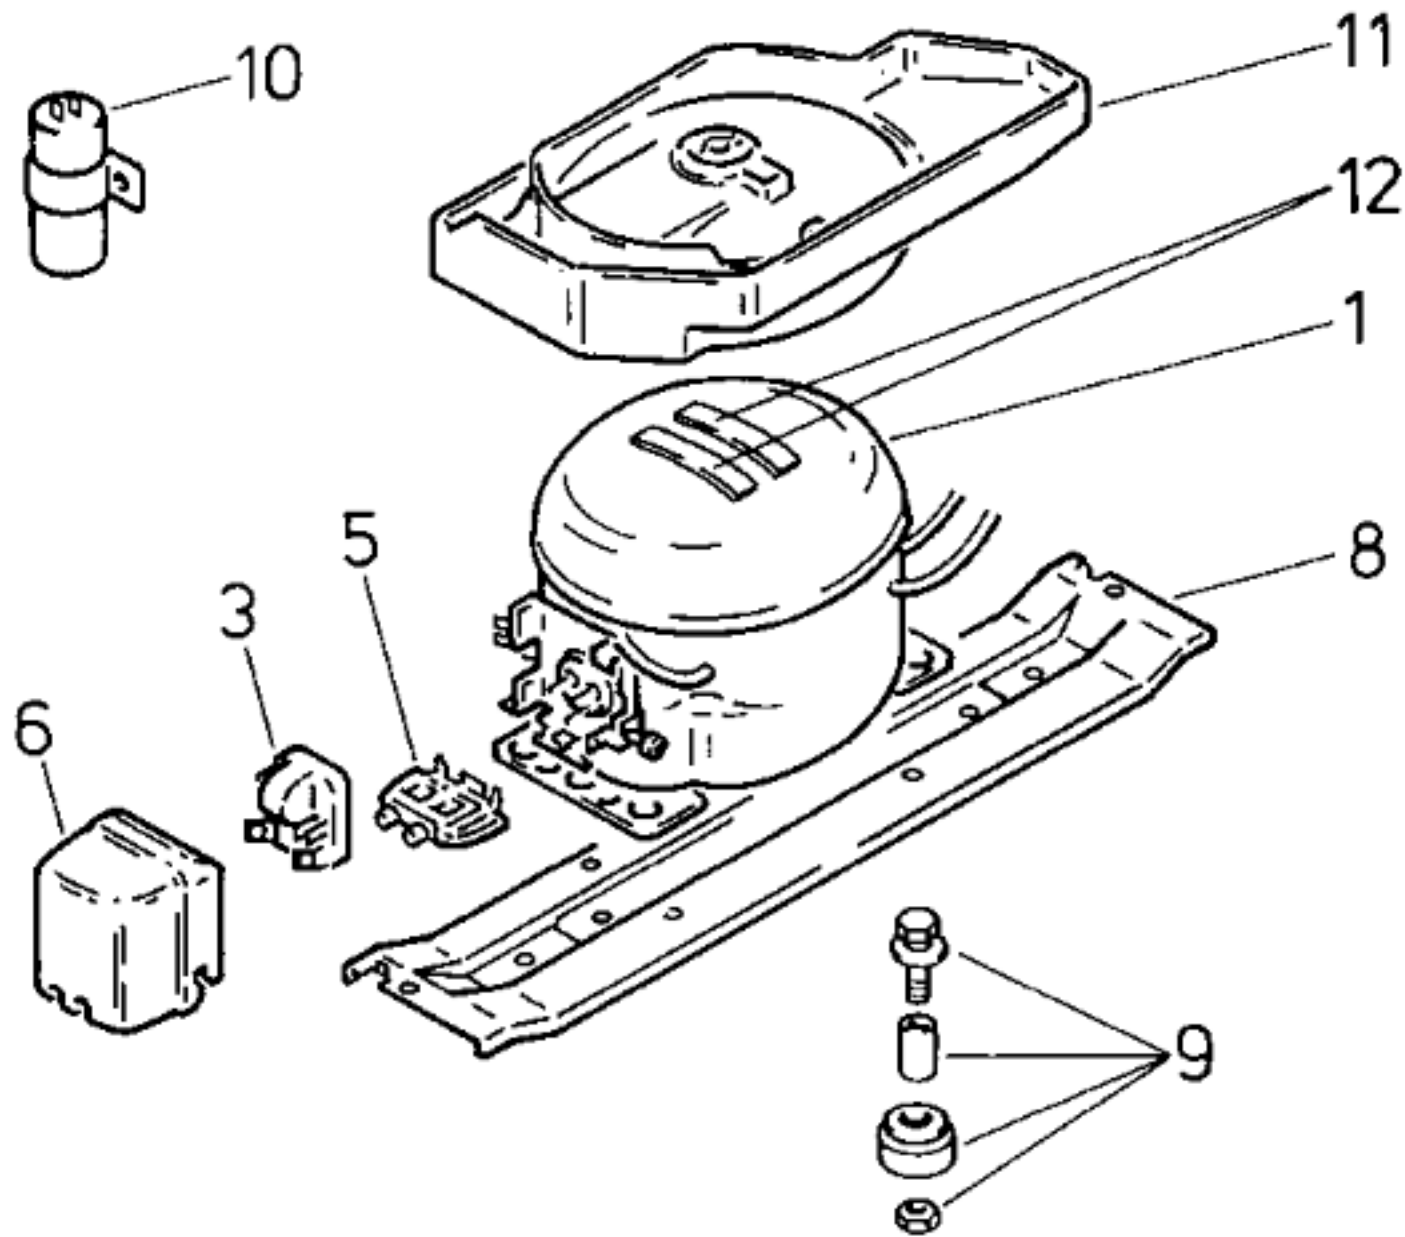

Pos.	EU1,F1,EU2,F2		
	Danfoss TL 5 A		
1	14 0065		
2			
3	02 0108		
4			
5	02 7310		
6	05 1413		
7			
8	11 0437		
9	05 0166		
10			
11	08 4744		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss			
Typ/Type		TL 5 A			
Förderleistung/Delivery/Débit		l/h	914		
Anlaufstrom/Starting current/Cour. de démarrage		A	9,0		
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	15,5	
		Hi/aux	Ω	16,8	
Temp.-Regler/Thermostat		WHF			
Typ/Type		TF 57 F1			
Reglerstellung/Position		kalt		warm	
Schaltwerte/Switching values/ Valeurs de commutation		„ein“	°C	+ 5	+ 5
		„aus“		- 27	- 12
		(„abtauen“ od.)	„alarm“		
Füllmenge/Fill.quantity/Charge		R12	g	125	
Anschlußwert/Conn.load/Puiss. connectée			W	120	
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance			Ω		
Leistung/Power/Puissance			W		
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance			Ω		
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance			Ω		
Spannung/Voltage/Tension			V		