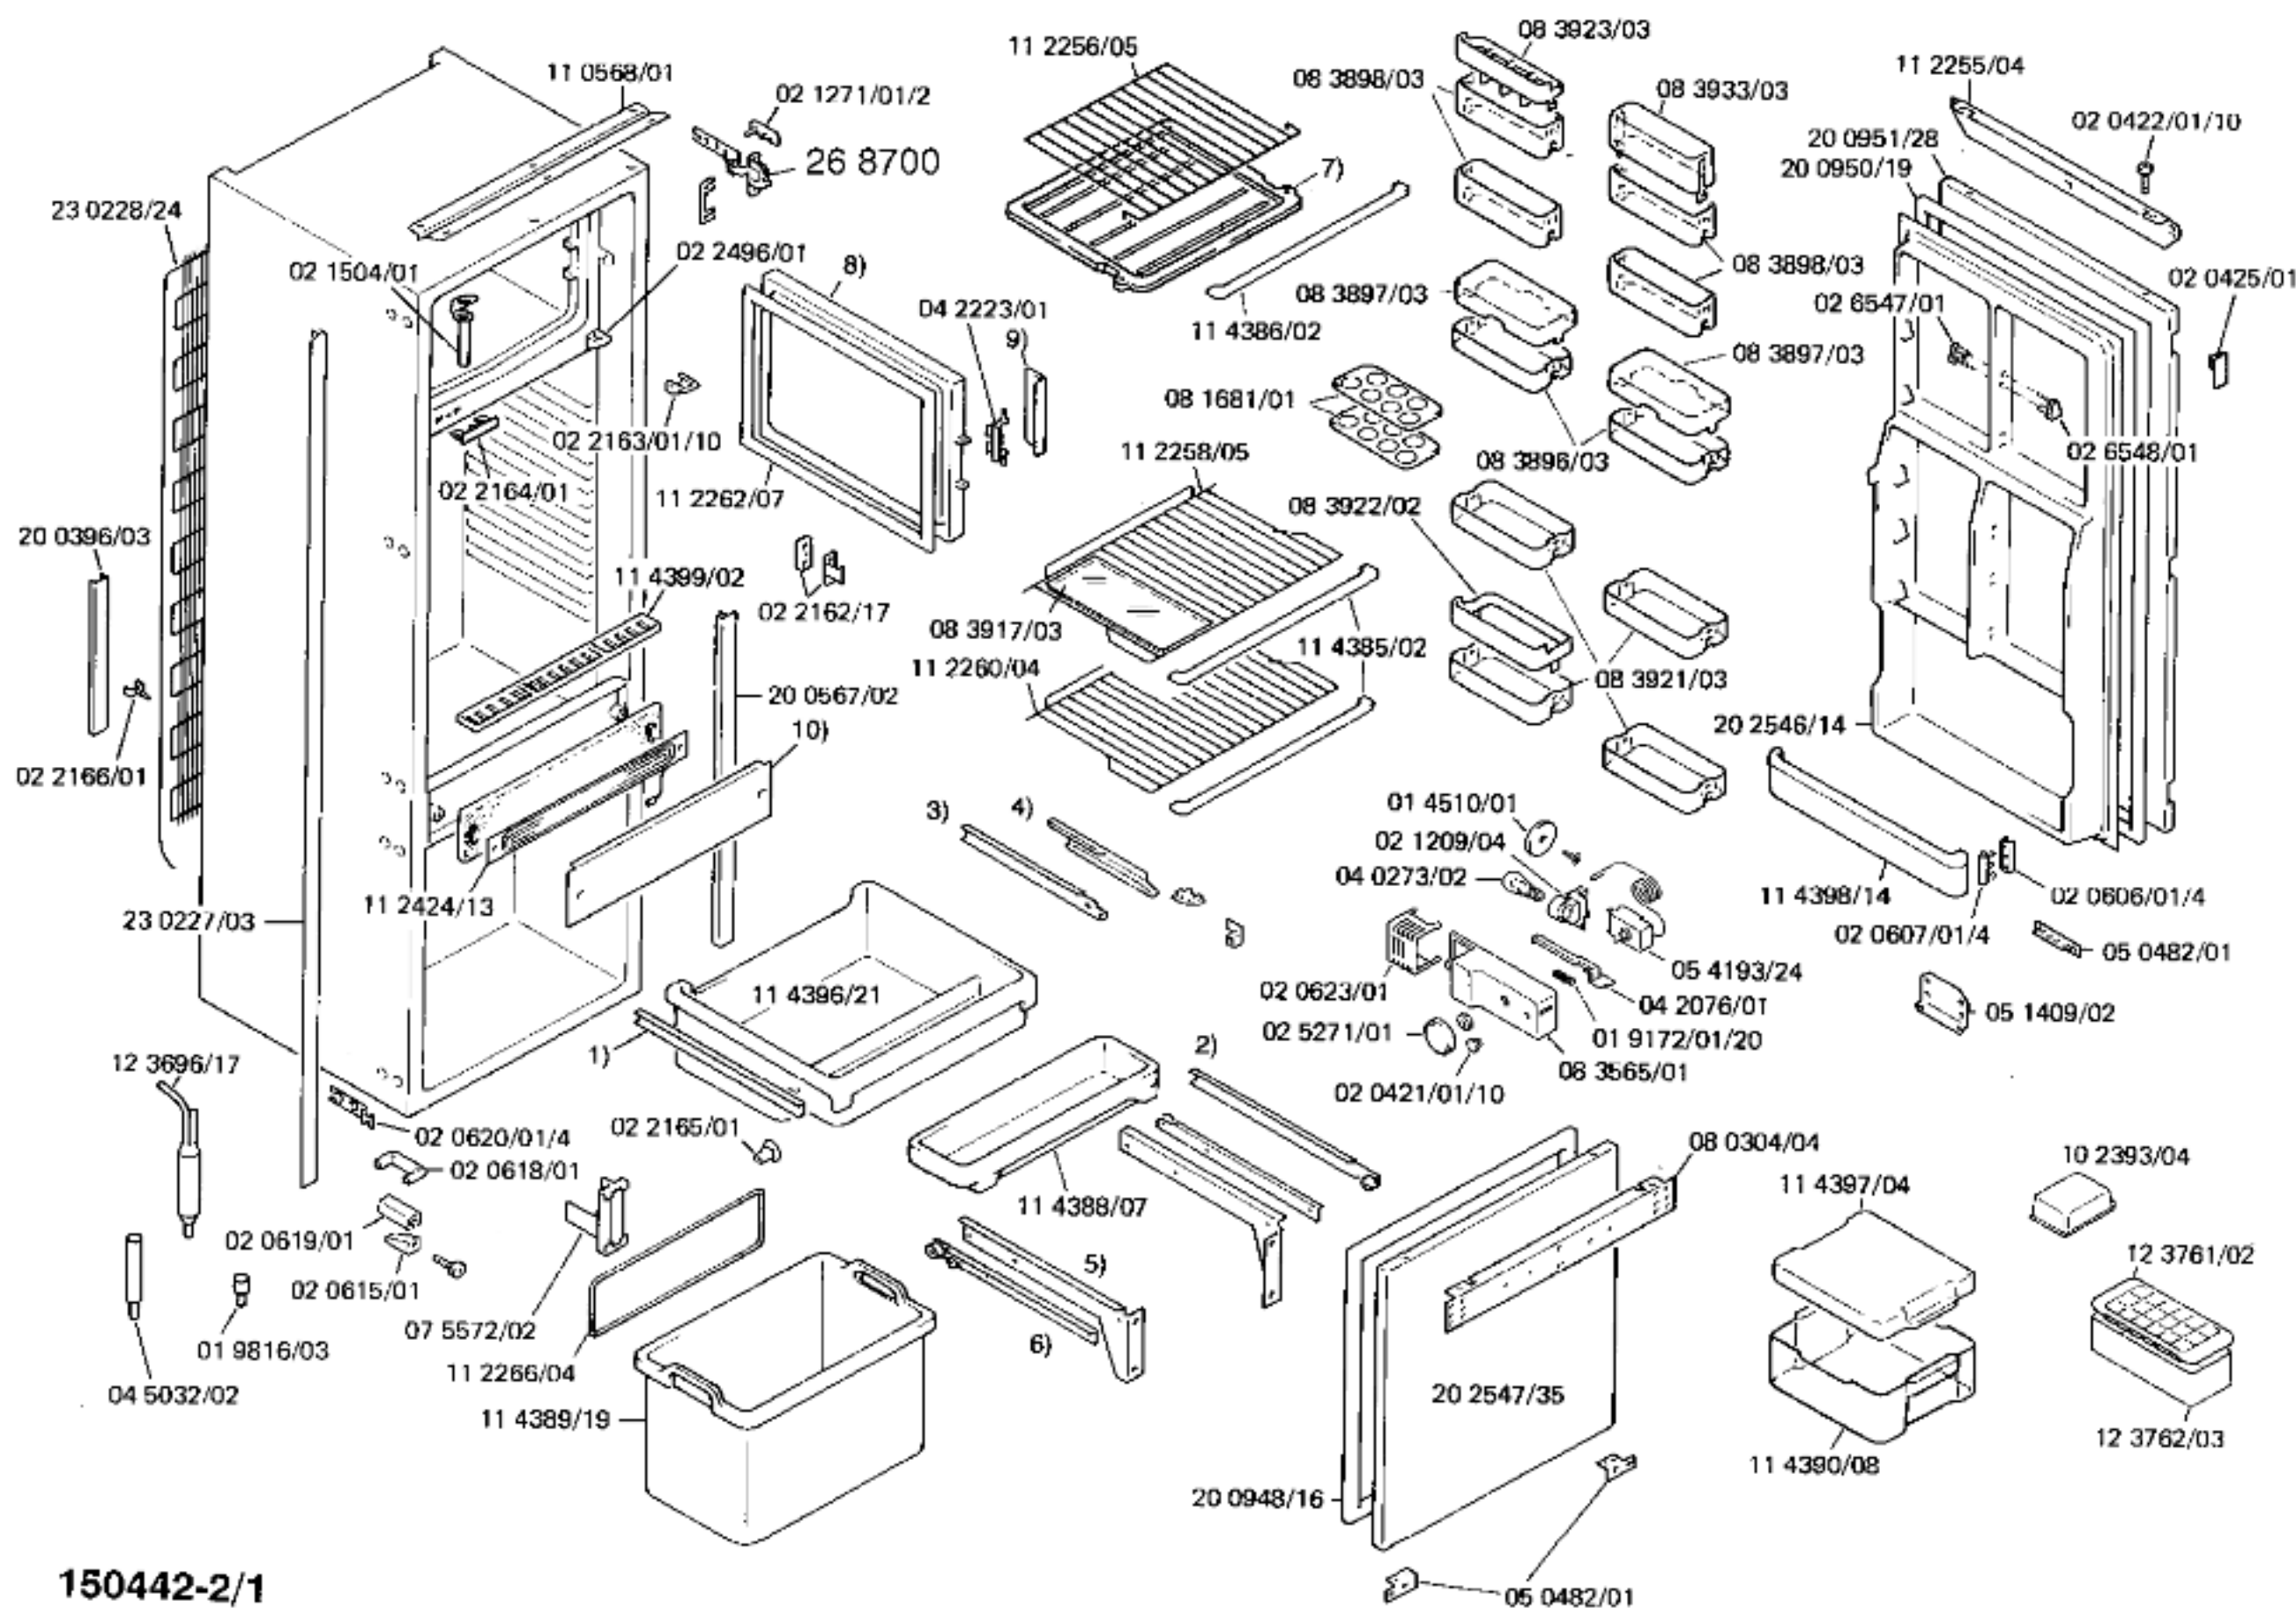


Ident-Nummern-Konstante
3740

51 1180/00
EU1,EU2,CH1,CH2,F1,F2,I1
Gebrauchsanweisung
(D,GB,F,I,NL)
51 1179/00
EU1,EU2,CH1,CH2,F1,F2,I1
Montageanleitung
(D,GB,F,I,NL,E,S,N)

1) 11 2267/03
rechts
11 2268/03
links

```
2) 11 2272/09
    rechts
    11 2273/09
    links
```

3) 11 2270/03
rechts
11 2271/03
links

4) 07 5574/02
rechts
07 5575/02
links

5) 11 2276/08
rechts
11 2277/08
links


6) 11 2274/09
rechts
11 2275/09
links

7) 11 2598/07

B) 11 4395/32
kompl.
EU1,CH1,F1
11 5179/32
kompl.
EU2,CH2,F2,I1

9) 08 3916/02
EU1,CH1,F1
08 4372/01
EU2,CH2,F2,I1

10) 11 2265/07
EU1,CH1,F1
11 5165/07
EU2,CH2,F2,11

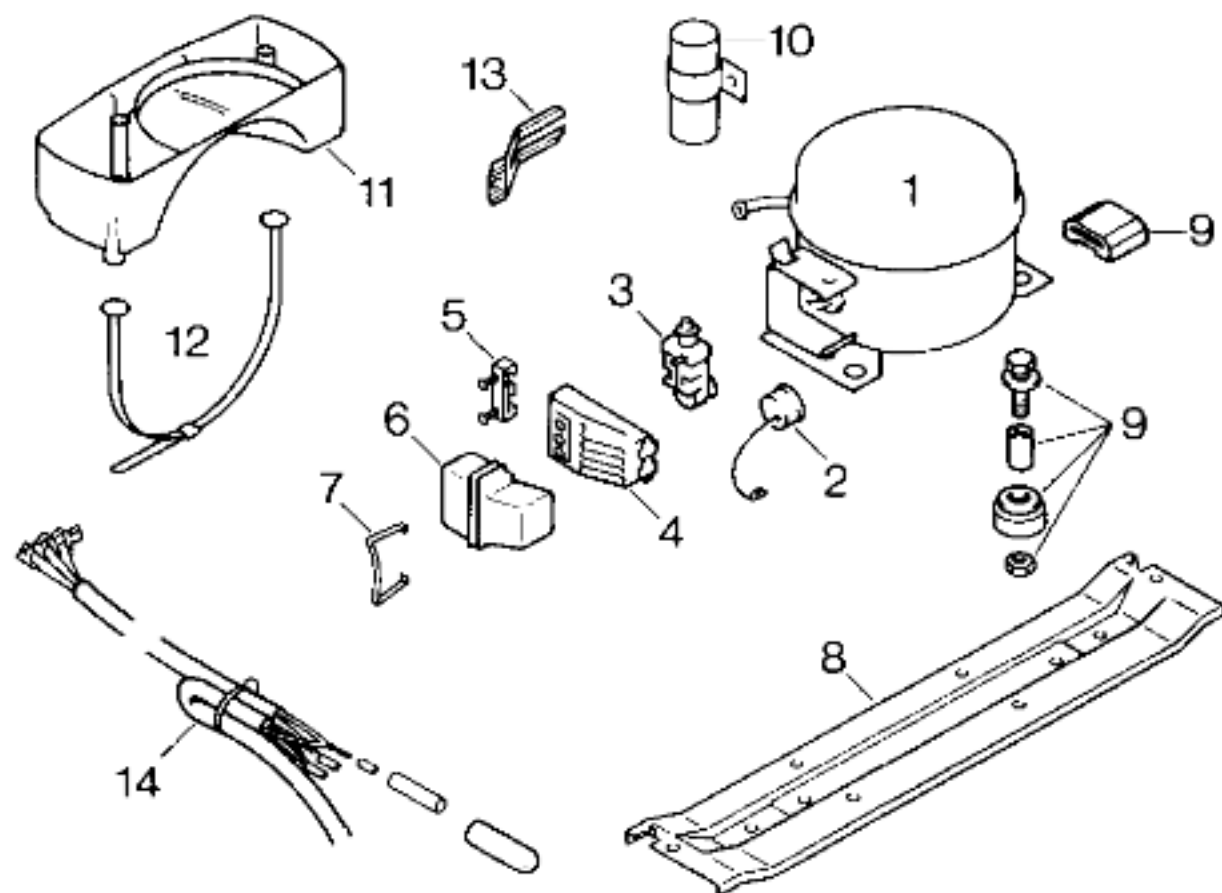
TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss		Aspera		
Typ/Type		FR 8,5 A		BY 1116 A		
Förderleistung/Delivery/Débit		l/h	1430	1450		
Anlaufstrom/Starting current/Cour. de démarrage		A	10,3	9,9		
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	12,2	11,7	
		Hi/aux	Ω	13,7	37,7	
Temp.-Regler/Thermostat		M + J				
Typ/Type		TF 57				
Reglerstellung/Position		kalt		warm		
Schaltwerte/Switching values/ Valeurs de commutation		„ein“	°C	+ 4	+ 4	
		„aus“ („abtauen“ od.)		- 28	- 13	
Füllmenge/Fill.quantity/Charge		R12	g	180		
Anschlußwert/Conn.load/Puiss. connectée		W	150			
Heizung/Heater/Chauffage						
Widerstand/Resistance/Résistance		Ω	8800			
Leistung/Power/Puissance		W	5,5			
Ventilator/Blower/Ventilateur						
Widerstand/Resistance/Résistance		Ω				
Magnetventil/Magnetic valve/Electrovanne						
Widerstand/Resistance/Résistance		Ω				
Spannung/Voltage/Tension		V				

Pos.	F1, F2	EU2, CH2, I1		
	Danfoss	Aspera		
1	14 0167/45	14 0312/45		
2		02 6559		
3	02 0108/27	02 2342/16		
4		05 1748/06		
5	02 1361/04			
6	05 1413/05	05 1746/01		
7		02 2339/01		
8	11 1838/03	11 1919/04		
9	05 0166/05/4	05 0166/05/4		
10				
11	10 7331/02	10 7331/03		
12				
13		04 2688/01/2		
14				