 


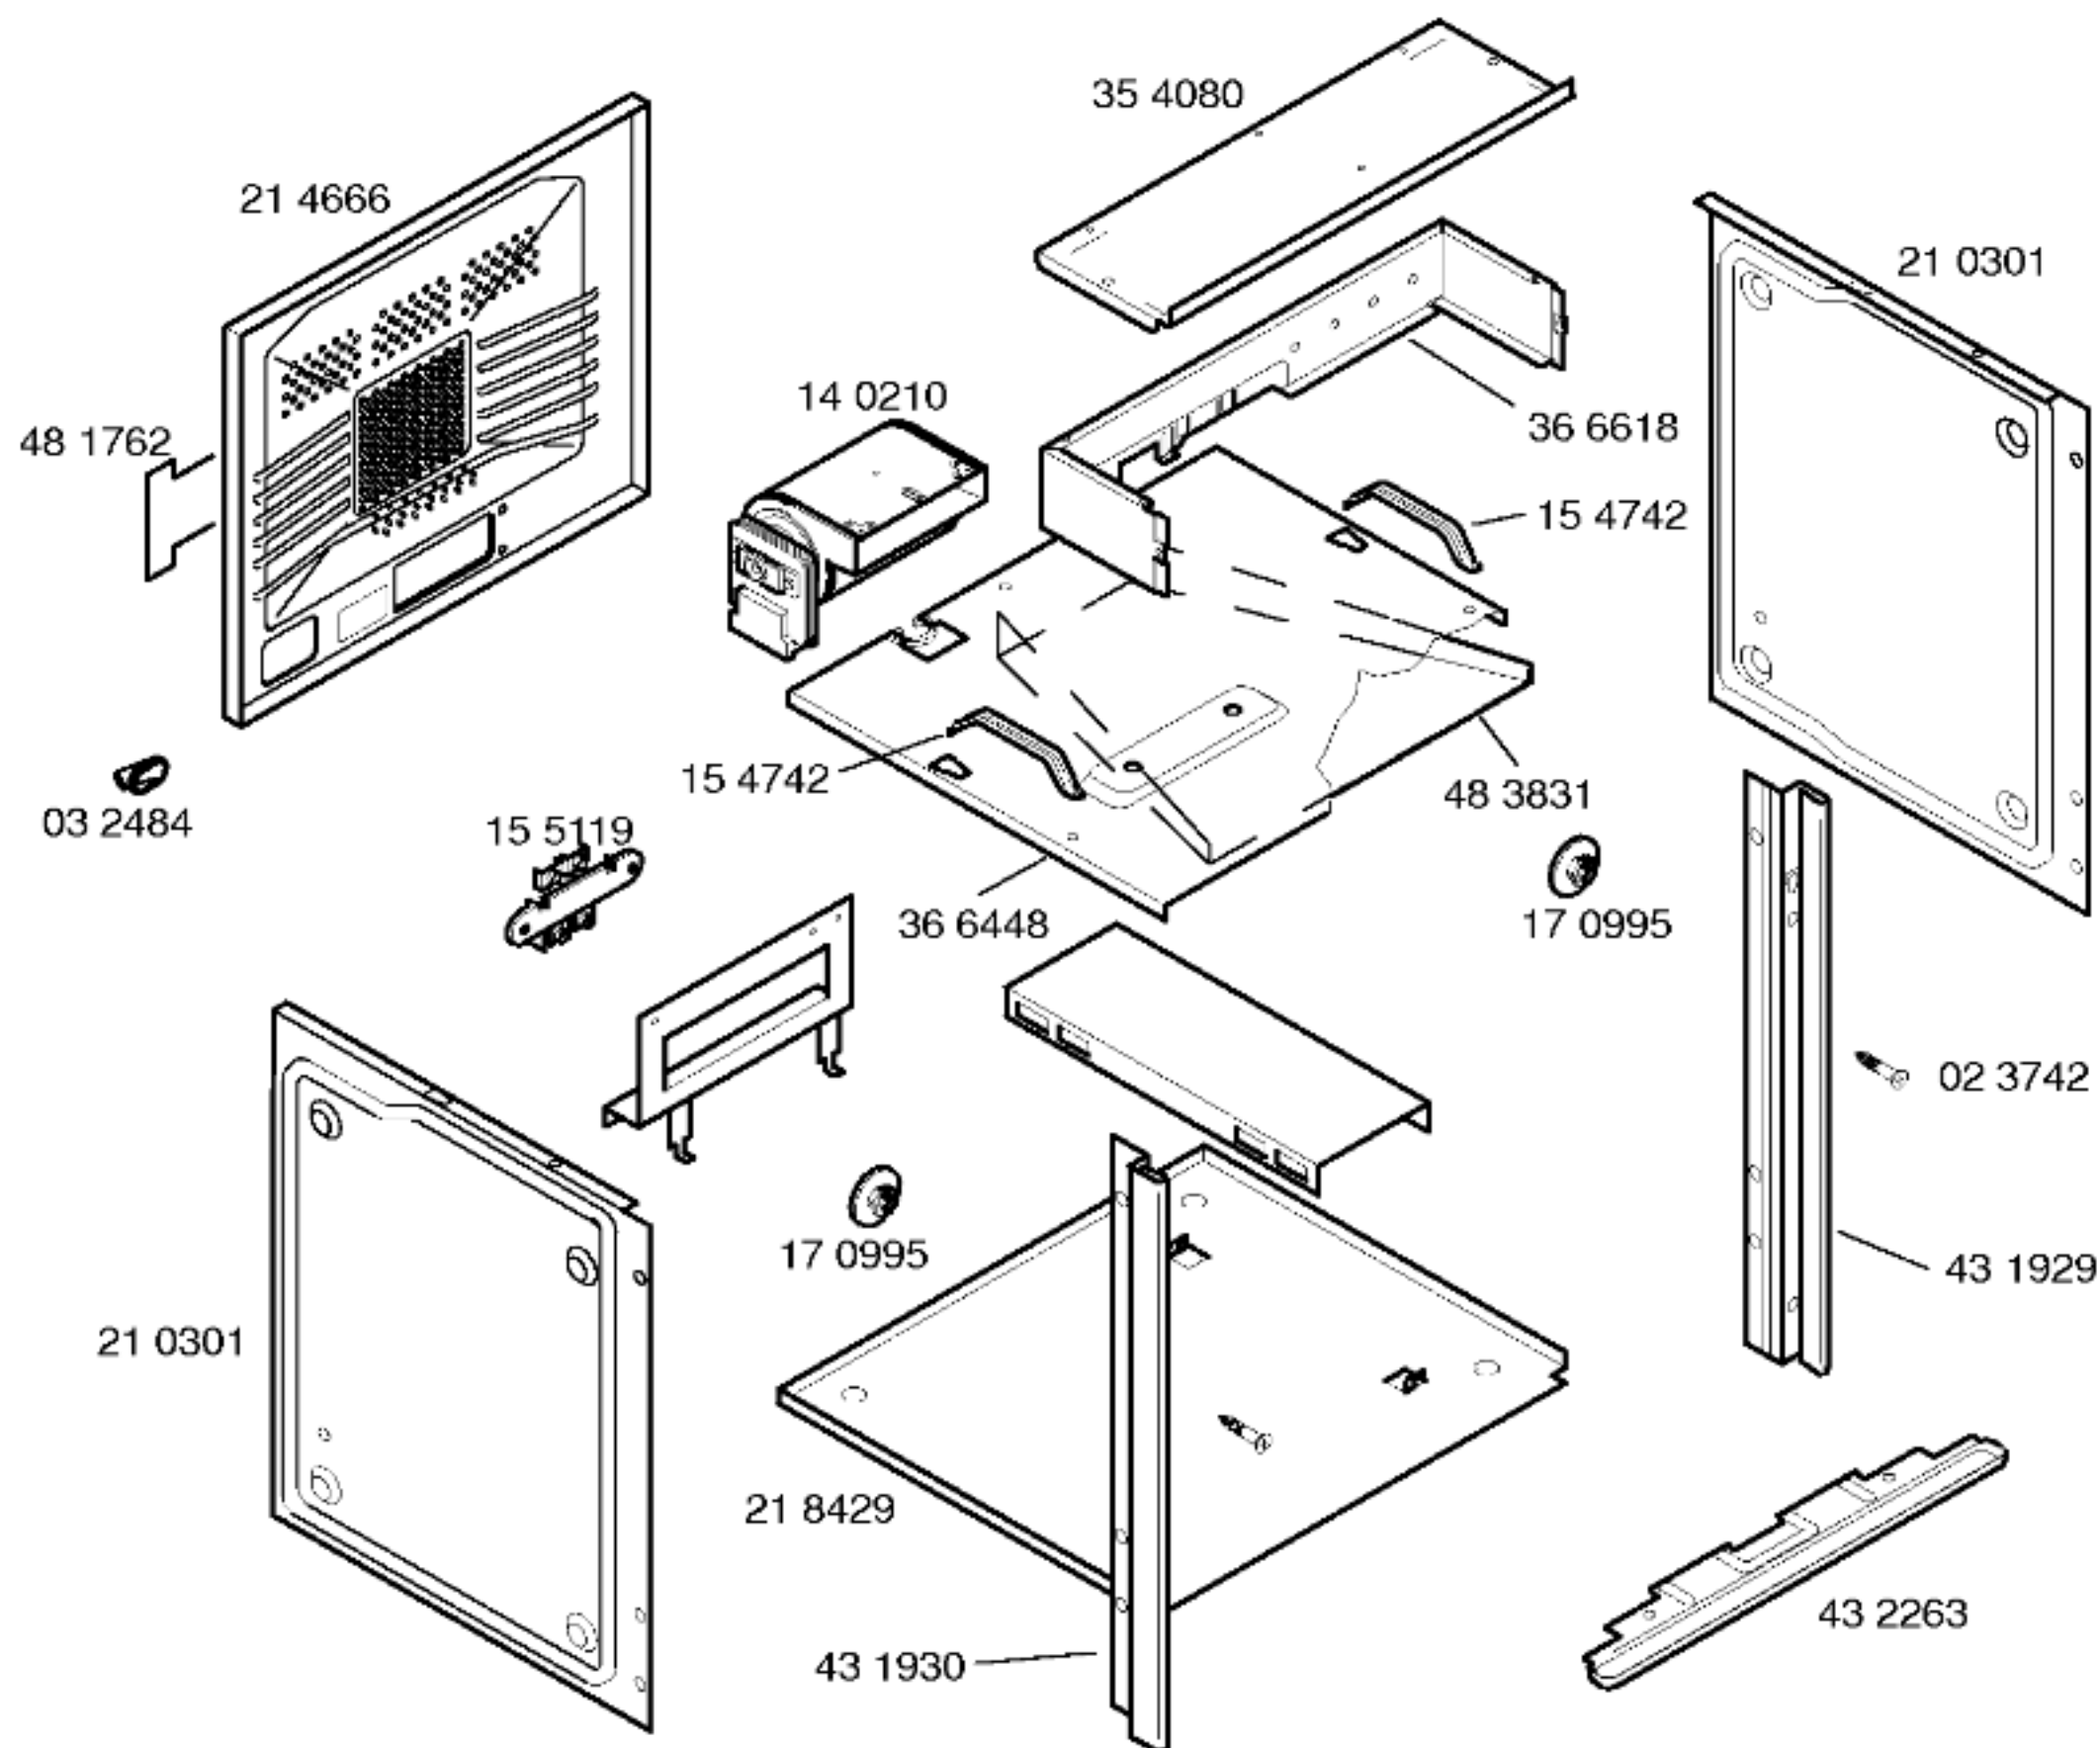

Gebrauchsanweisung
58 6150
(de,fr)

Kochbuch
58 5533

Zubehör:

Dampfgarer
N8640X2

Bratrost engmaschig
Z1440X0

Bratrost gekröpft
Z1430X0

Backblech, Alu
Z1330X0

Backblech Email
Z1340X2

Bratenblech
Z1510X2

 
Brotbackstein
Z1910X0

Grillpfanne u. Bratrost
Z1230X2


Nachrüstsatz Clou/Kat.
Z1740X0

Nachrüstsatz Clou4/Kat.
Z1750X0


Auflaufform
Z1270X2

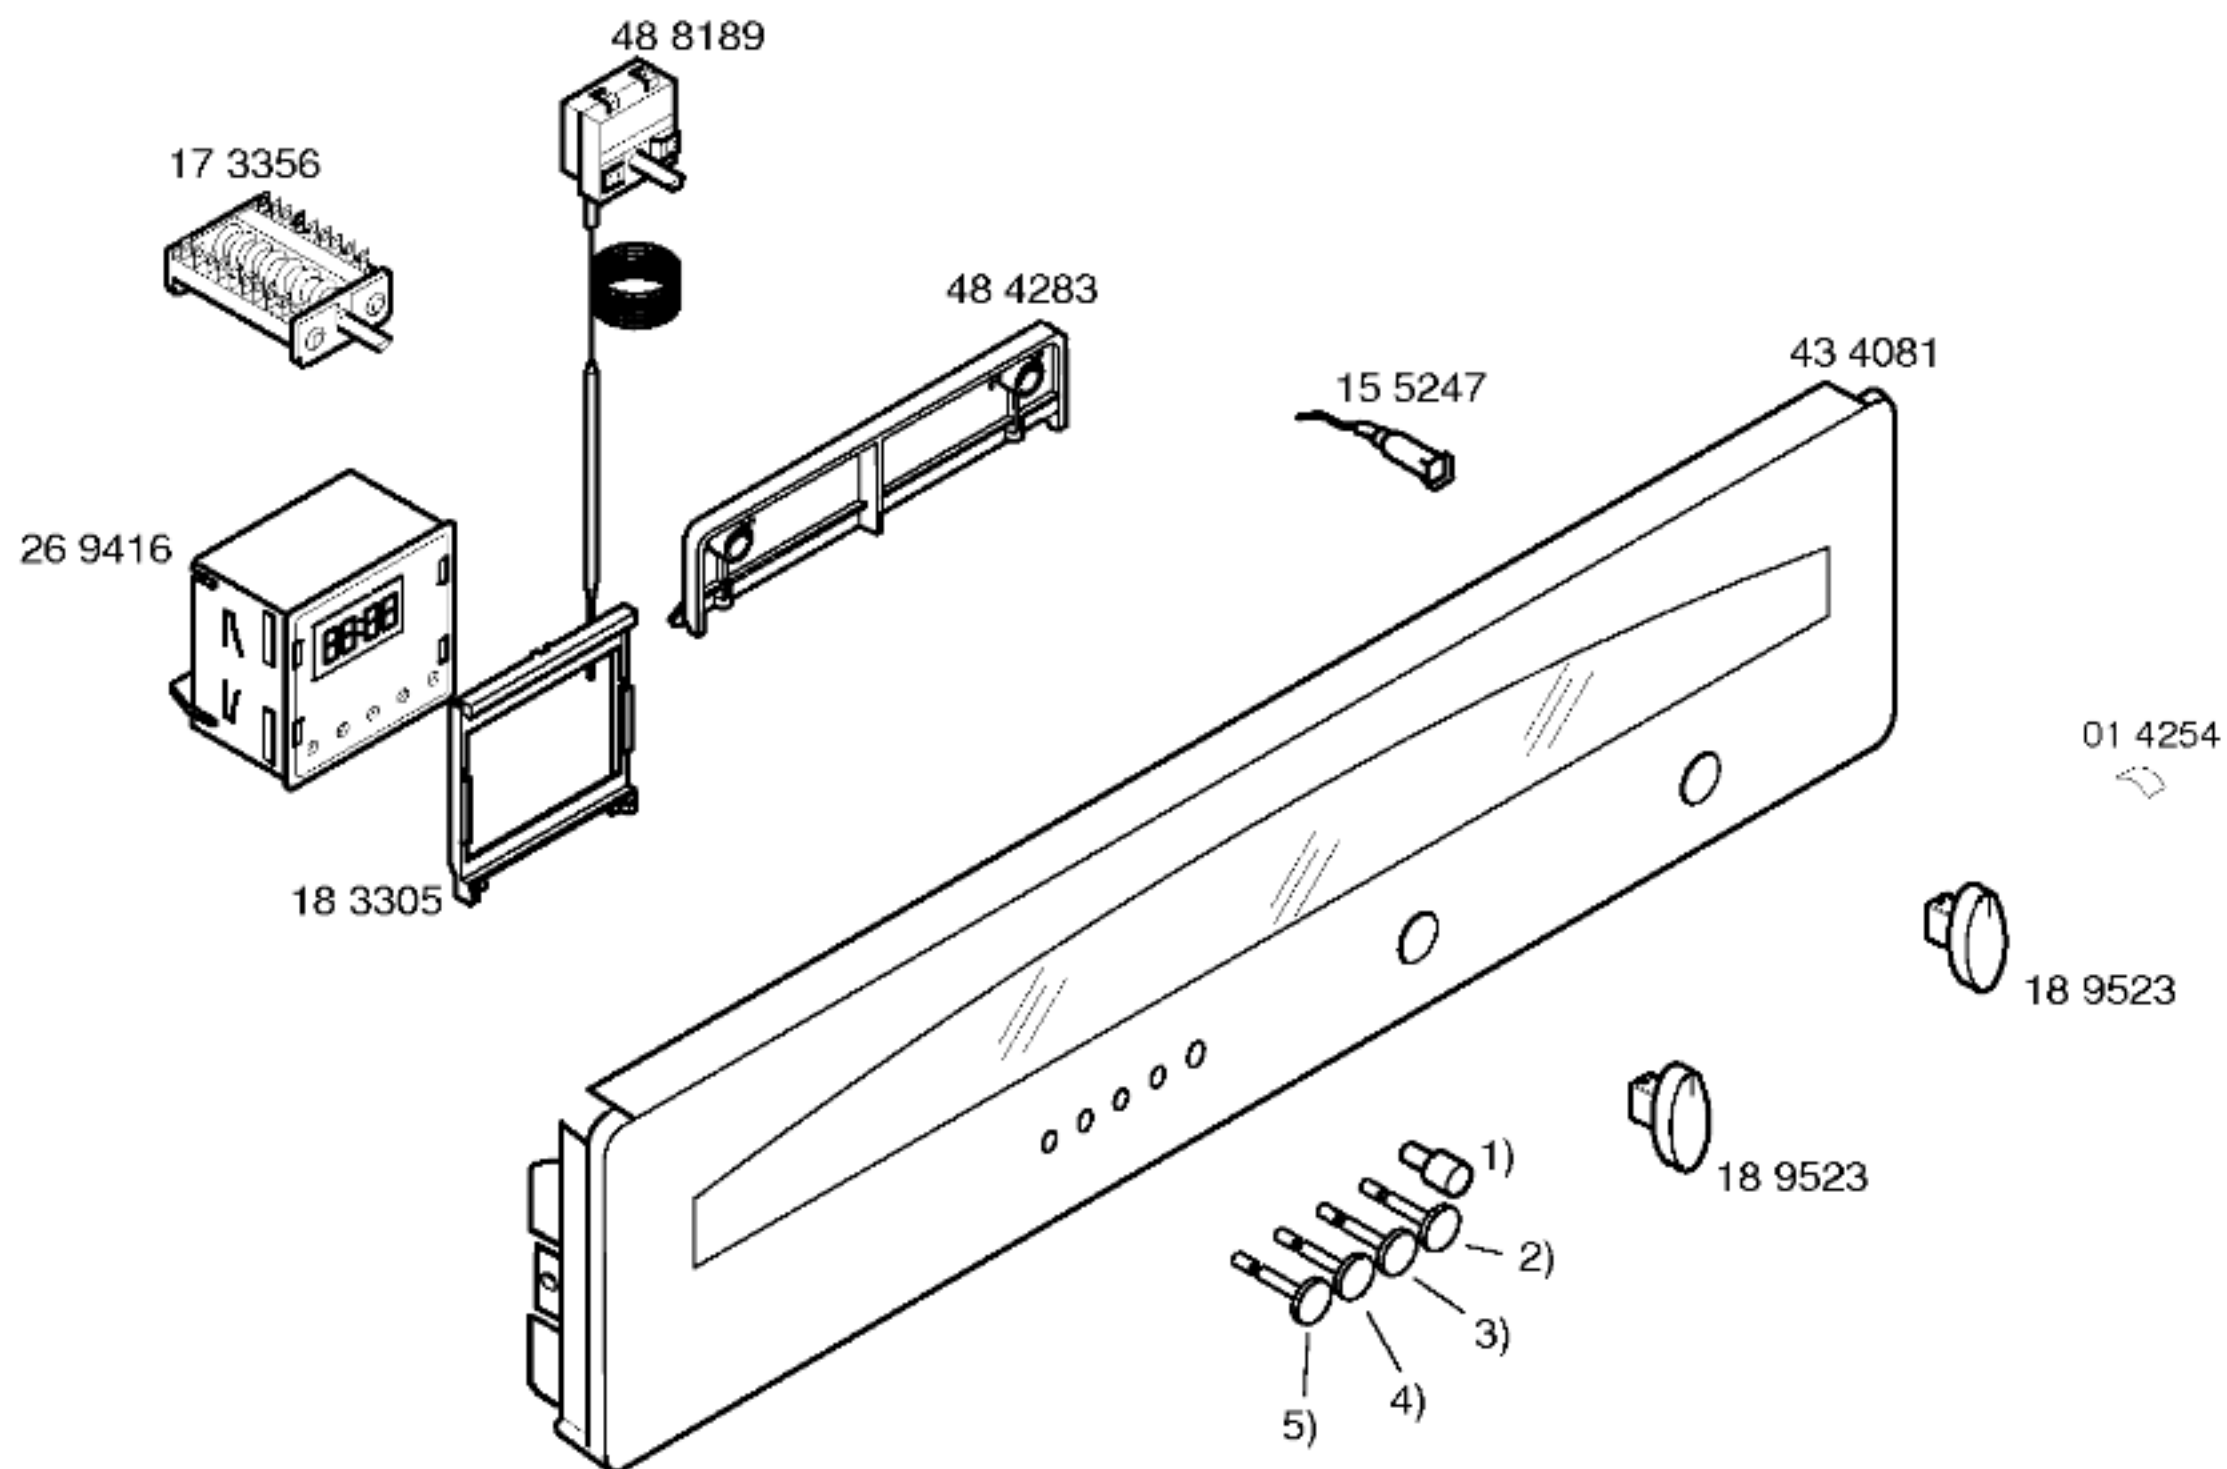

 - 1) 18 4472
- 2) 18 4476
- 3) 18 4475
- 4) 18 4474
- 5) 18 4473

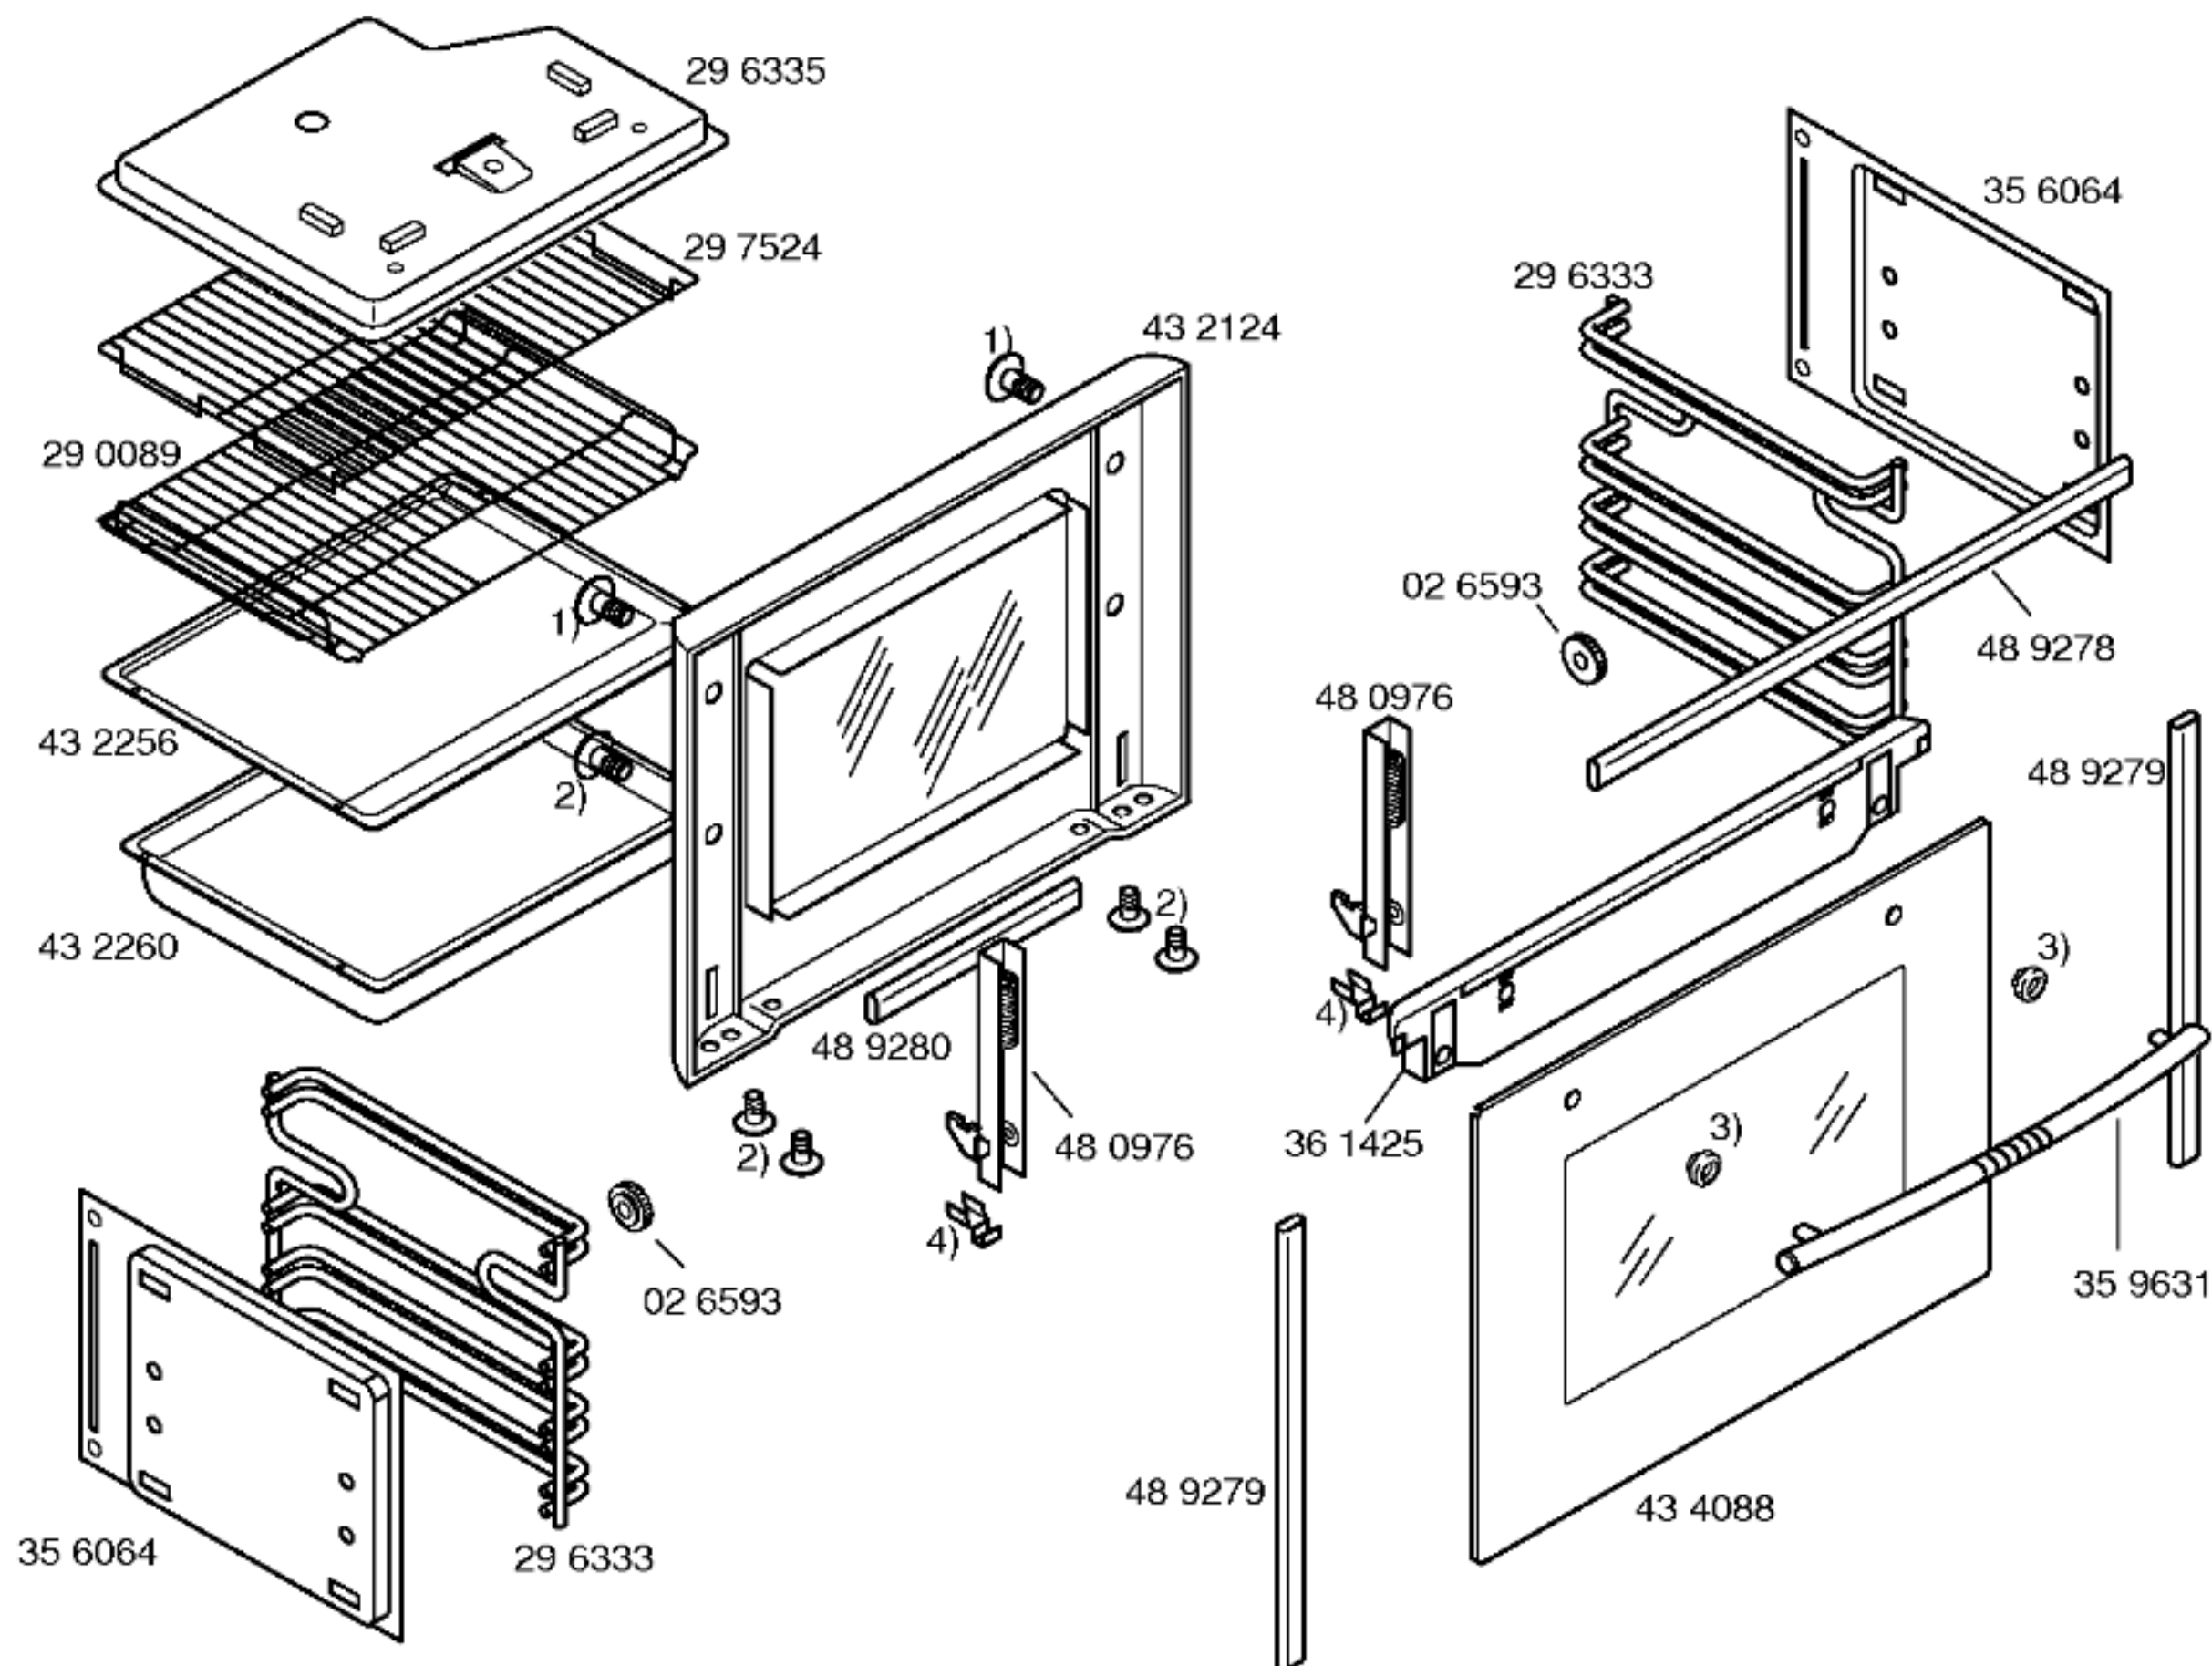

 - 1) 16 8581
- 2) 17 2646
- 3) 18 3632
- 4) 18 2427

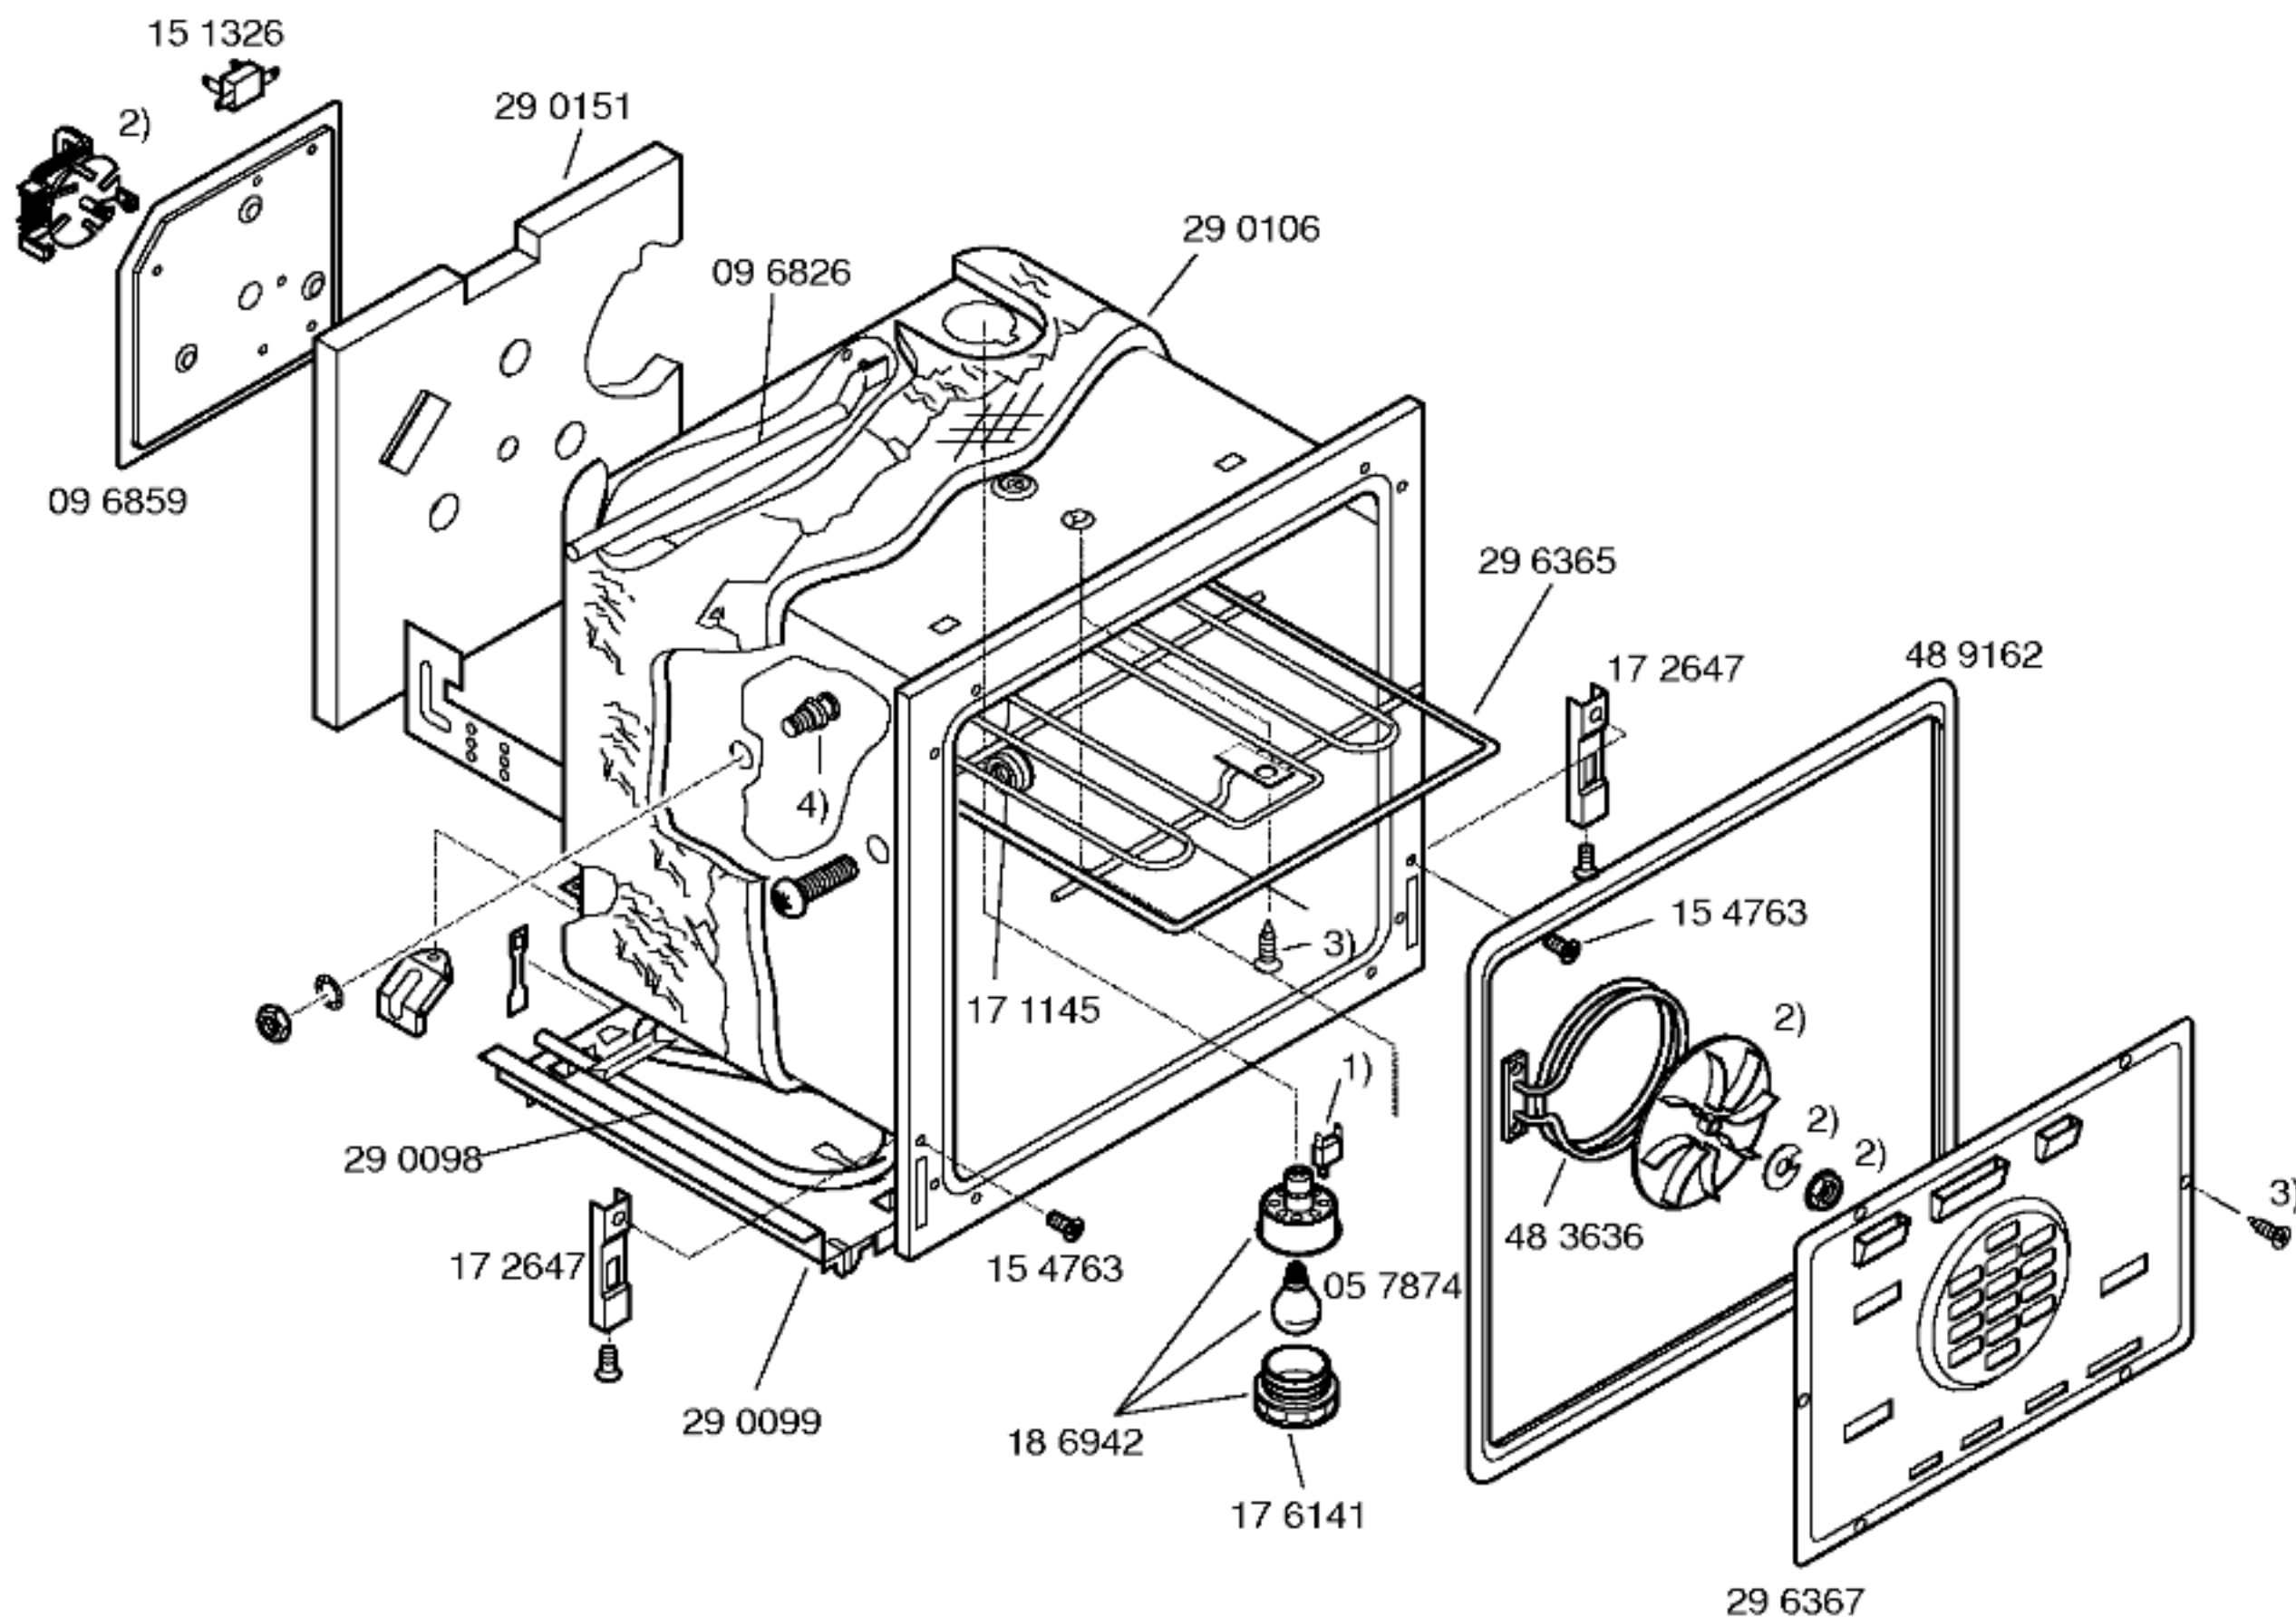

- 1) 15 4836
- 2) 26 1674
kompl.
- 3) 41 8562
- 4) 17 1146