


**BOSCH**

S610 – SMS 61003–0 730 101 655–F1
 S610 – SMS 61004–0 730 101 669–I1

GESCHIRRSPÜLGERÄTE
 Standgeräte

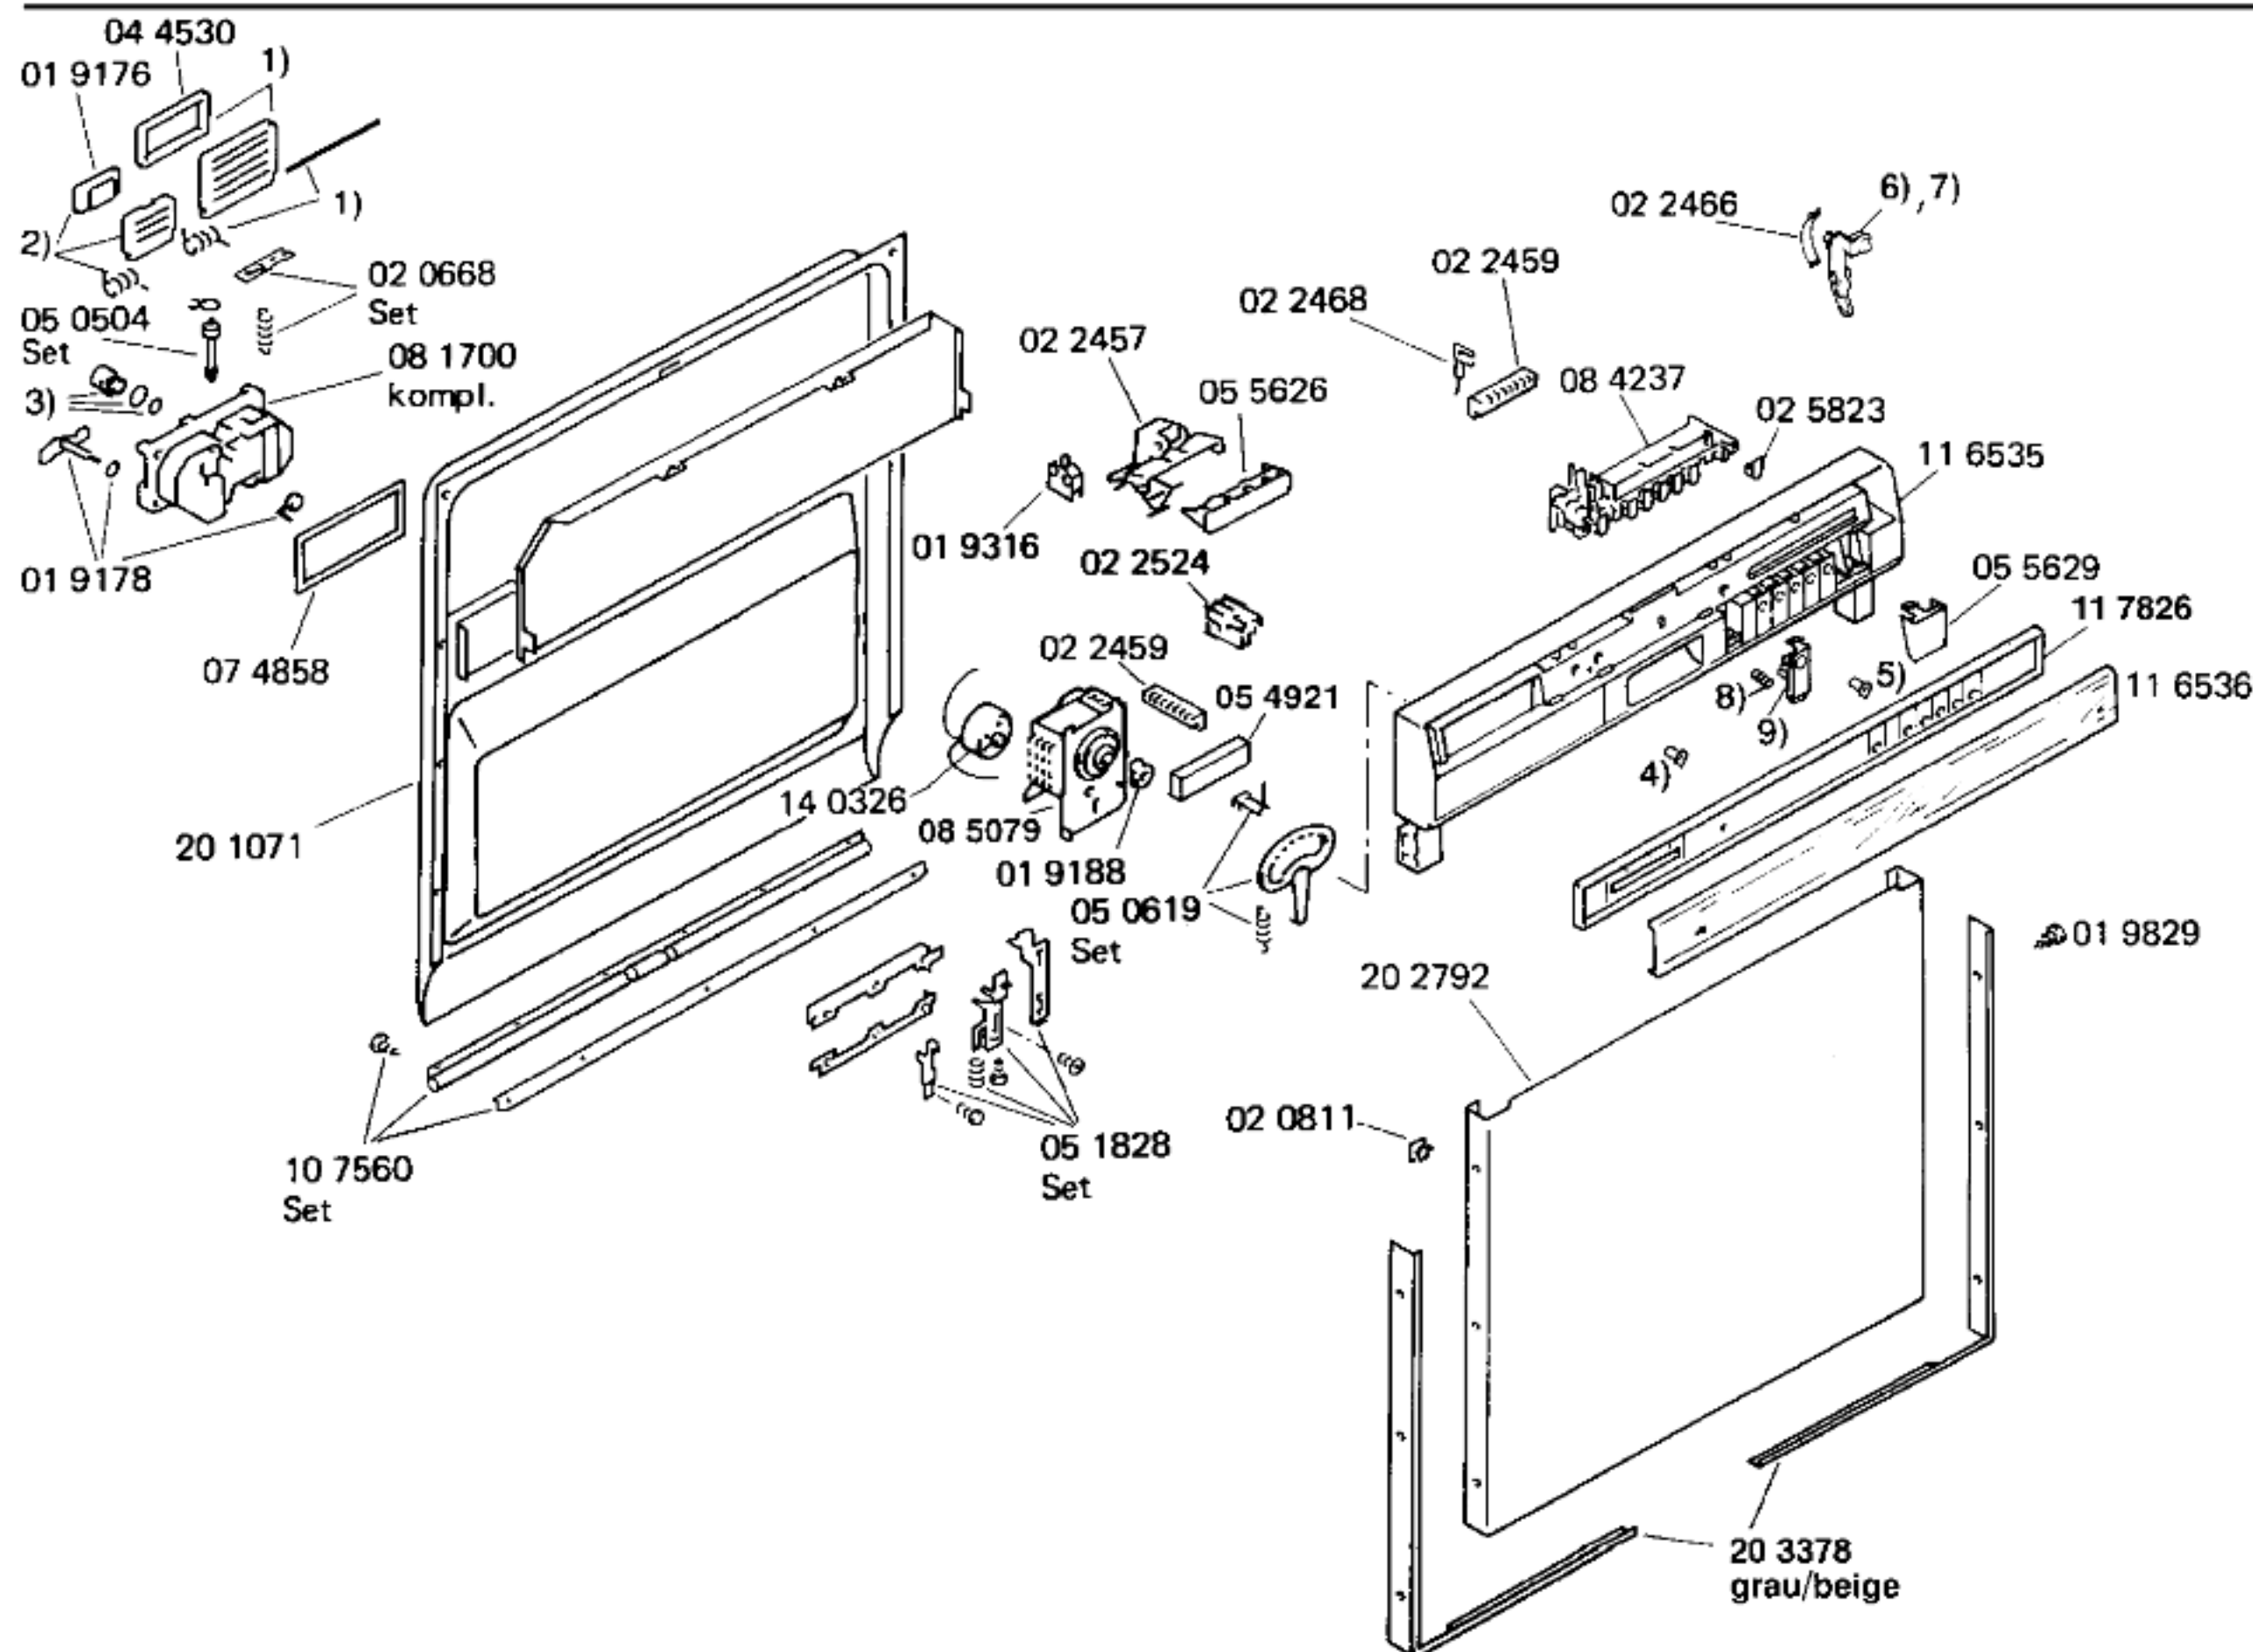

Mat. – Nr. – Konstante
 3740


51 3032
 F1
 Gebrauchsanweisung
 (D,GB,F,I,NL,E)
 51 2277
 Aufstellanleitung

- 1) 04 2085 Set
- 2) 04 2105 Set
- 3) 01 9177 Set
- 4) 02 5122
- 5) 02 5123
- 6) 02 5657 rot
- 7) 02 5658 grün
- 8) 02 5824
- 9) 02 8238

**BOSCH**

S610 – SMS 61003–0 730 101 655–F1
 S610 – SMS 61004–0 730 101 669–I1

GESCHIRRSPÜLGERÄTE
 Standgeräte

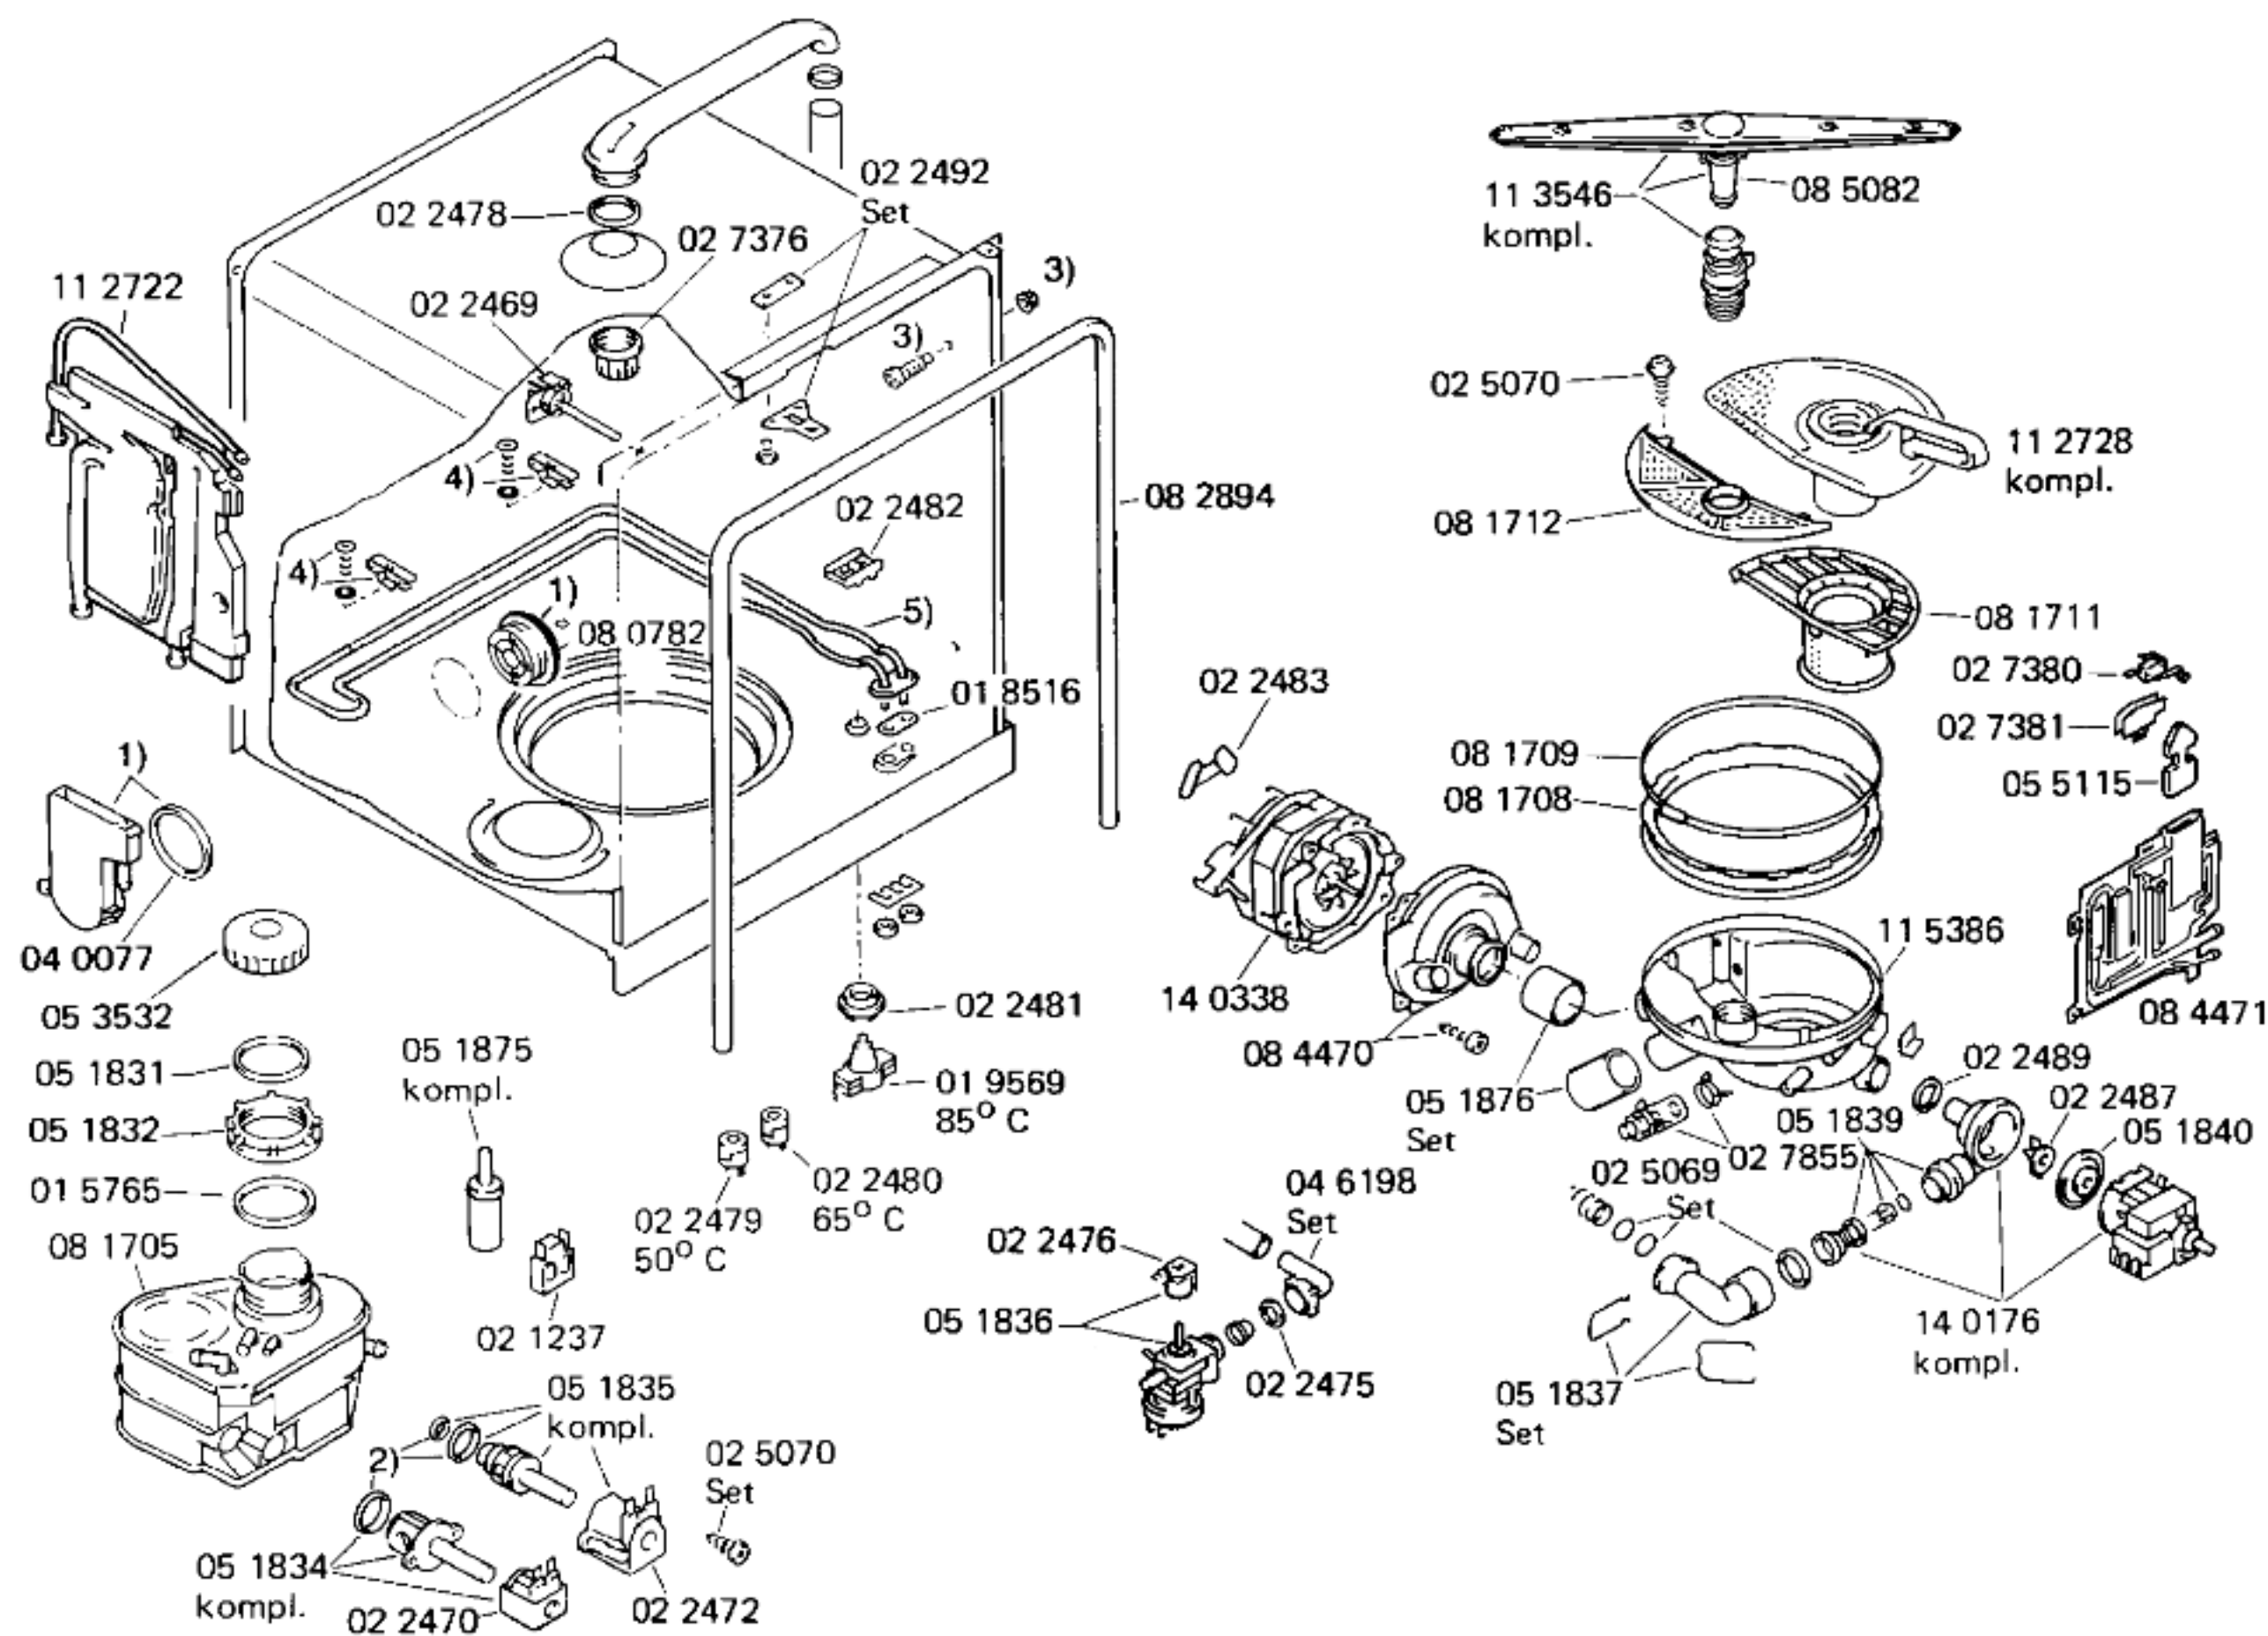

Mat. – Nr. – Konstante
 3740


- 1) 08 0781
Set
- 2) 02 5067
Set
- 3) 01 9204
Set
- 4) 05 1838
- 5) 20 1073
3000 W
EU1
20 2256
2300 W
I1

**BOSCH**

S610 – SMS 61003–0 730 101 655–F1
 S610 – SMS 61004–0 730 101 669–I1

GESCHIRRSPÜLGERÄTE
 Standgeräte


Mat. – Nr. – Konstante
 3740

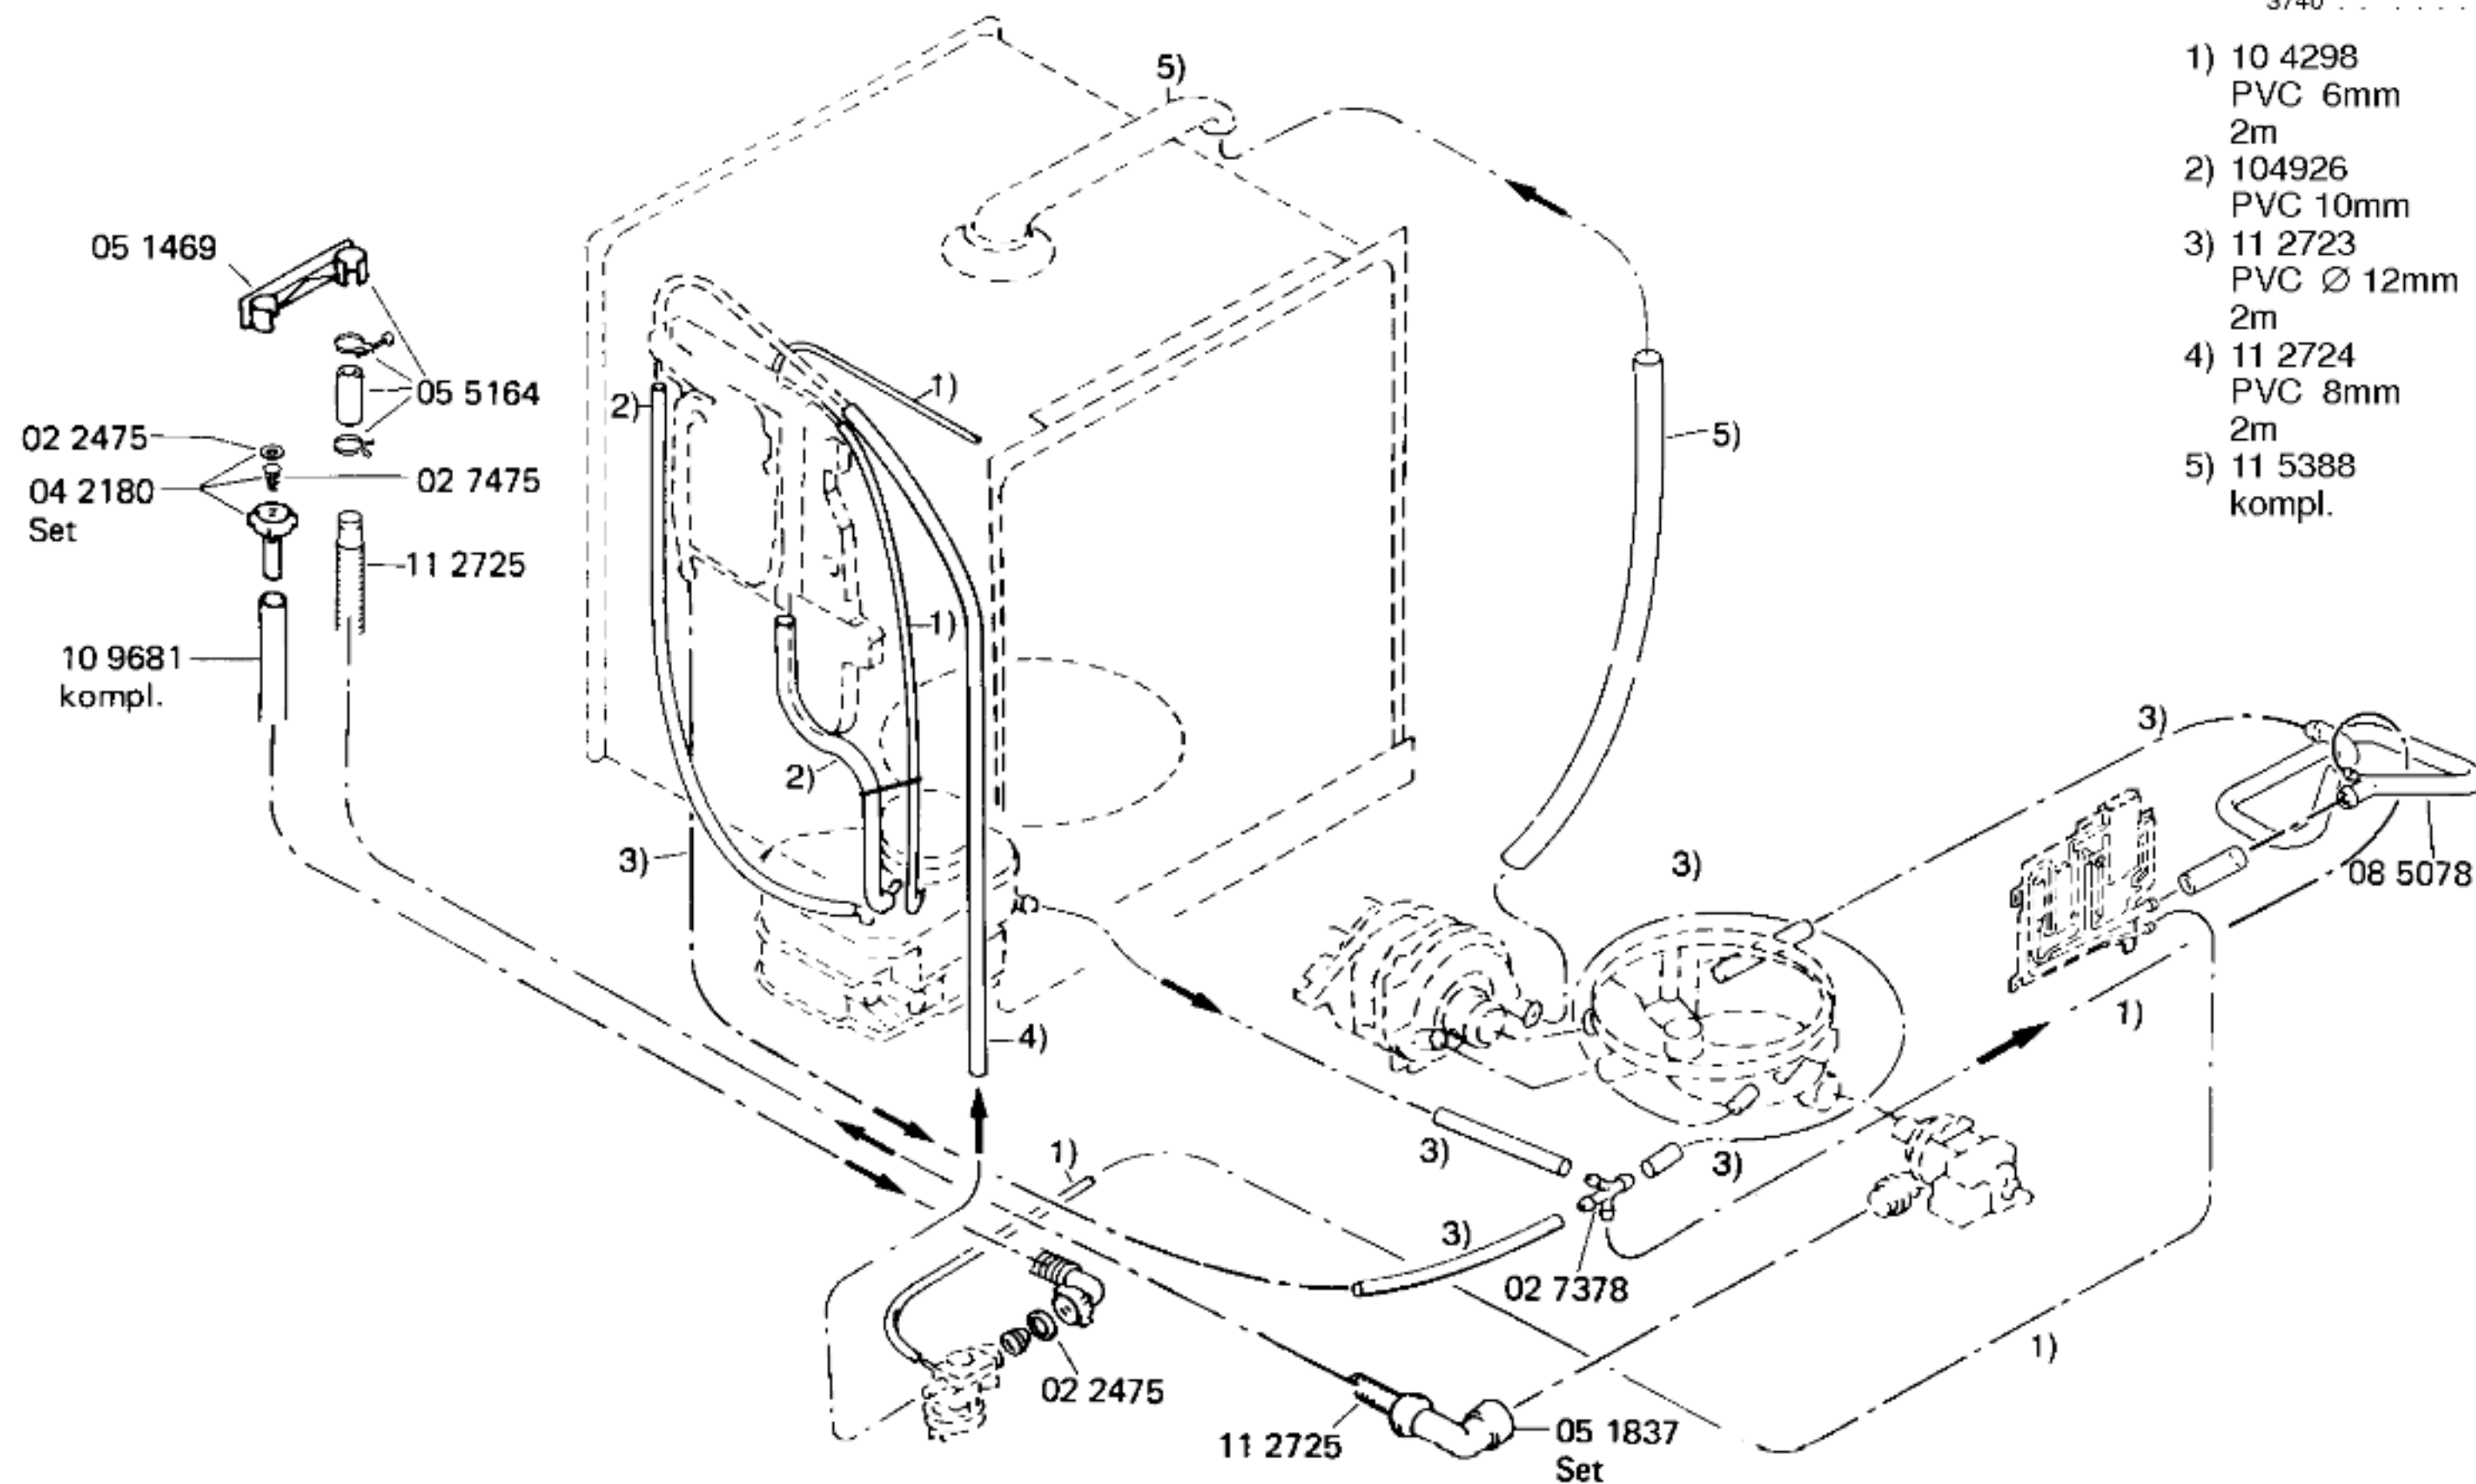

**BOSCH**

S610 – SMS 61003–0 730 101 655–F1
S610 – SMS 61004–0 730 101 669–I1

GESCHIRRSPÜLGERÄTE
Standgeräte

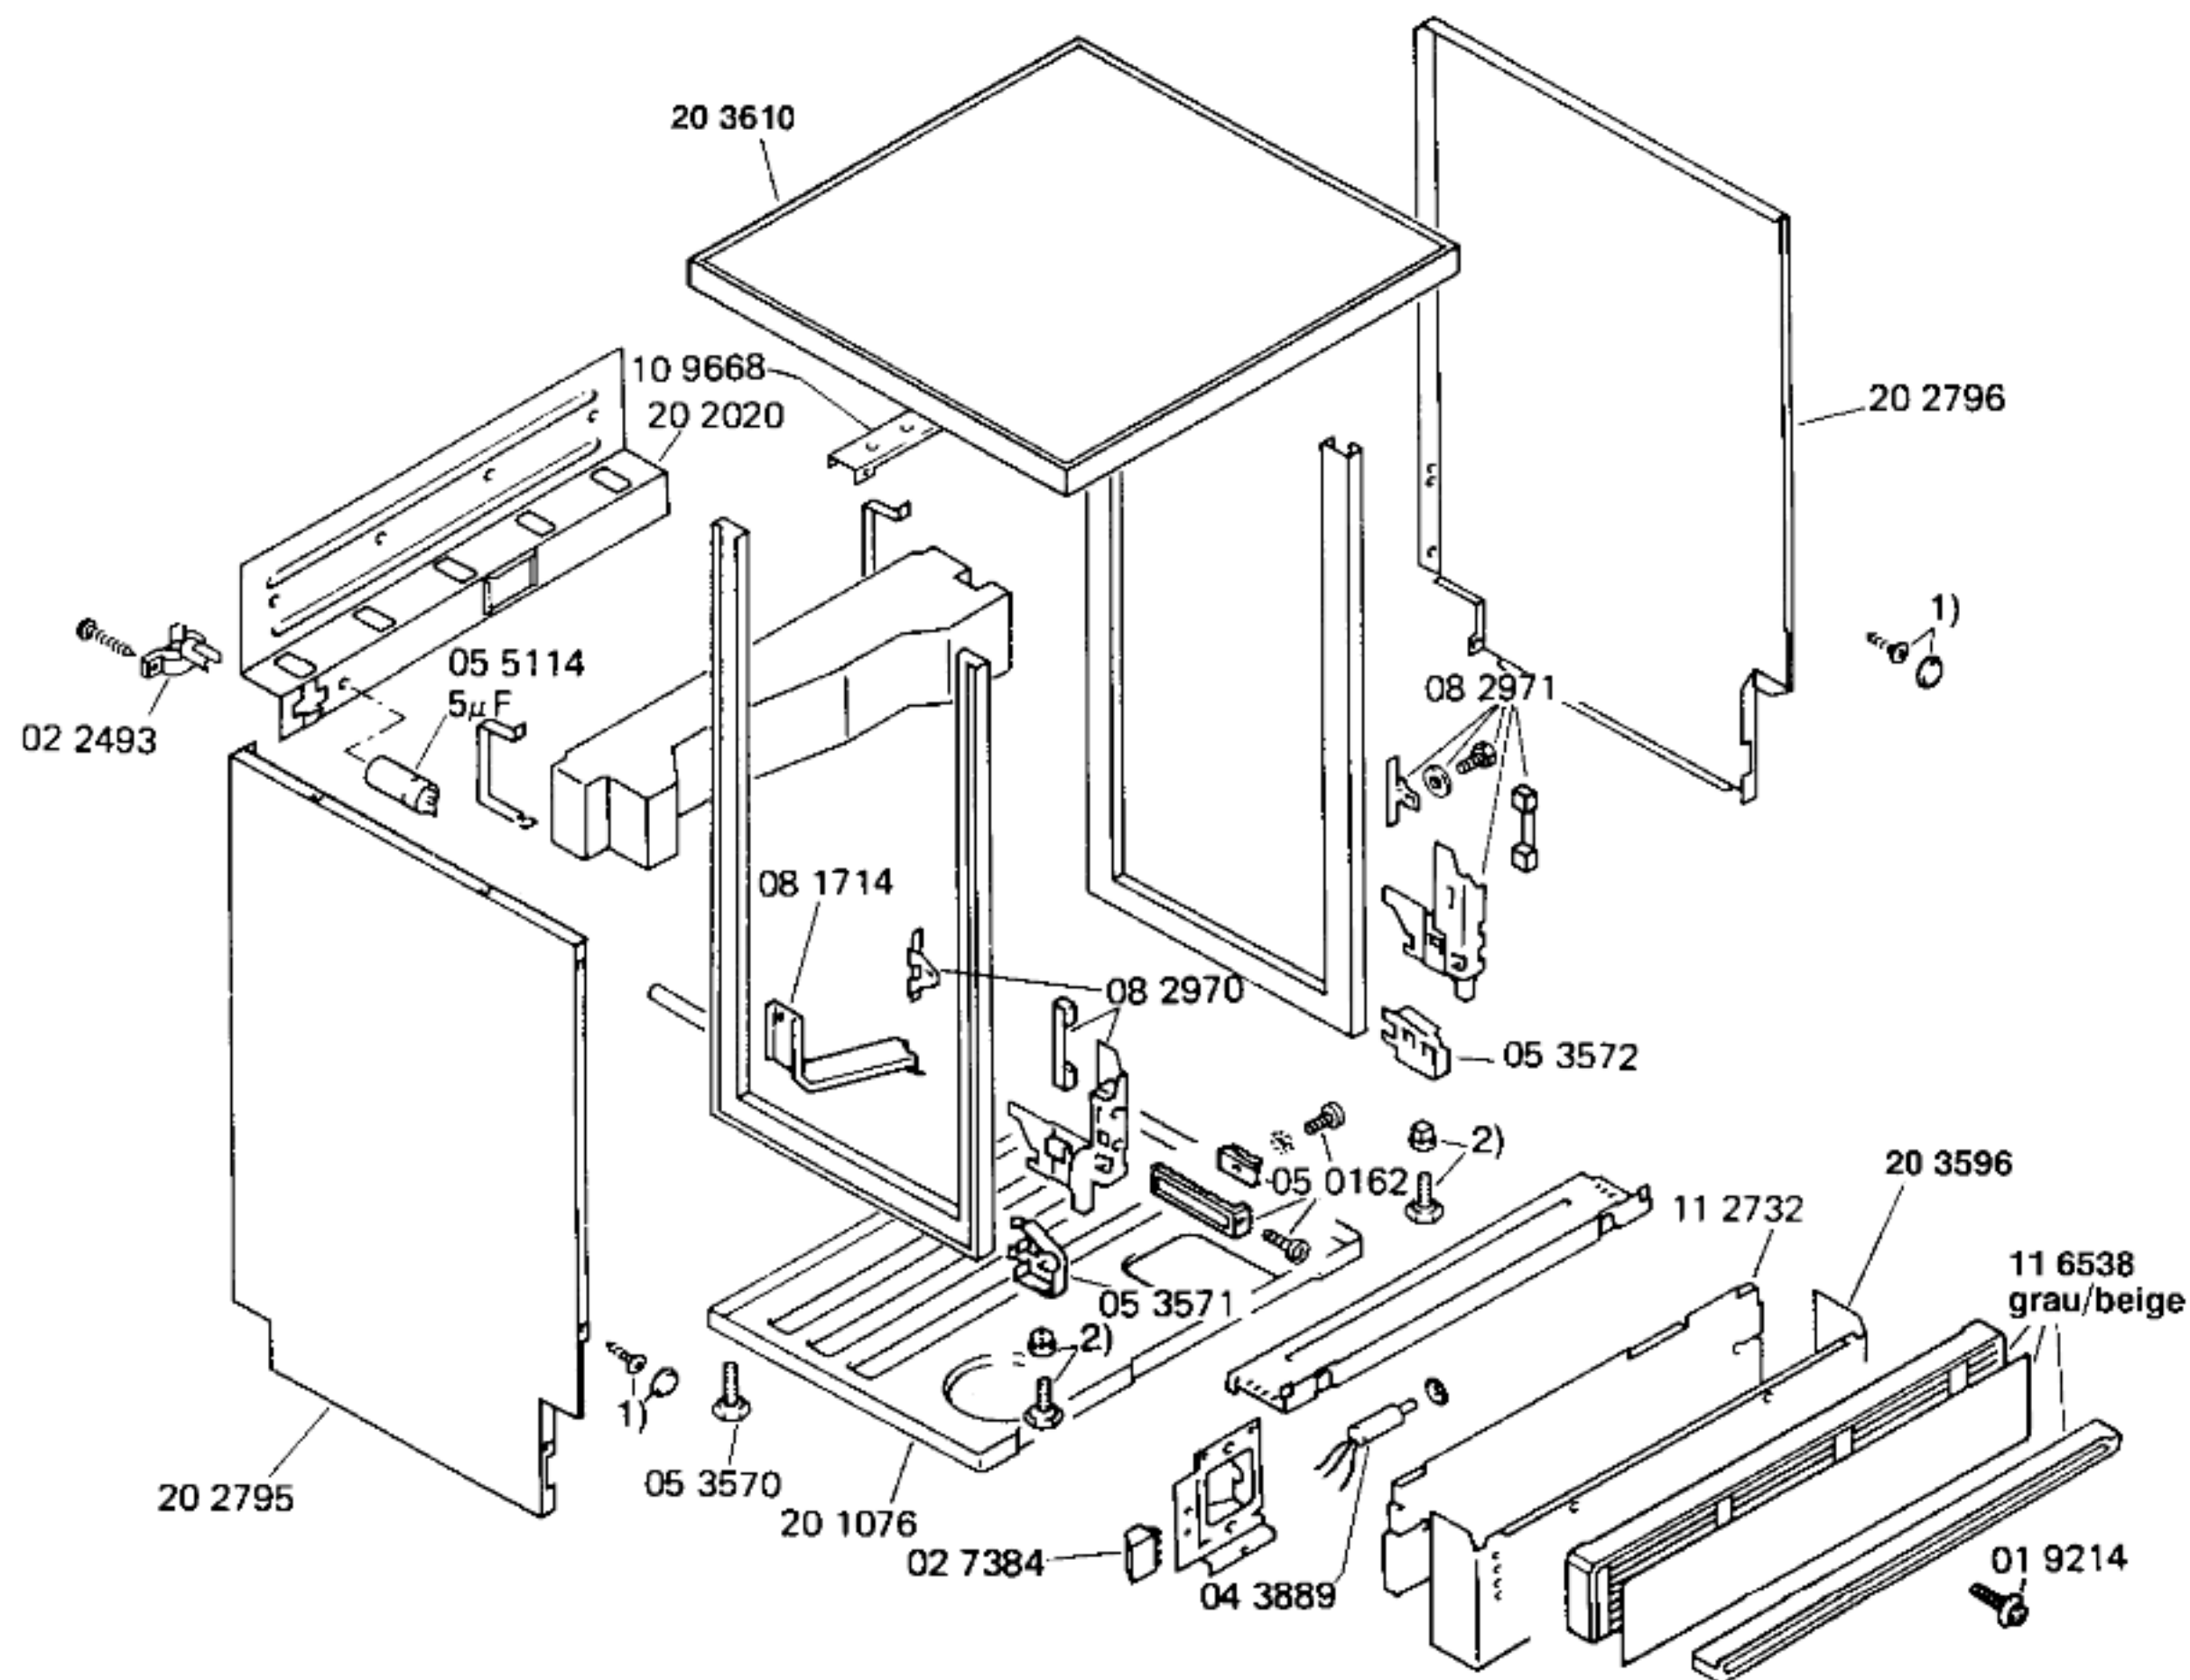


Mat. – Nr. – Konstante
3740

1) 01 3861
2) 02 7386

**BOSCH**

S610 – SMS 61003–0 730 101 655–F1
 S610 – SMS 61004–0 730 101 669–I1

GESCHIRRSPÜLGERÄTE
 Standgeräte

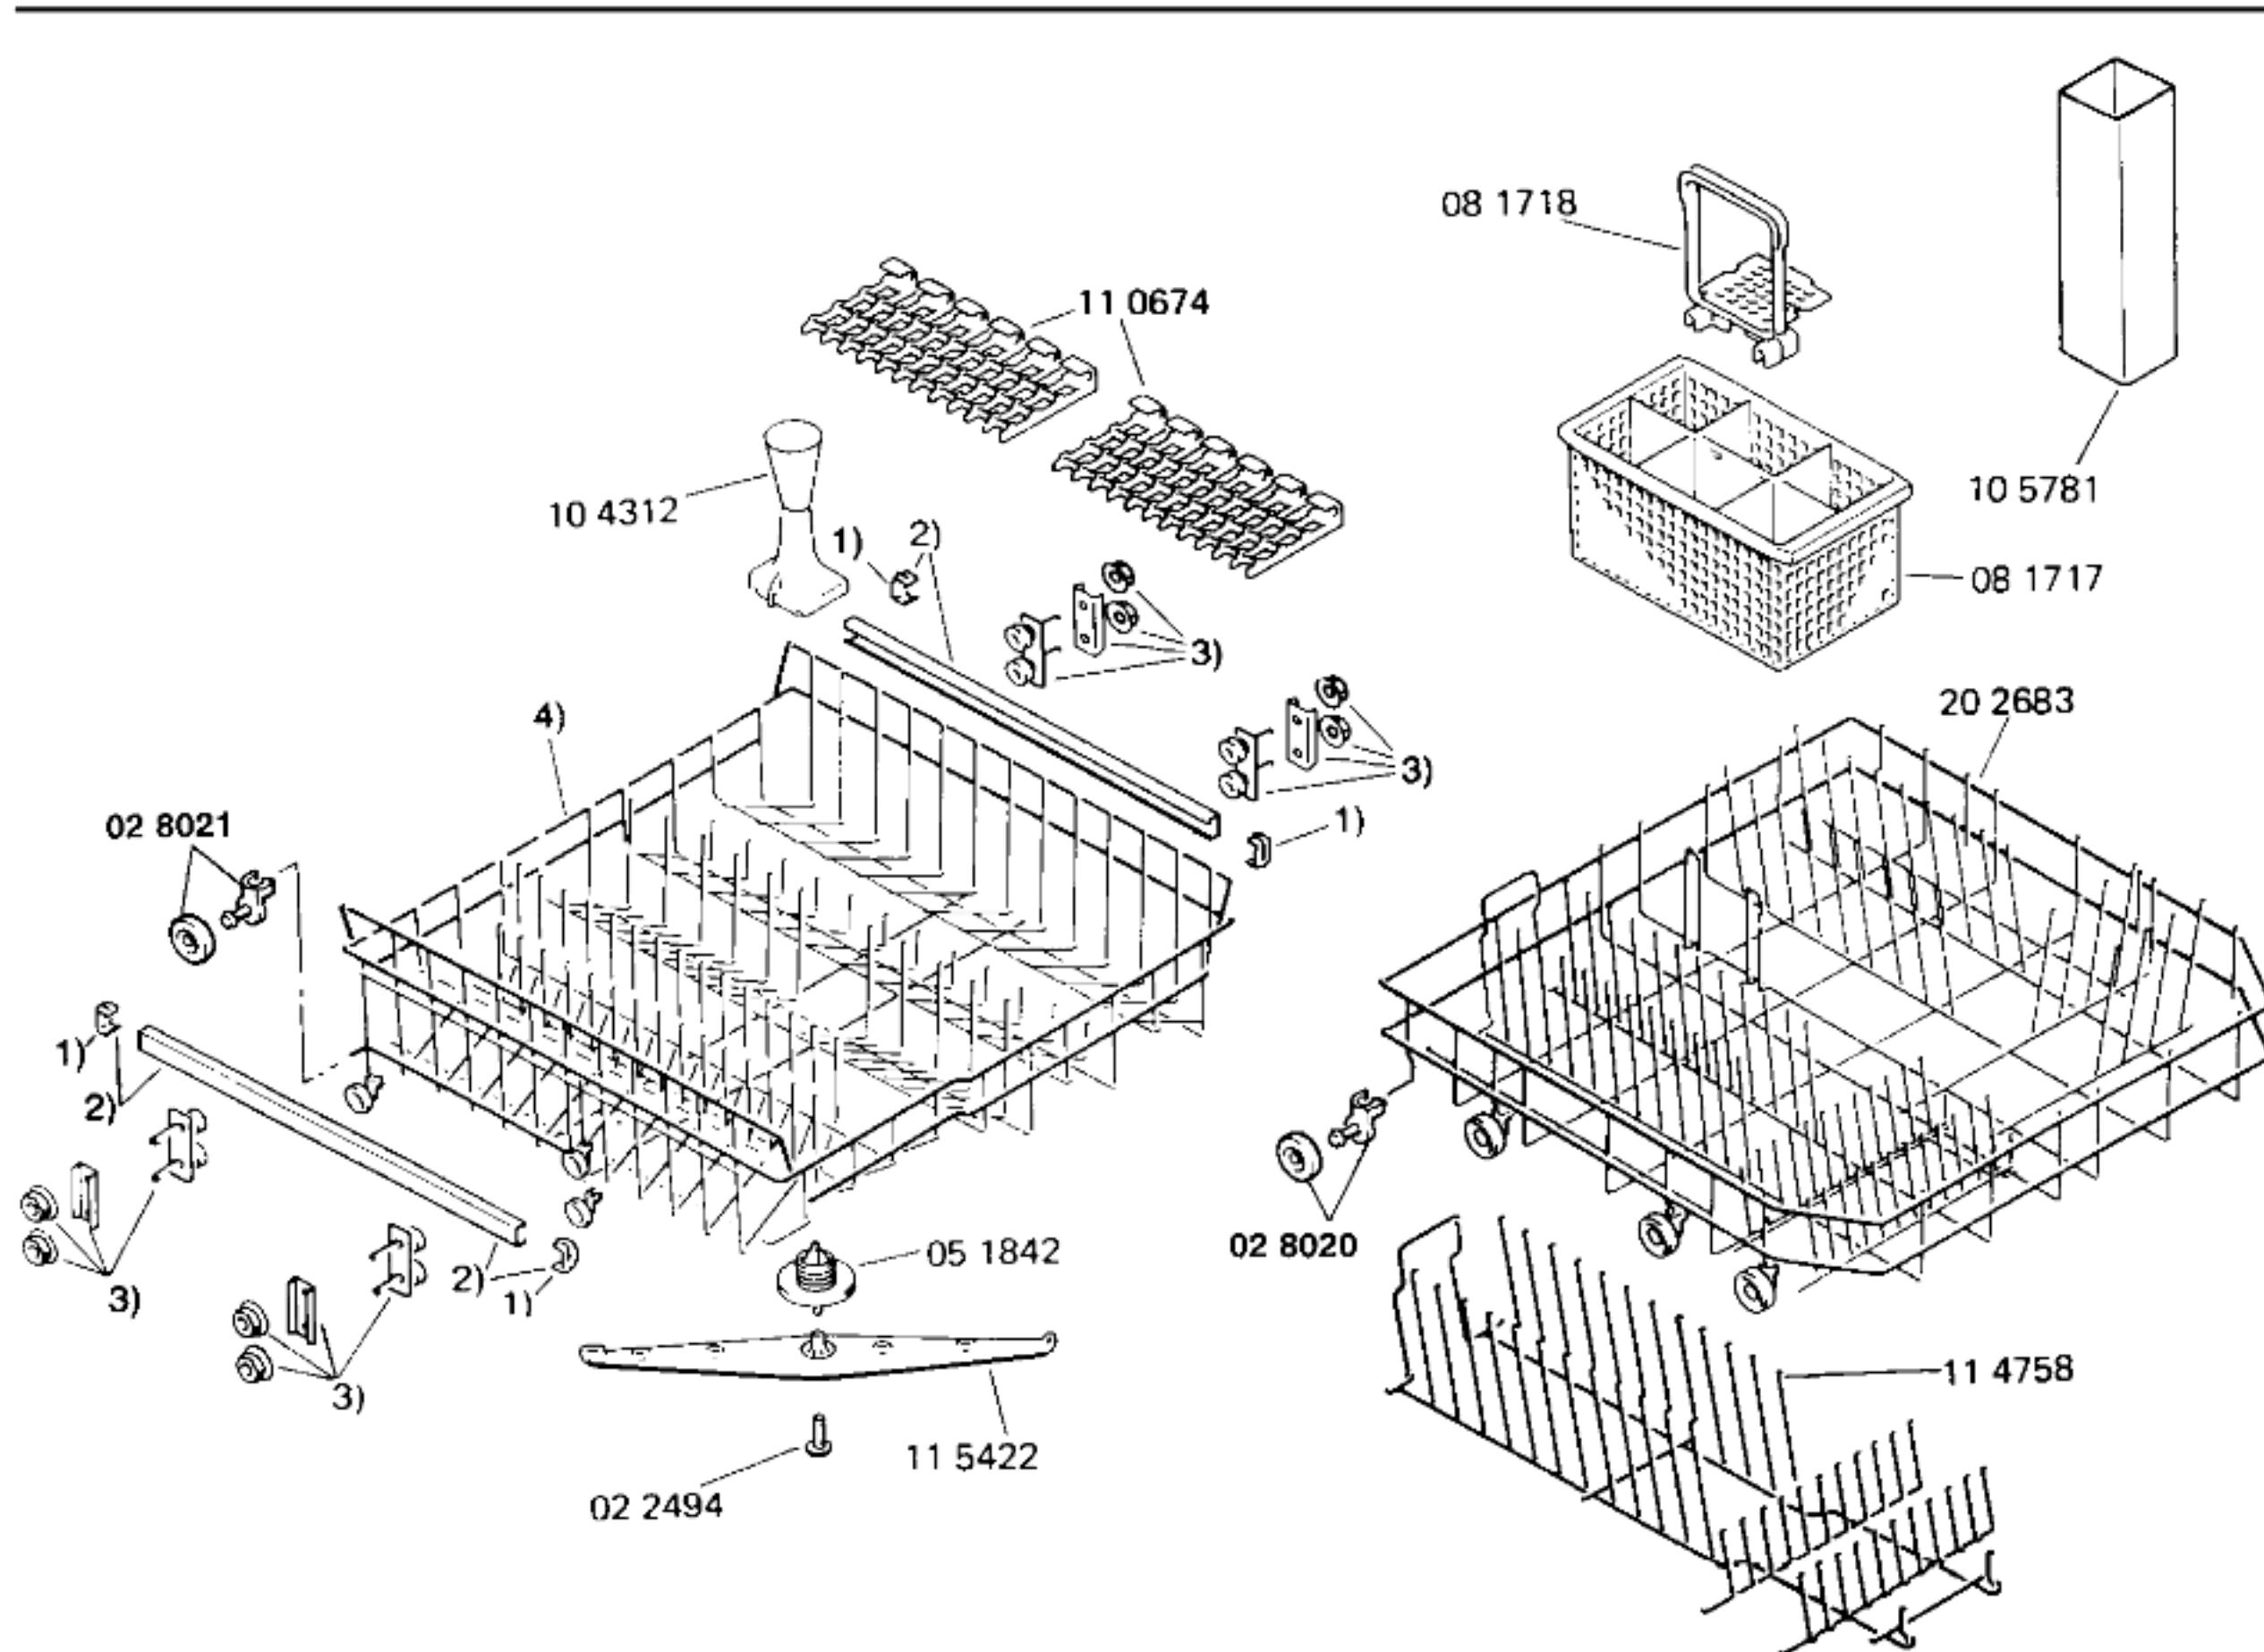

Mat. – Nr. – Konstante
 3740

- 1) 01 9202
- 2) 11 06678
- Set
- 3) 05 1287
- Set
- 4) 20 1970
- EU1
- 20 2631
- I1