


**BOSCH**

GIL 102 – 0 705 114 505–D1
 – 0 705 114 506–CH1
 – 0 705 114 510–F1

GIL 102 – 0 705 114 515–E1

GEFRIERGERÄTE
 Gefrierschränke, Einbau

Ident – Nummern – Konstante
 3740

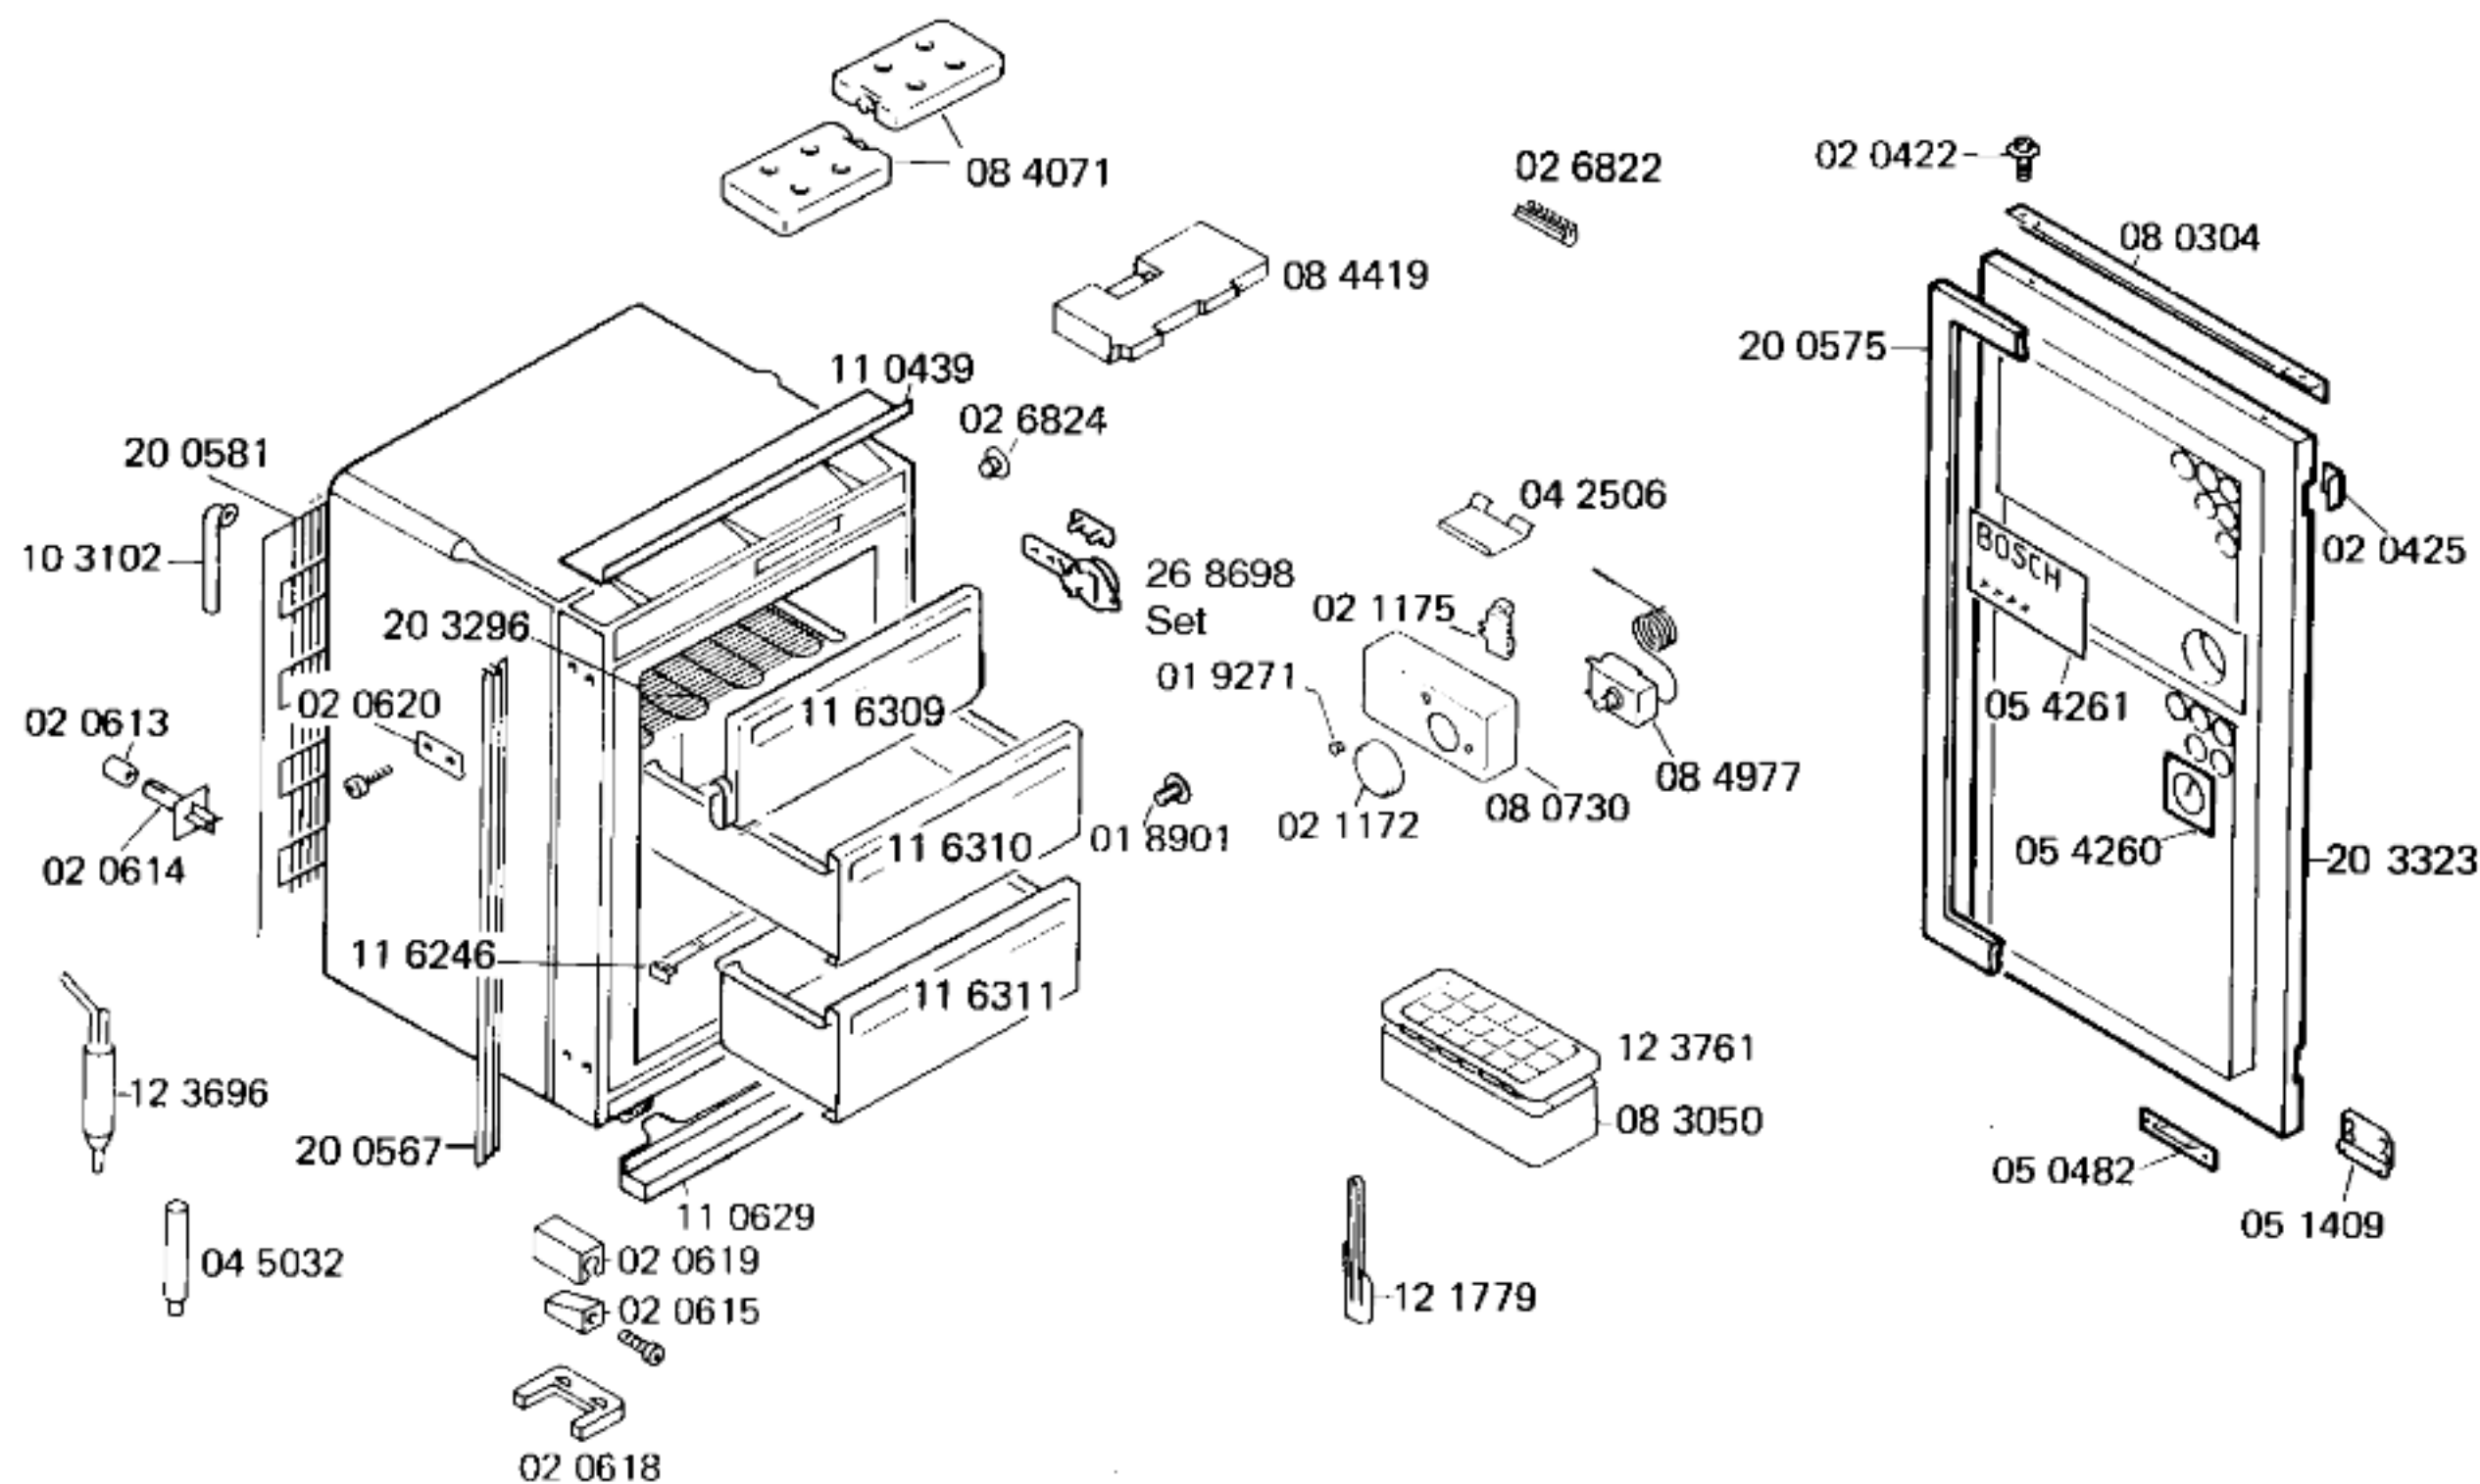

51 2674
 D1,CH1,F1,SF1,E1
 Gebrauchsanweisung
 (D,GB,F,I,NL,S,E,
 SF,N)

51 2643
 D1,CH1,F1,SF1,E1
 Aufstellanweisung
 (D,GB,F,I,NL,S,E,SF,
 N,DK)


**BOSCH**

GIL 102 – 0 705 114 505–D1
 – 0 705 114 506–CH1
 – 0 705 114 510–F1

GIL 102 – 0 705 114 515–E1

GEFRIERGERÄTE
 Gefrierschränke, Einbau

Ident – Nummern – Konstante
 3740

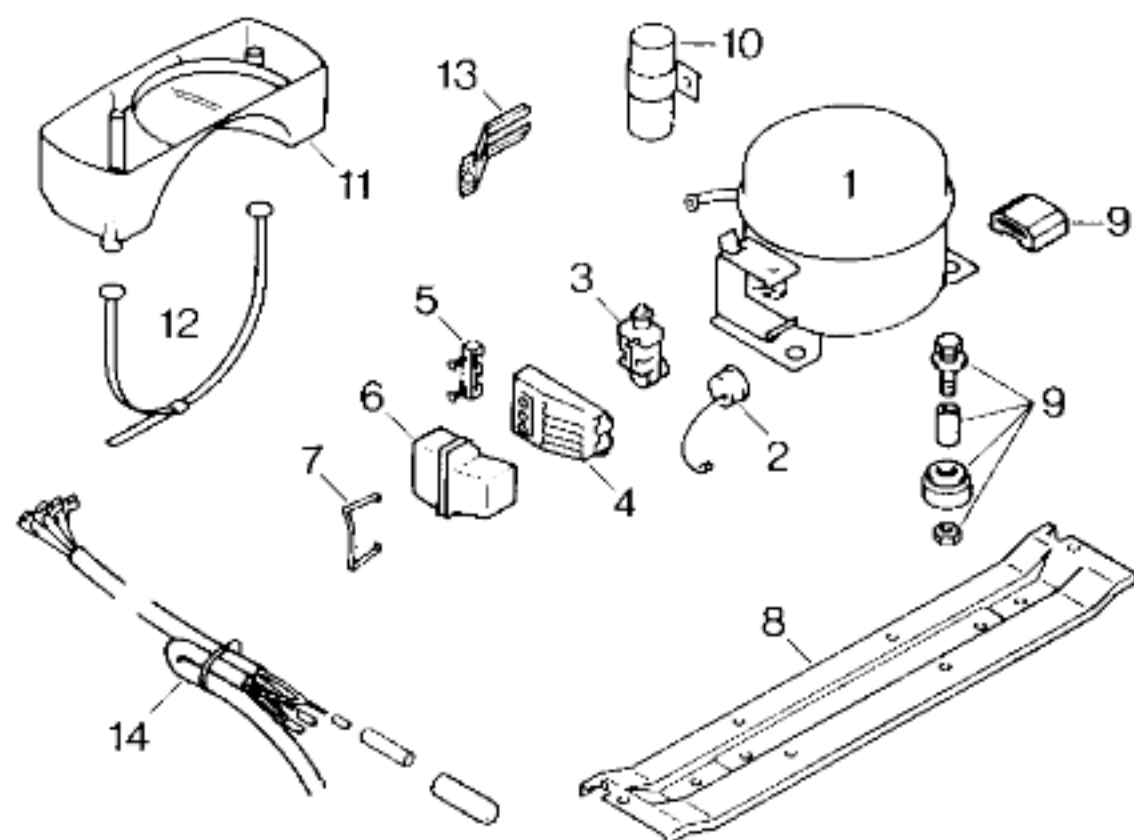

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss	Danfoss		
Typ/Type		TL 4 A	TL 5 A		
Förderleistung/Delivery/Débit		V 702	V 920		
Anlaufstrom/Starting current/Cour. de démarrage	l/h	7,8	9,0		
Widerstand/Resistance/Résistance	Ha/main/prin.	23,8	15,7		
	Hi/aux	19,7	18,8		
Temp.-Regler/Thermostat		M & J			
Typ/Type		TF 57 SF 2			
Reglerstellung/Position		kalt warm			
Schaltwerte/Switching values/ Valeurs de commutation	„ein“ °C	- 24 - 16			
	„aus“	- 34 - 24			
(„abtauen“ od.) „alarm“		- 19 - 12			
Füllmenge/Fill.quantity/Charge	R12 g	150			
Anschlußwert/Conn.load/Puiss. connectée	W	110			
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance	Ω				
	W				
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance	Ω				
	Spannung/Voltage/Tension V				

Pos.	D1,CH1,F1	E1		
	Danfoss	Danfoss		
1	13 1064	14 0065		
2				
3	02 0108			
4				
5				
6	05 1413			
7				
8	11 0437			
9	05 0166			
10				
11				
12				
13				
14				