


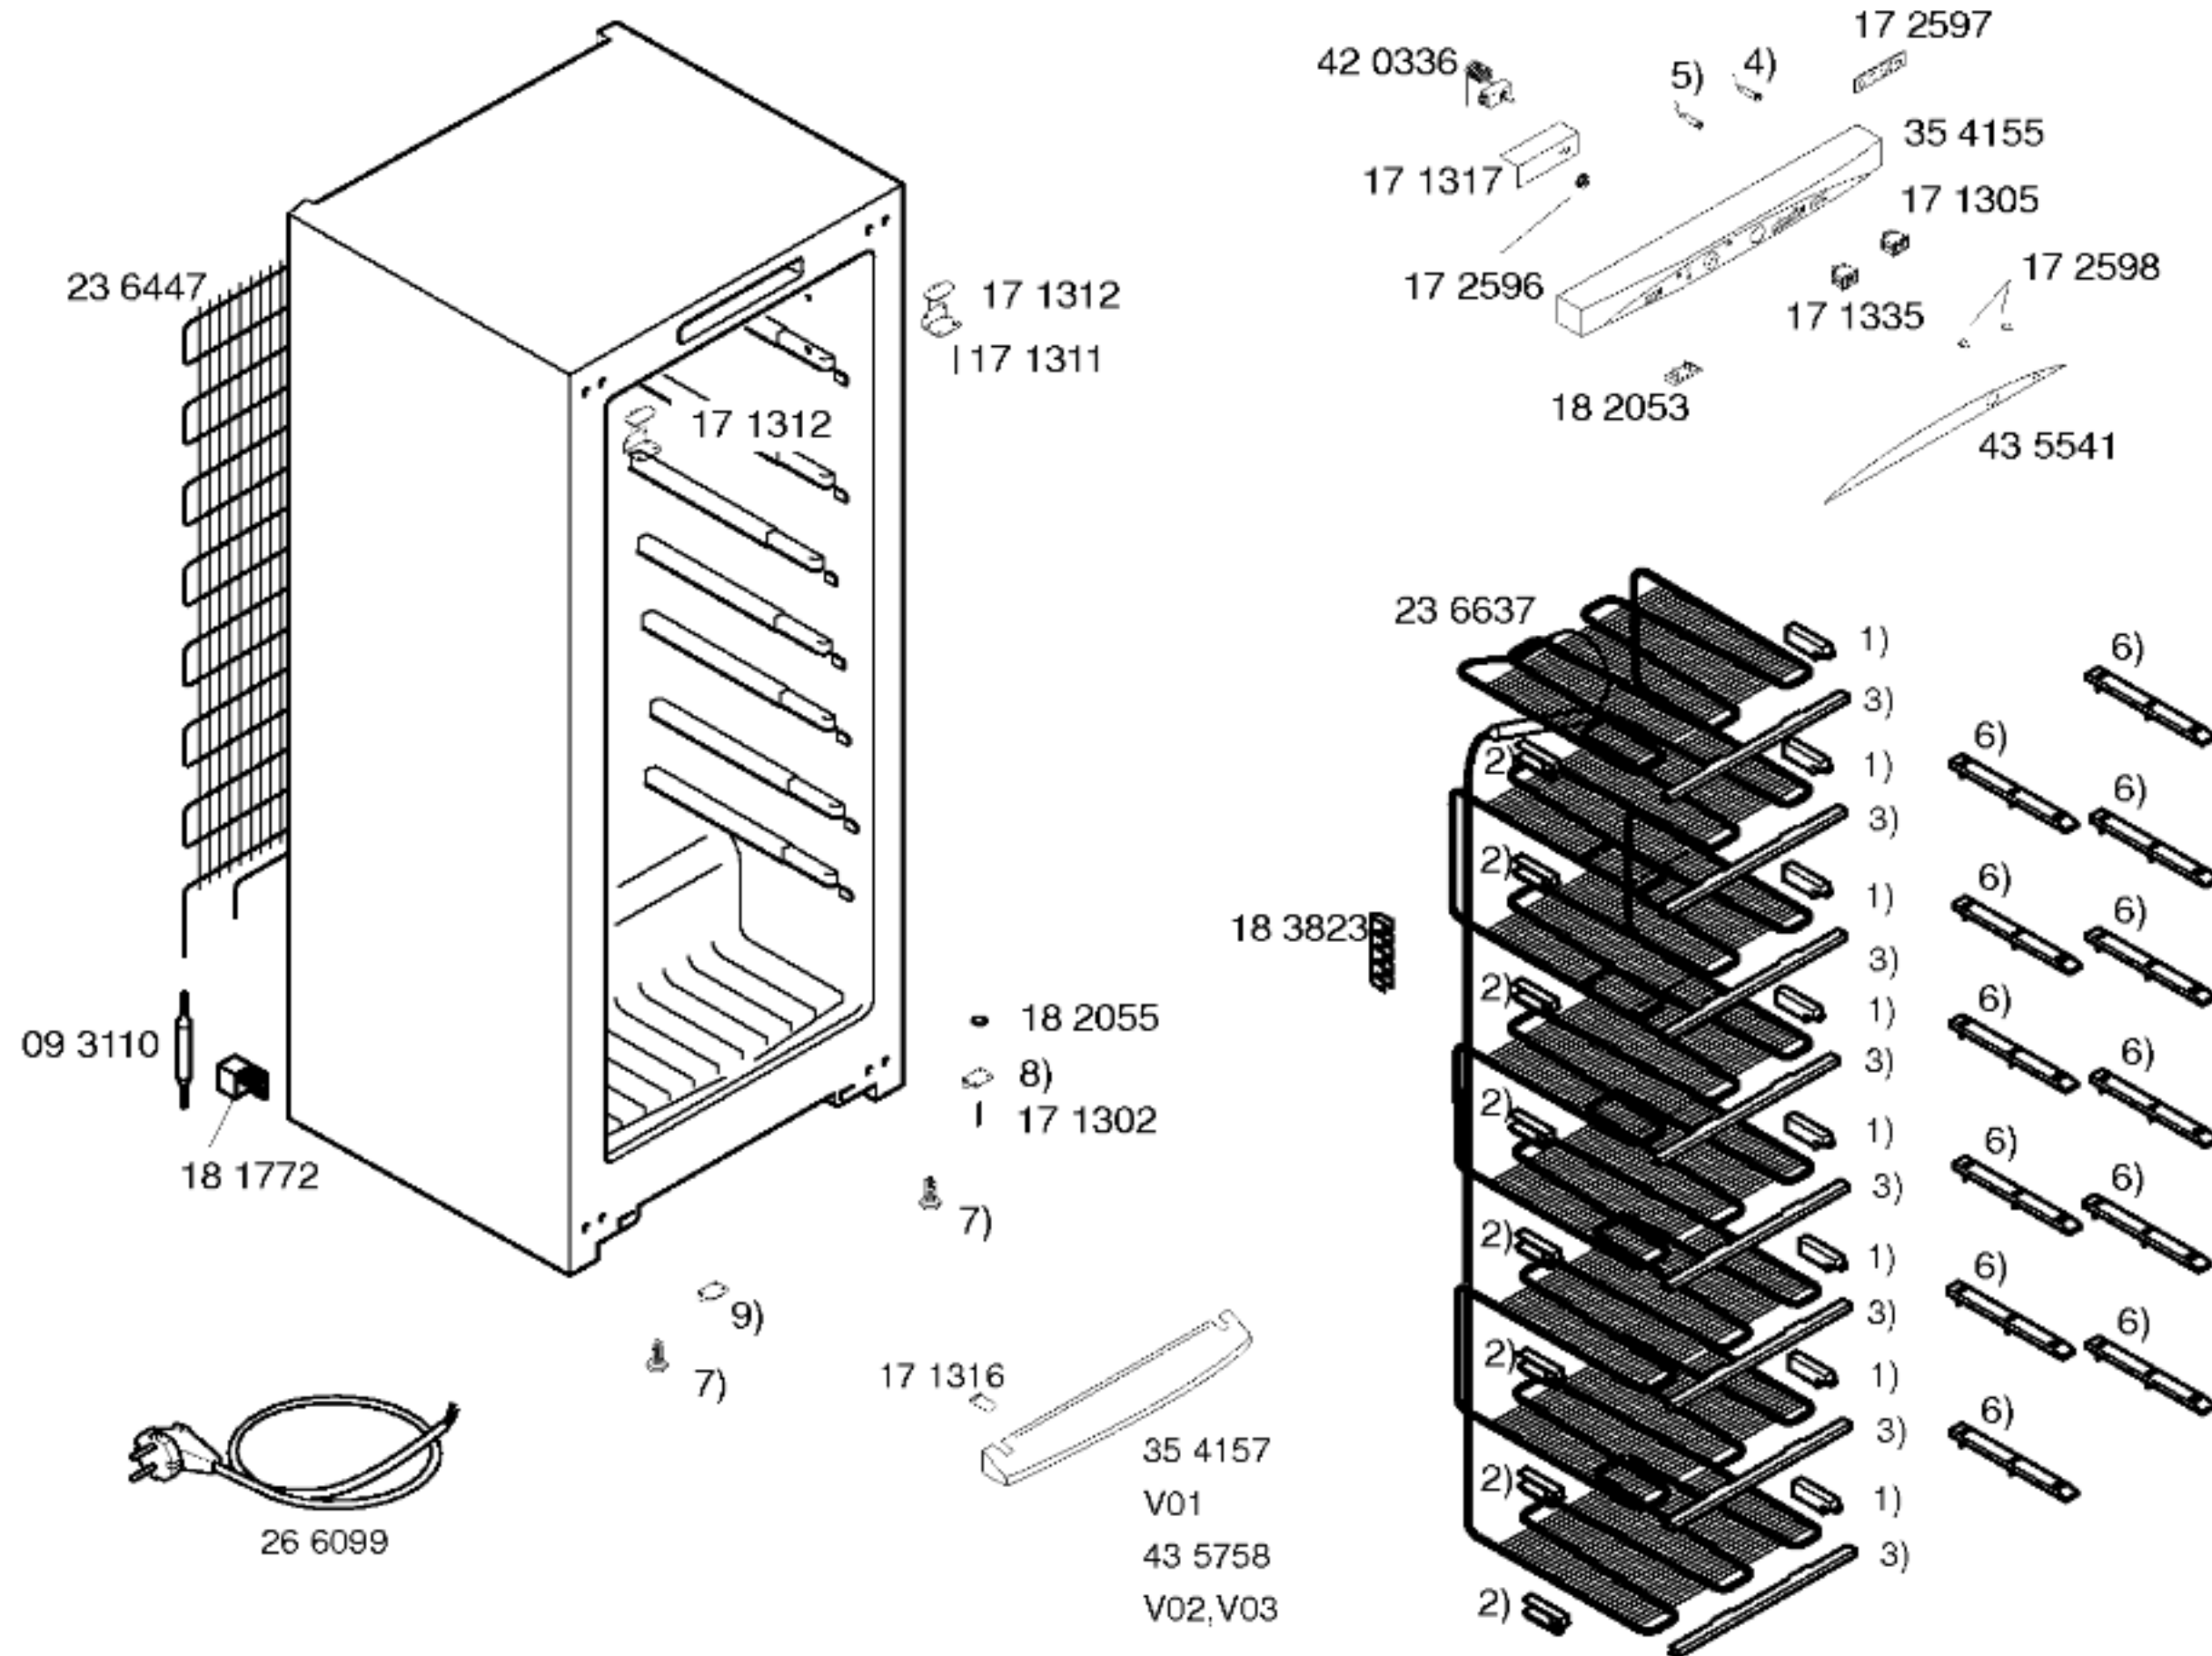

Gebrauchsanweisung
58 7348
(DE,EN,ES,PT)

Side by Side
Beistellsatz

- 1) 18 3821
- 2) 18 3822
- 3) 36 2472
- 4) 17 2595
- 5) 18 3820

- 6) 36 7363
- 7) 18 9089

V01

42 1516

V02,V03

- 8) 17 1303

V01

42 1601



V02,V03

- 9) 17 1303

V01

42 1602

V02,V03

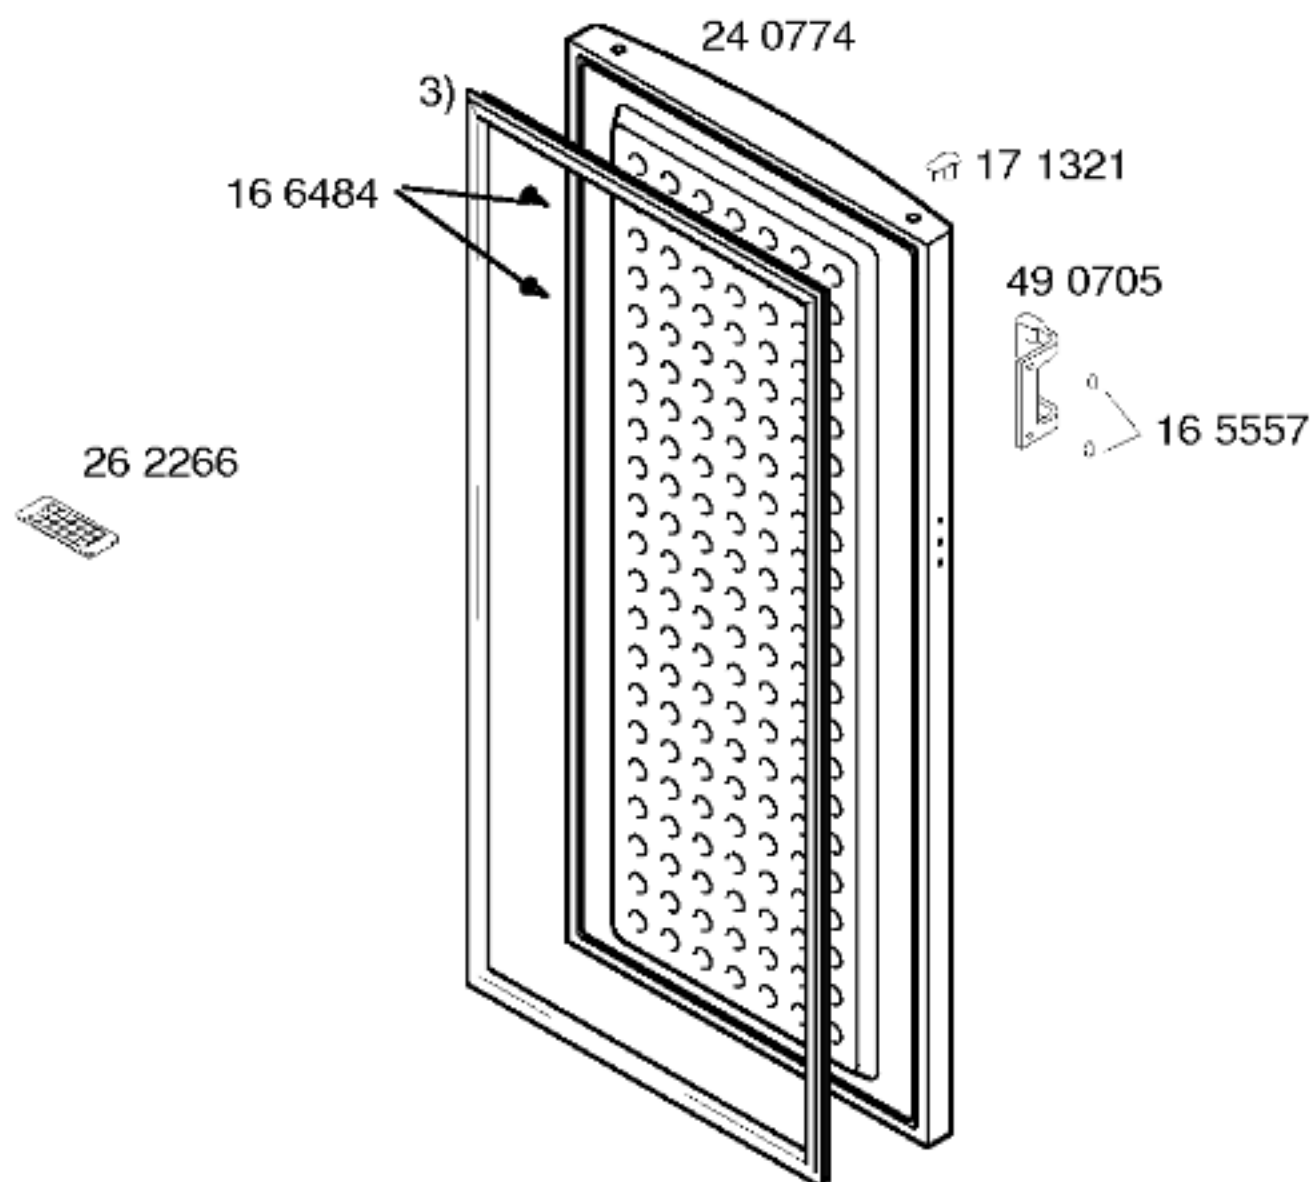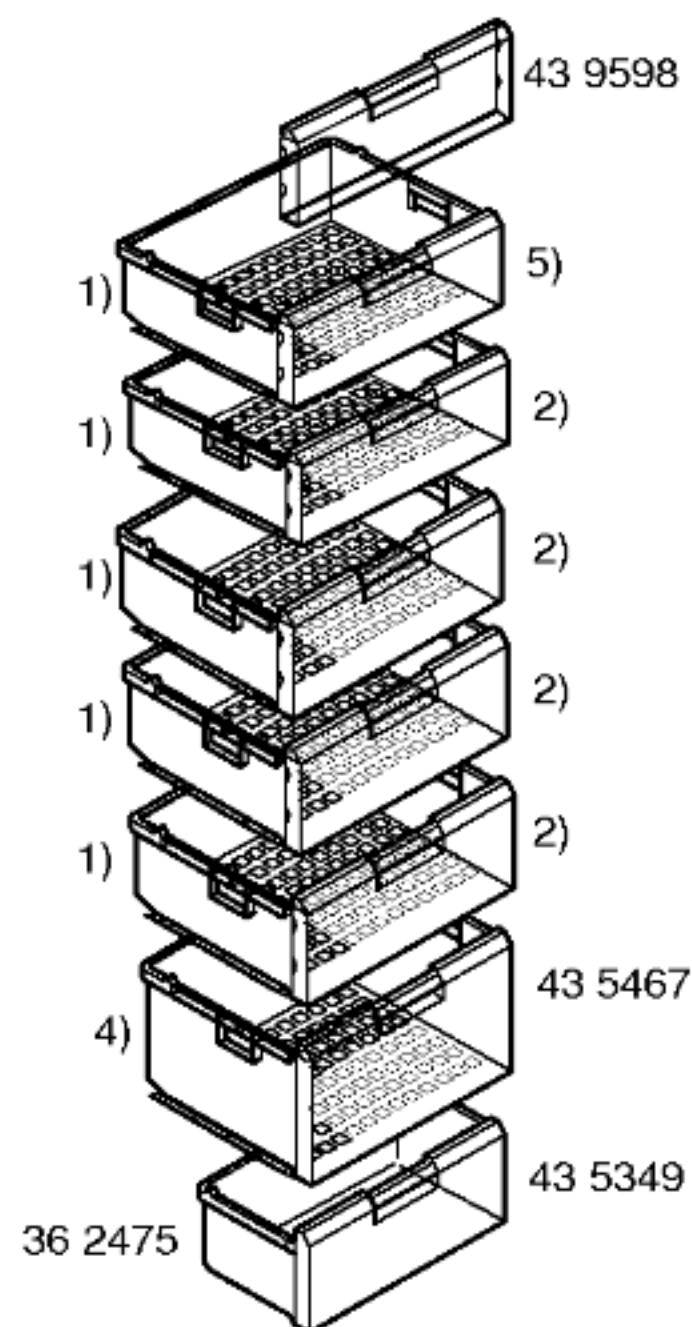

1) 43 1043

2) 43 5350

3) 23 8414


V01,V02

24 1323

V03

4) 43 1044

5) 43 5454

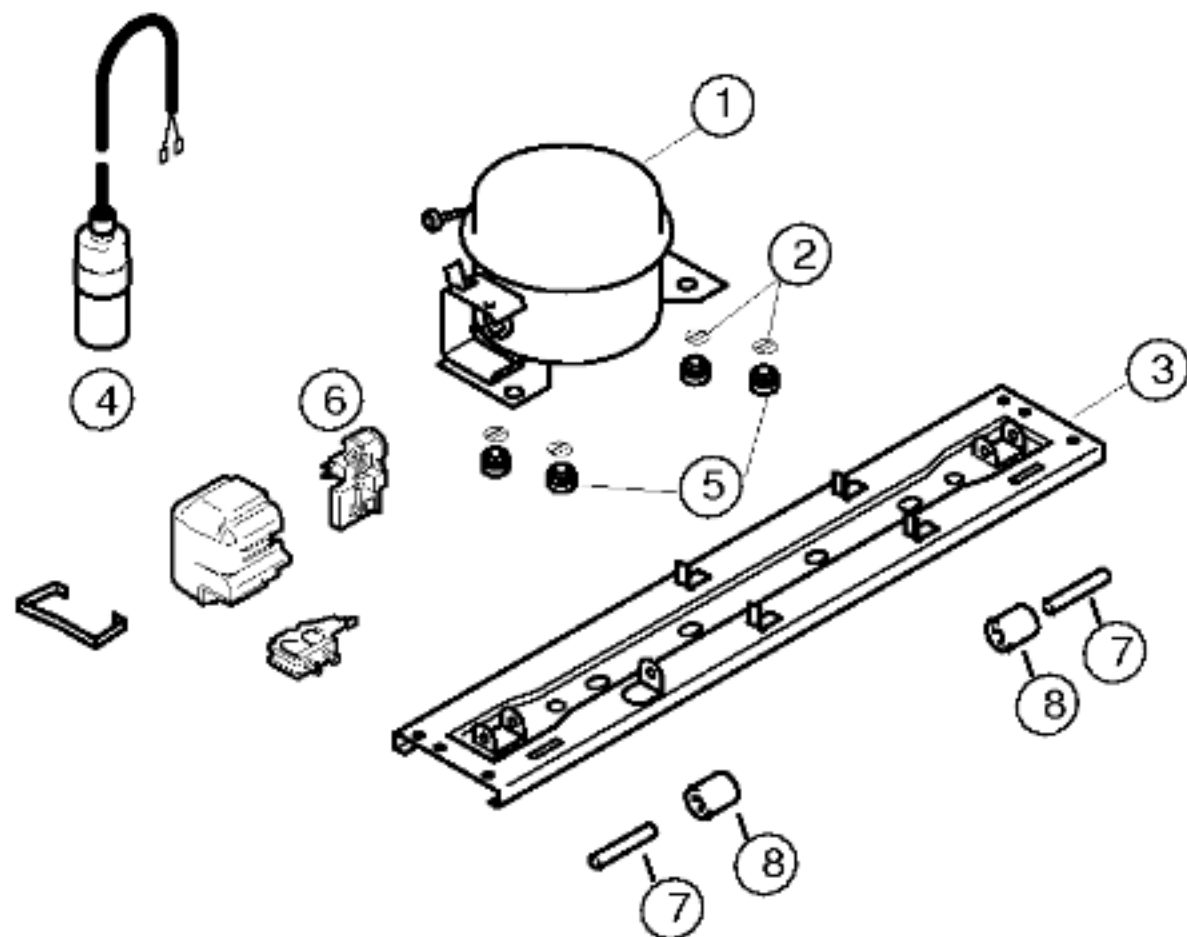

Pos.	Matsushita		
	DC125E12		
1	14 2012		
2	17 1519		
3	35 4158		
4	17 4093		
5	16 3427		
6	18 3872		
7	18 1014		
8	17 1318		
9			
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
Verdichter/Compressor/Kompresör	Matsushita		
Typ/Type/Tip	DC125E12		
Förderleistung/Delivery/Verim/h	2074		
Anlaufstrom/Starting current/Giris akimi	A		
Widerstand/Resistance/Rezistans Ha/	Ω		
Hi/aux.	18,0		
Temp.Reyler/Thermostat/Termostat			
Typ/Type/Tip			
Reglerstellung/Position/Termostat pozisyonu			
Schaltwerte/Actma kapama degerleri	..ein/acma °C		
Valeurs de commutation/Termostat degeri	..aus"/kapama		
(..abtaven' od)	..alarm'		
Füllmenge/Fill. quantily/ Dolum miktarı	R600	g	*
Anschlusswert/Comm. load/Giris gucu	W		
Heizung/Heater/Rezistans	Ω		
Widerstand/Resistance/Direnc	W		
Leistung/Power/Guc			
Ventilador/Blower/Vantilatör	Ω		
Widerstand/Resistance/Rezistans			
Magnetventil/Magnetic valve/Manyetik valf	Ω		
Widerstand/Resistance/Rezistans	V		
Spannung/Voltage/Gerilim			
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakiniz