


**BOSCH**

V336-0722044418-D1
V336-0722044428-Exp.1

WASCHGERÄTE
Waschvollautomaten

Ident - Nummern - Konstante
3740

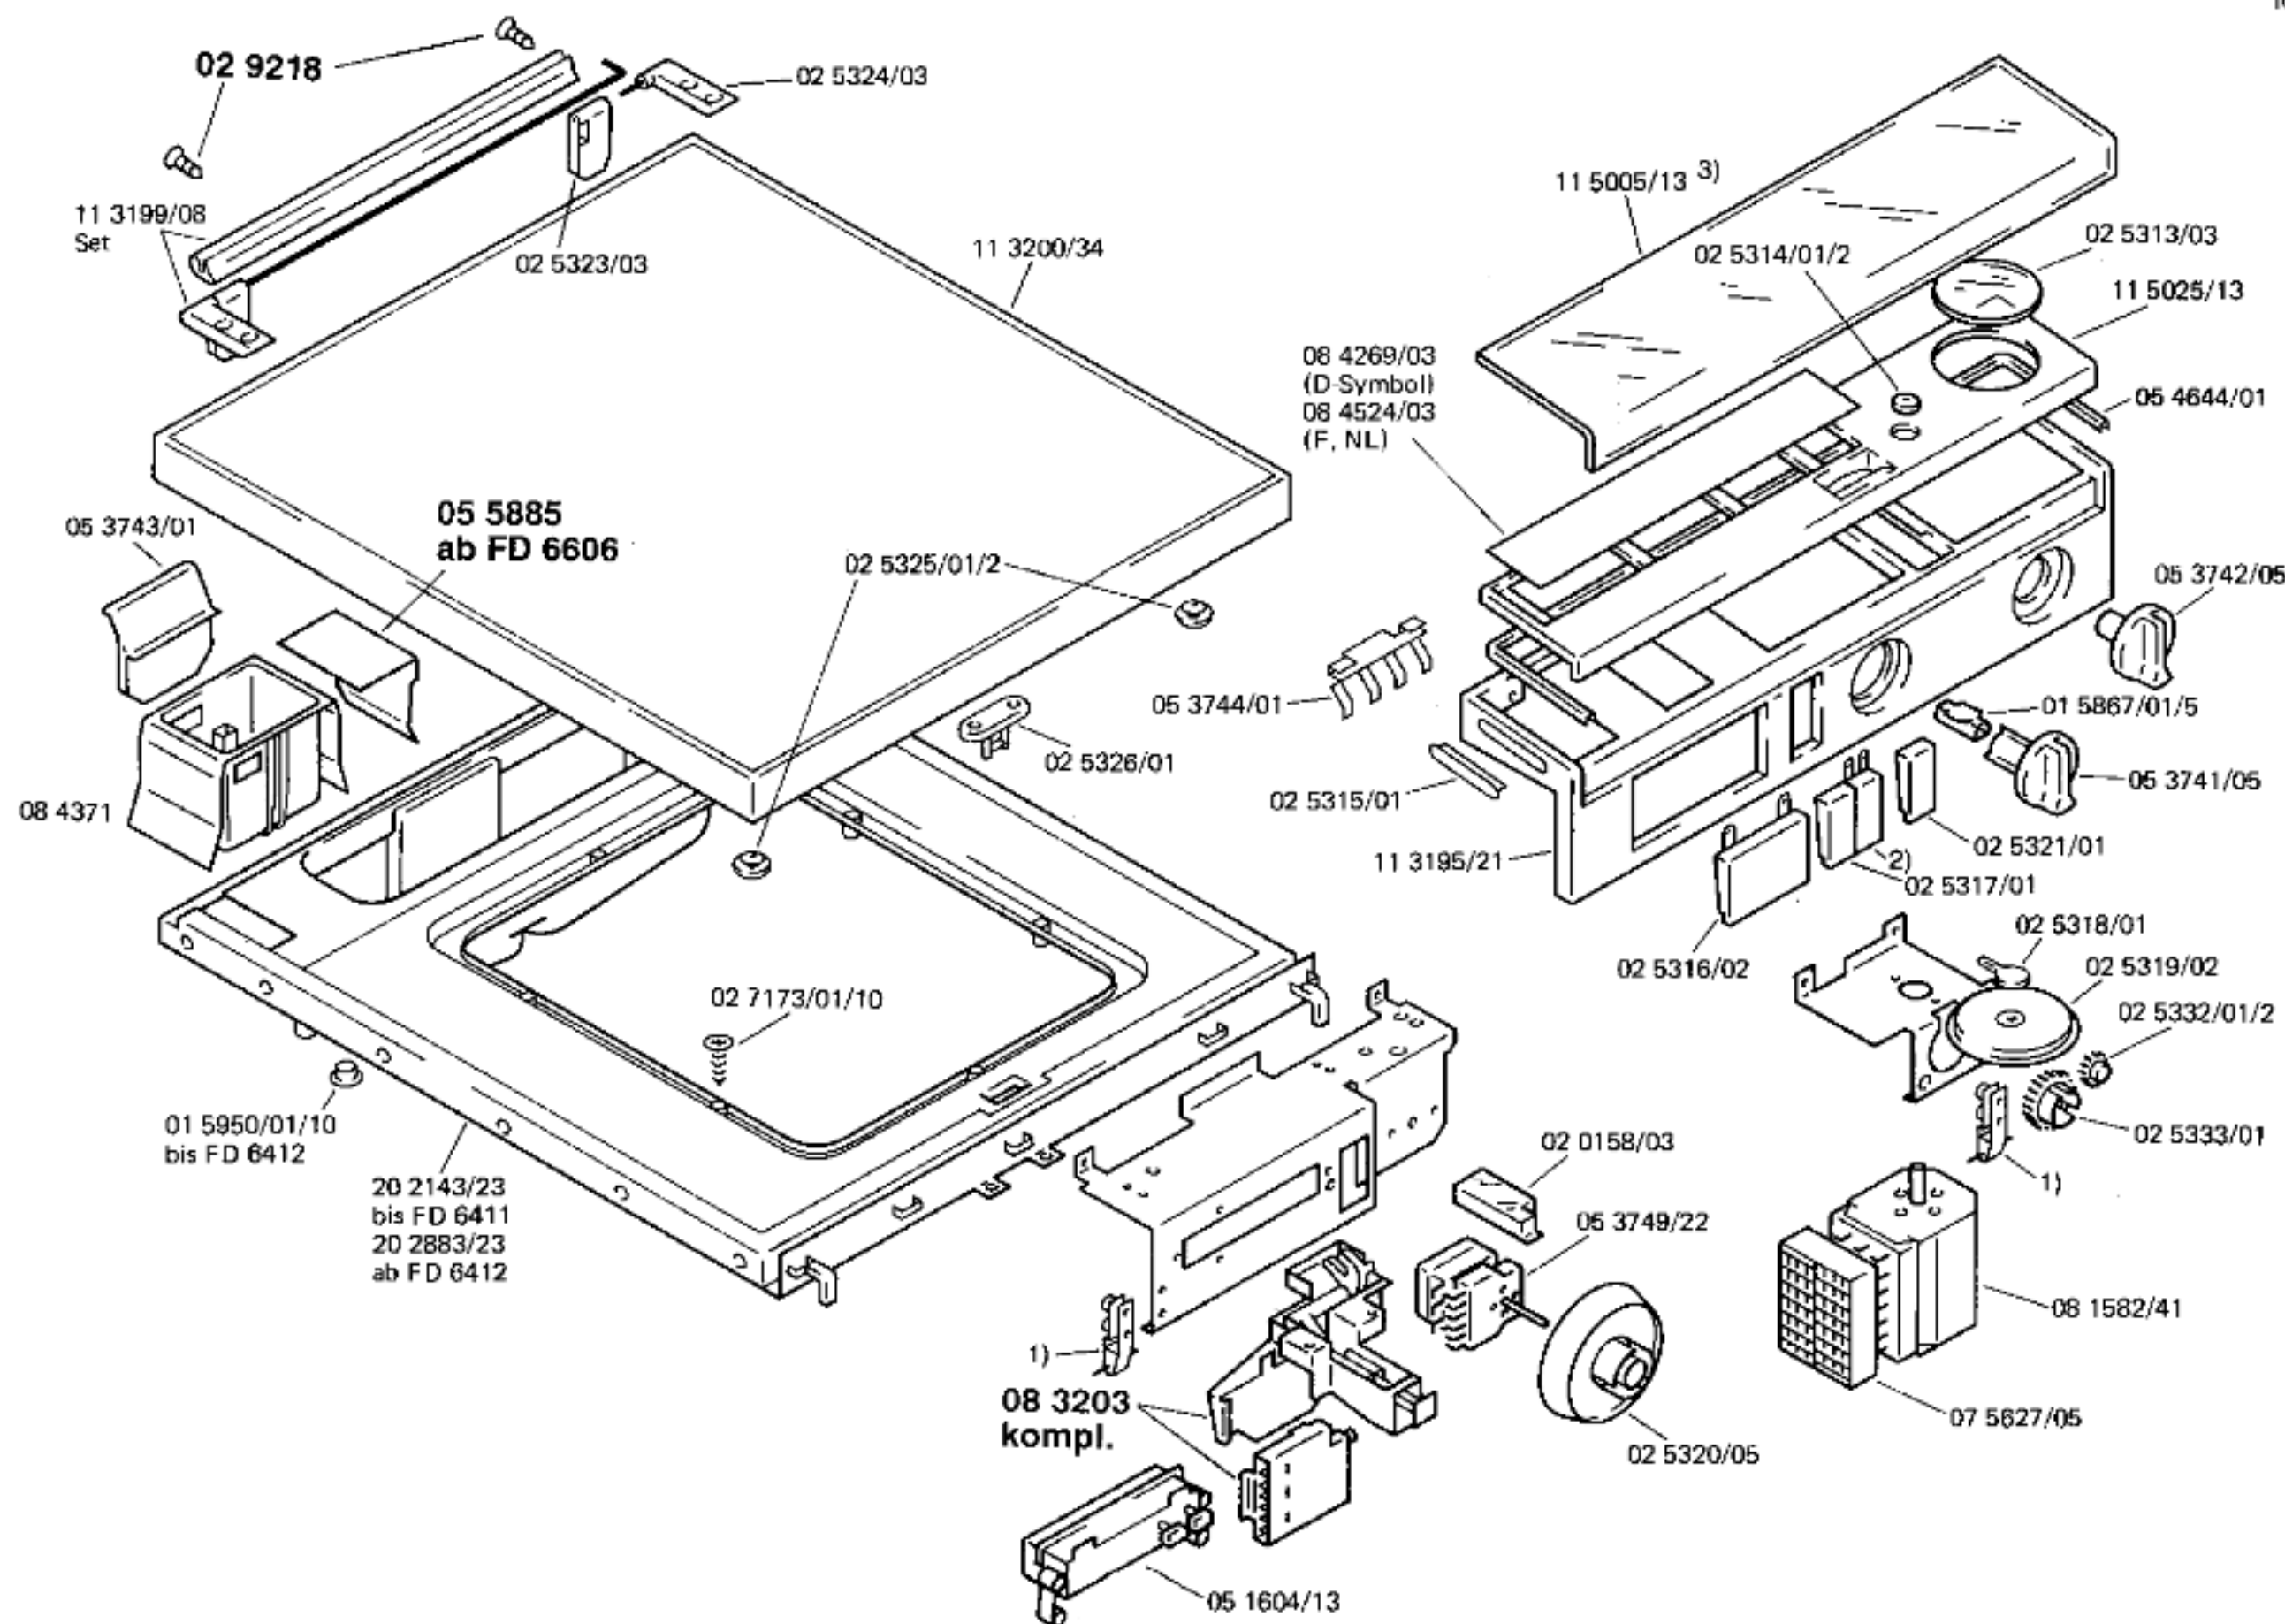


51 1497/00
Aufstellanweisung
(D, GB, F, I, NL)

51 1495/00
Gebrauchsanweisung
(D, GB, F, I, NL)

51 1499/00
Programmtabellen
(D, GB, F, I, NL)


- 1) 02 5334/01/2
2) 02 7125/02
3) einschl. 05 4644

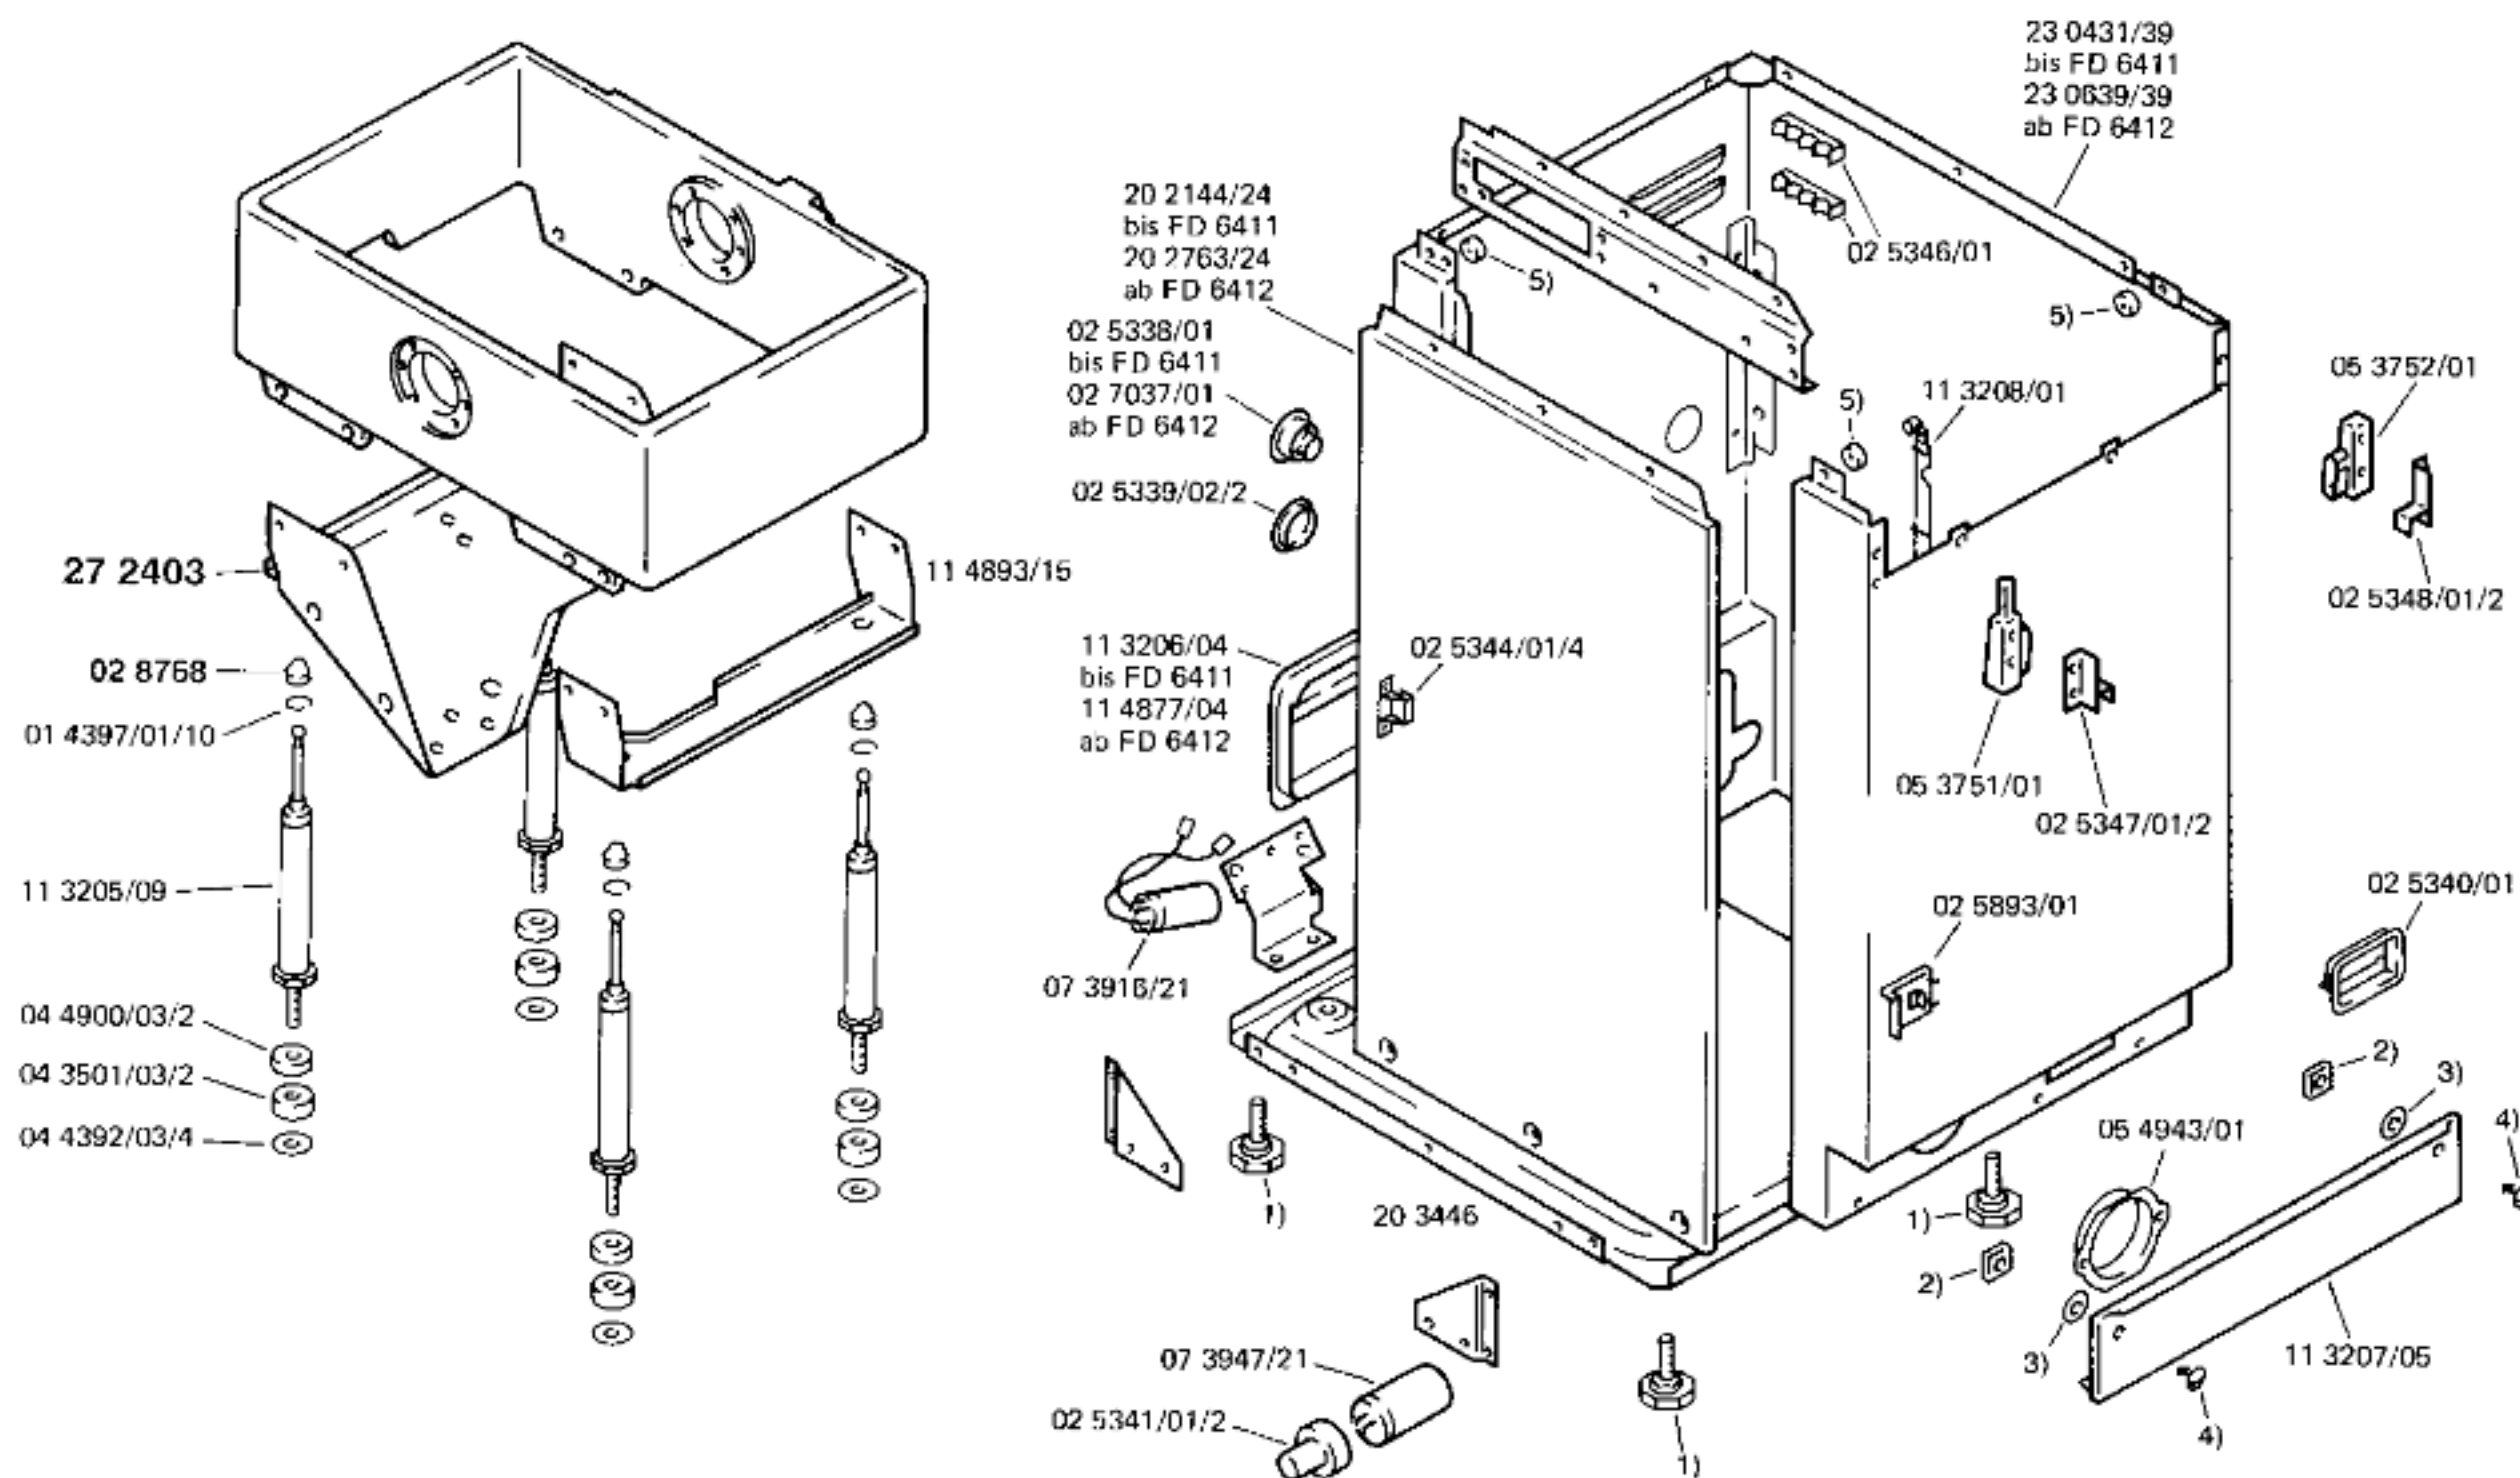**BOSCH**V336-0722044418-D1
V336-0722044428-Exp.1WASCHGERÄTE
WaschvollautomatenIdent - Nummern - Konstante
3740

- 1) 04 5561/02
- 2) 01 4687/01/2
- 3) 02 5342/01/2
- 4) 02 5343/01/2
- 5) 02 5345/01/4



Ident – Nummern – Konstante
3740

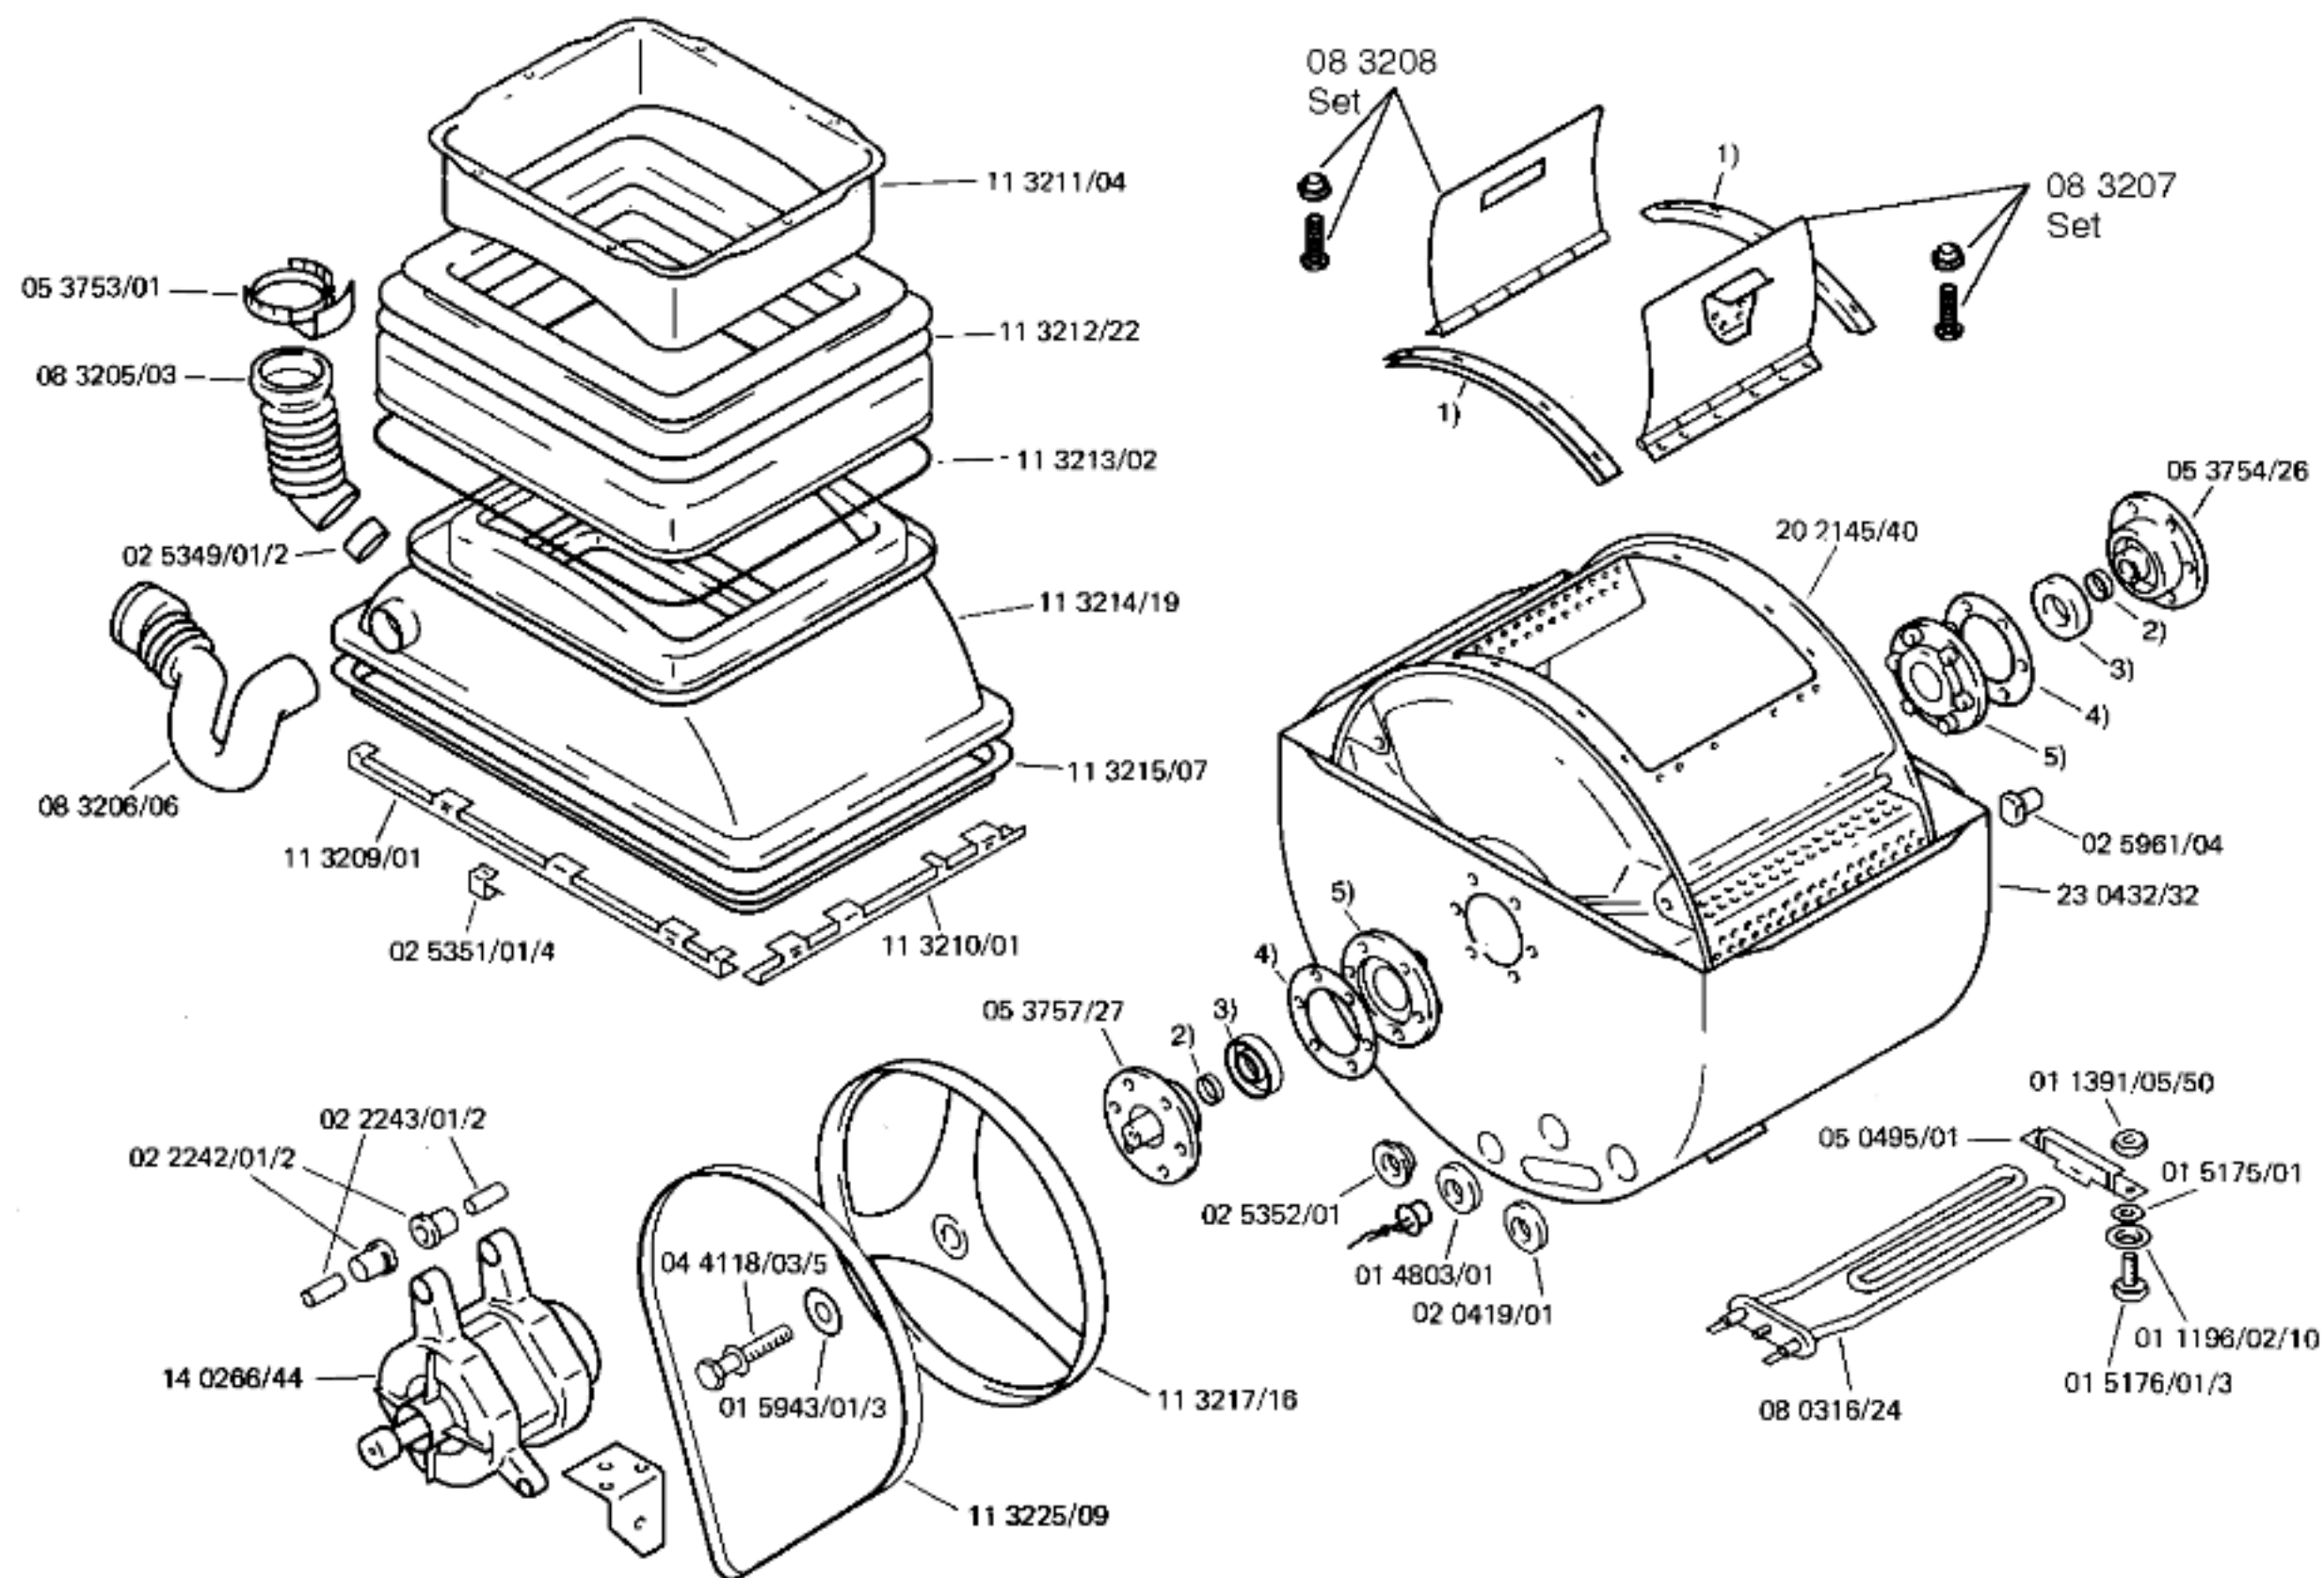

- 1) 11 3216/01
- 2) 04 2309/03/10
- 3) 02 5350/04
- 4) 05 3755/01
- 5) 05 3756/03

Ident - Nummern - Konstante
3740