 


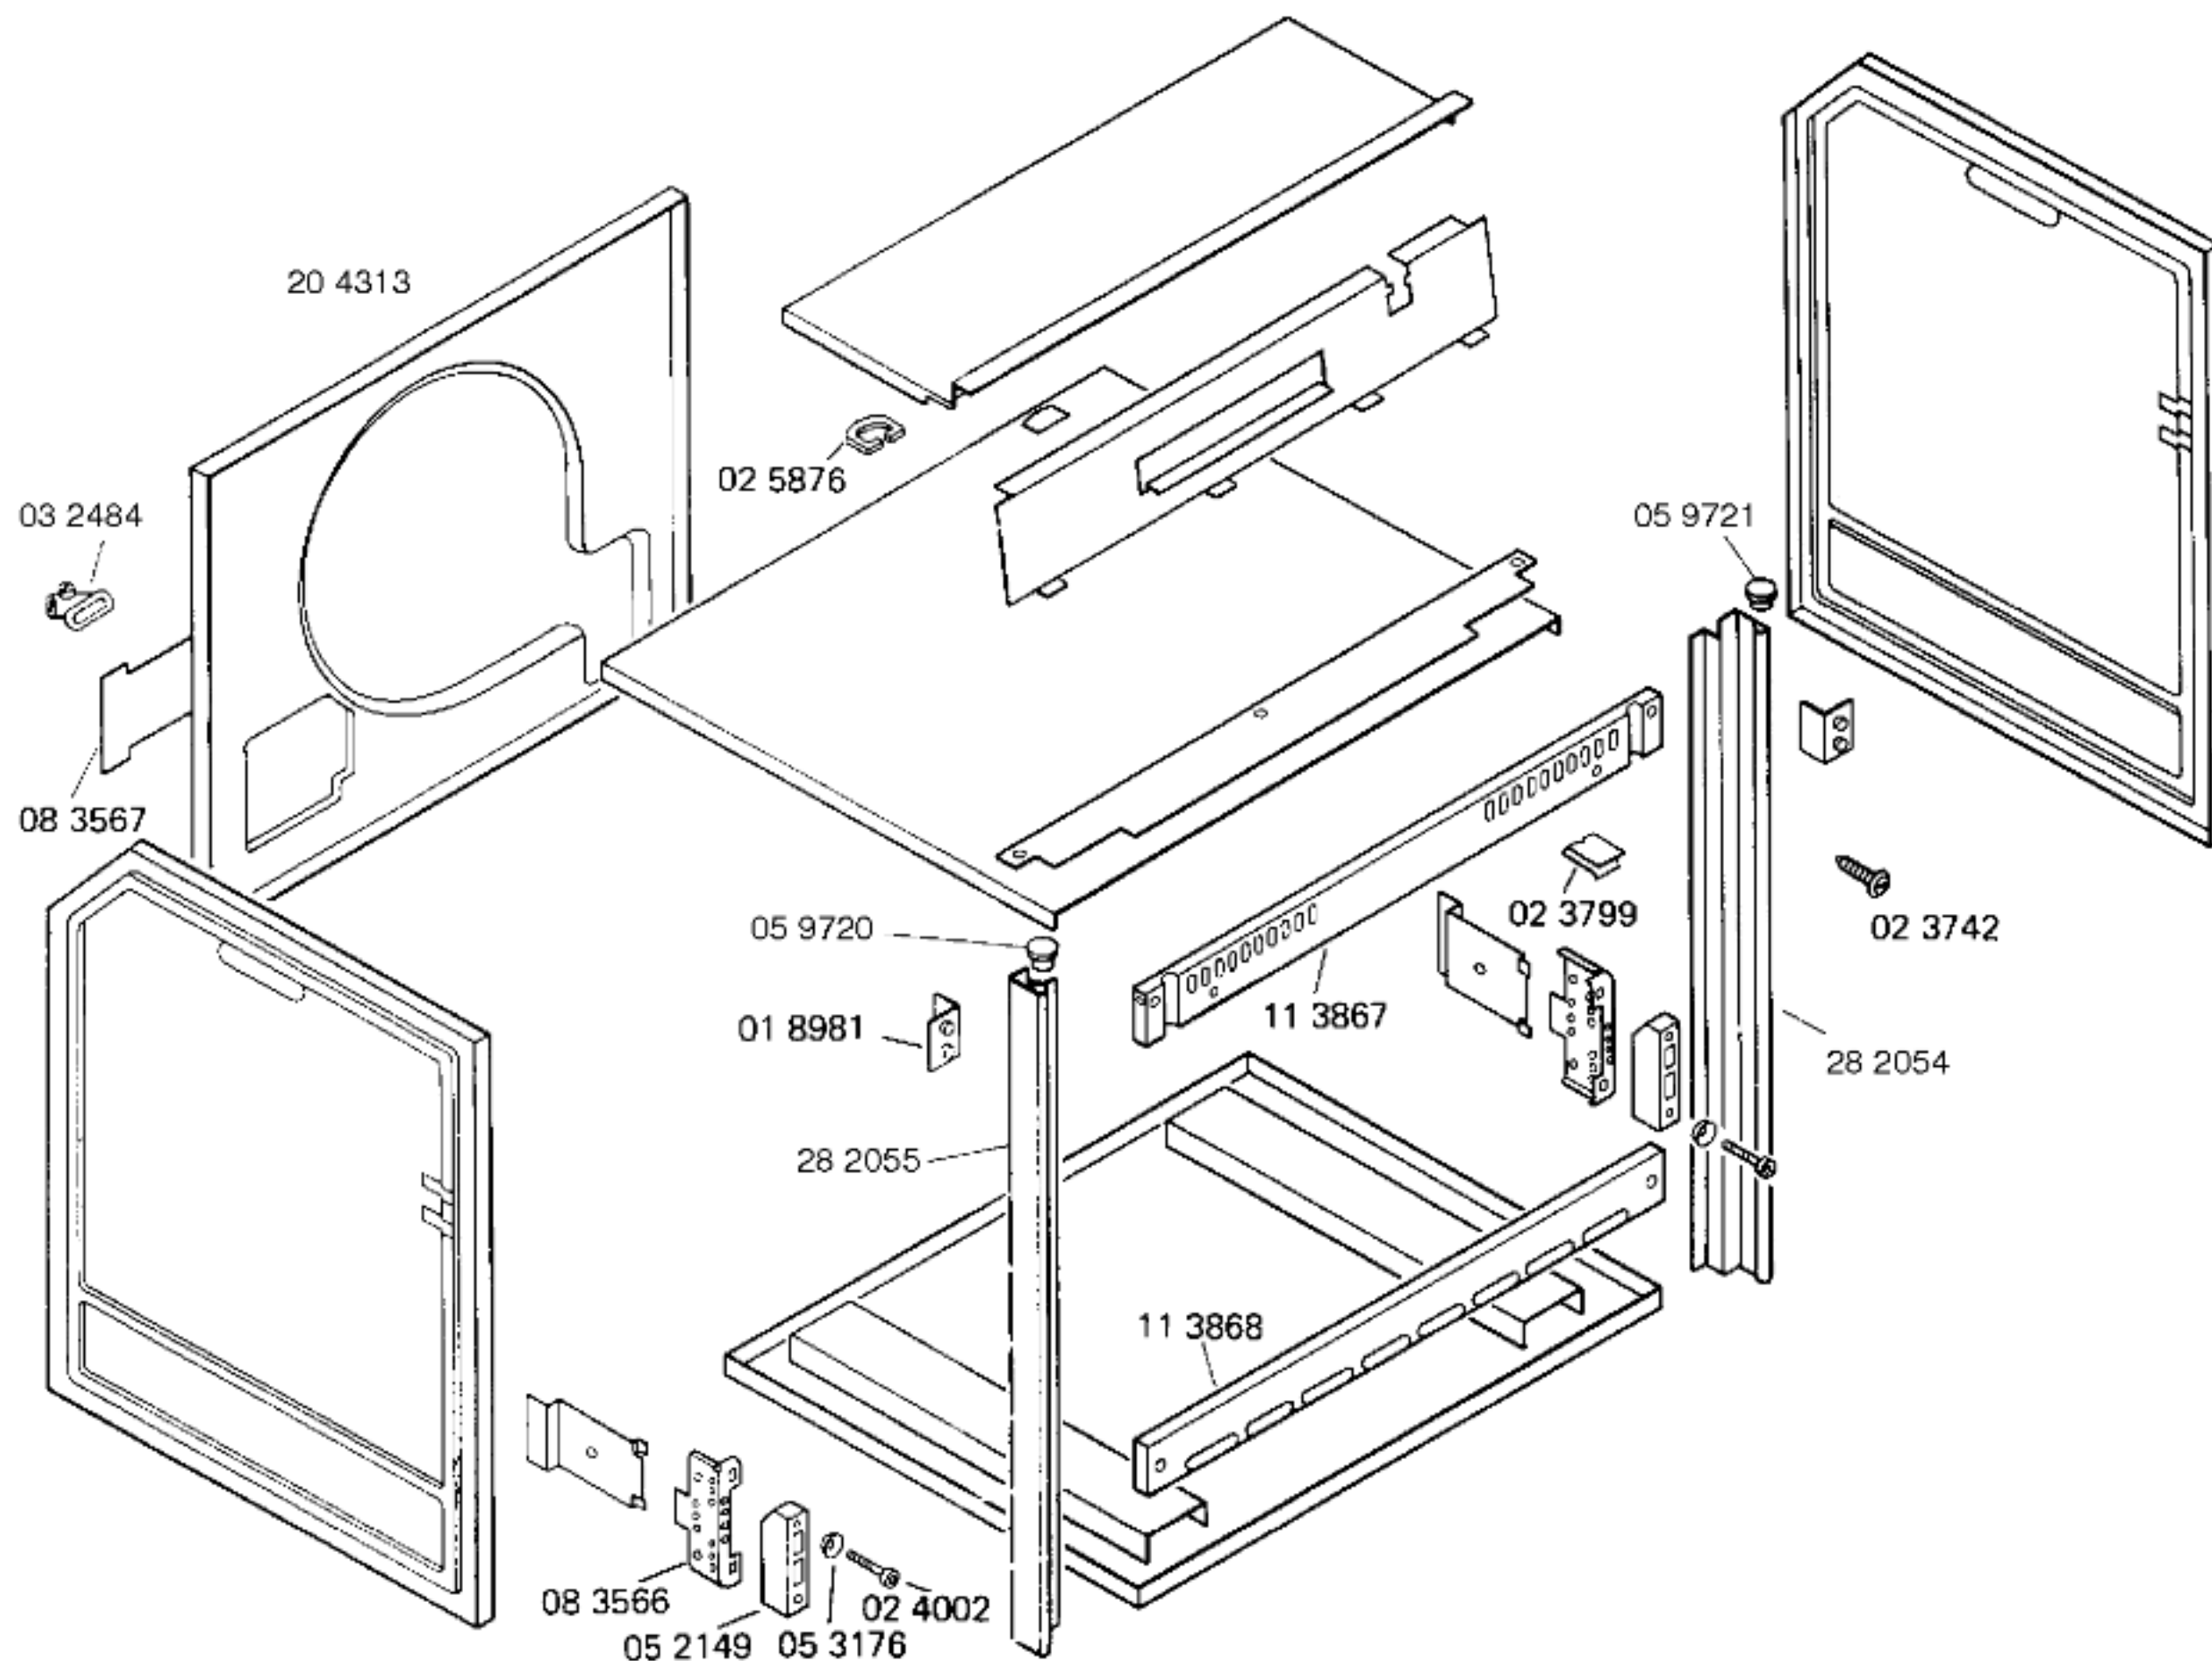

Gebrauchsanweisung
51 3821
(D,GB,F,NL,I,E)

51 2001
Tips und Rezepte

Zubehör

**Back- und
Bratrost normal**
Z1400X1

**Back- und
Bratrost eng**
Z1410X1

Grillpfanne
Z1200X1

Email-Backblech
Z1310X1

 
Alu-Backblech
Z1300X1

 
Bratenblech
Z1510X0

Drehspieß-Set
Z1162X0


Brotbackstein
Z1910X0

Grill 2,7kW
Z1100X0

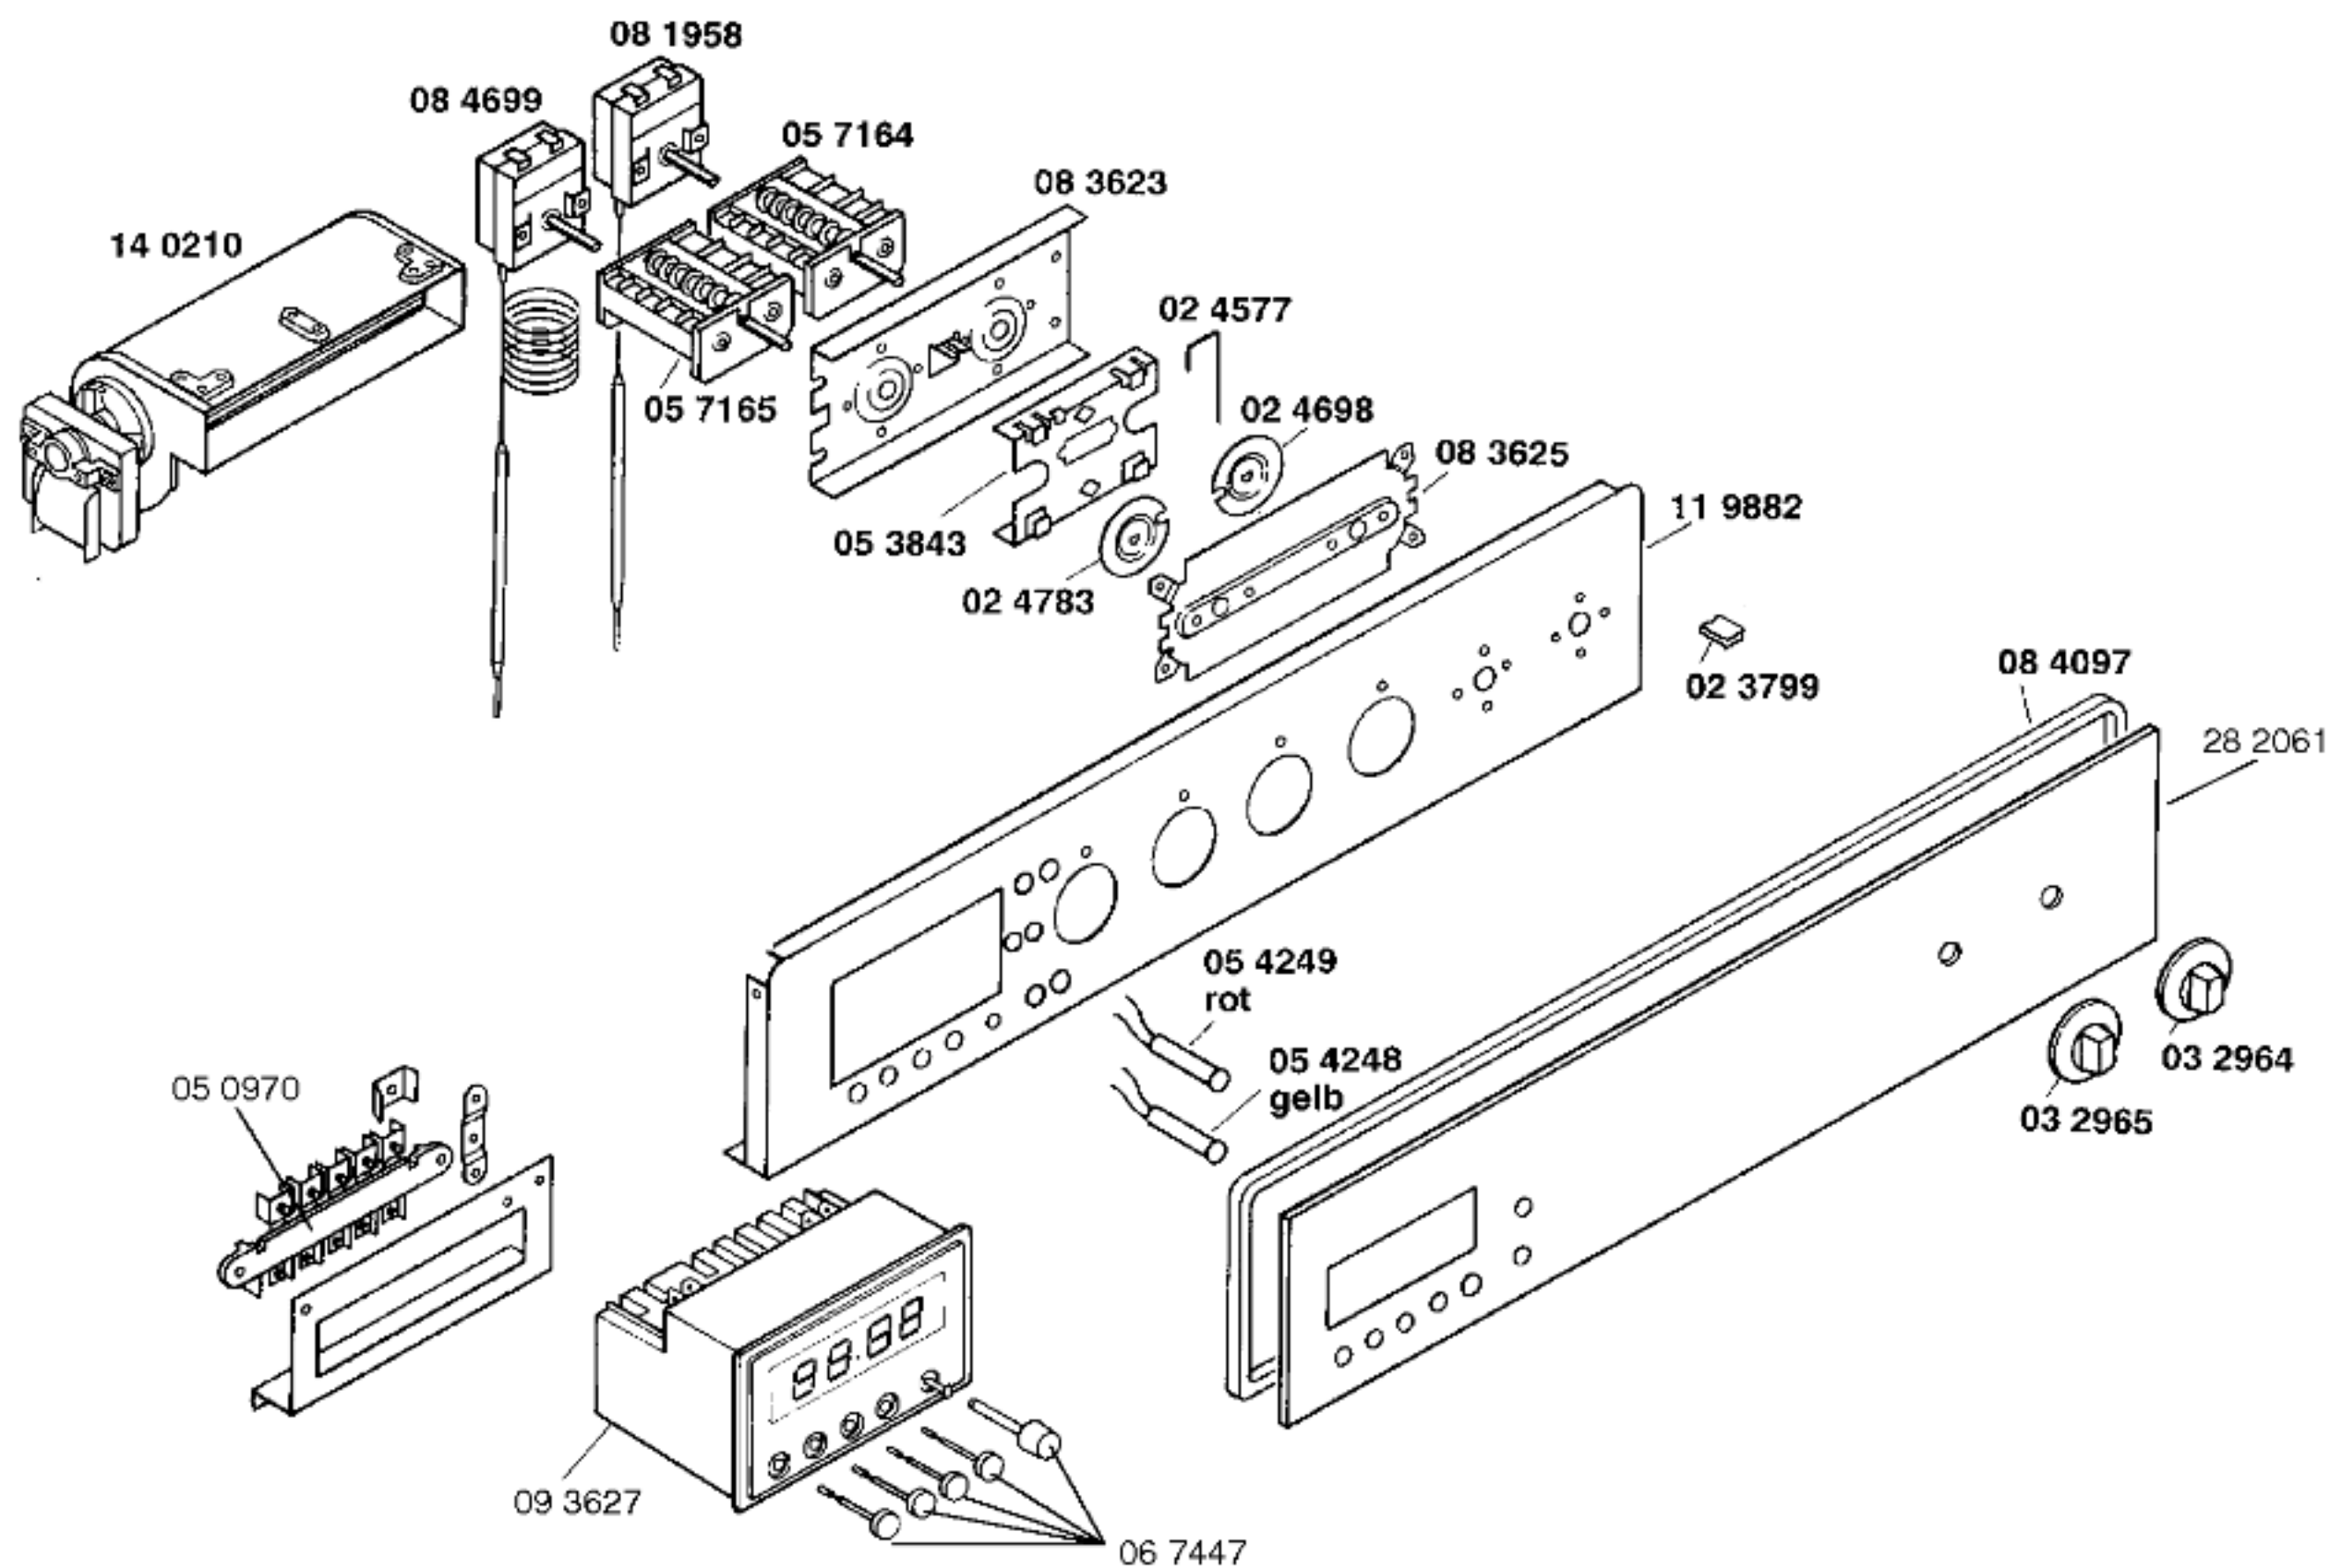

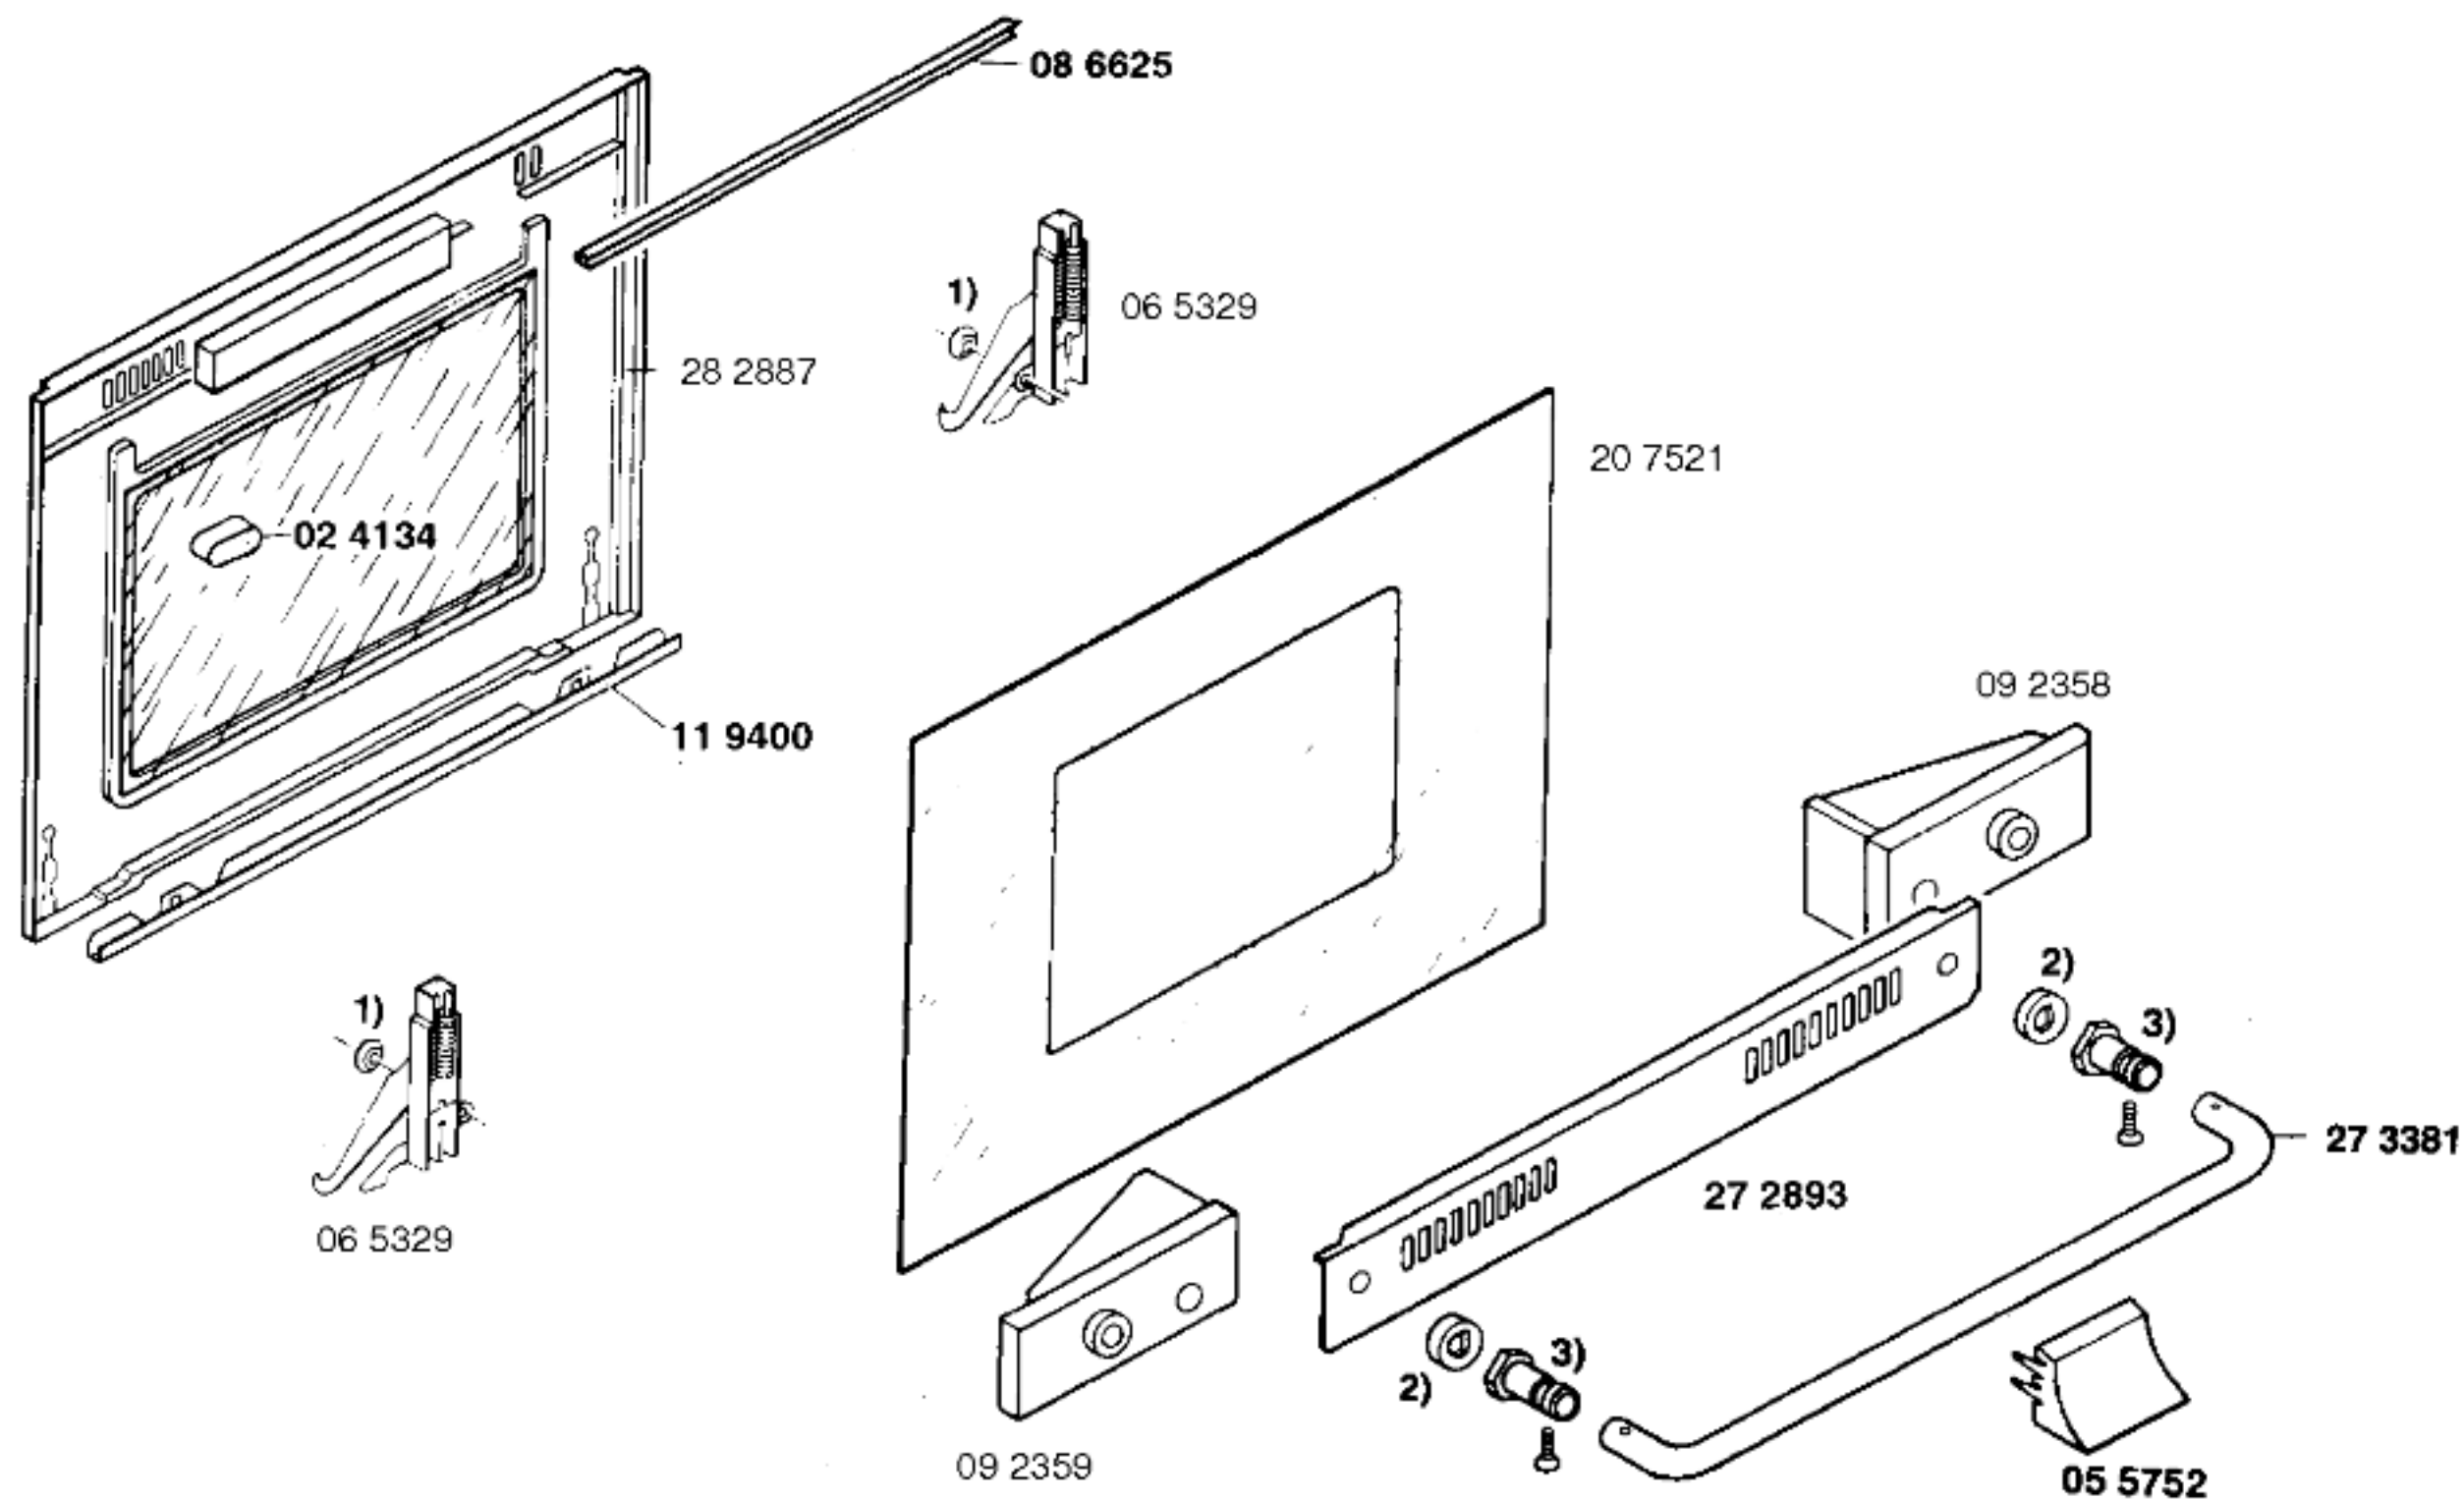

 - 1) 02 2695
- 2) 03 0428
- 3) 02 8347

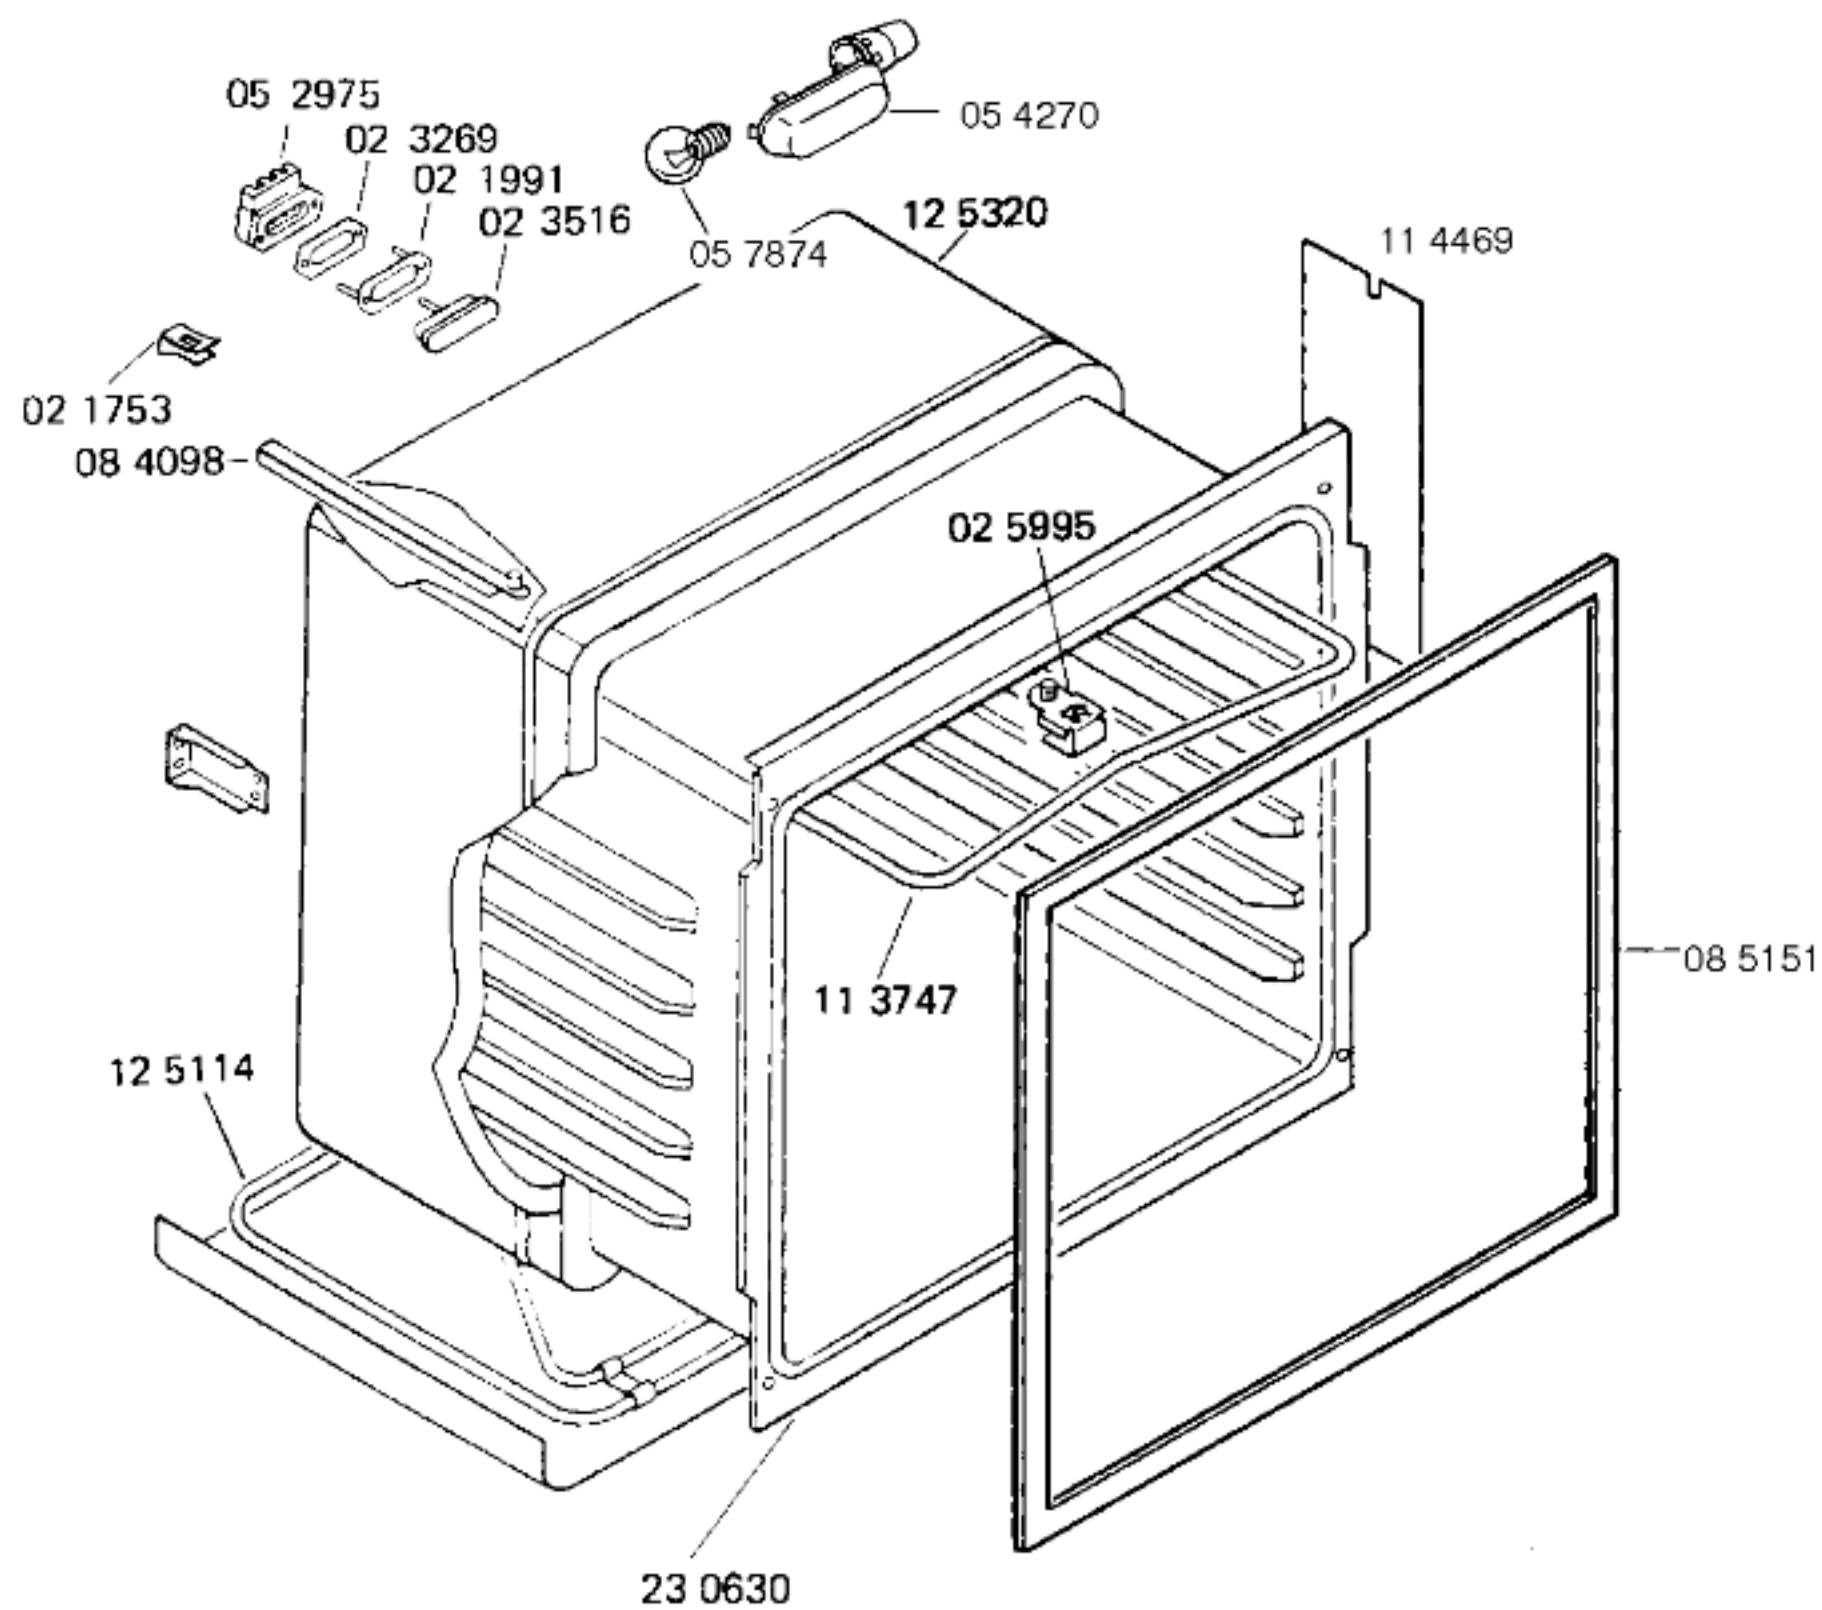

Montageanweisung
(Grill)
51 2039

