

**BOSCH**


S712 - SMS 7122 - 0 730 100 640-EU1
 S712 - SMS 71224 - 0 730 100 643-I1
 SMS 39224 - 0 730 100 651-I1

GESCHIRRSPÜLGERÄTE
 Standgeräte


Ident-Nummern-Konstante
 3740

51 3033
 EU1,I1
 Gebrauchsanweisung
 (D,GB,F,I,NL)
 51 2277
 Aufstellanleitung

- 1) 04 2085
Set
- 2) 04 2105
Set
- 3) 01 9177
Set
- 4) 02 5122
- 5) 02 5123
- 6) 02 2459
- 7) 02 5657
rot
- 8) 02 5658
grün
- 9) 02 5824
- 10) 11 7673
EU1,I1
11 8276
I2

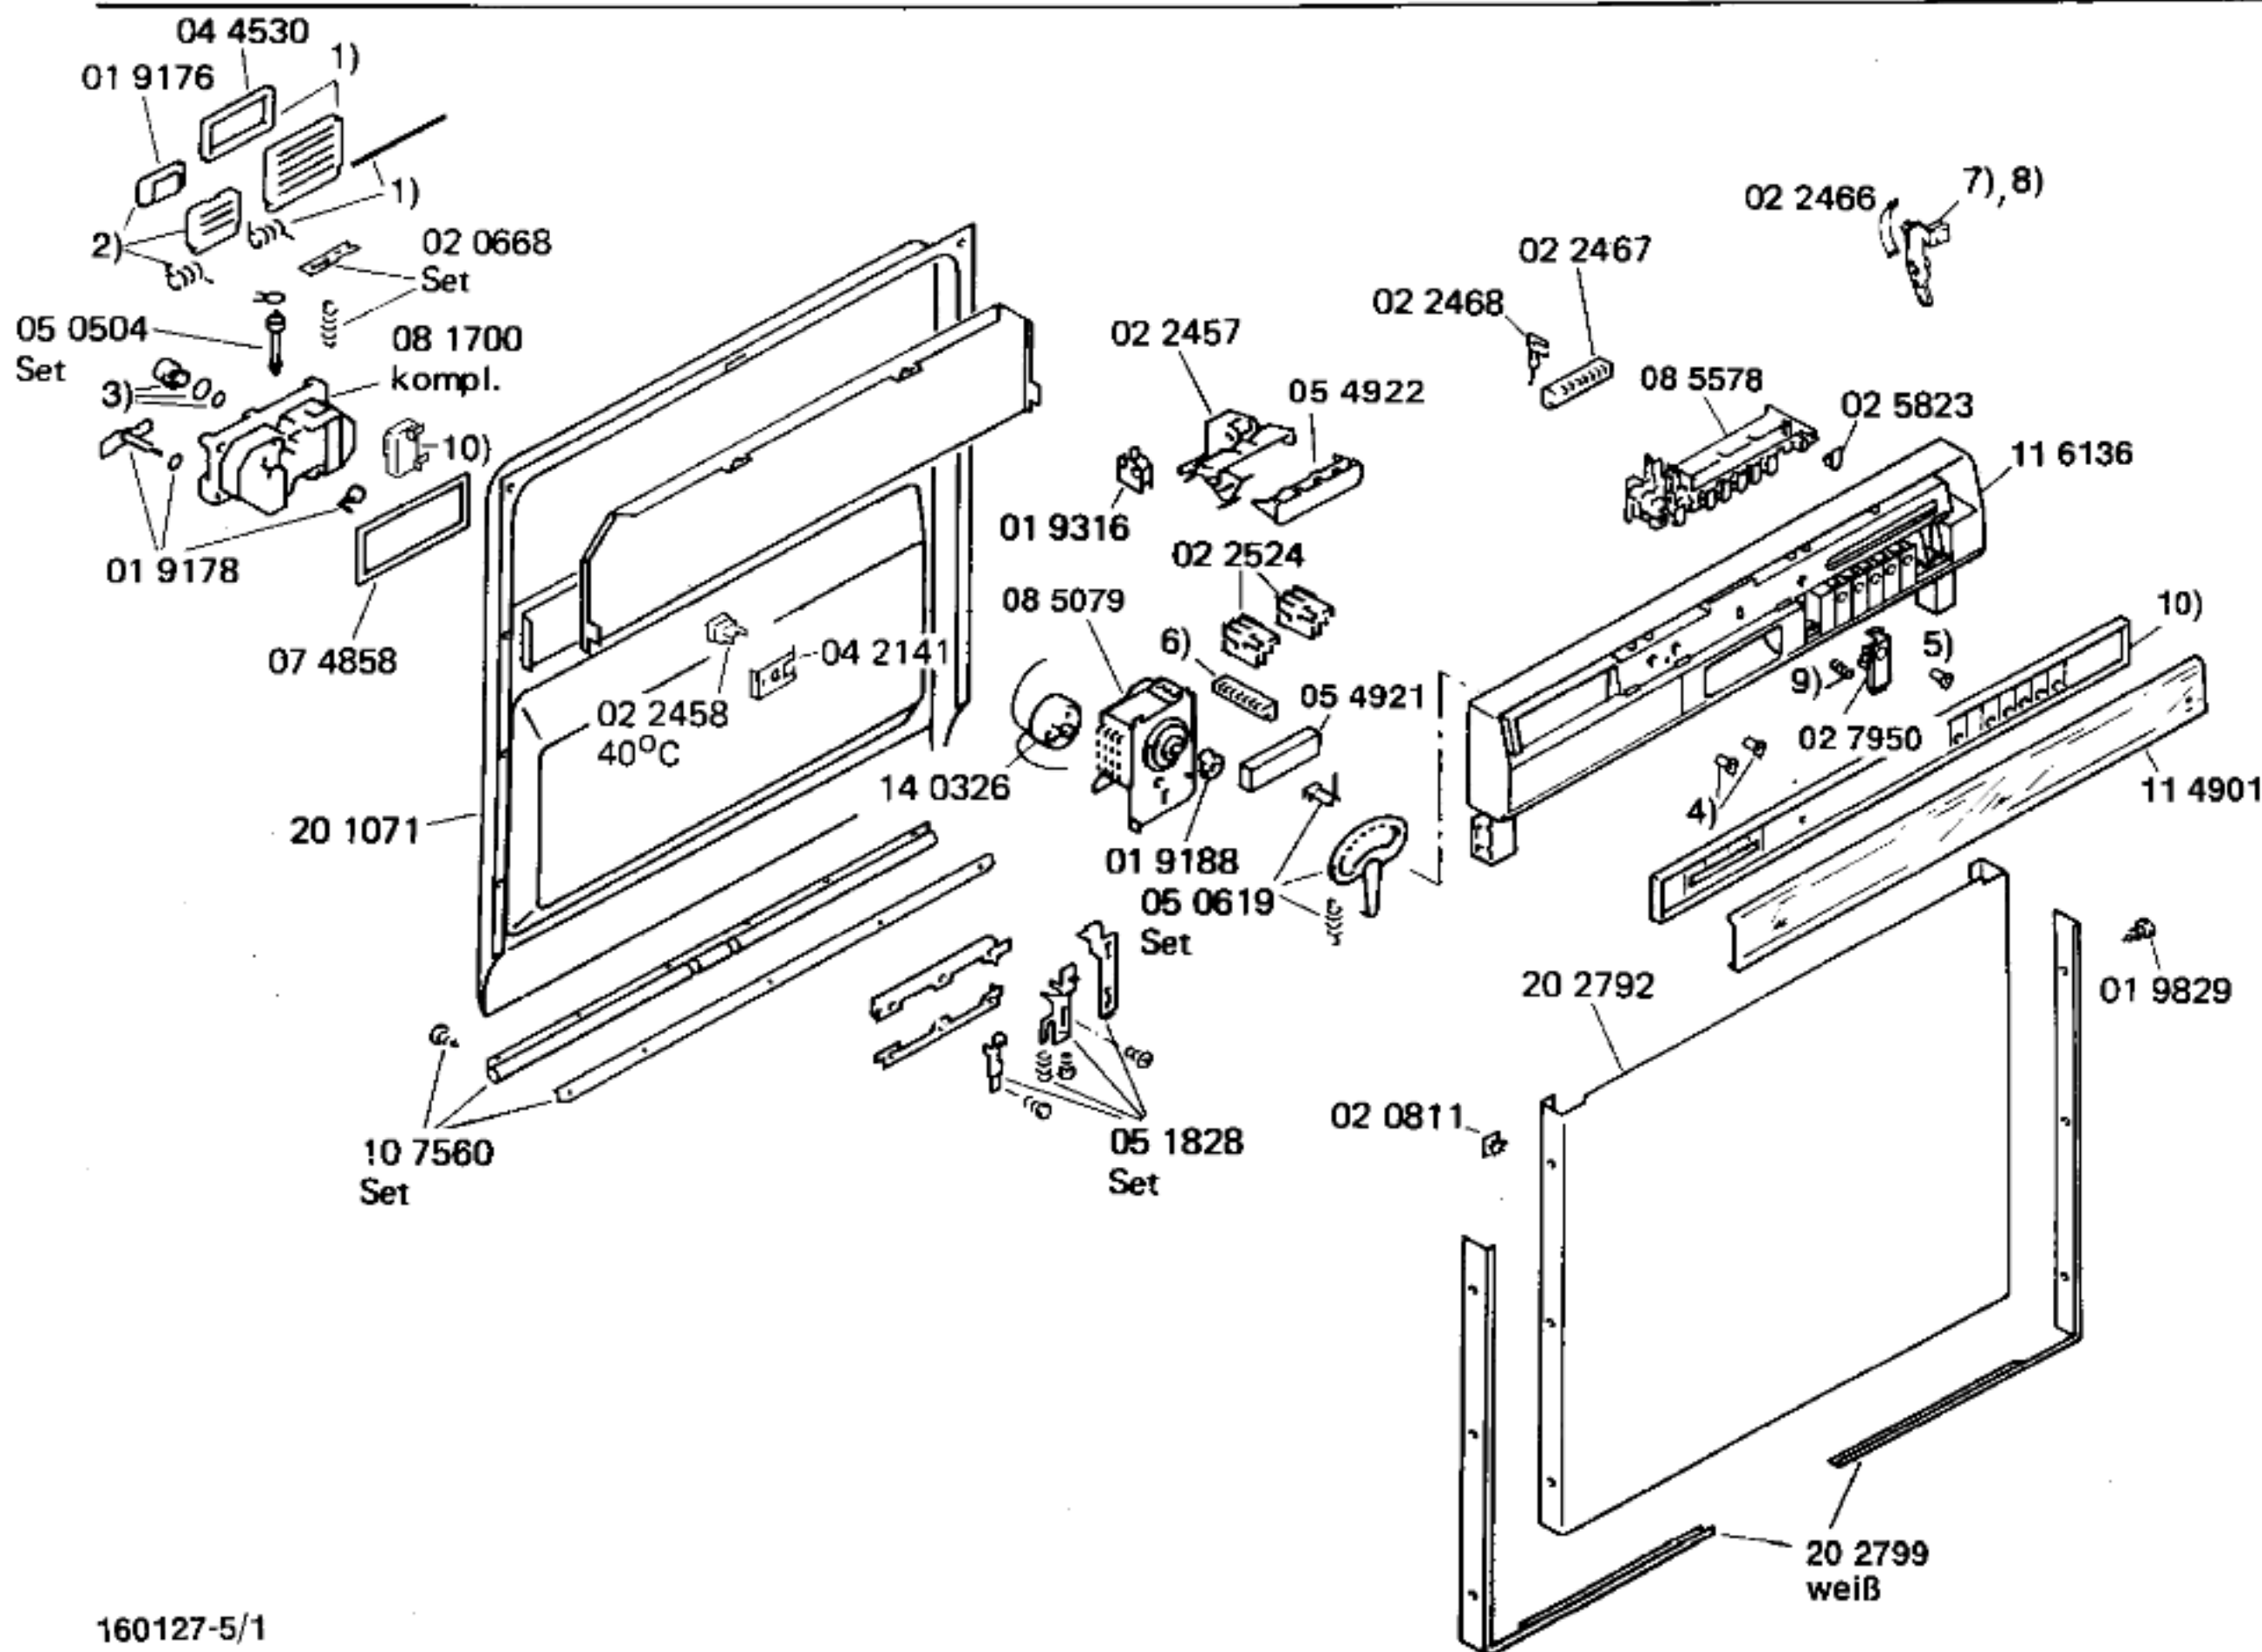

Ident.-Nummern-Konstante
3740

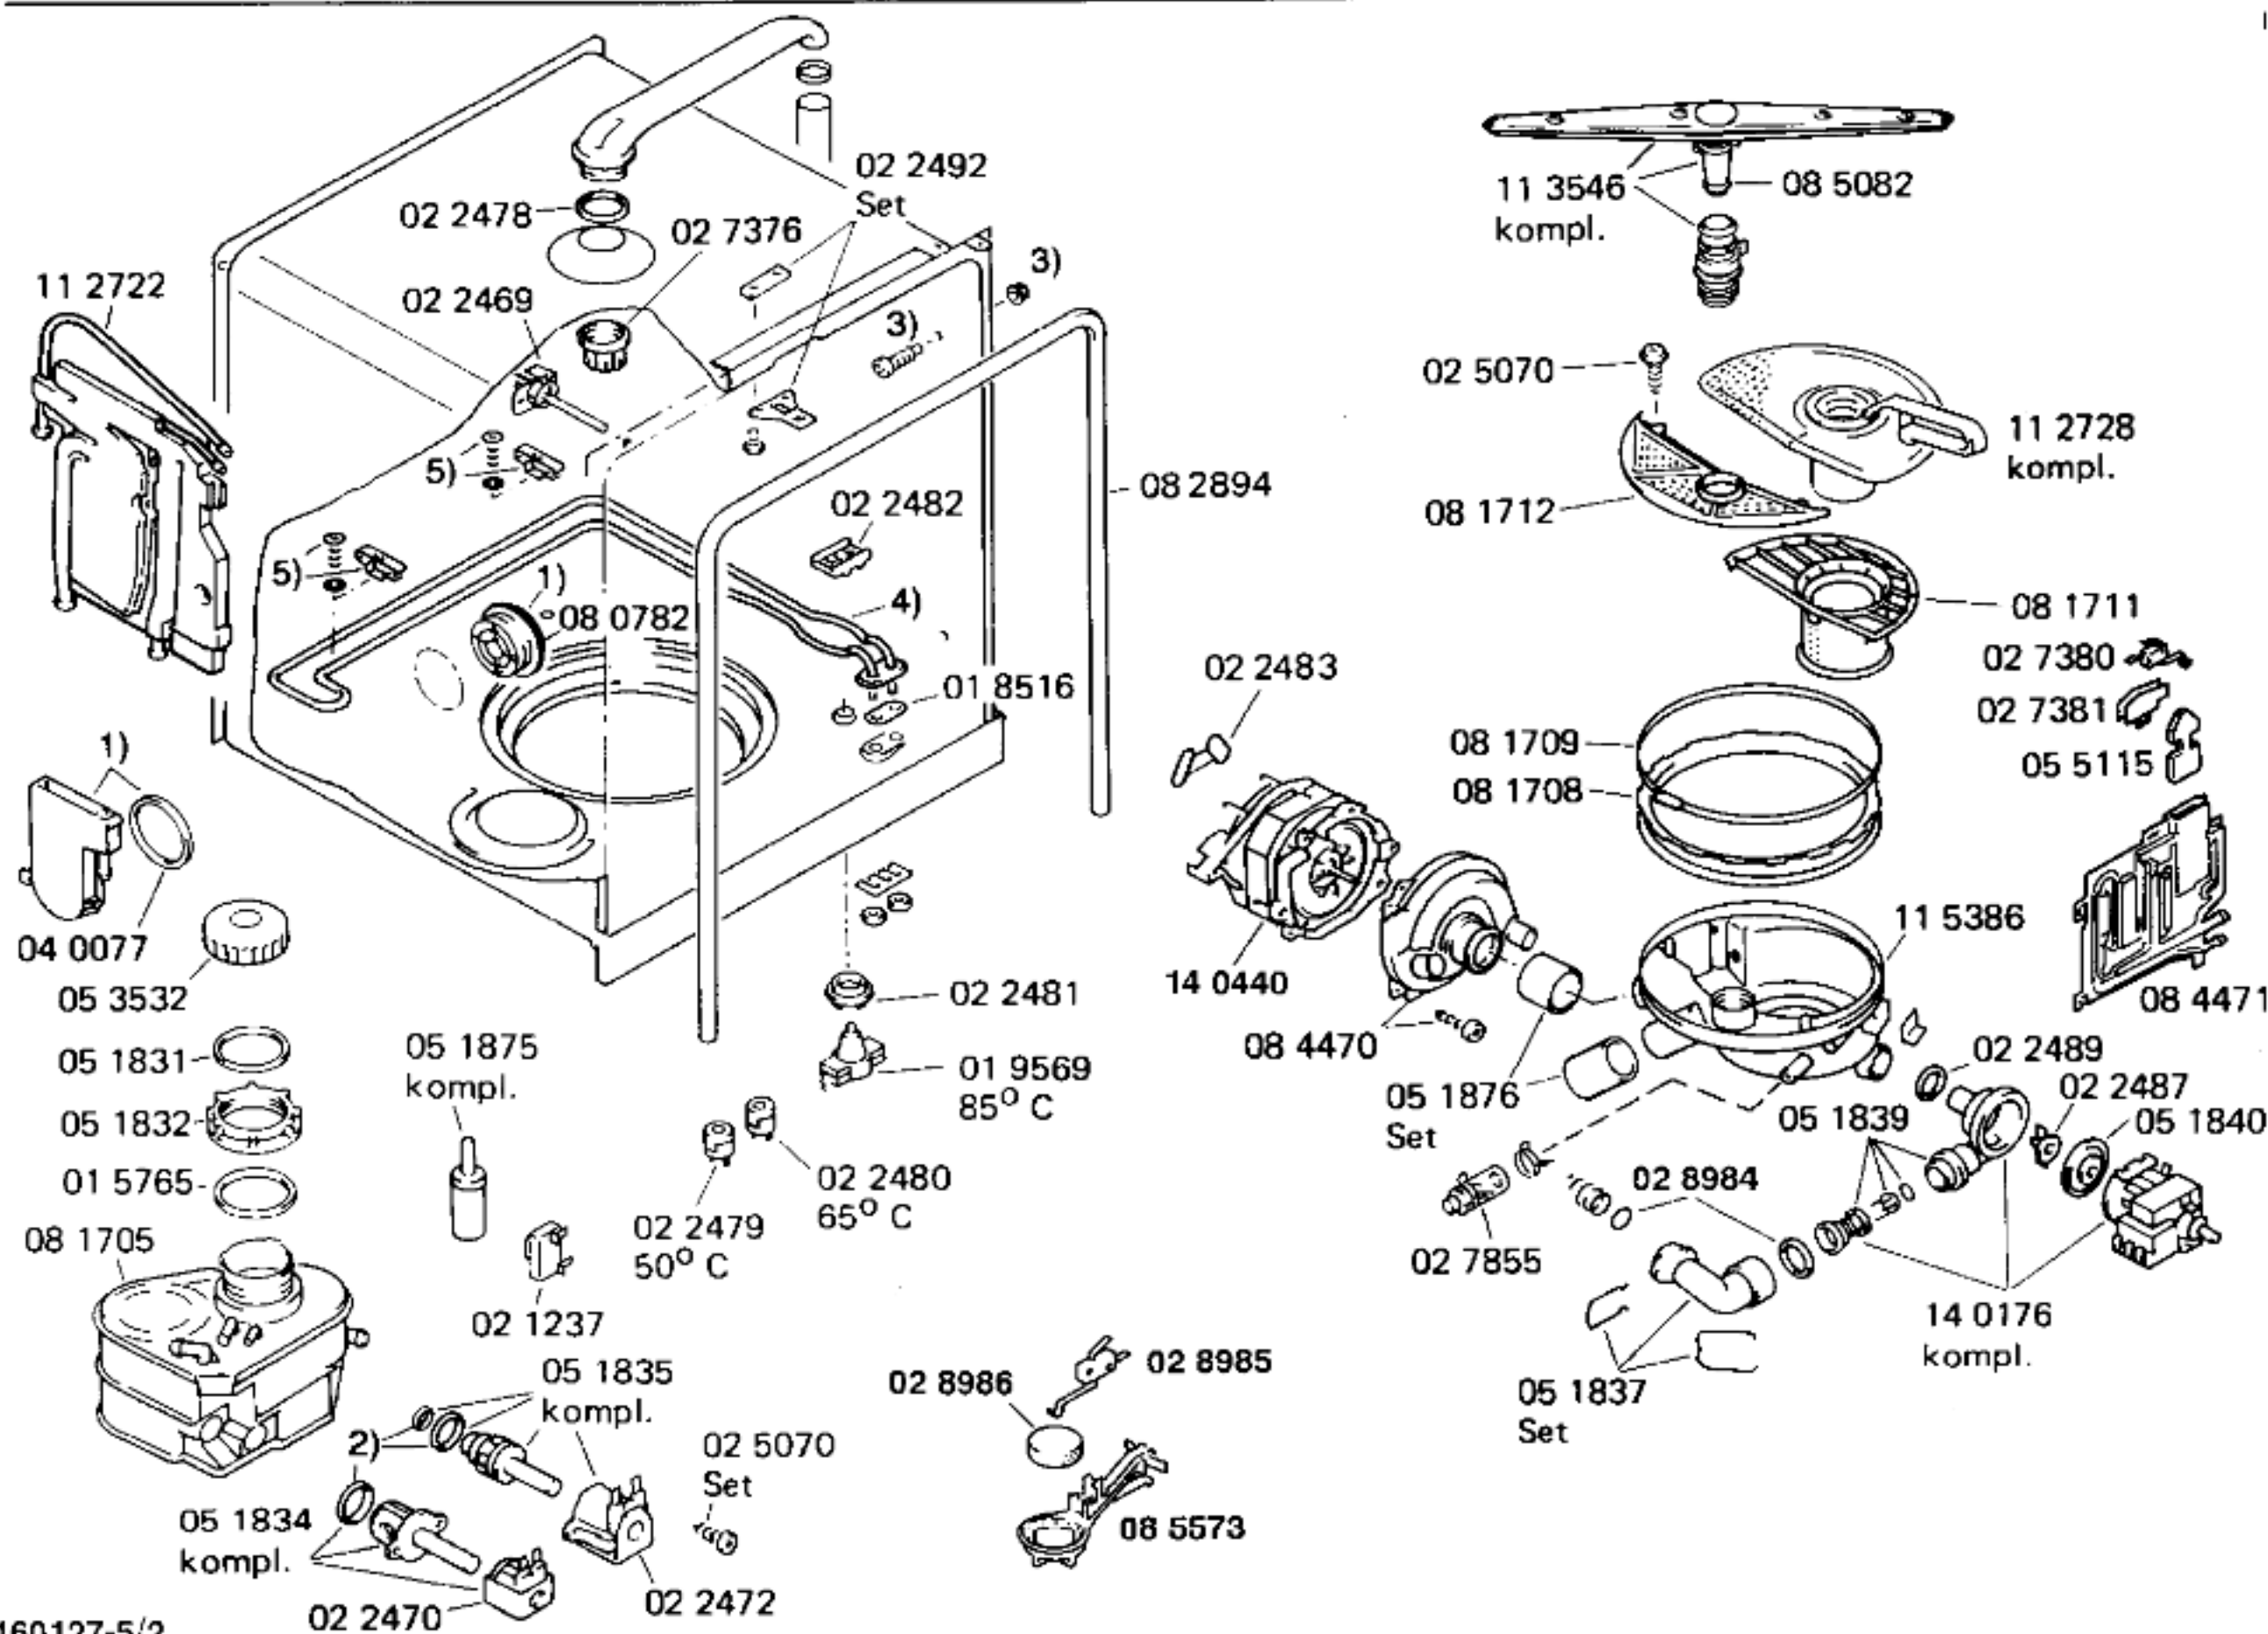

1) 08 0781
Set

2) 02 5067
Set

3) 01 9204
Set

4) 20 1073
EU1


5) 05 1838

**BOSCH**


S712 - SMS 7122 - 0 730 100 640-EU1
S712 - SMS 71224 - 0 730 100 643-I1
SMS 39224 - 0 730 100 651-I1

GESCHIRRSPÜLGERÄTE
Standgeräte

Ident-Nummern-Konstante
3740

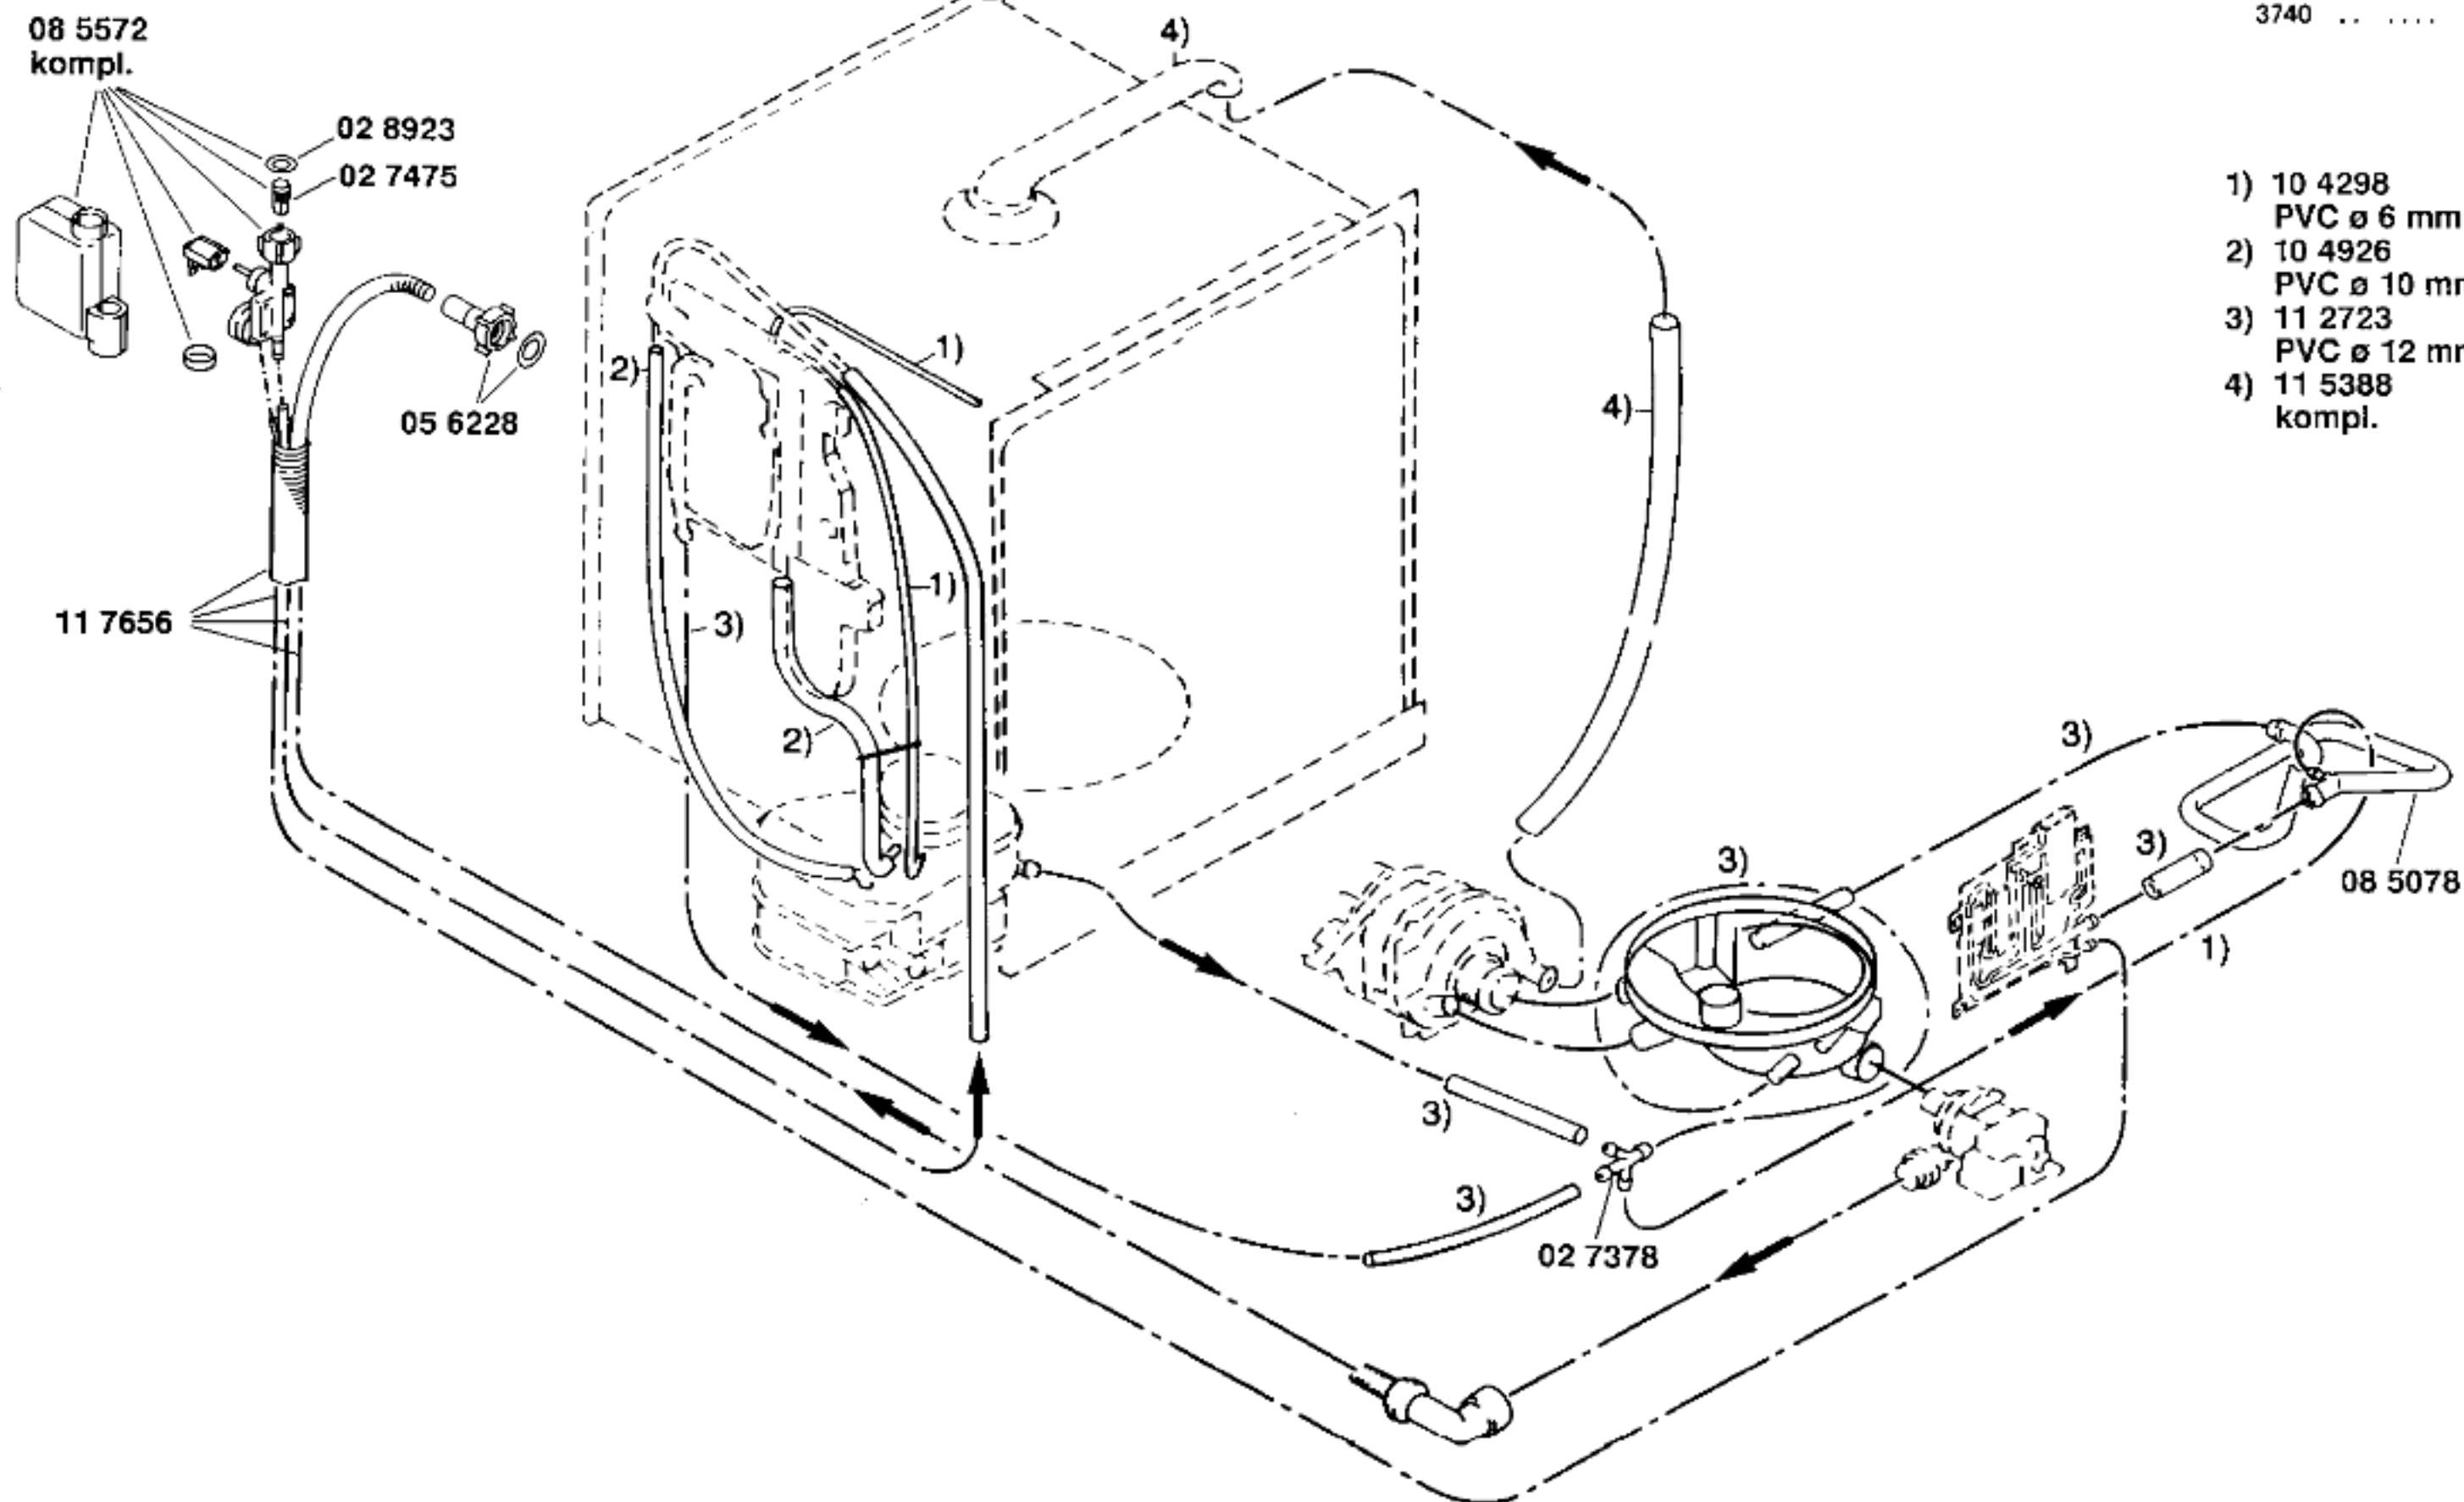

Ident-Nummern-Konstante
3740

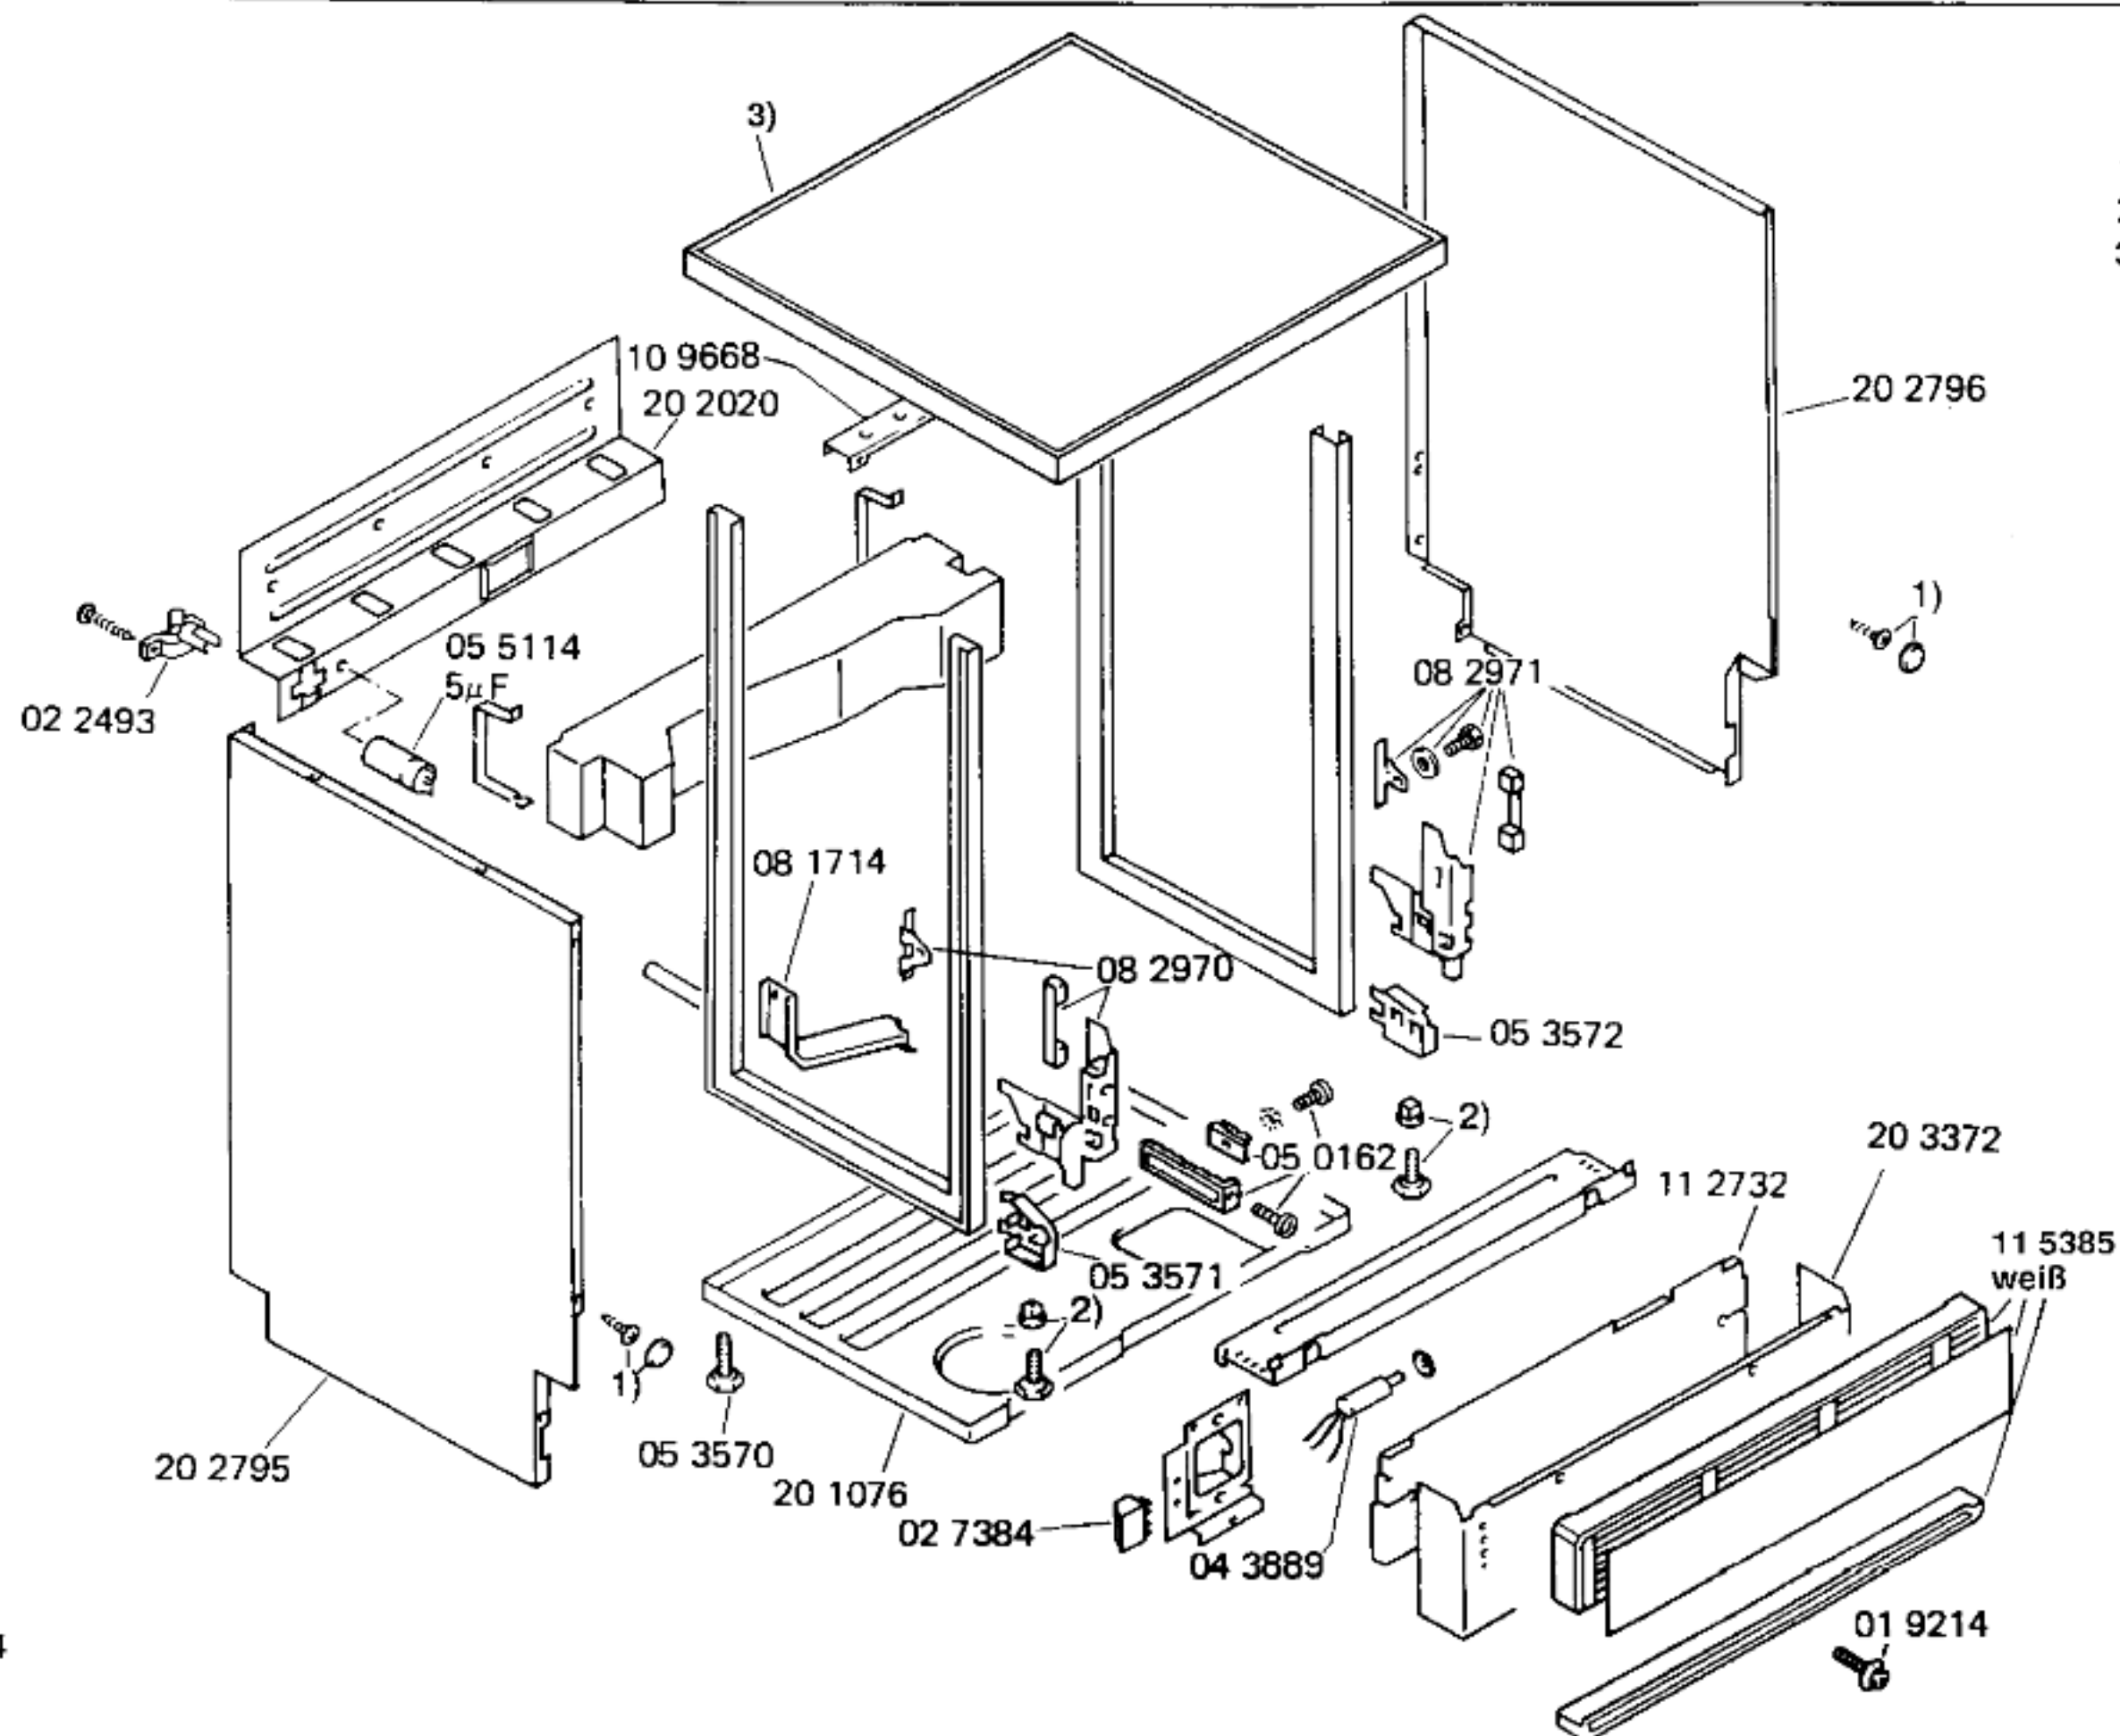


**BOSCH**

S712 - SMS 7122 - 0 730 100 640-EU1
 S712 - SMS 71224 - 0 730 100 643-I1
 SMS 39224 - 0 730 100 651-I1

GESCHIRRSPÜLGERÄTE
 Standgeräte

Ident.-Nummern-Konstante
 3740

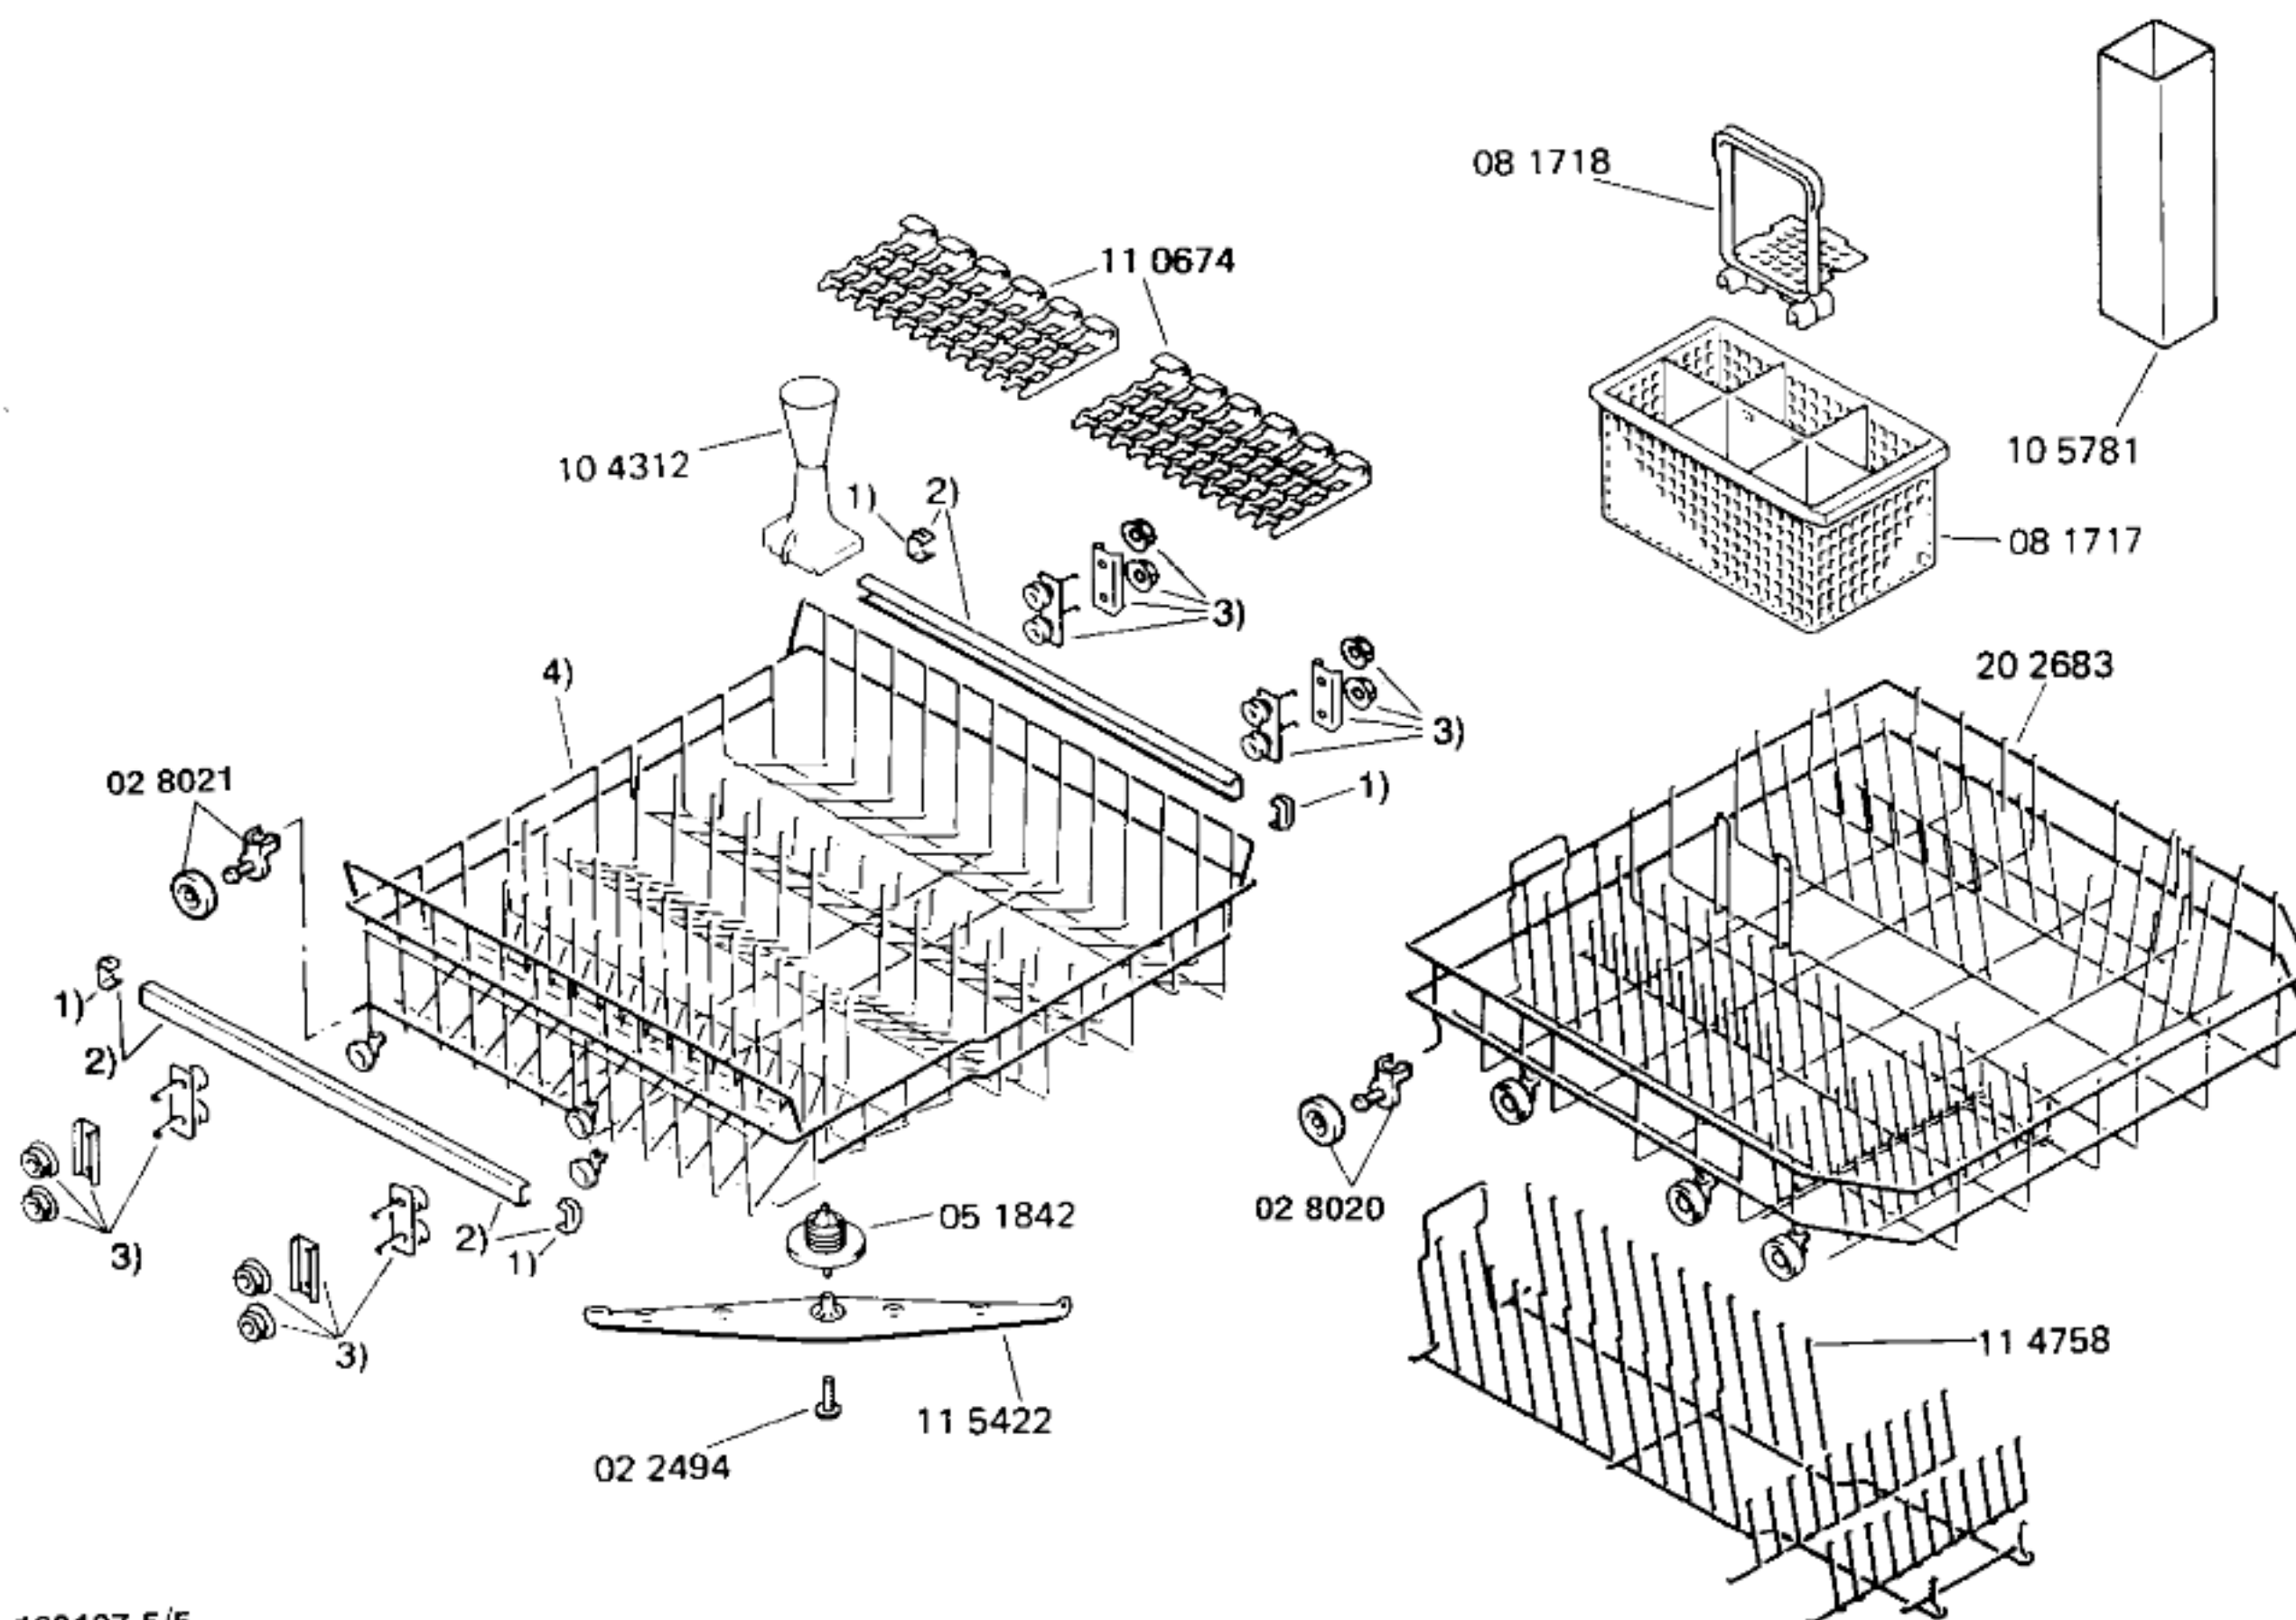

- 1) 01 9202
- 2) 11 0668
Set
- 3) 05 1287
Set
- 4) 20 1970
EU1
20 3631
I1,I2