




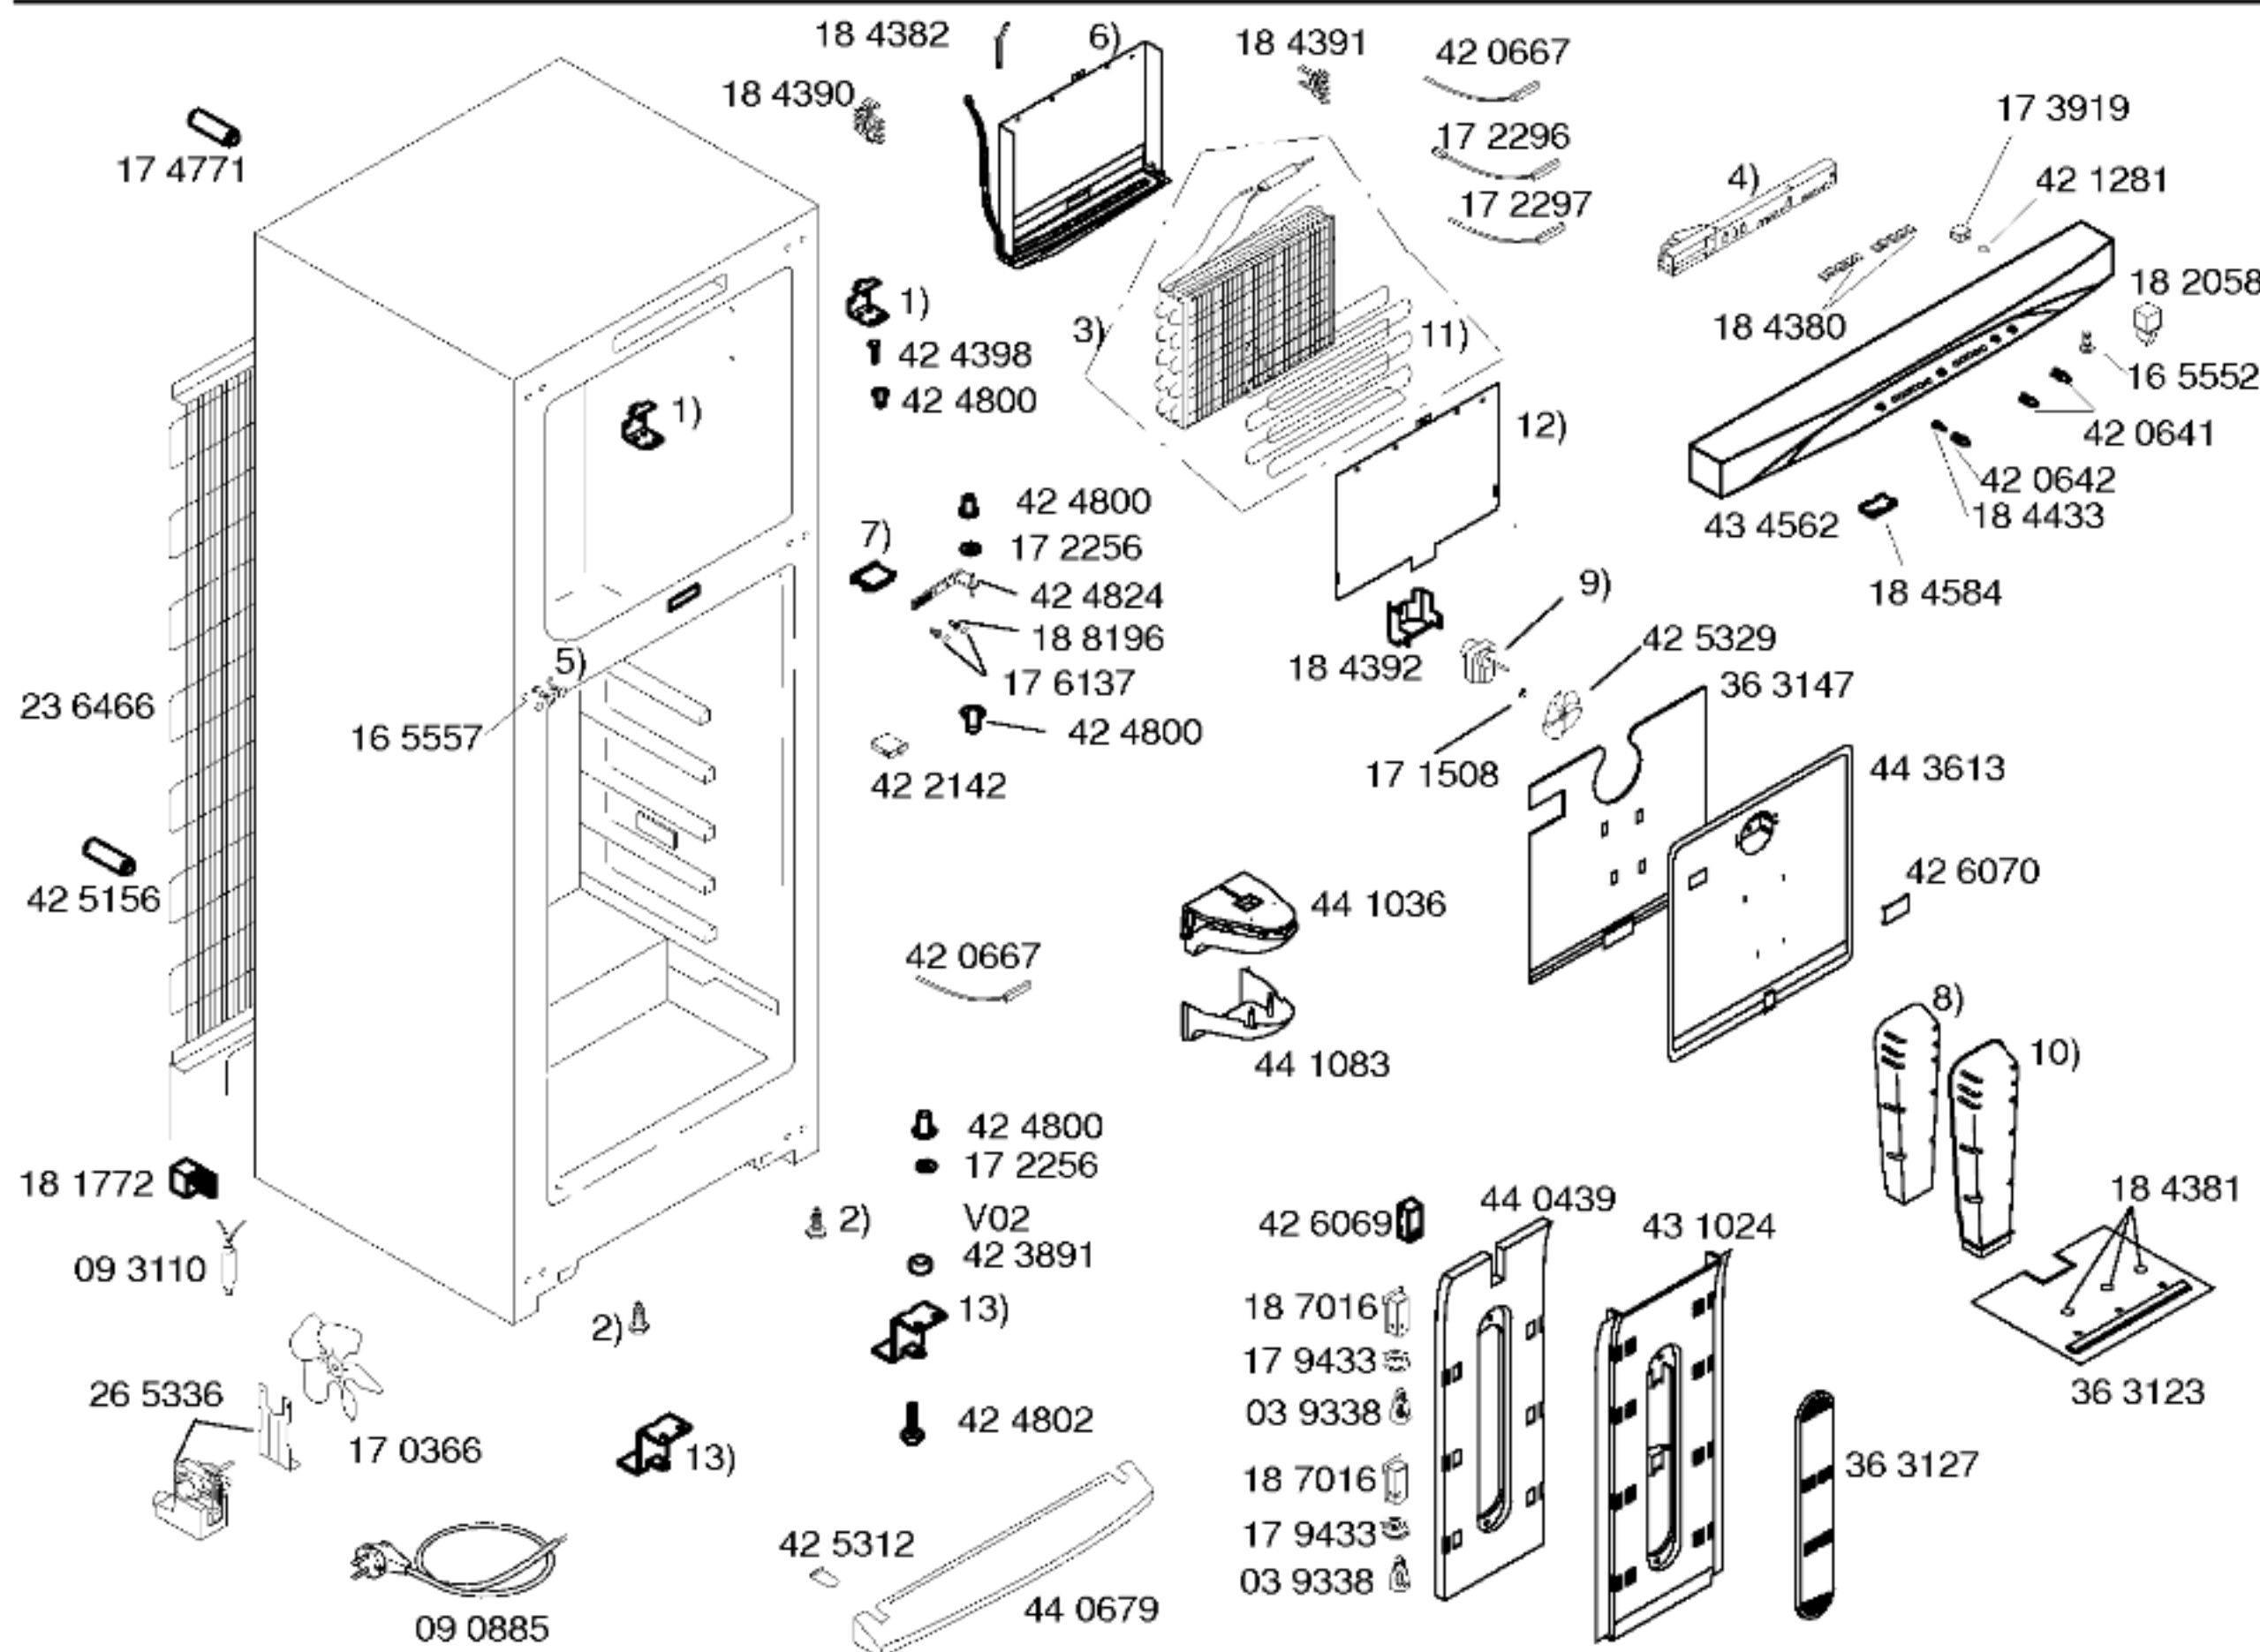

Gebrauchsanweisung
59 1117
(TR)

- 1) 17 1312
- 2) 42 4340
- 3) 43 8726
- 4) 49 5511
- 5) 16 5552
- 6) 47 3410
- 7) 41 8128
- 8) 44 3611
- 9) 49 1665
- 10) 43 7165
- 11) 36 9816
- 12) 36 6902
- 13) 42 4801
- V01
- 42 8184
- V02

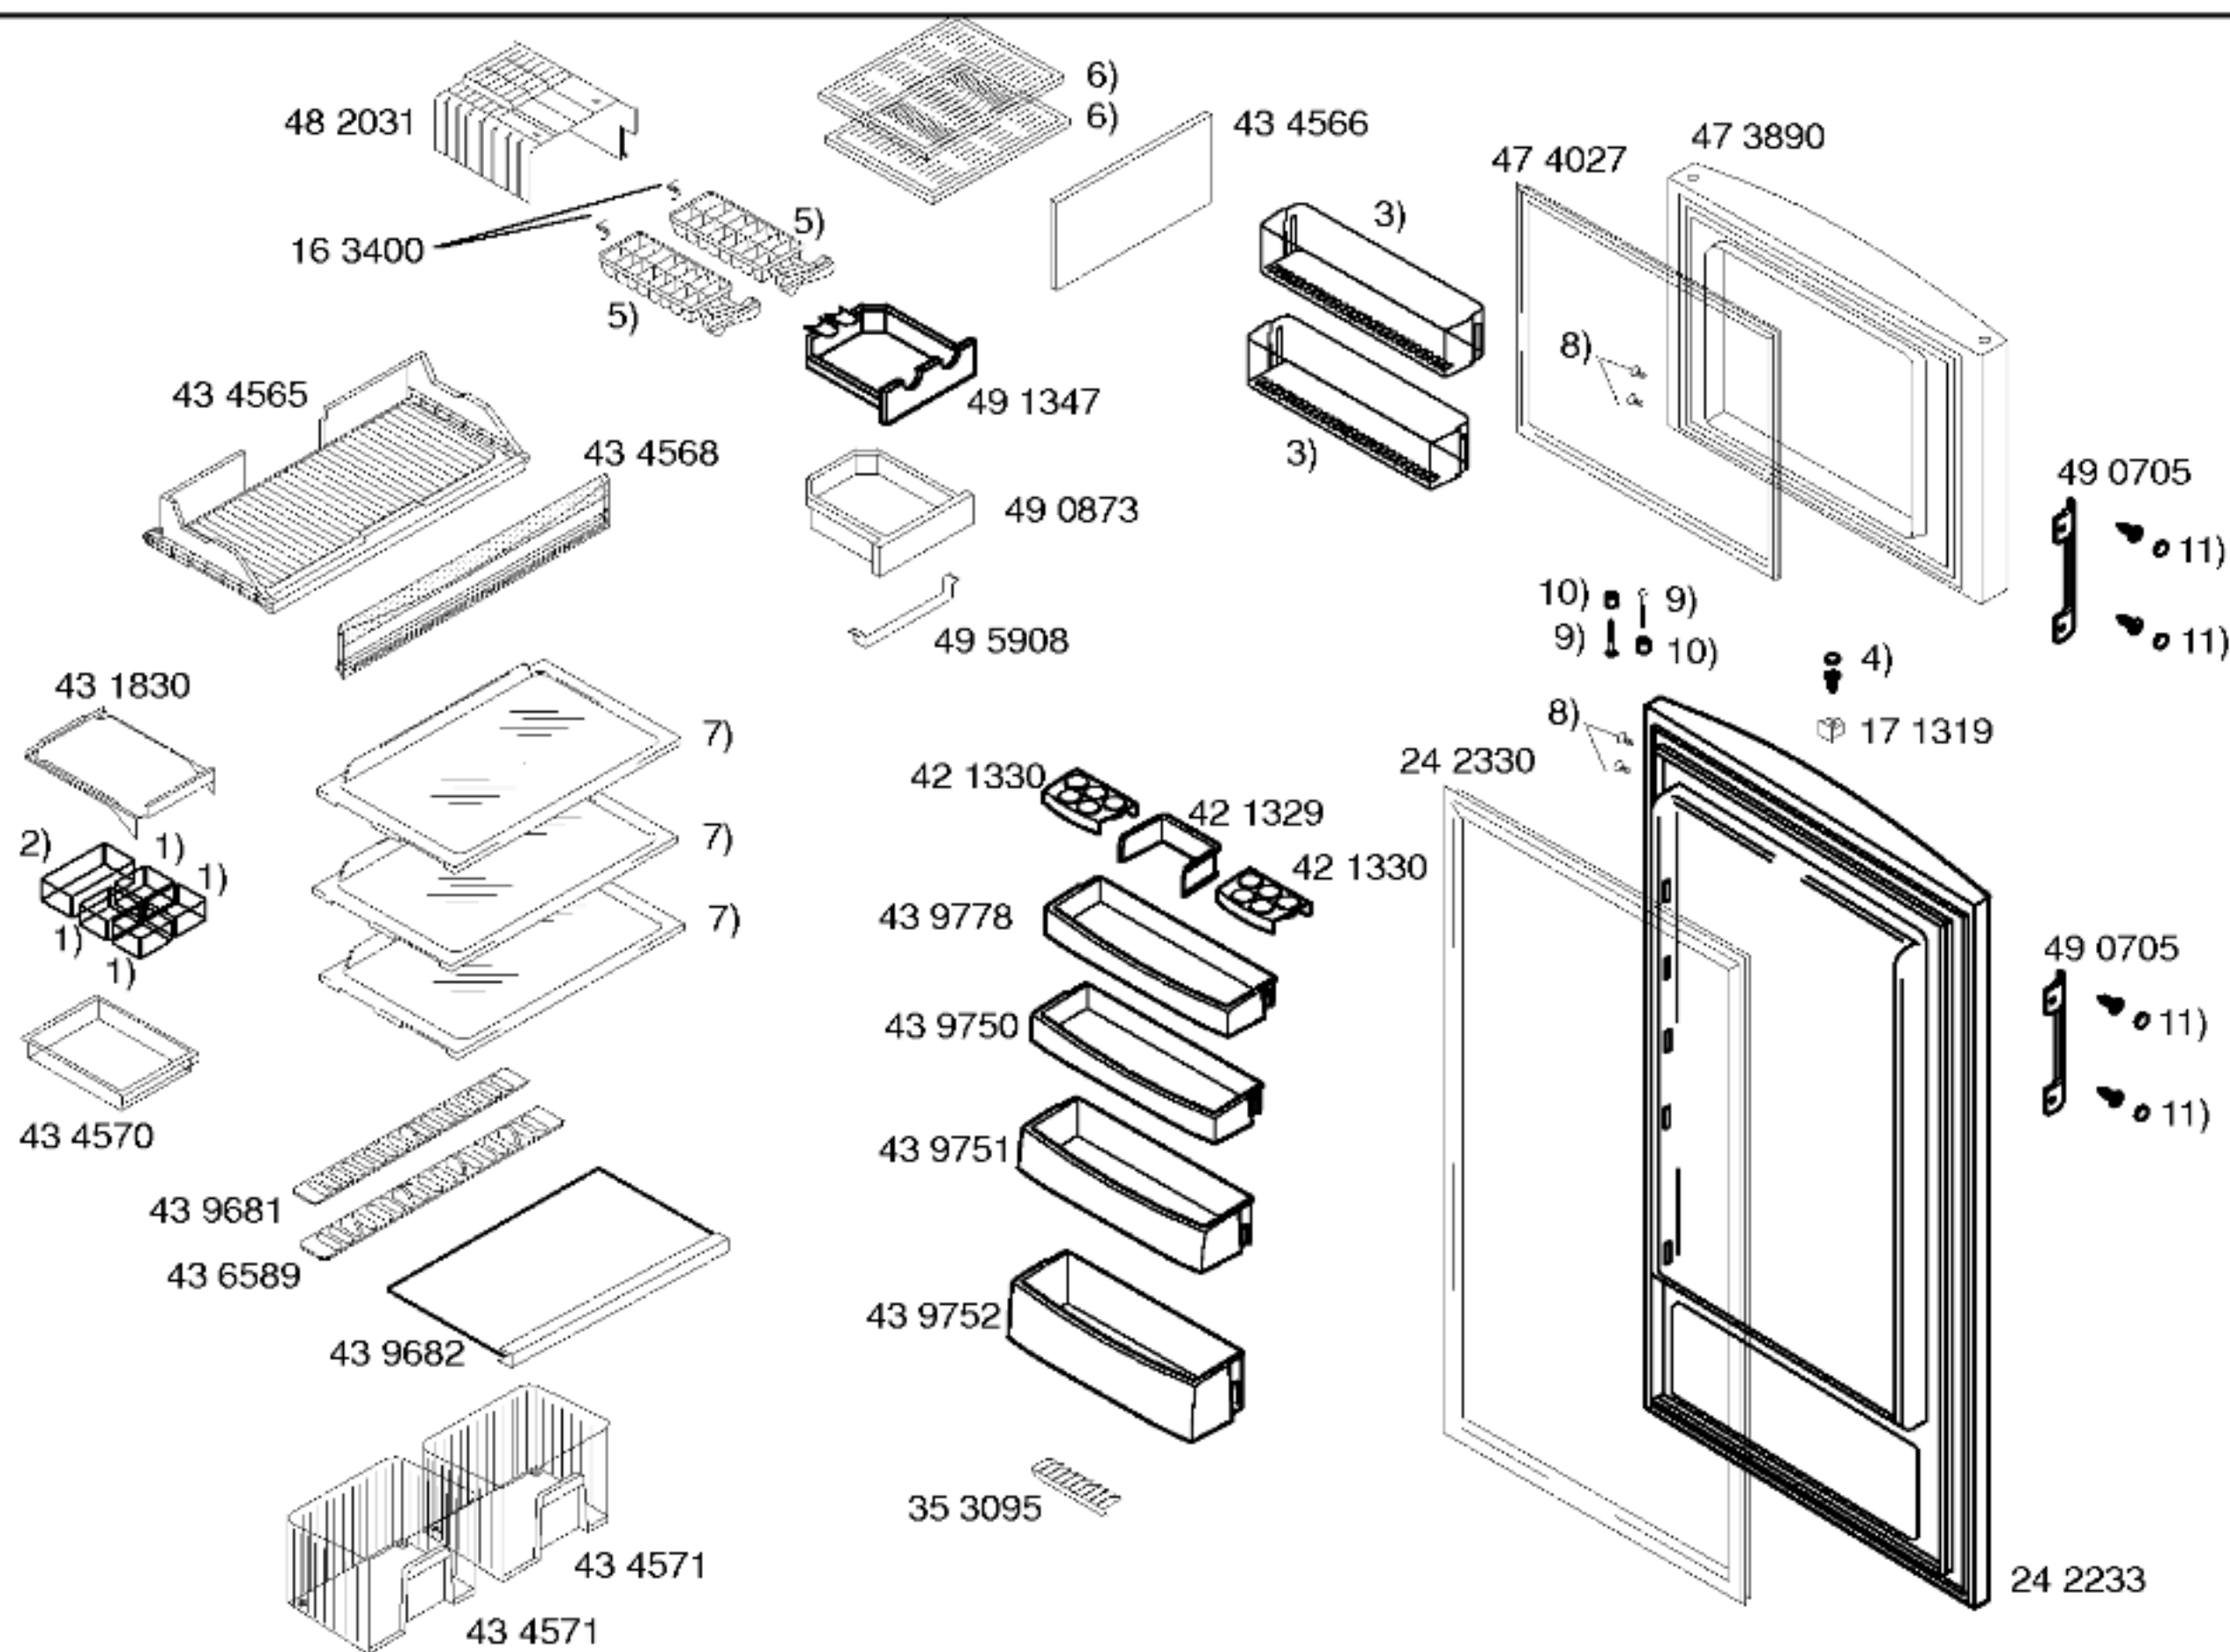

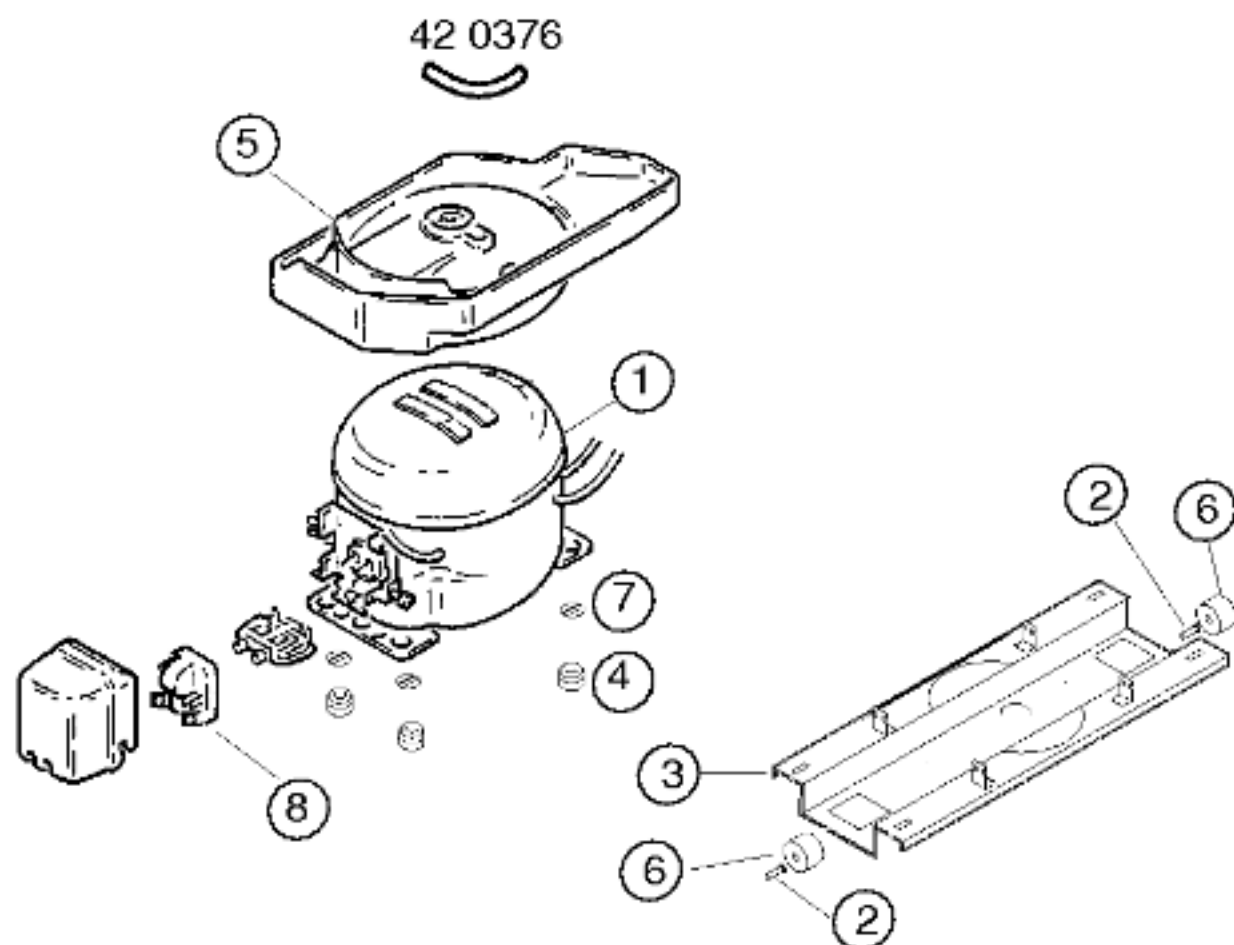

Pos.	Danfoss		
	NLE15KTK2		
1	14 2207		
2	18 1014		
3	35 4583		
4	16 3427		
5	49 4671		
6	17 1318		
7	17 1519		
8	42 6296		
9	16 5570		
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER				
Verdichter/Compressor/Kompresör		Danfoss		
Typ/Type/Tip		NLE15KTK2		
Förderleistung/Delivery/Verim/h		8		
Anlaufstrom/Starting current/Giris akimi		A		
Widerstand/Resistance/Rezistans Ha/		Ω		
Hi/aux.				
Temp.Reyler/Thermostat/Termostat		Elektronisch		
Typ/Type/Tip				
Reglerstellung/Position/Termostat pozisyonu				
Schaltwerte/Actua kapama degerleri		..ein/acma °C		
Valeurs de commutation/Termostat degeri		..aus"/kapama		
(..abtaven' od)		..alarm'		
Füllmenge/Fill. quantity/ Dolum miktarı		R600a	g	58
Anschlusswert/Comm. load/Giris gucu		W	215	
Heizung/Heater/Rezistans		Ω	Verdampfer	Ablaufrinne
Widerstand/Resistance/Direnc		W	267	81
Leistung/Power/Guc				Klappe
				4
Ventilador/Blower/Vantilatör				
Widerstand/Resistance/Rezistans		Ω		
Magnetventil/Magnetic valve/Manyetik valf				
Widerstand/Resistance/Rezistans		Ω		
Spannung/Voltage/Gerilim		V		
Temp.Reyler/Thermostat/Termostat				

* Siehe Typenschild/Mamul etiketine bakınız