



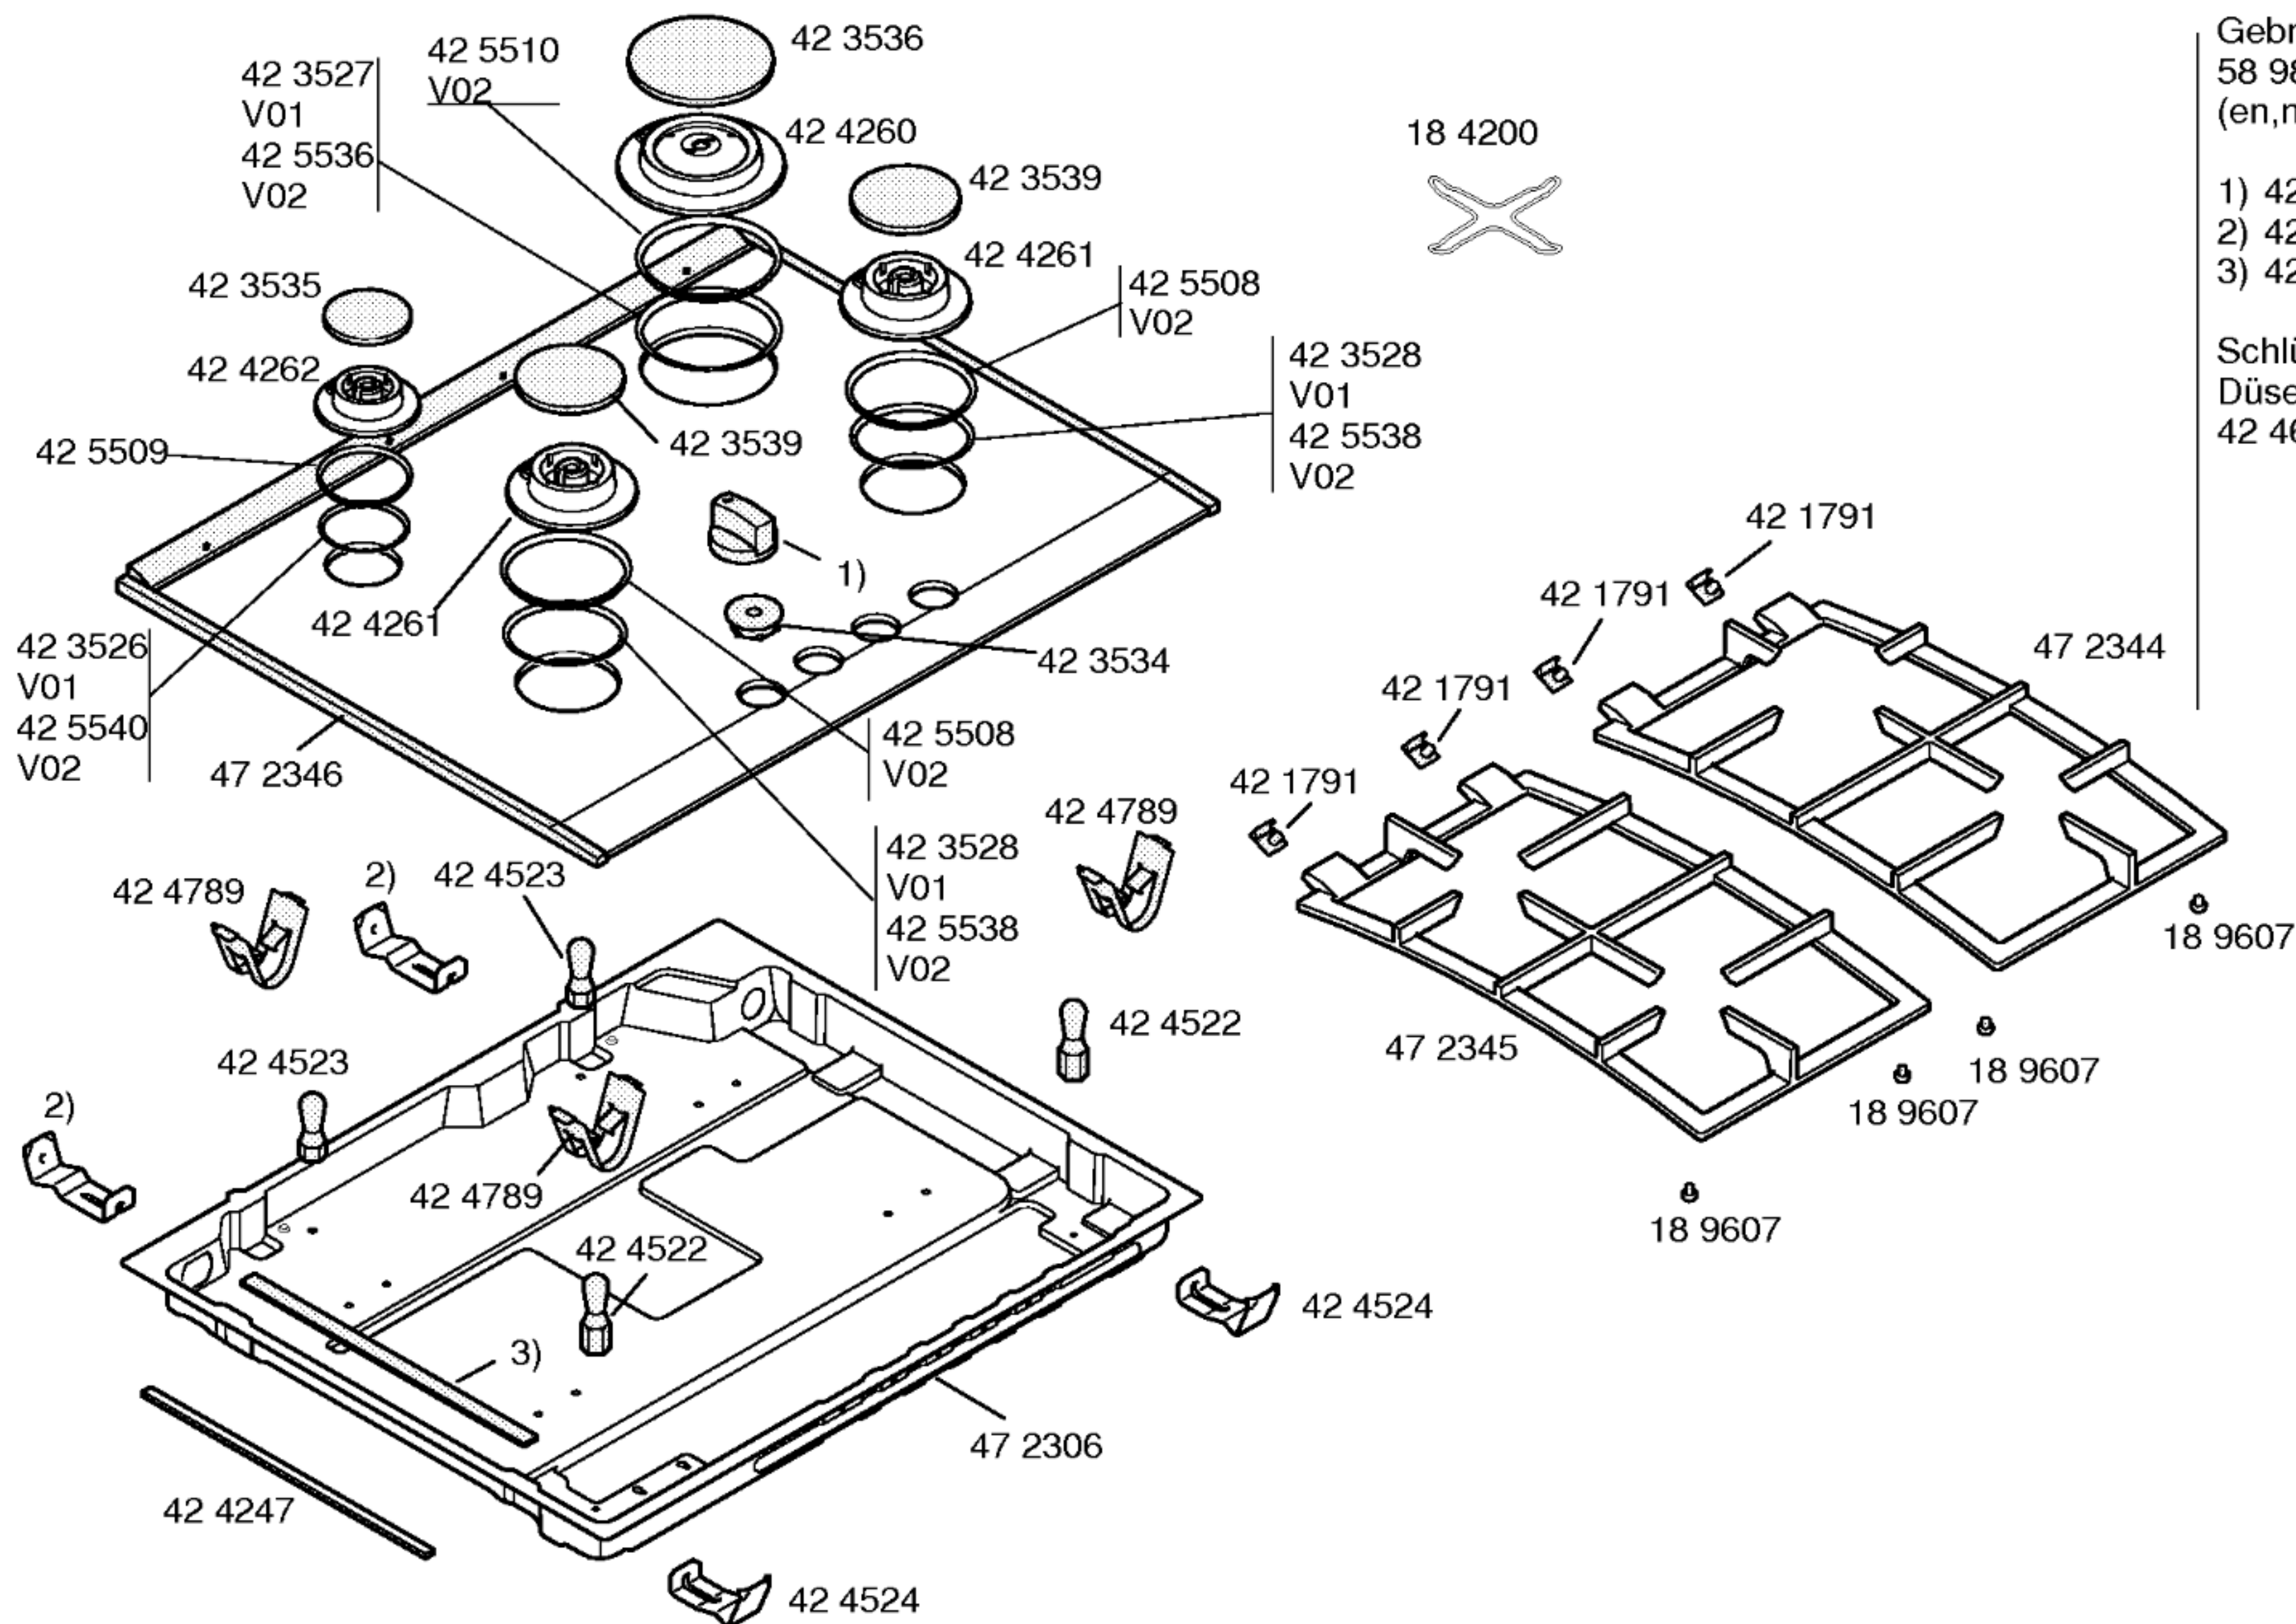

Gebrauchsanweisung
58 9818
(en,nl)

1) 42 3553
2) 42 4525
3) 42 4526

Schlüssel für
Düsenwechsel
42 4699

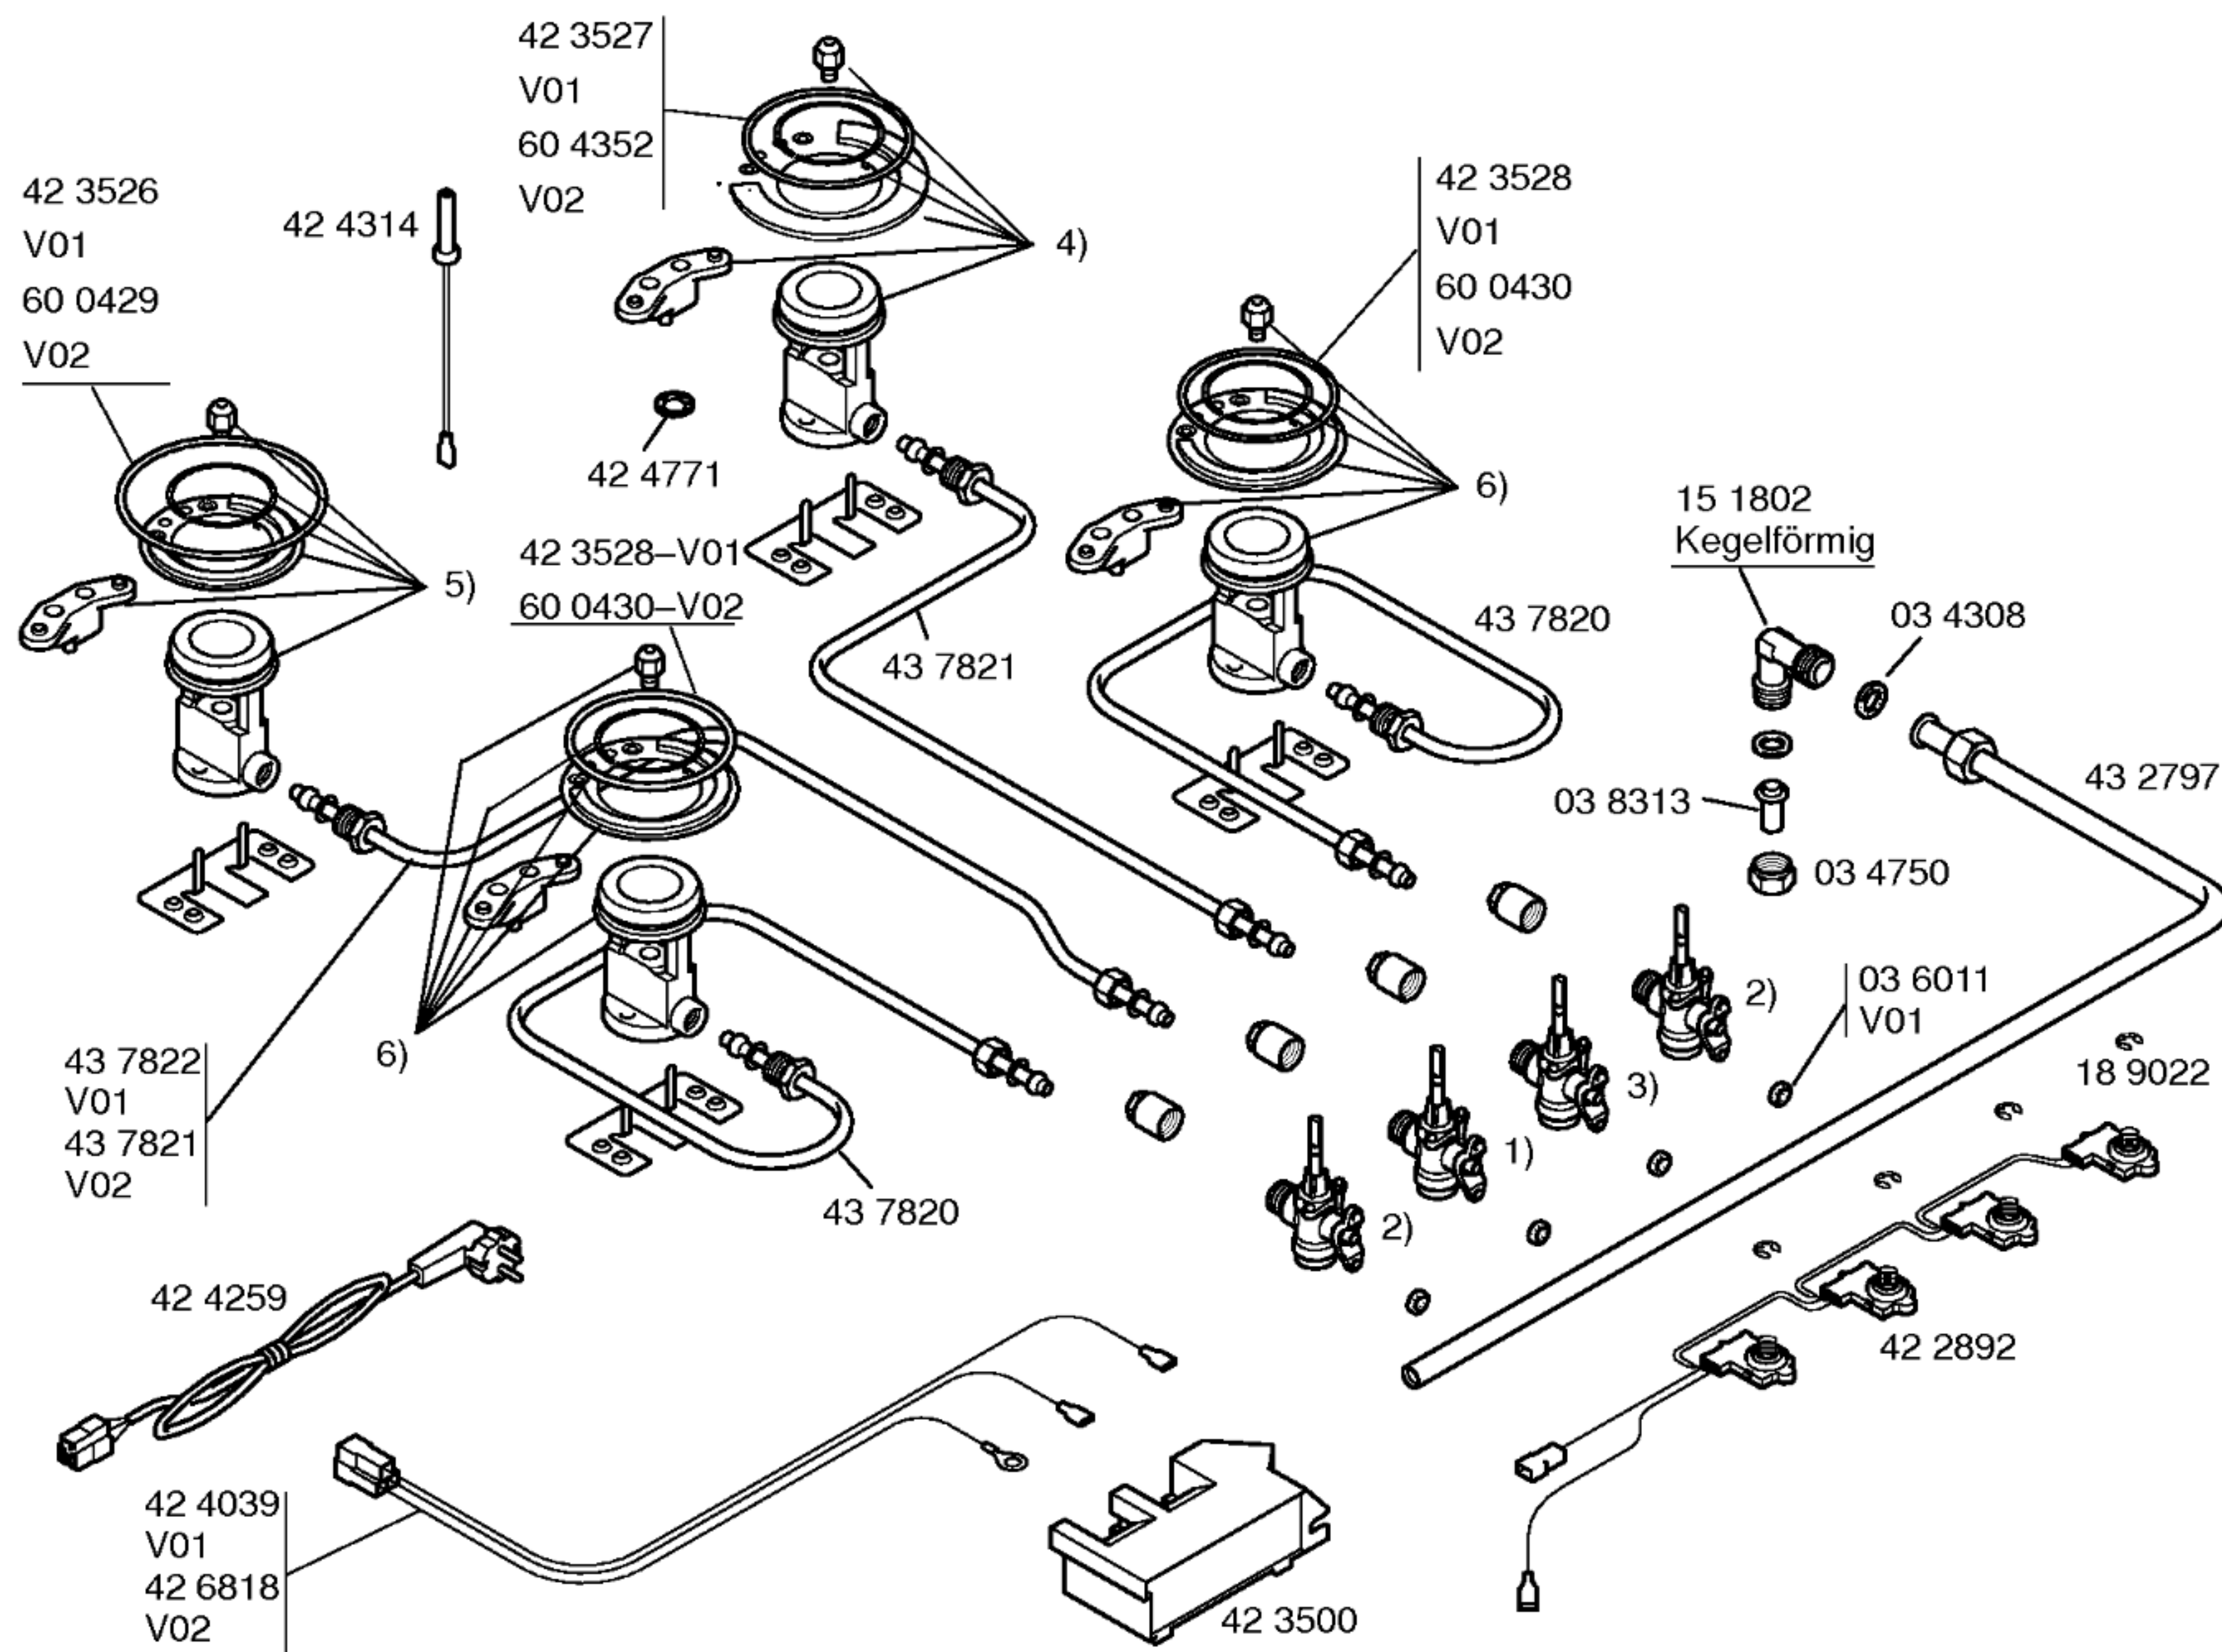

- 1) 42 4252
V01
42 4752
V02
- 2) 42 4250
V01
42 4751
V02
- 3) 42 4251
V01
42 4748
V02
- 4) 42 4253
V01
49 4439
V02
- 5) 42 4257
V01
49 4438
V02
- 6) 42 4254
V01
49 4437
V02

Düsensatz für:
G-30, 50 mbar
42 1473
G-30, 30 mbar
42 4220
G-20, 20 mbar
42 4221
G-25, 25 mbar
42 4225
G-25, 20 mbar
42 4223