



Control Panel Parts

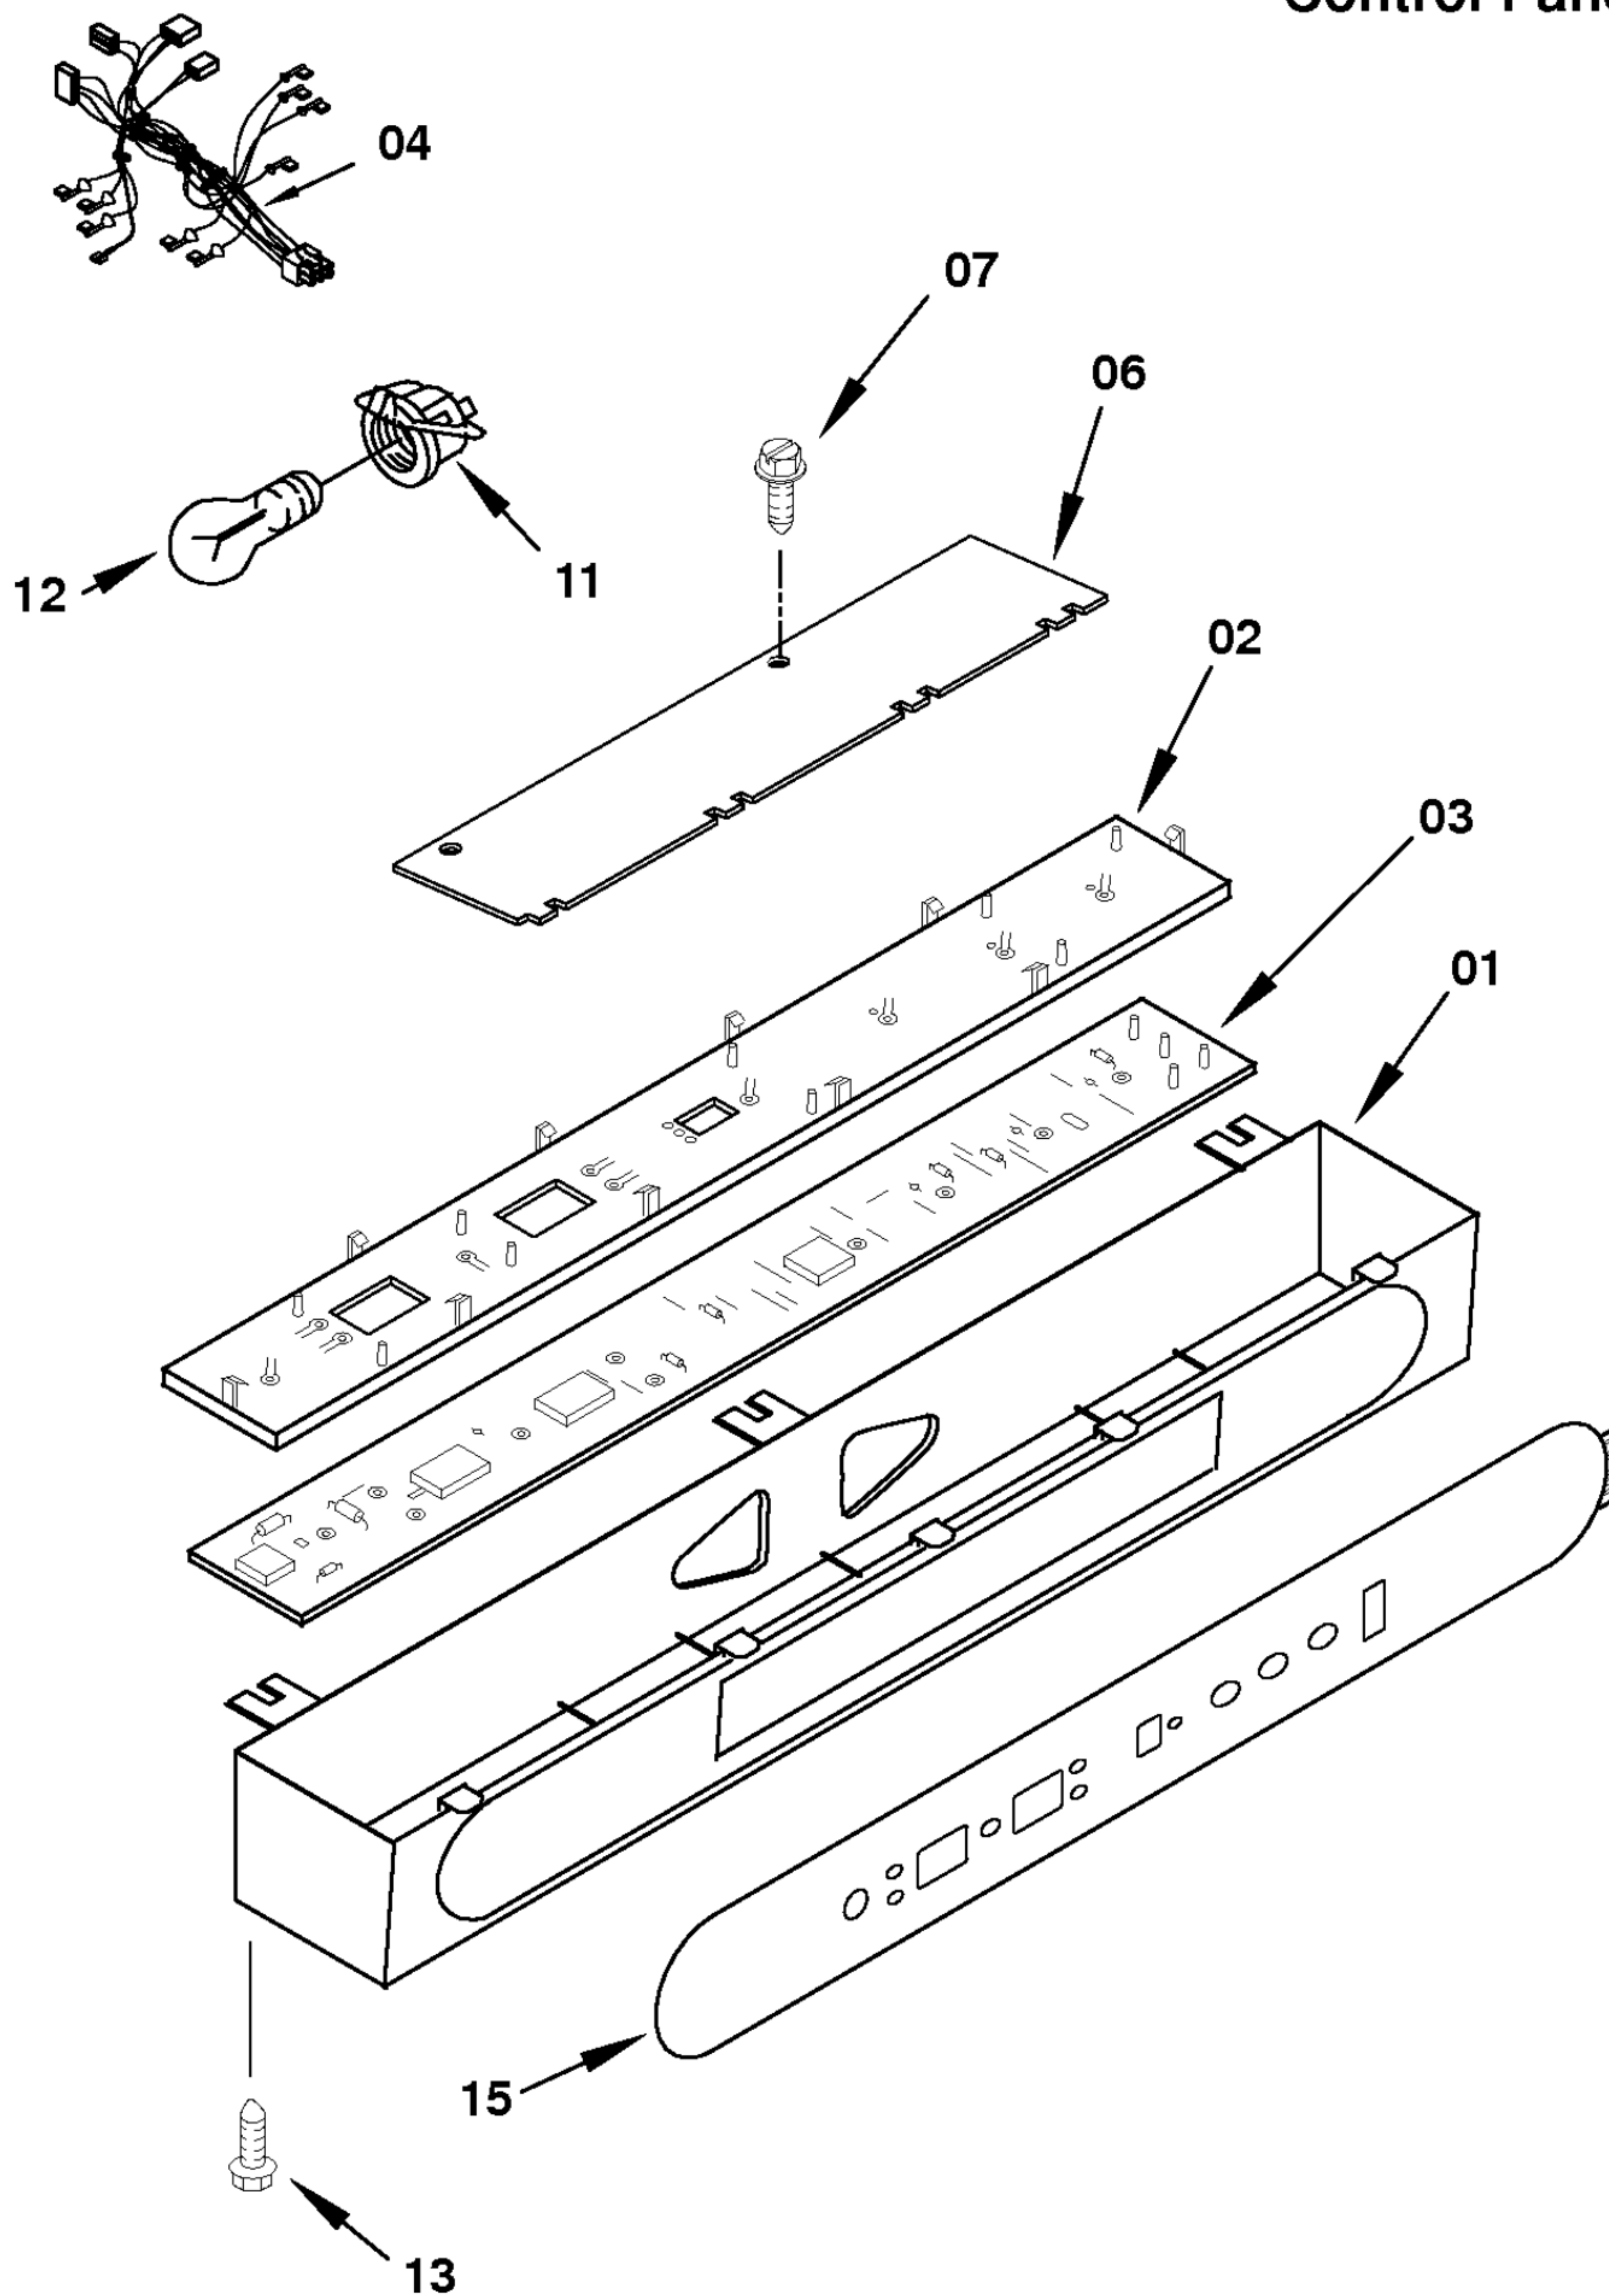

Page/Item	Part No.	Image	Part Description
01 01	14 3777	CONTROL UNIT	CONTROL PANEL
01 02	43 6752	INSERT	INSERT, CONTROL BOX
01 03	43 6753	CONTROL UNIT	CIRCUIT BOARD
01 04	49 1840	CABLE HARNESS	CONTROL BOX WIRE HARNESS
01 06	43 6754	SUPPORT	SUPPORT, CONTROL BOX
01 07	42 2350	SCREW	SCREW (2)
01 11	42 2566	SOCKET	SOCKET, LIGHT
01 12	49 1868	LAMP	LIGHT BULB (2)
01 13	41 5861	SCREW	SCREW
01 15	43 7612	PLATE	OVERLAY, CONTROL PANEL
* 01 16	42 2435	INSTRUCTION MANUAL	USE & CARE MANUAL
* 01 17	42 2443	INSTALLATION INSTRUCTIONS	ENERGY LABEL
* 01 18	42 2446	SERVICE CARD	SERVICE & WIRING SHEET
* 01 19	42 2436	SERVICE CARD	MODULAR ICEMAKER SERVICE SHEET
* 01 20	42 2439	INSTALLATION INSTRUCTIONS	INSTALLATION INSTRUCTIONS

* Not illustrated


Refrigerator Shelf Parts

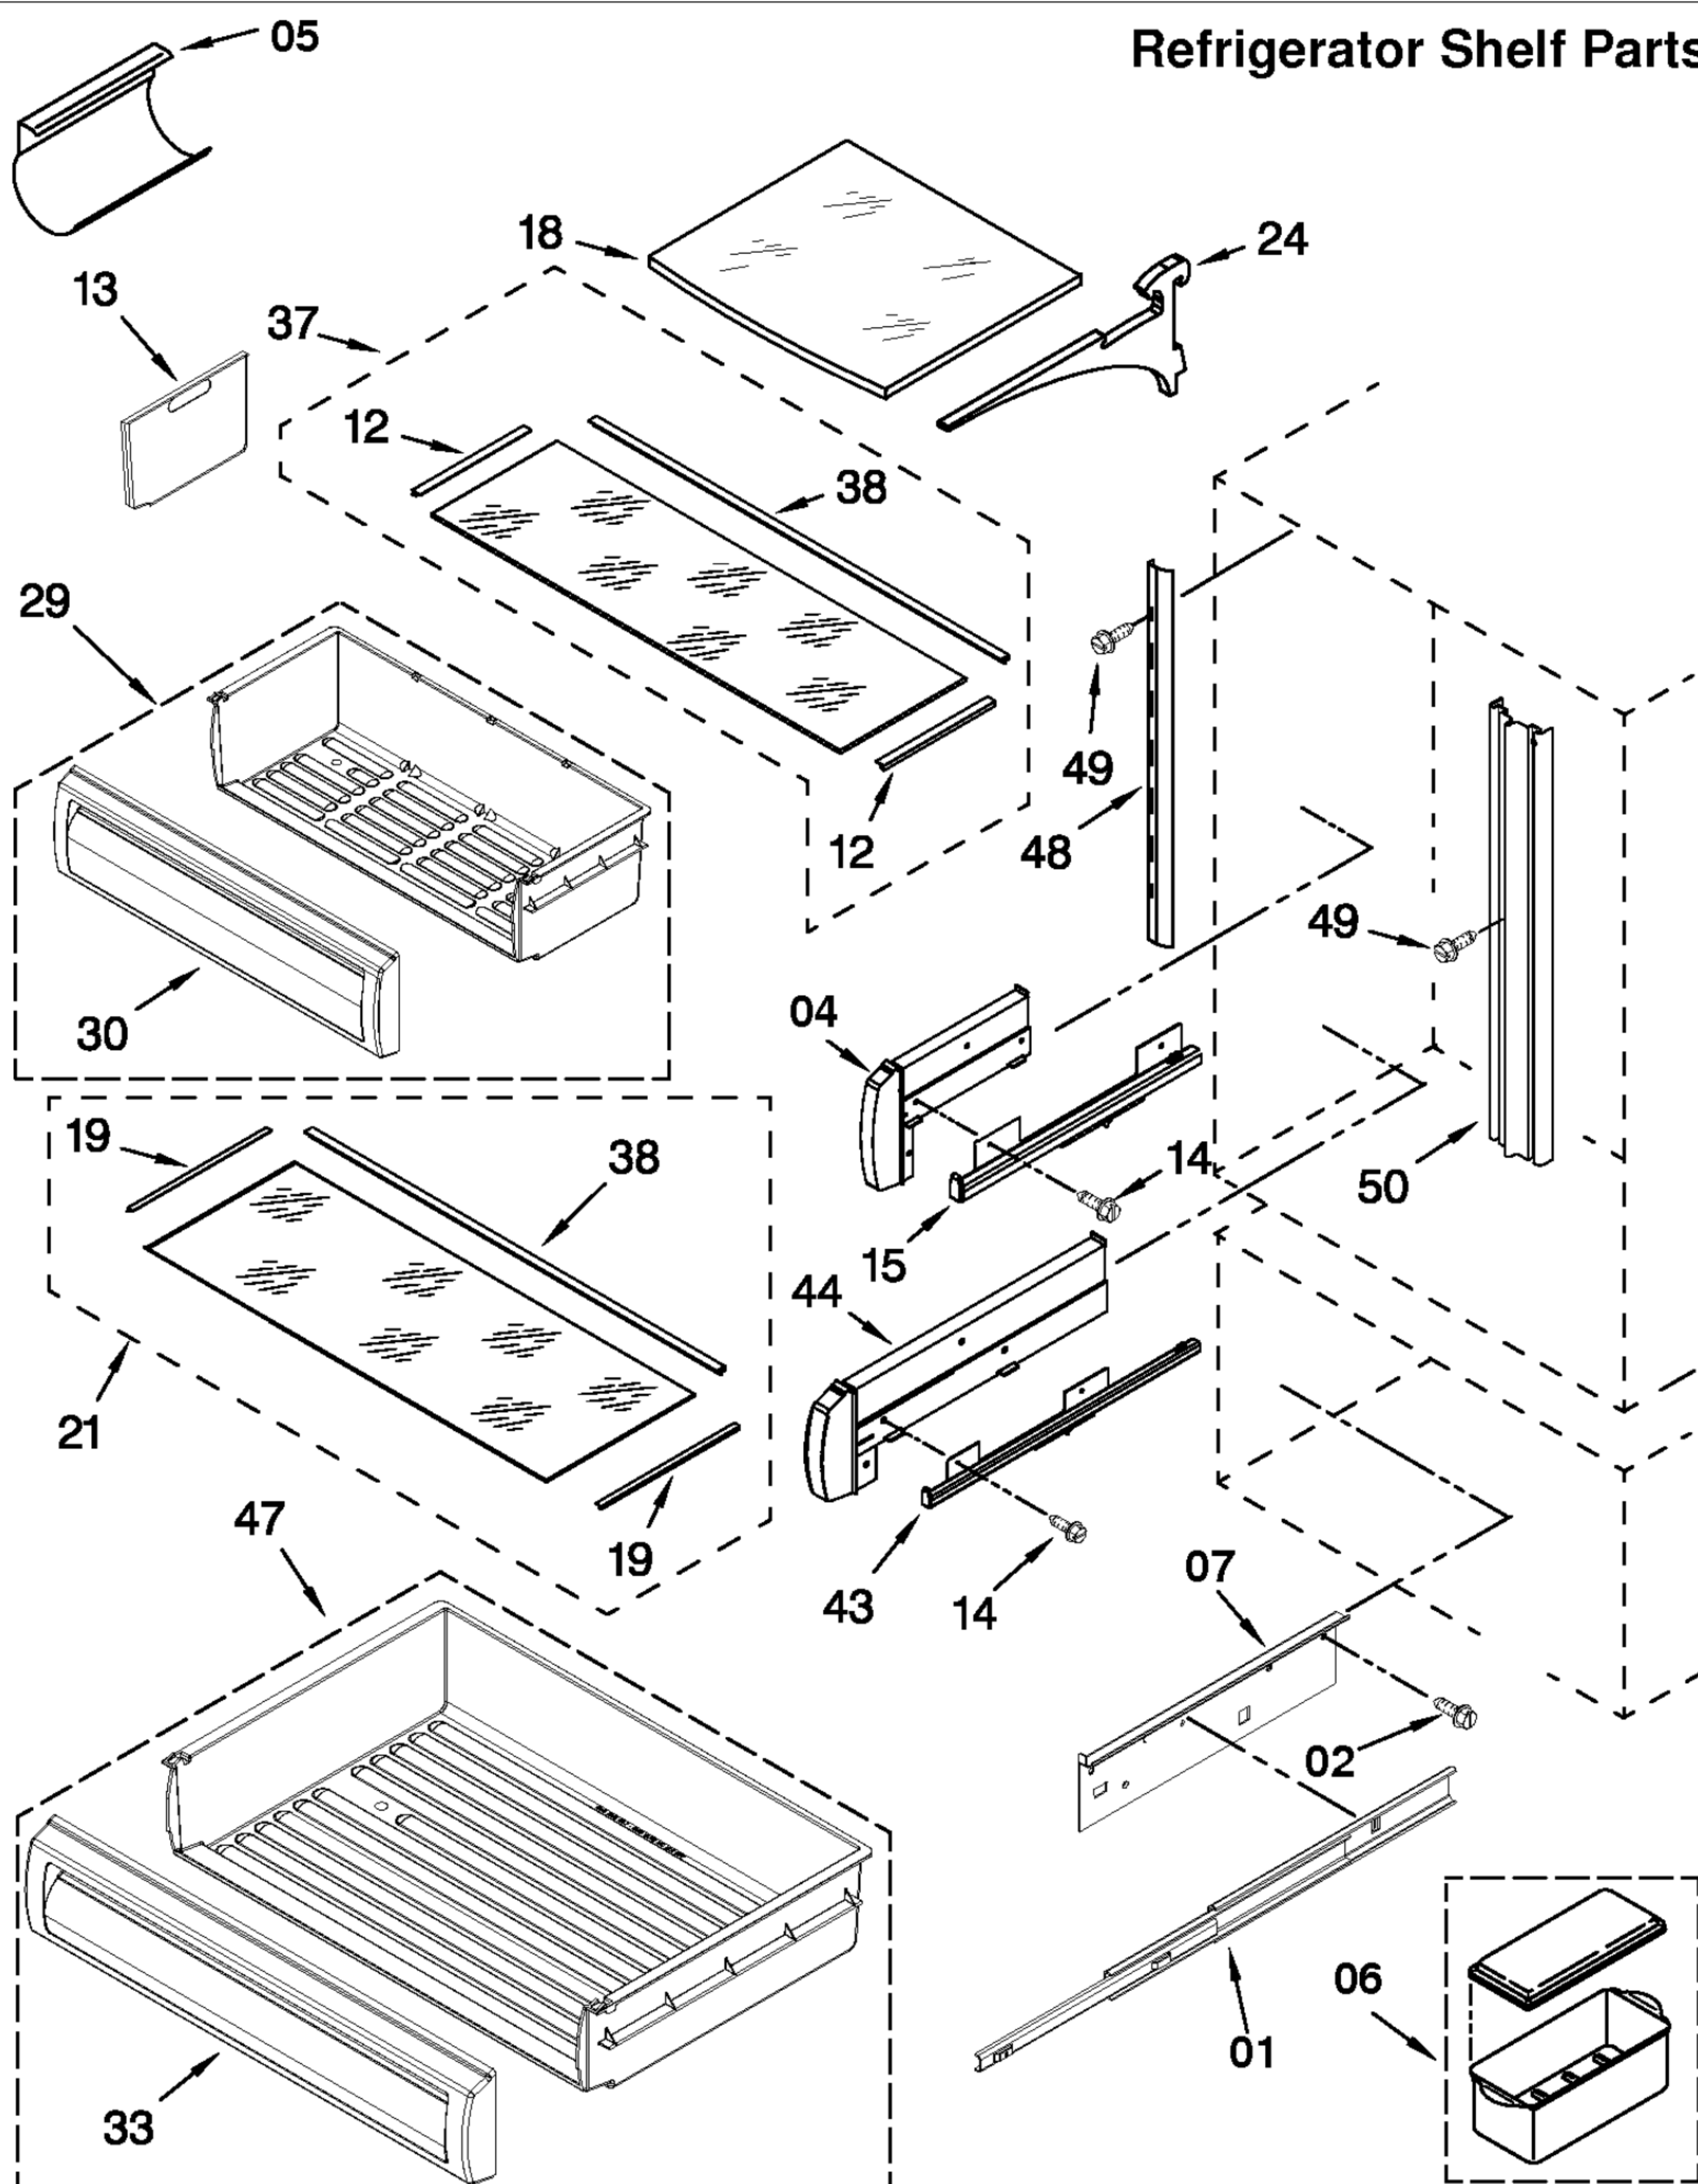

Page/Item	Part No.	Image	Part Description
11 01	43 7623	SLIDE	SLIDE, FREEZER BASKET (RIGHT)
11 02	42 2468	SCREW	SCREW, 8–15 X 1.00
11 04	43 7625	SPACER	SPACER, CRISPER (RIGHT)
11 05	43 6707	SHELF	RACK, WINE
11 06	43 6758	EGG RACK	EGG BIN ASSEMBLY
11 07	43 7627	BRACKET	BRACKET, FREEZER BASKET (RIGHT)
11 12	49 2320	EDGE PROTECTION	TRIM-GLASS, SIDE (2)
11 13	49 2322	DIVIDING WALL	DIVIDER, CRISPER PAN
11 14	42 2464	SCREW	SCREW (2)
11 15	43 7629	SLIDE	SLIDE, CRISPER (LEFT)
11 18	143786	SHELF	ASSEMBLY, GLASS SHELF (4)
11 19	49 2321	EDGE PROTECTION	TRIM-GLASS, SIDE (2)
11 21	47 2162	SHELF	ASSEMBLY-GLASS SHELF, DELI
11 24	49 1869	SUPPORT	SIDEARM, SHELF (8)
11 29	472163	PAN	CRISPER PAN ASSEMBLY
11 30	143787	PANEL	FRONT CRISPER PAN
11 33	14 3788	PANEL	FRONT DELI PAN
11 37	472165	SHELF	CRISPER SHELF ASSEMBLY
11 38	437631	EDGE PROTECTION	TRIM-GLASS, REAR (2)
11 43	437632	SLIDE	SLIDE, DELI (LEFT)
11 44	143789	SPACER	SPACER, DELI (LEFT)
11 47	472164	PAN	DELI PAN ASSEMBLY
11 48	43 7634	FRAME	LADDER, SHELF SIDE (2)
11 49	42 2468	SCREW	SCREW (2)
11 50	43 7635	FRAME	LADDER, SHELF CENTER
* 11 51	43 7624	SLIDE	SLIDE, FREEZER BASKET (LEFT)
* 11 52	43 7626	SPACER	SPACER, CRISPER (LEFT)
* 11 53	43 7628	BRACKET	BRACKET, FREEZER BASKET (LEFT)
* 11 54	43 7630	SLIDE	SLIDE, CRISPER (RIGHT)
* 11 55	43 7633	SLIDE	SLIDE, DELI (RIGHT)
* 11 56	14 3790	SPACER	SPACER, DELI (RIGHT)

* Not illustrated


Refrigerator Door Parts

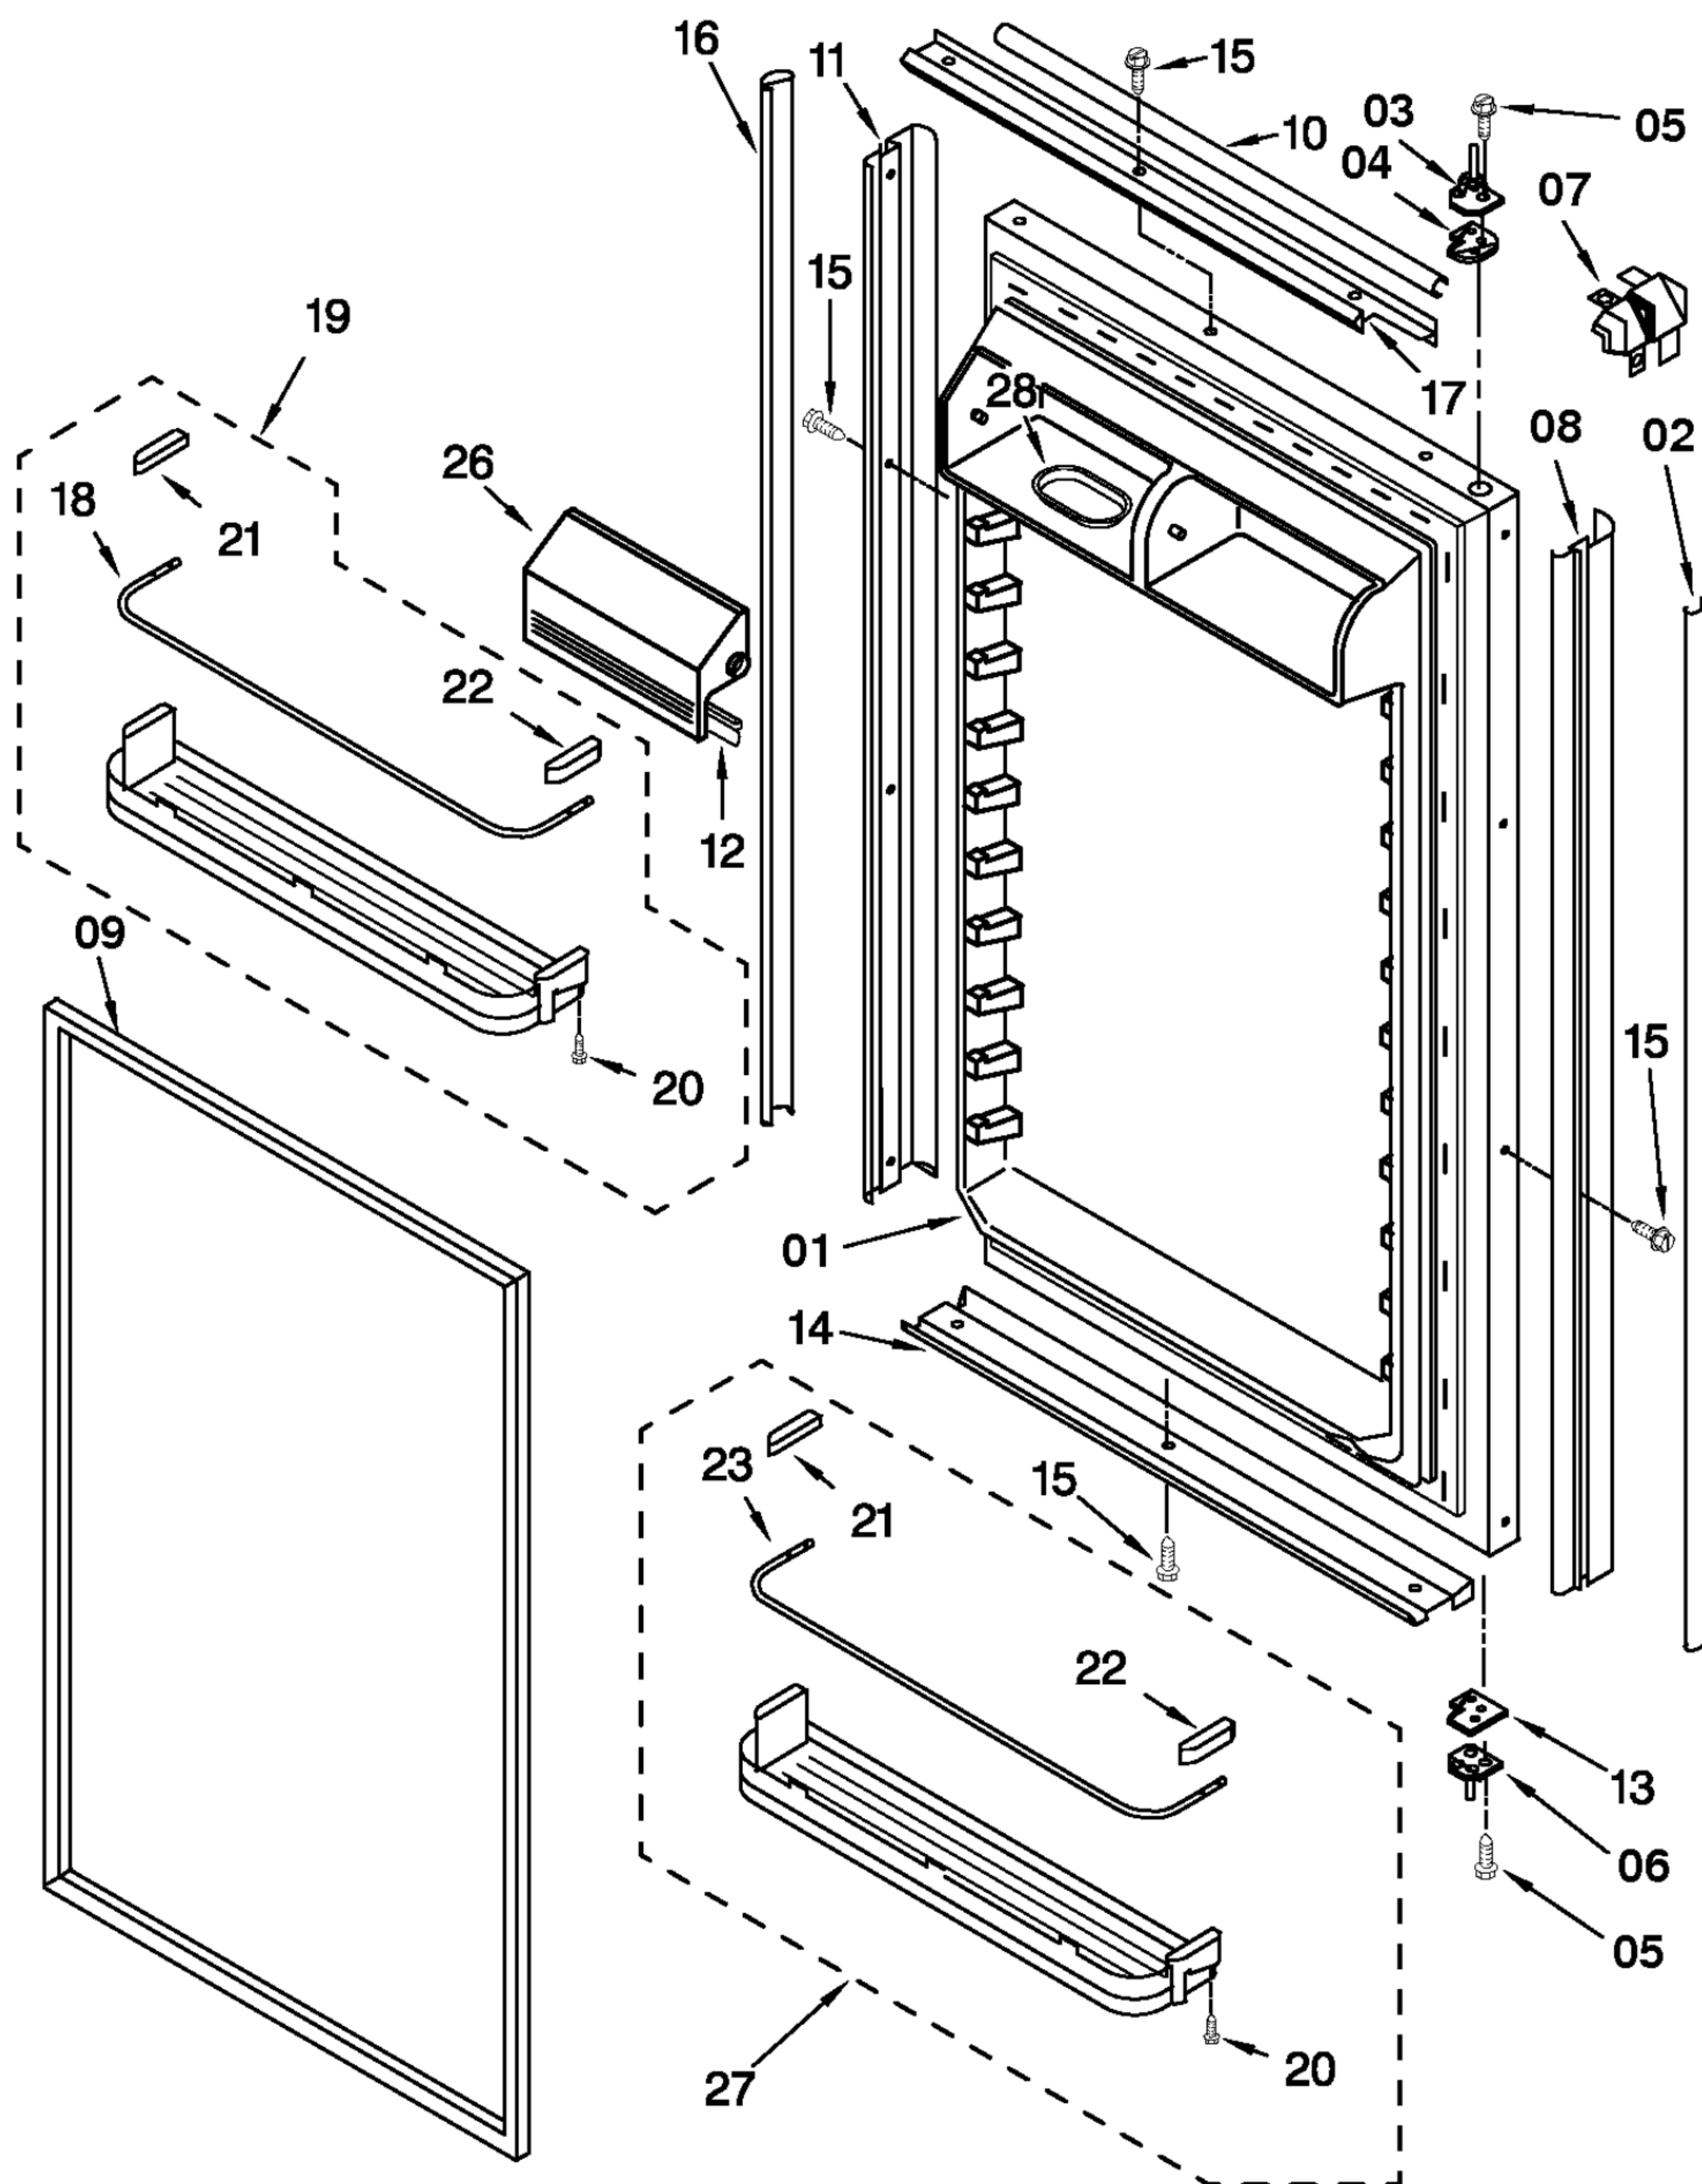

Page/Item	Part No.	Image	Part Description
13 01	24 1351	DOOR, INNER	REFRIGERATOR DOOR
13 02	47 2169	COVER	COVER, SCREW (HINGE SIDE)
13 03	42 3286	HINGE	HINGE ASSEMBLY (TOP)
13 04	42 2644	SPACER	SPACER, HINGE (TOP)
13 05	41 5889	SCREW	SCREW, 10-32 X 3/4 (2)
13 06	42 3287	HINGE	HINGE ASSEMBLY (BOTTOM)
13 07	49 2330	FRAME-DECOR	TRIM, CORNER
13 08	47 2172	FRAME-DECOR	TRIM, DOOR (HINGE SIDE)
13 09	47 2161	SEAL-DOOR	DOOR GASKET, MAGNETIC
13 10	14 3795	COVER	COVER, SCREW (TOP)
13 11	47 2173	HANDLE-DOOR	HANDLE, DOOR (SS)
13 12	42 2471	SEAL	GASKET (2)
13 13	42 3288	SPACER	SPACER, HINGE (BOTTOM)
13 14	14 3796	FRAME-DECOR	TRIM, DOOR (BOTTOM)
13 15	41 5861	SCREW	SCREW, 8-15 X 1/2 (SS) (4)
13 16	47 2174	COVER	COVER, SCREW (HANDLE SIDE)
13 17	14 3797	FRAME-DECOR	TRIM, DOOR (TOP)
13 18	43 7621	TUBE	TUBE, DOOR SHELF
13 19	14 3741	SHELF	SHELF, DOOR ASSEMBLY (2)
13 20	42 2397	SCREW	SCREW, 8-18 X 3/4 (2)
13 21	42 2430	CAP LOCK	END CAP (LEFT) (2)
13 22	42 2429	CAP LOCK	END CAP (RIGHT) (2)
13 23	43 7622	TUBE	TUBE, DOOR SHELF (GALLON)
13 26	49 1823	DOOR	DOOR UTILITY BIN (2)
13 27	14 3785	SHELF	DOOR SHELF ASSEMBLY, GALLON
13 28	48 7840	THERMADOR SPARE PART	BUTTER TRAY

* Not illustrated


Freezer Door and Basket Parts

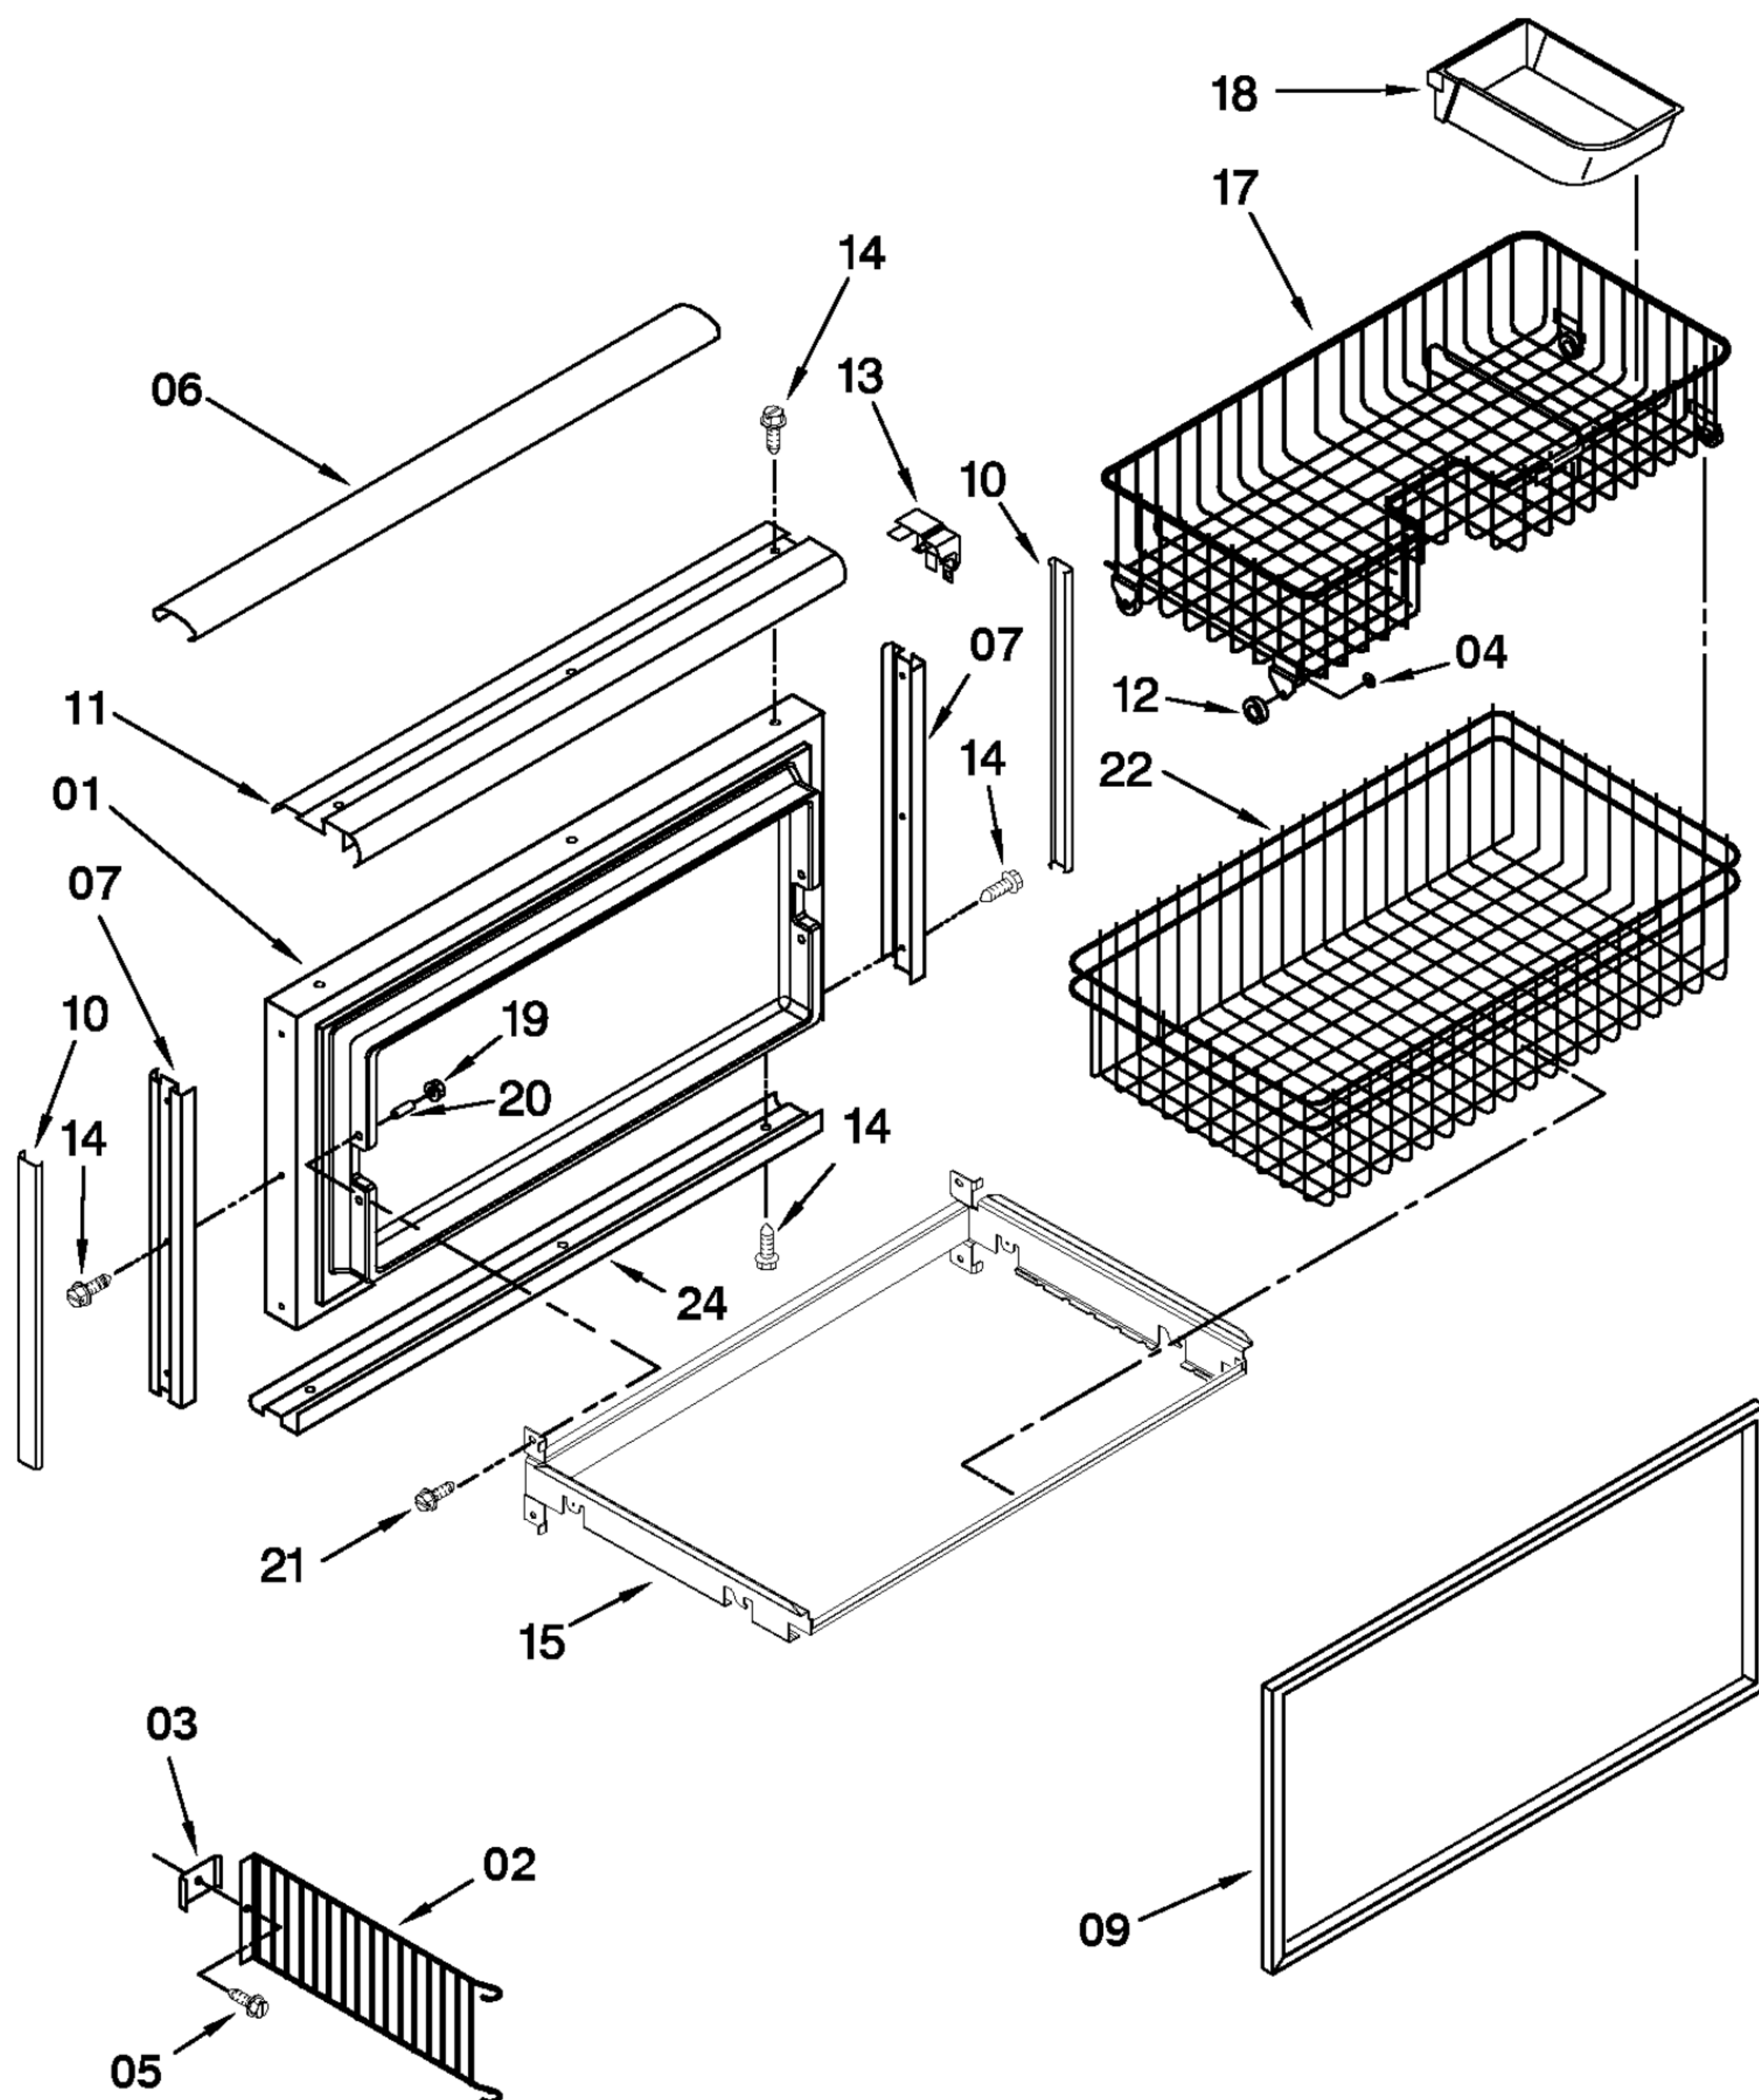

Page/Item	Part No.	Image	Part Description
15 01	47 2153	DOOR, INNER	FREEZER DOOR PANEL
15 02	43 7618	DIVIDING WALL	DIVIDER, BASKET
15 03	42 2457	CLAMP	CLAMP, DIVIDER
15 04	42 2497	NUT	NUT, CRIMP
15 05	42 2458	SCREW	SCREW
15 06	14 3799	COVER	COVER, SCREW (TOP)
15 07	43 7648	FRAME-DÉCOR	TRIM, DOOR (SIDE) (2)
15 09	14 3782	SEAL-DOOR	DOOR GASKET, MAGNETIC
15 10	43 7649	COVER	COVER, SCREW (SIDE) (2)
15 11	14 3800	HANDLE-DOOR	HANDLE, DOOR (SS)
15 12	42 3282	ROLLER SET	ROLLER
15 13	49 2330	FRAME-DÉCOR	TRIM, CORNER
15 14	41 5861	SCREW	SCREW (SS), 8-15 X 1/2 (4)
15 15	47 2155	FRAME	BRACKET ASSEMBLY, FREEZER BASKET
15 17	47 2156	BASKET-FROZEN FOOD	BASKET, UPPER
15 18	43 7620	ICE BIN	PAN, ICE CUBE
15 19	42 2498	NUT	NUT, HEX
15 20	42 3283	SLEEVE	BUSHING
15 21	42 2461	SCREW	SCREW
15 22	47 2157	BASKET-FROZEN FOOD	BASKET, FREEZER (LOWER)
15 24	14 3798	FRAME-DÉCOR	TRIM-DOOR

* Not illustrated


Liner Parts

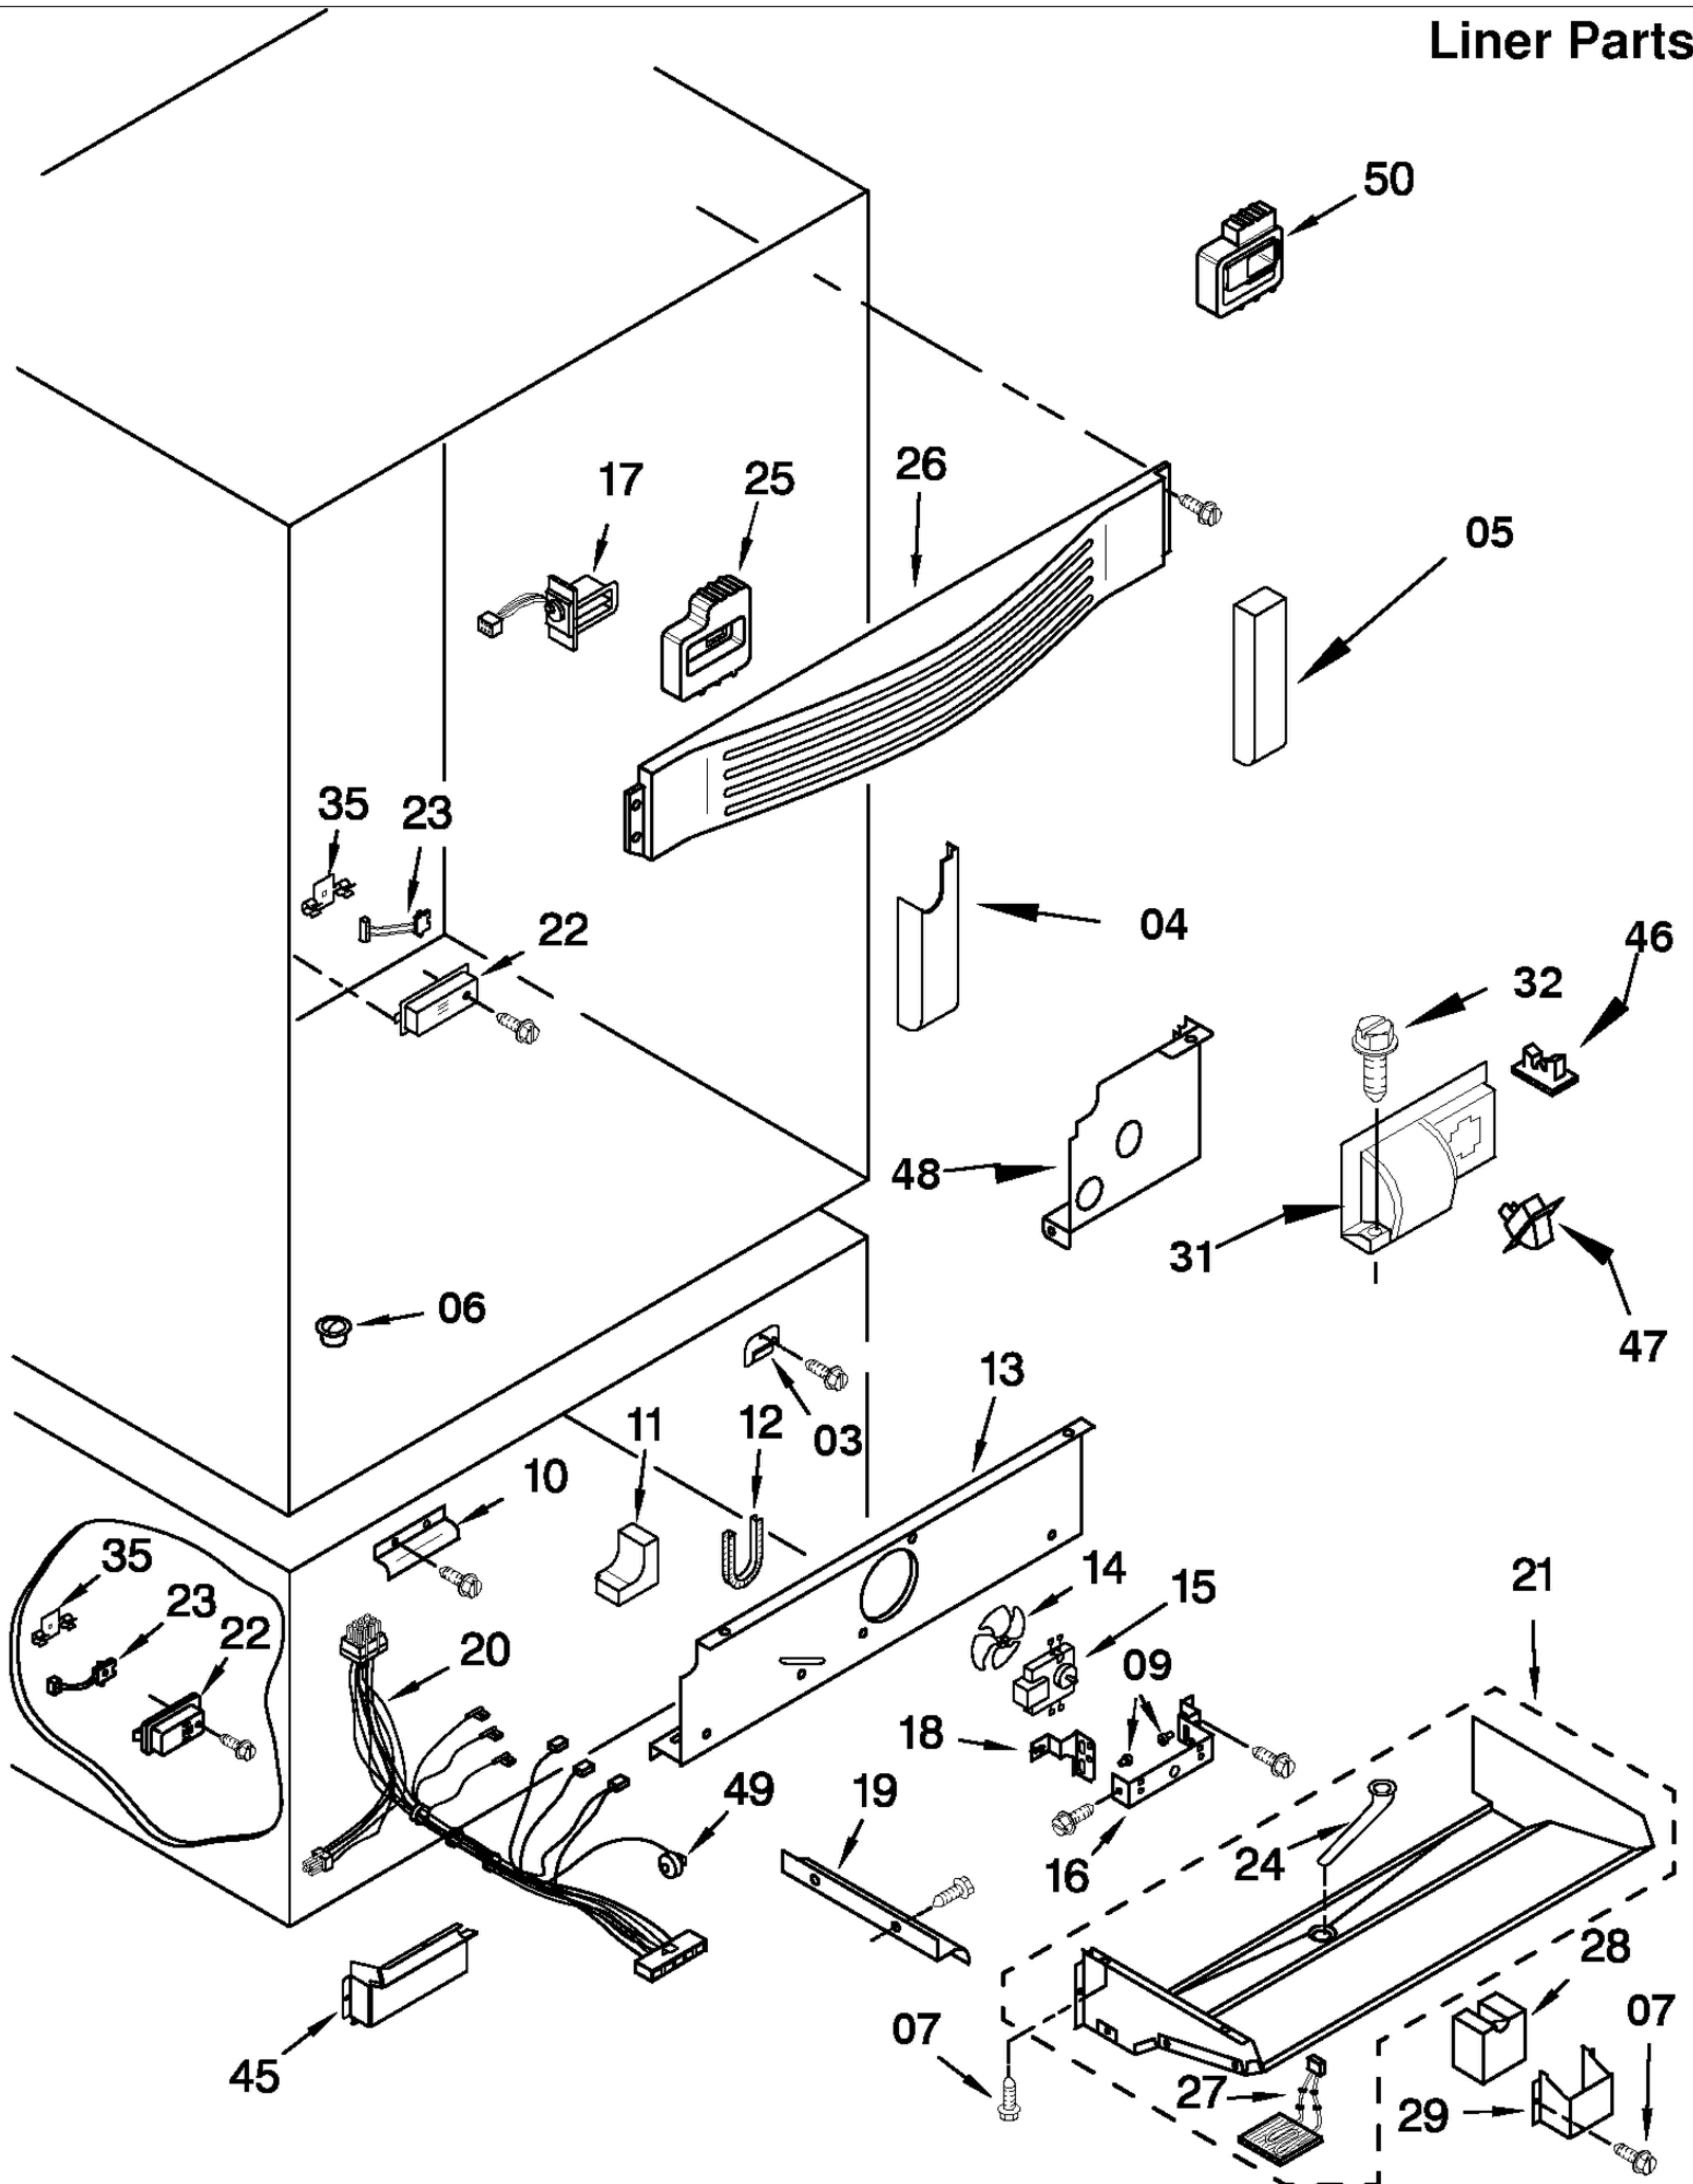

Page/Item	Part No.	Image	Part Description
17 03	42 3272	COVER	COVER, HEAT EXCHANGER
17 04	49 2313	COVER	DIFFUSER CAP, LEFT
17 05	42 2470	COVER	DIFFUSER CAP, RIGHT
17 06	42 2483	VALVE	RELEASE VALVE
17 07	41 5861	SCREW	SCREW, 8–15 X 1/2 (2)
17 09	42 2358	WASHER	MOTOR, GROMMET
17 10	42 2472	BRACKET	WIRING CHANNEL, FREEZER (REAR)
17 11	42 3274	SHIELD	FOAM, FAN SHROUD
17 12	42 2568	BRACKET	GROMMET, FLEXIBLE
17 13	43 7617	COVER	SHROUD, EVAPORATOR FAN
17 14	41 6121	FAN BLADE	BLADE, FAN (EVAPORATOR)
17 15	42 3276	MOTOR–FAN	MOTOR, FAN (EVAPORATOR)
17 16	42 2314	BRACKET	BRACKET–DOUBLE, FAN MOTOR
17 17	49 1969	AIR CHANNEL	AIR BAFFLE ASSEMBLY
17 18	42 2402	BRACKET	BRACKET–SINGLE, FAN MOTOR
17 19	49 2314	BRACKET	WIRING CHANNEL
17 20	43 6726	CABLE HARNESS	WIRING HARNESS, FREEZER
17 21	14 3779	COVER	COVER, EVAPORATOR ASSEMBLY
17 22	41 5995	COVER	COVER, THERMISTOR (2)
17 23	49 1867	SENSOR	THERMISTOR (2)
17 24	42 3277	TUBE	DRAIN TUBE, CONDENSATE
17 25	42 3278	INSULATING PART	INSULATION, BAFFLE
17 26	14 3780	COVER	COVER, AIR DIFFUSER
17 27	42 3277	HEATER ELEMENT	HEATER, TUBE DRAIN
17 28	42 3279	INSULATING PART	INSULATION, TUBE DRAIN
17 29	42 3280	COVER	COVER, TUBE DRAIN
17 31	49 2316	HOUSING	HOUSING, SWITCH
17 32	42 2352	SCREW	SCREW, 8–18 X 3/8
17 35	42 2546	CLIP	CLIP, THERMISTOR (2)
17 45	49 2317	COVER	WIRING COVER, FREEZER LIGHT
17 46	41 6273	CLIP	CLIP, WIRING
17 47	42 2513	SWITCH–DOOR	SWITCH, ROCKER
17 48	42 2433	COVER	WIRING COVER, ICEMAKER
17 49	42 2495	TEMPERATURE SENSOR	DEFROST BI–METAL
17 50	42 3281	FILTER MODULE	DIFFUSER ASSEMBLY

* Not illustrated


Top Grille and Unit Cover Parts

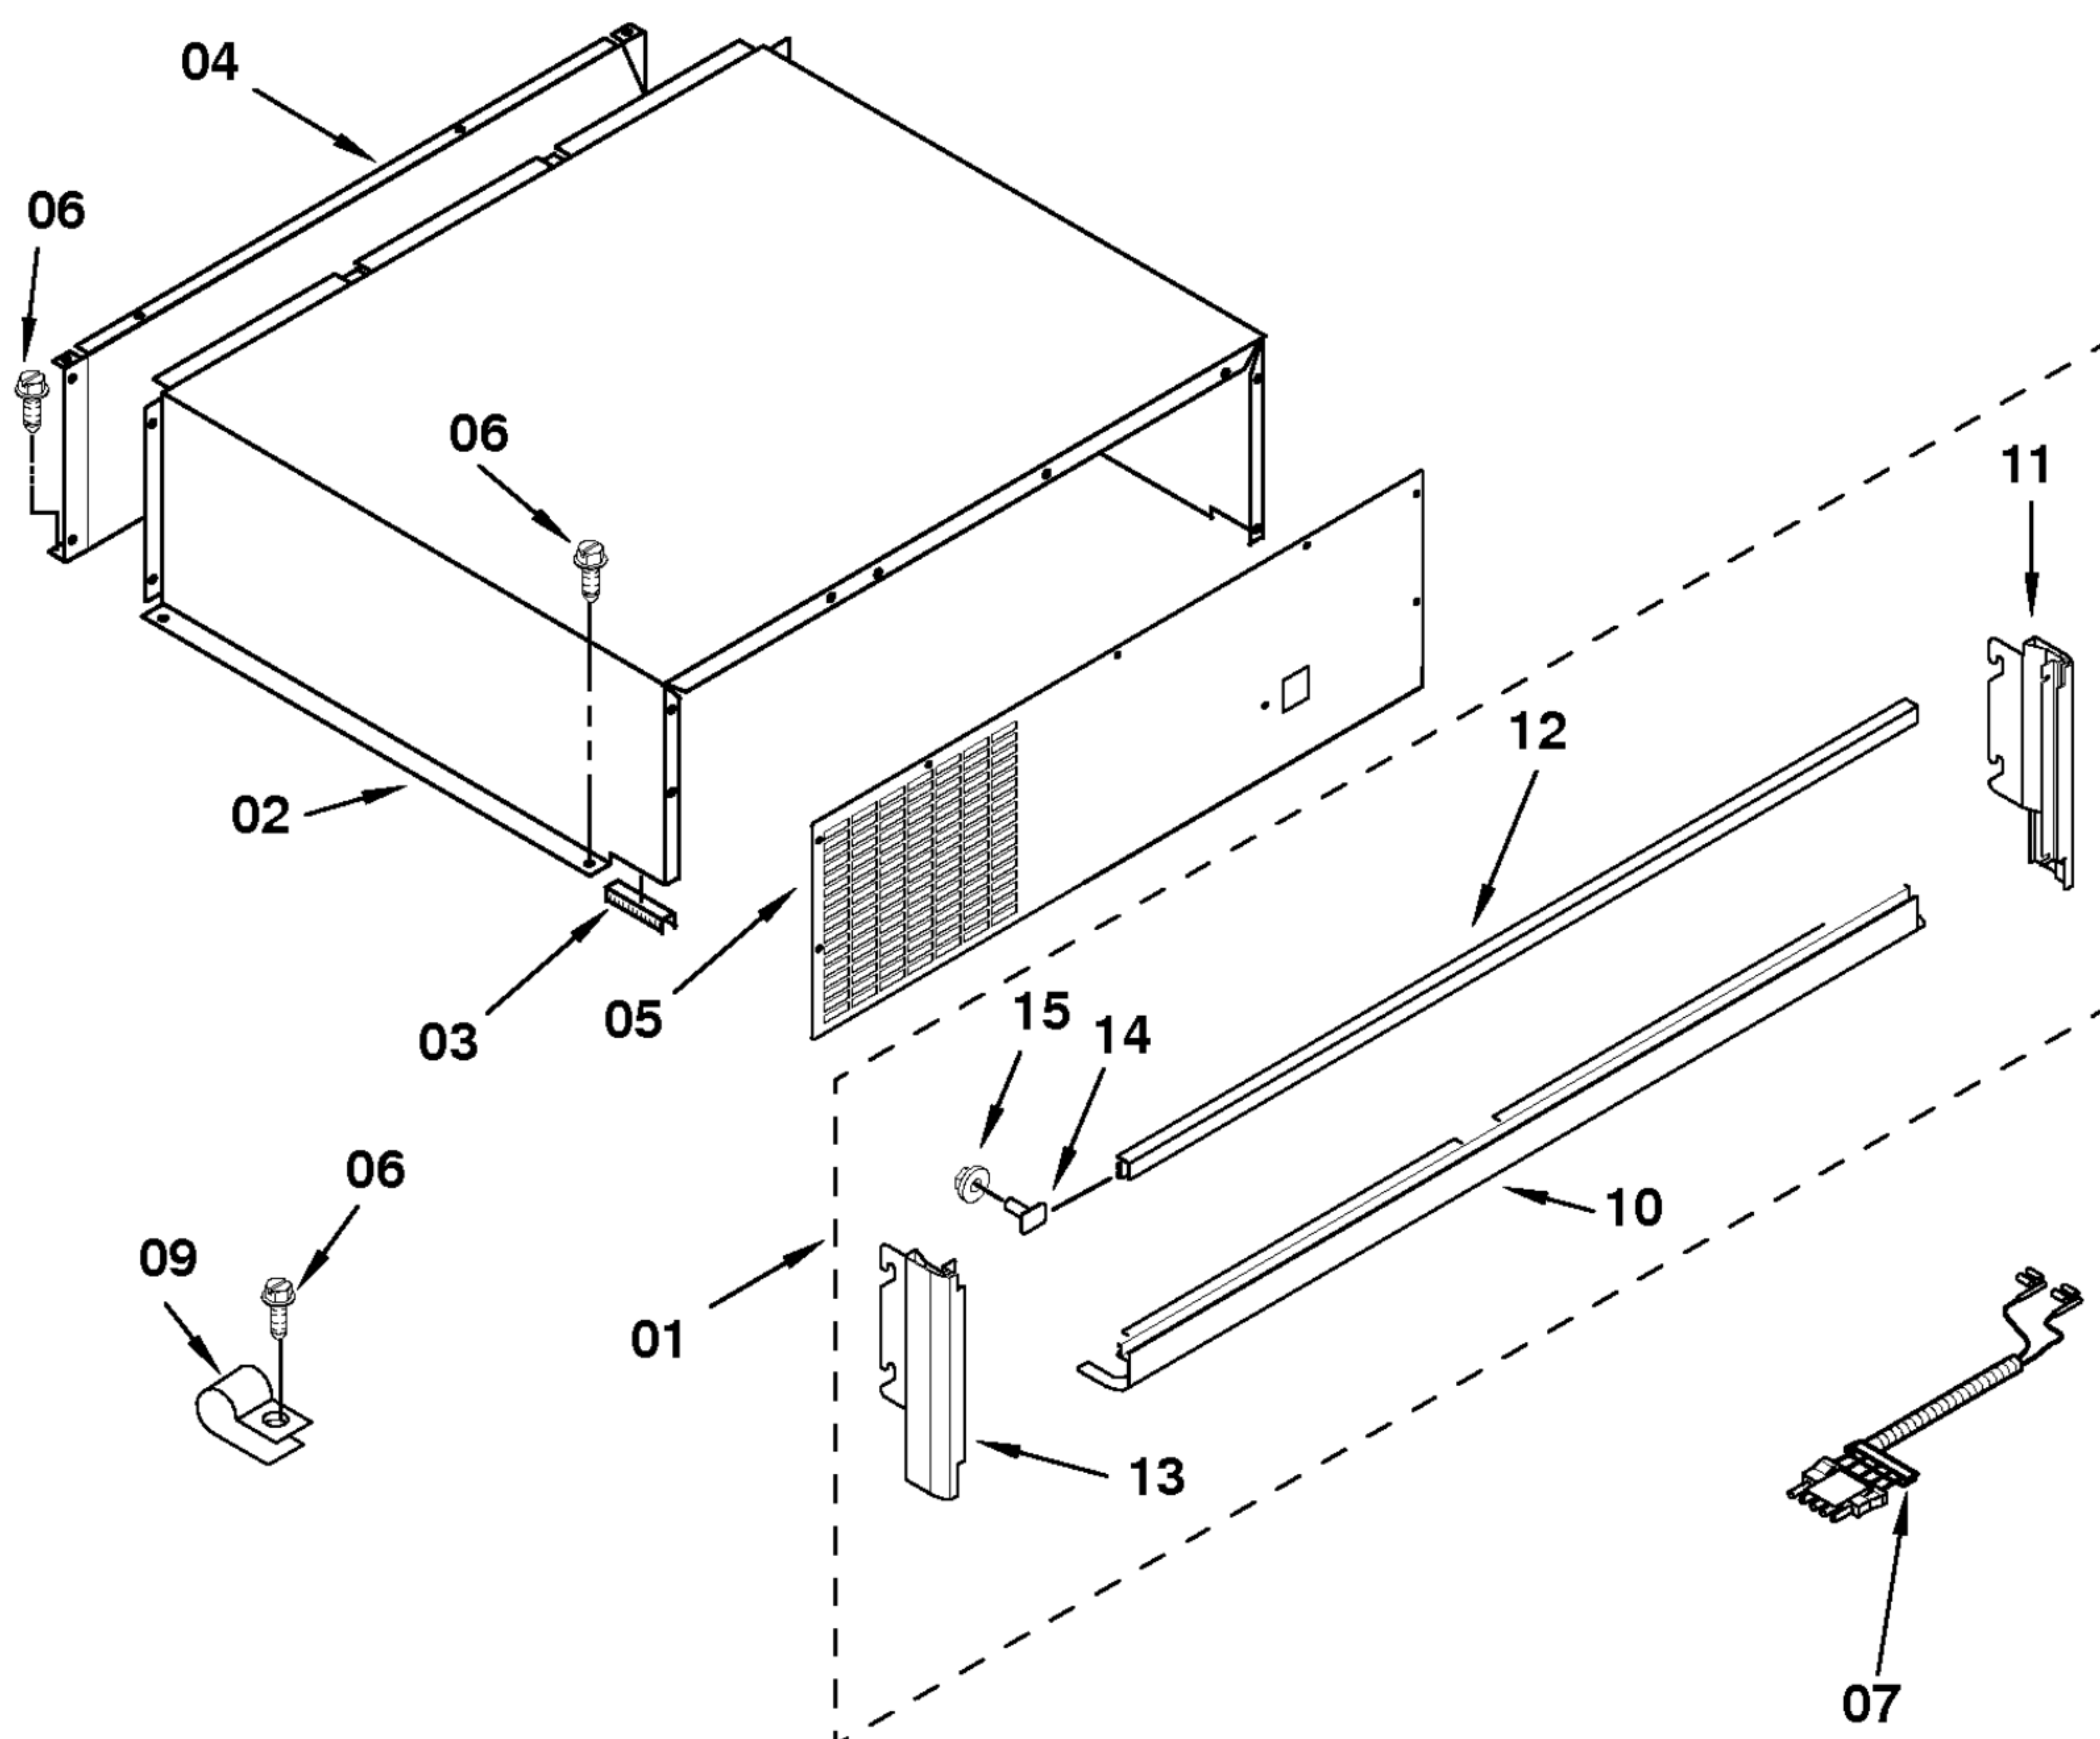


Page/Item	Part No.	Image	Part Description
19 01	14 3801	FRAME	TOP GRILLE FRAME ASSEMBLY (ETCHED ALUMINUM)
19 02	24 1209	COVER	COVER, UNIT
19 03	42 2568	BRACKET	GROMMET, FLEXIBLE
19 04	47 1749	PANEL	BACK PANEL
19 05	47 1750	PANEL	FRONT, UNIT COVER
19 06	42 2404	SCREW	SCREW (3)
19 07	49 1842	CABLE HARNESS	WIRE ASSEMBLY
19 09	42 2360	CLAMP	CLAMP
19 10	14 3802	FRAME-DÉCOR	GRILLE, TRIM (BOTTOM)
19 11	43 6755	FRAME-DÉCOR	GRILLE, TRIM (RIGHT)
19 12	14 3803	FRAME-DÉCOR	GRILLE, TRIM (TOP)
19 13	43 6756	FRAME-DÉCOR	GRILLE, TRIM (LEFT)
19 14	42 2419	SCREW	SCREW
19 15	42 2344	NUT	NUT

* Not illustrated

Cabinet Parts

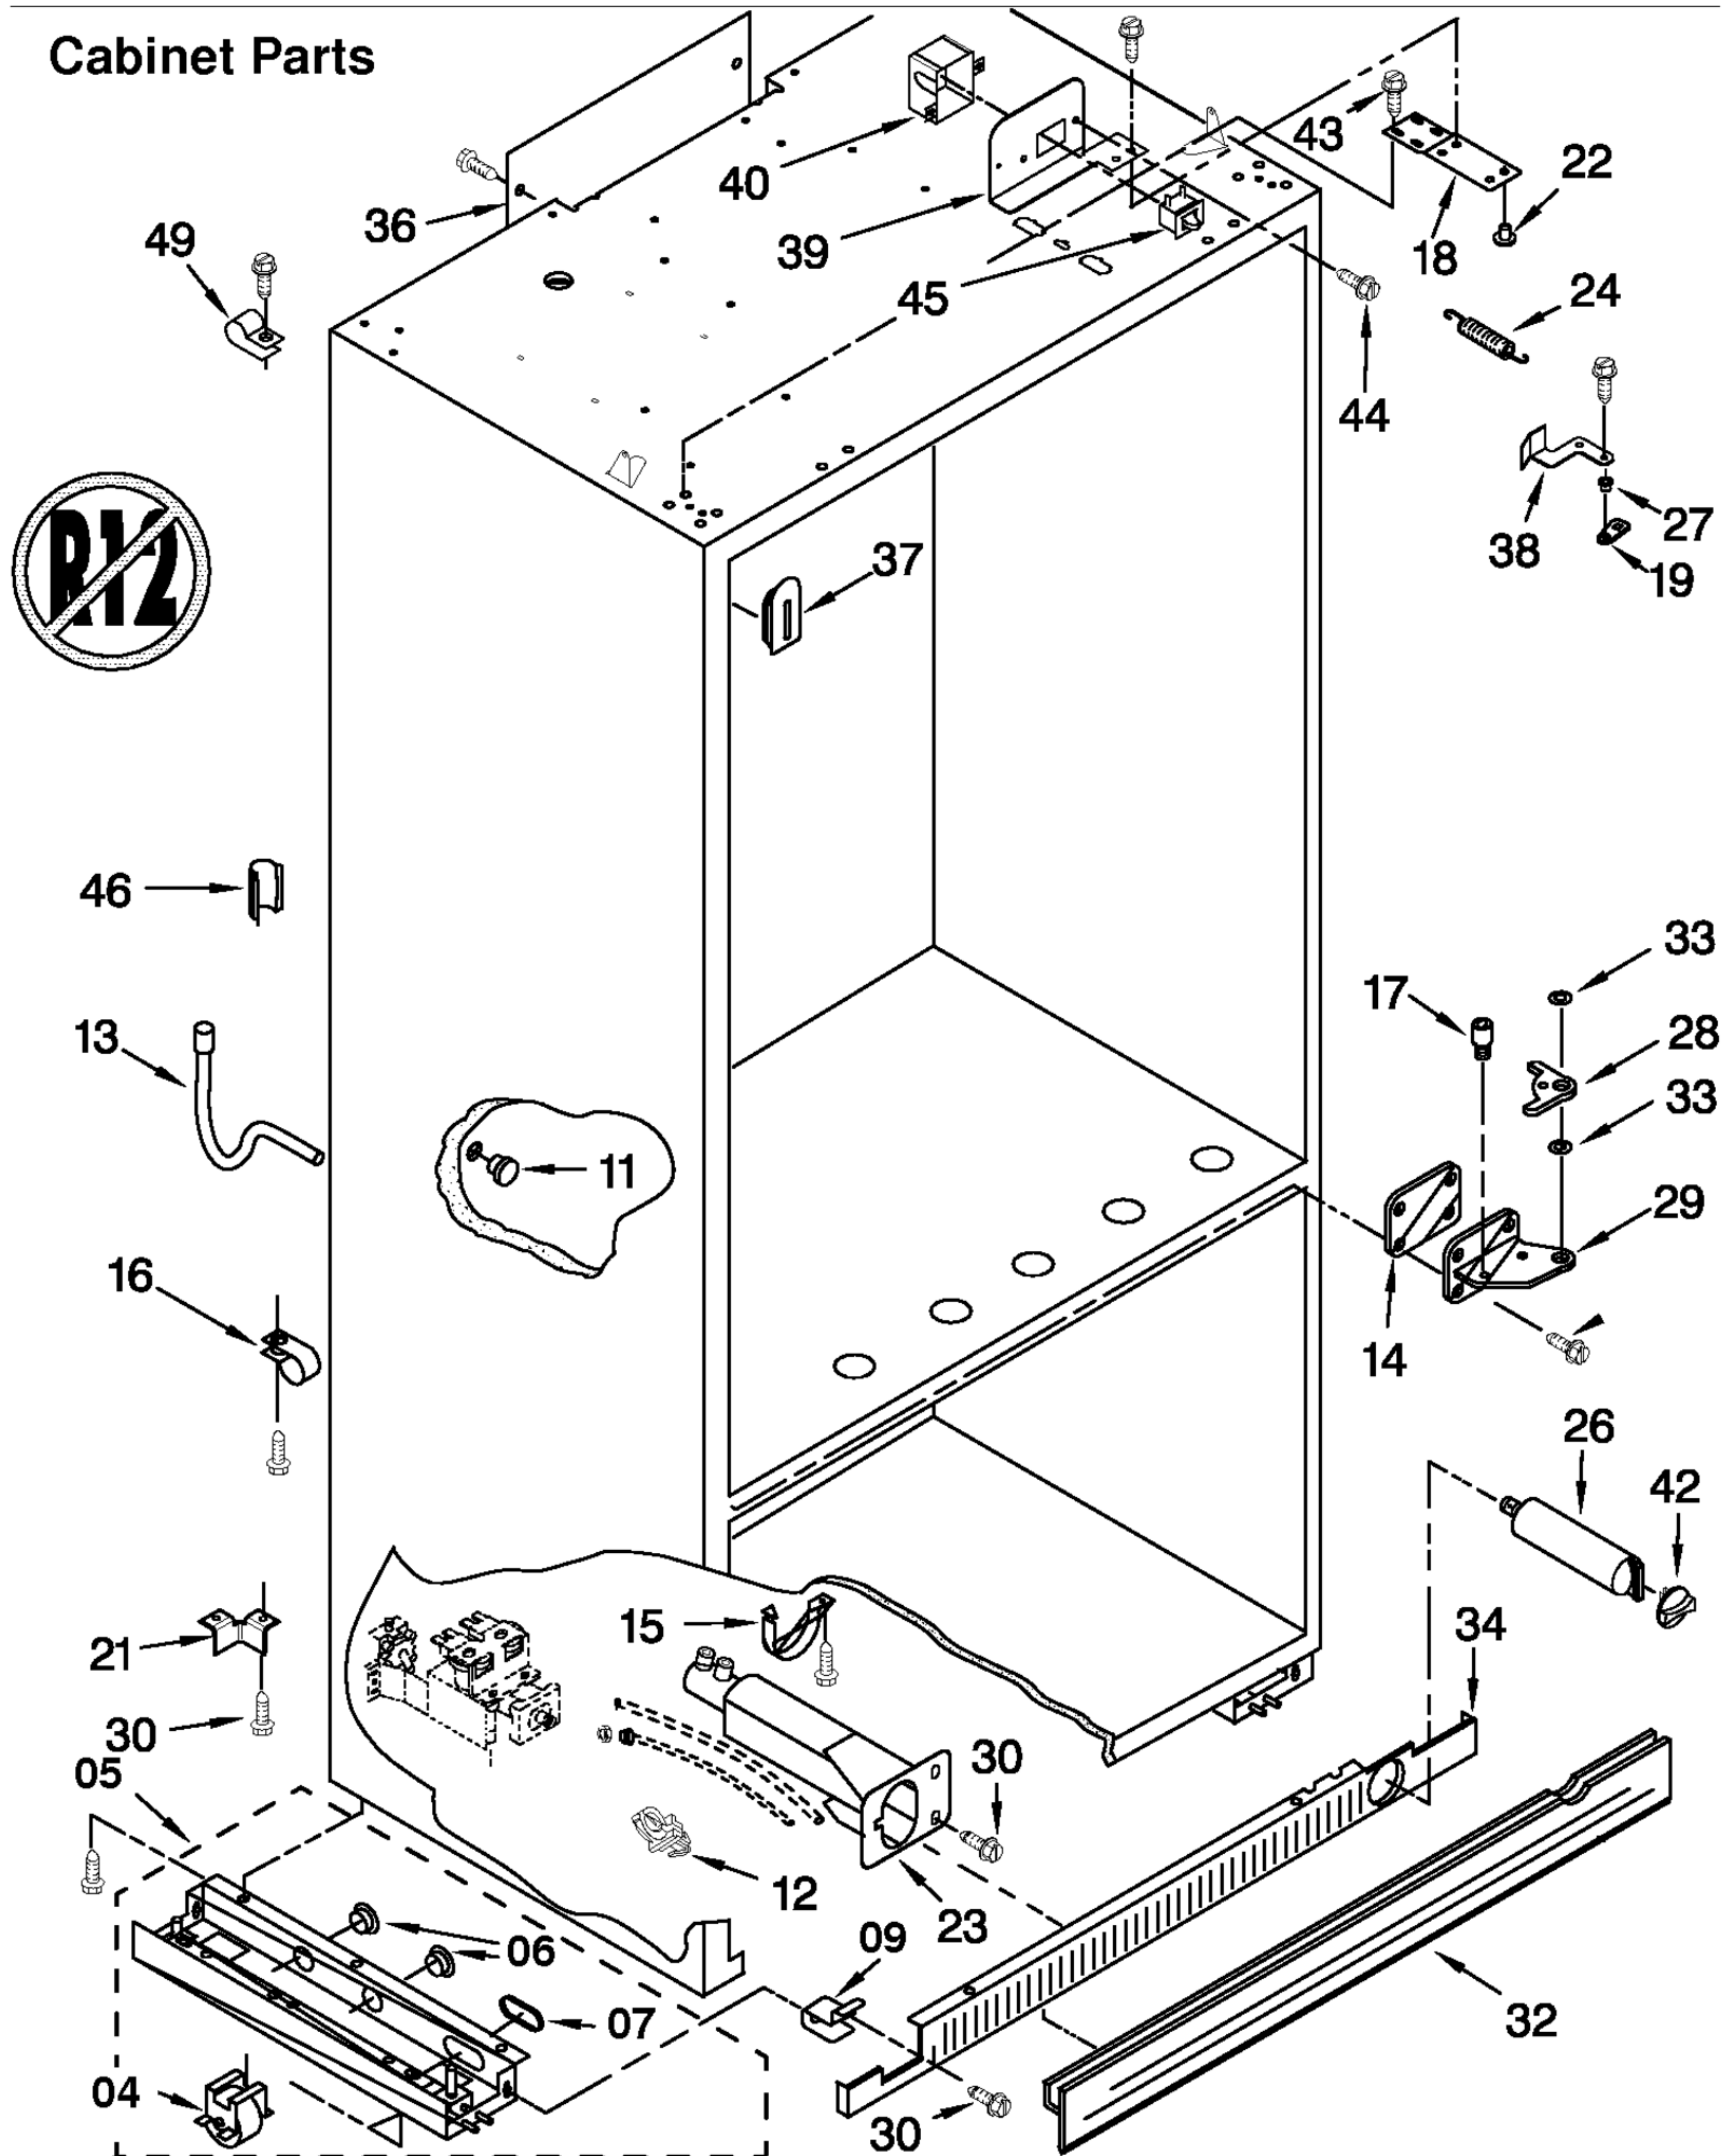

Cabinet and Breaker Trim Parts

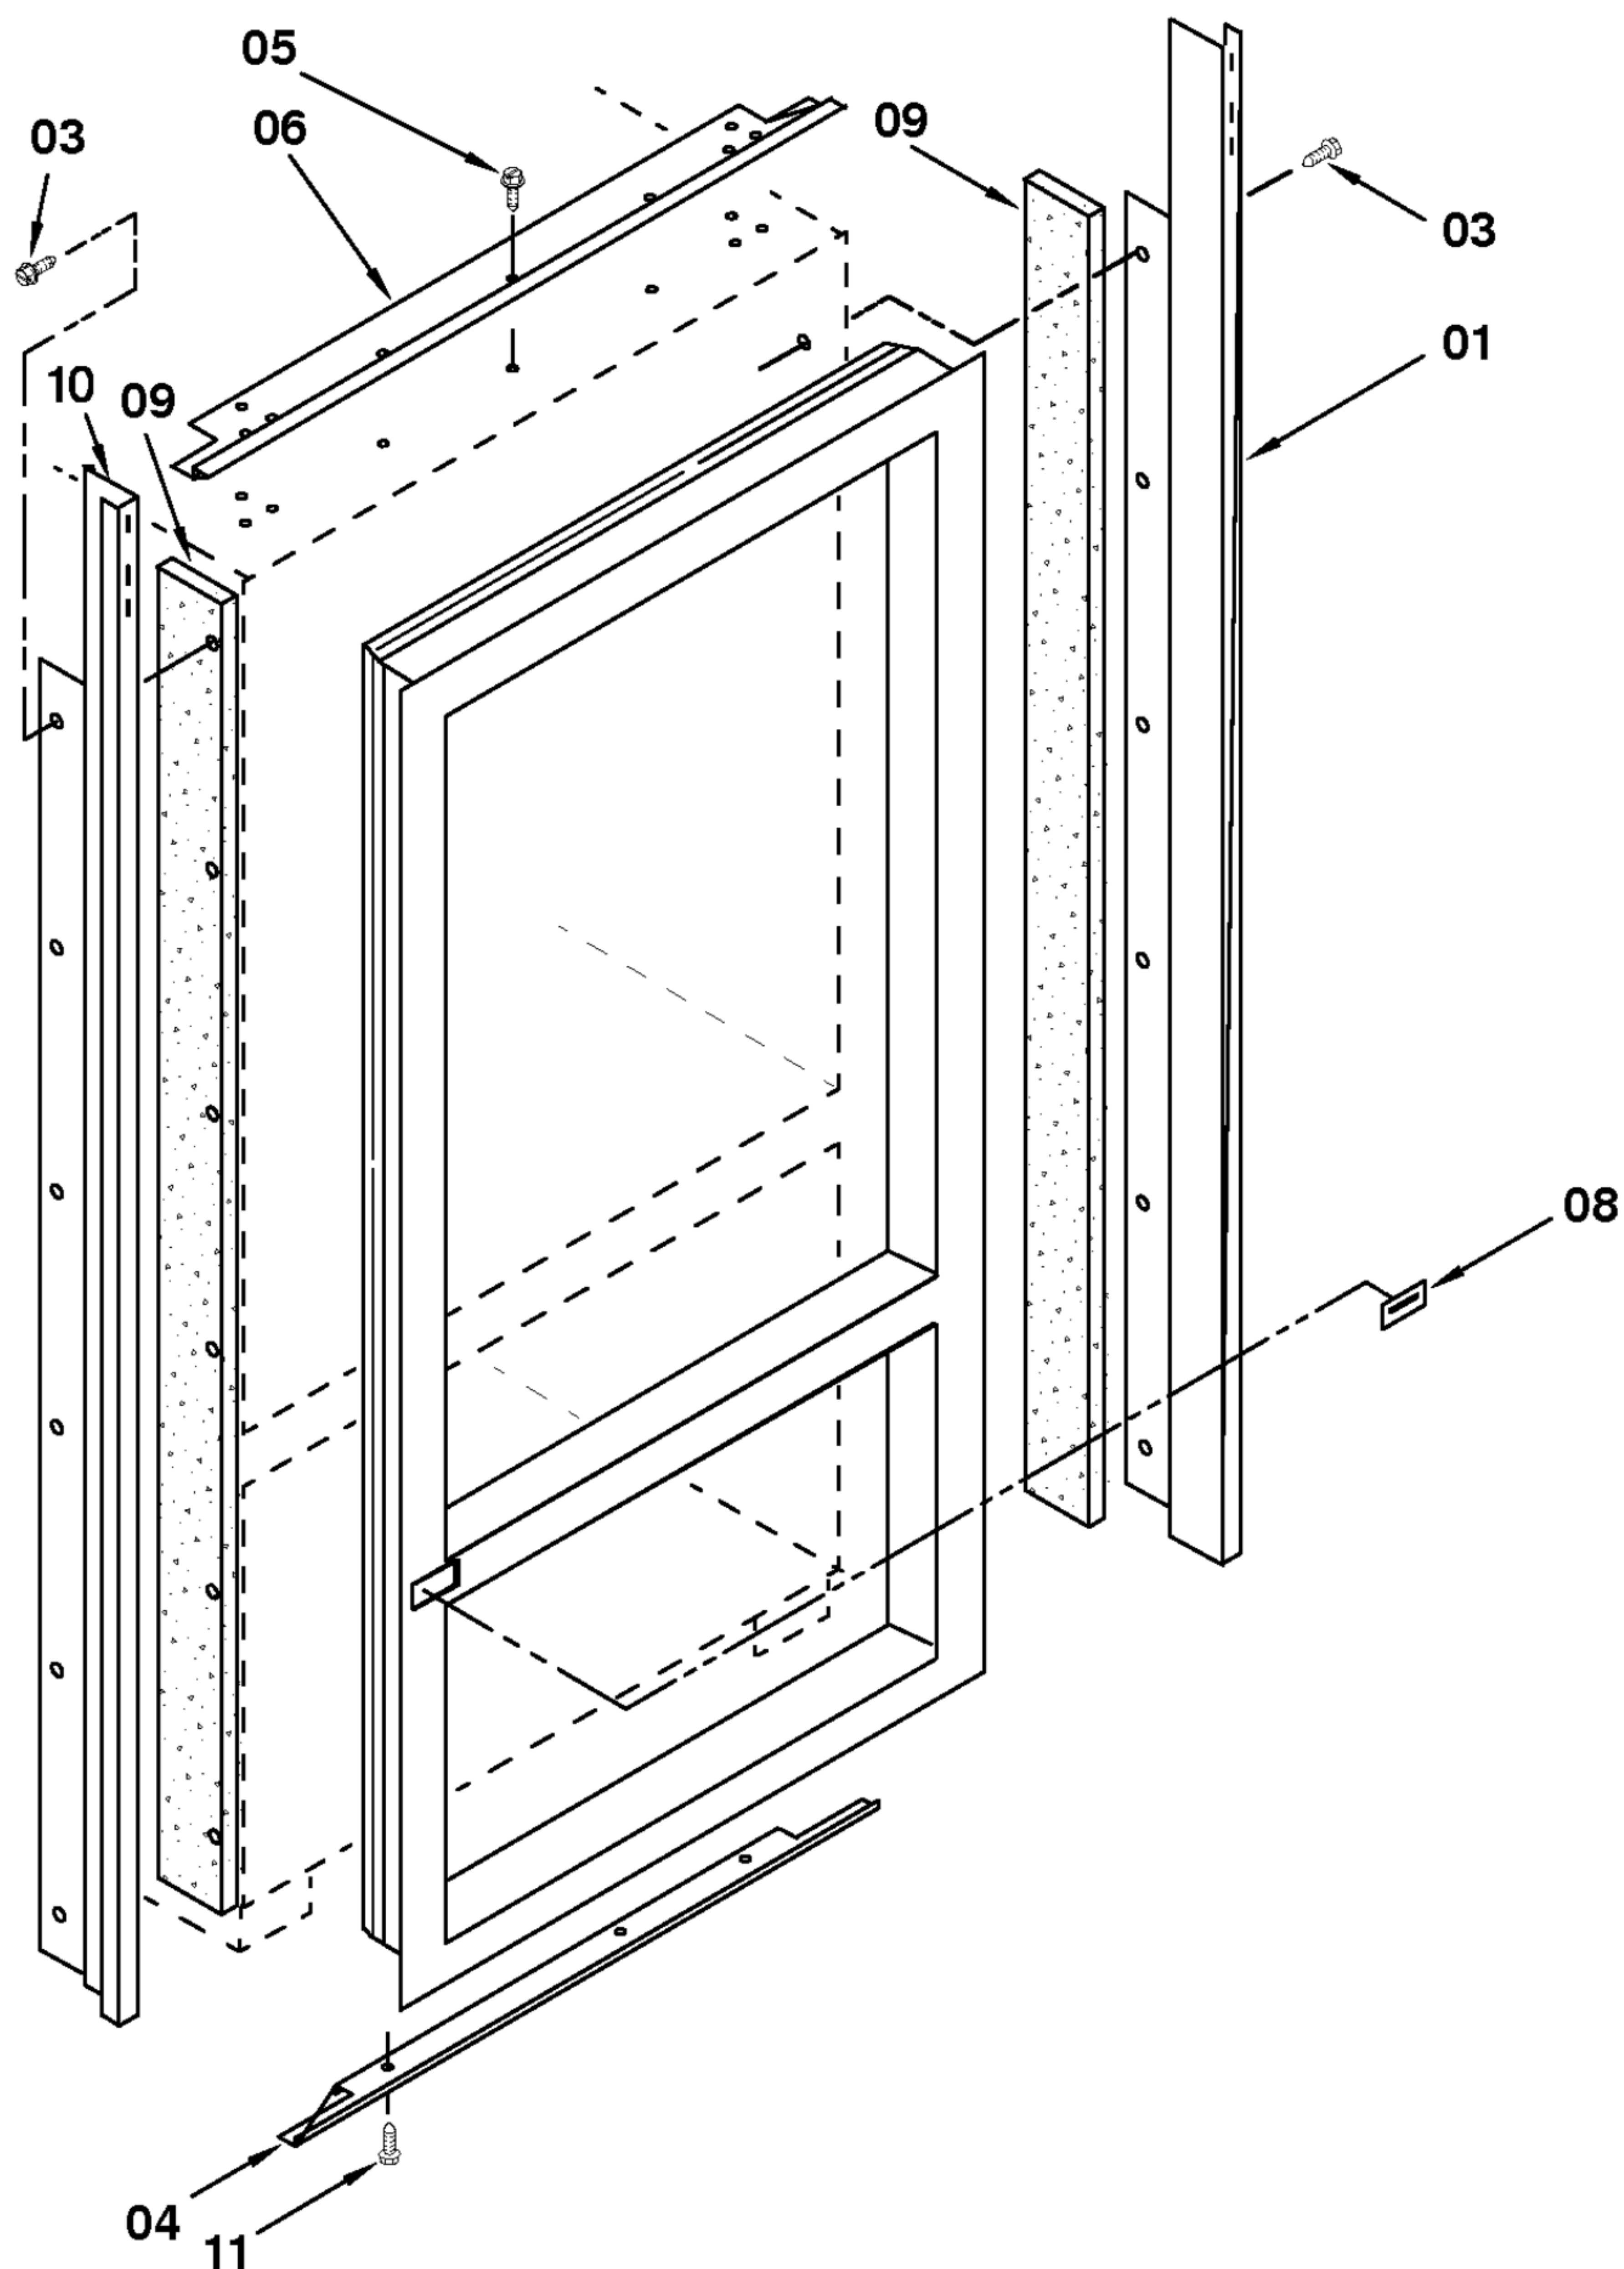


Page/Item	Part No.	Image	Part Description
21 01	24 1207	PANEL–SIDE	CABINET TRIM (RIGHT) ETCHED ALUMINUM
21 03	42 2415	SCREW	SCREW (2)
21 04	47 1736	FRAME–DÉCOR	CABINET TRIM (BOTTOM)
21 05	41 5861	SCREW	SCREW
21 06	47 1742	PANEL	CABINET TRIM (TOP)
21 08	42 2431	COVER	COVER, HINGE
21 09	24 1177	SEAL	SEAL–TRIM (SIDE) (2)
21 10	24 1208	PANEL–SIDE	CABINET TRIM (LEFT) ETCHED ALUMINUM
21 11	42 2357	SCREW	SCREW, 8–18 X 1/2

* Not illustrated

Page/Item	Part No.	Image	Part Description
03 04	42 2413	ROLLER SET	ROLLER, FRONT & REAR
03 05	41 6141	SUPPORT	SUPPORT, LEVELER ASSEMBLY (REFRIG. SIDE)
03 06	41 6143	WASHER	GROMMET, WIRING (2)
03 07	41 6144	WASHER	GROMMET, FLEXIBLE
03 09	42 2475	BRACKET	MOUNTING BRACKET, GRILL
03 11	48 7804	COVER	CAP, GROMMET
03 12	42 2421	CLAMP	CLAMP
03 13	49 2297	TUBE	TUBE, DRAIN CONDENSATE
03 14	42 3243	SPACER	SHIM-HINGE, DOOR
03 15	42 2507	CLAMP	CLAMP, FILTER HOUSING
03 16	42 2347	CLAMP	CLAMP, TUBE
03 17	41 6041	SCREW	SCREW, DOOR STOP
03 18	42 2505	HINGE	HINGE, DOOR
03 19	42 2432	BRACKET	CAM-CLOSER, DOOR
03 21	42 2478	BRACKET	BRACKET-SUPPORT, DOOR
03 22	41 6129	SUPPORT	BUSHING
03 23	43 6733	HOUSING	HOUSING, WATER FILTER
03 24	42 2422	SPRING	SPRING, DOOR CLOSURE
03 26	49 1849	FILTER-WATER INLET	FILTER, WATER
03 27	42 2480	NUT	BUSHING, EXTENSION ARM
03 28	42 2474	COVER	GAP, COVER ASSEMBLY (BOTTOM)
03 29	42 2423	HINGE	HINGE (BOTTOM), REFRIGERATOR SIDE
03 30	42 2357	SCREW	SCREW, 8-18 x 1/2 (3)
03 32	47 1731	PANEL-BASE	SKIRT, GRILLE (BOTTOM)
03 33	42 2473	WASHER	WASHER (2)
03 34	14 3778	PANEL-BASE	GRILLE, BASE (FRONT)
03 36	24 1206	COVER SHEET	COVER, REAR (AIR DUCT)
03 37	48 7816	WASHER	GROMMET, WIRING
03 38	42 2512	BRACKET	ARM, EXTENSION
03 39	42 2500	BRACKET	BRACKET, SWITCH
03 40	42 2514	COVER	COVER, SWITCH
03 42	42 2456	COVER	CAP, WATER FILTER
03 43	42 2453	SCREW	SCREW (4)
03 44	42 2404	SCREW	SCREW, 8-18 x 3/8
03 45	41 6133	SWITCH	SWITCH, ROCKER ARM (REFRIG. DOOR SIDE)
03 46	42 2455	CLIP	CLIP
03 49	42 2684	CLAMP	CLAMP, TUBE
* 03 50	41 6142	SUPPORT	SUPPORT, LEVELER ASSEMBLY (FREEZER SIDE)

* Not illustrated


Upper Unit Parts

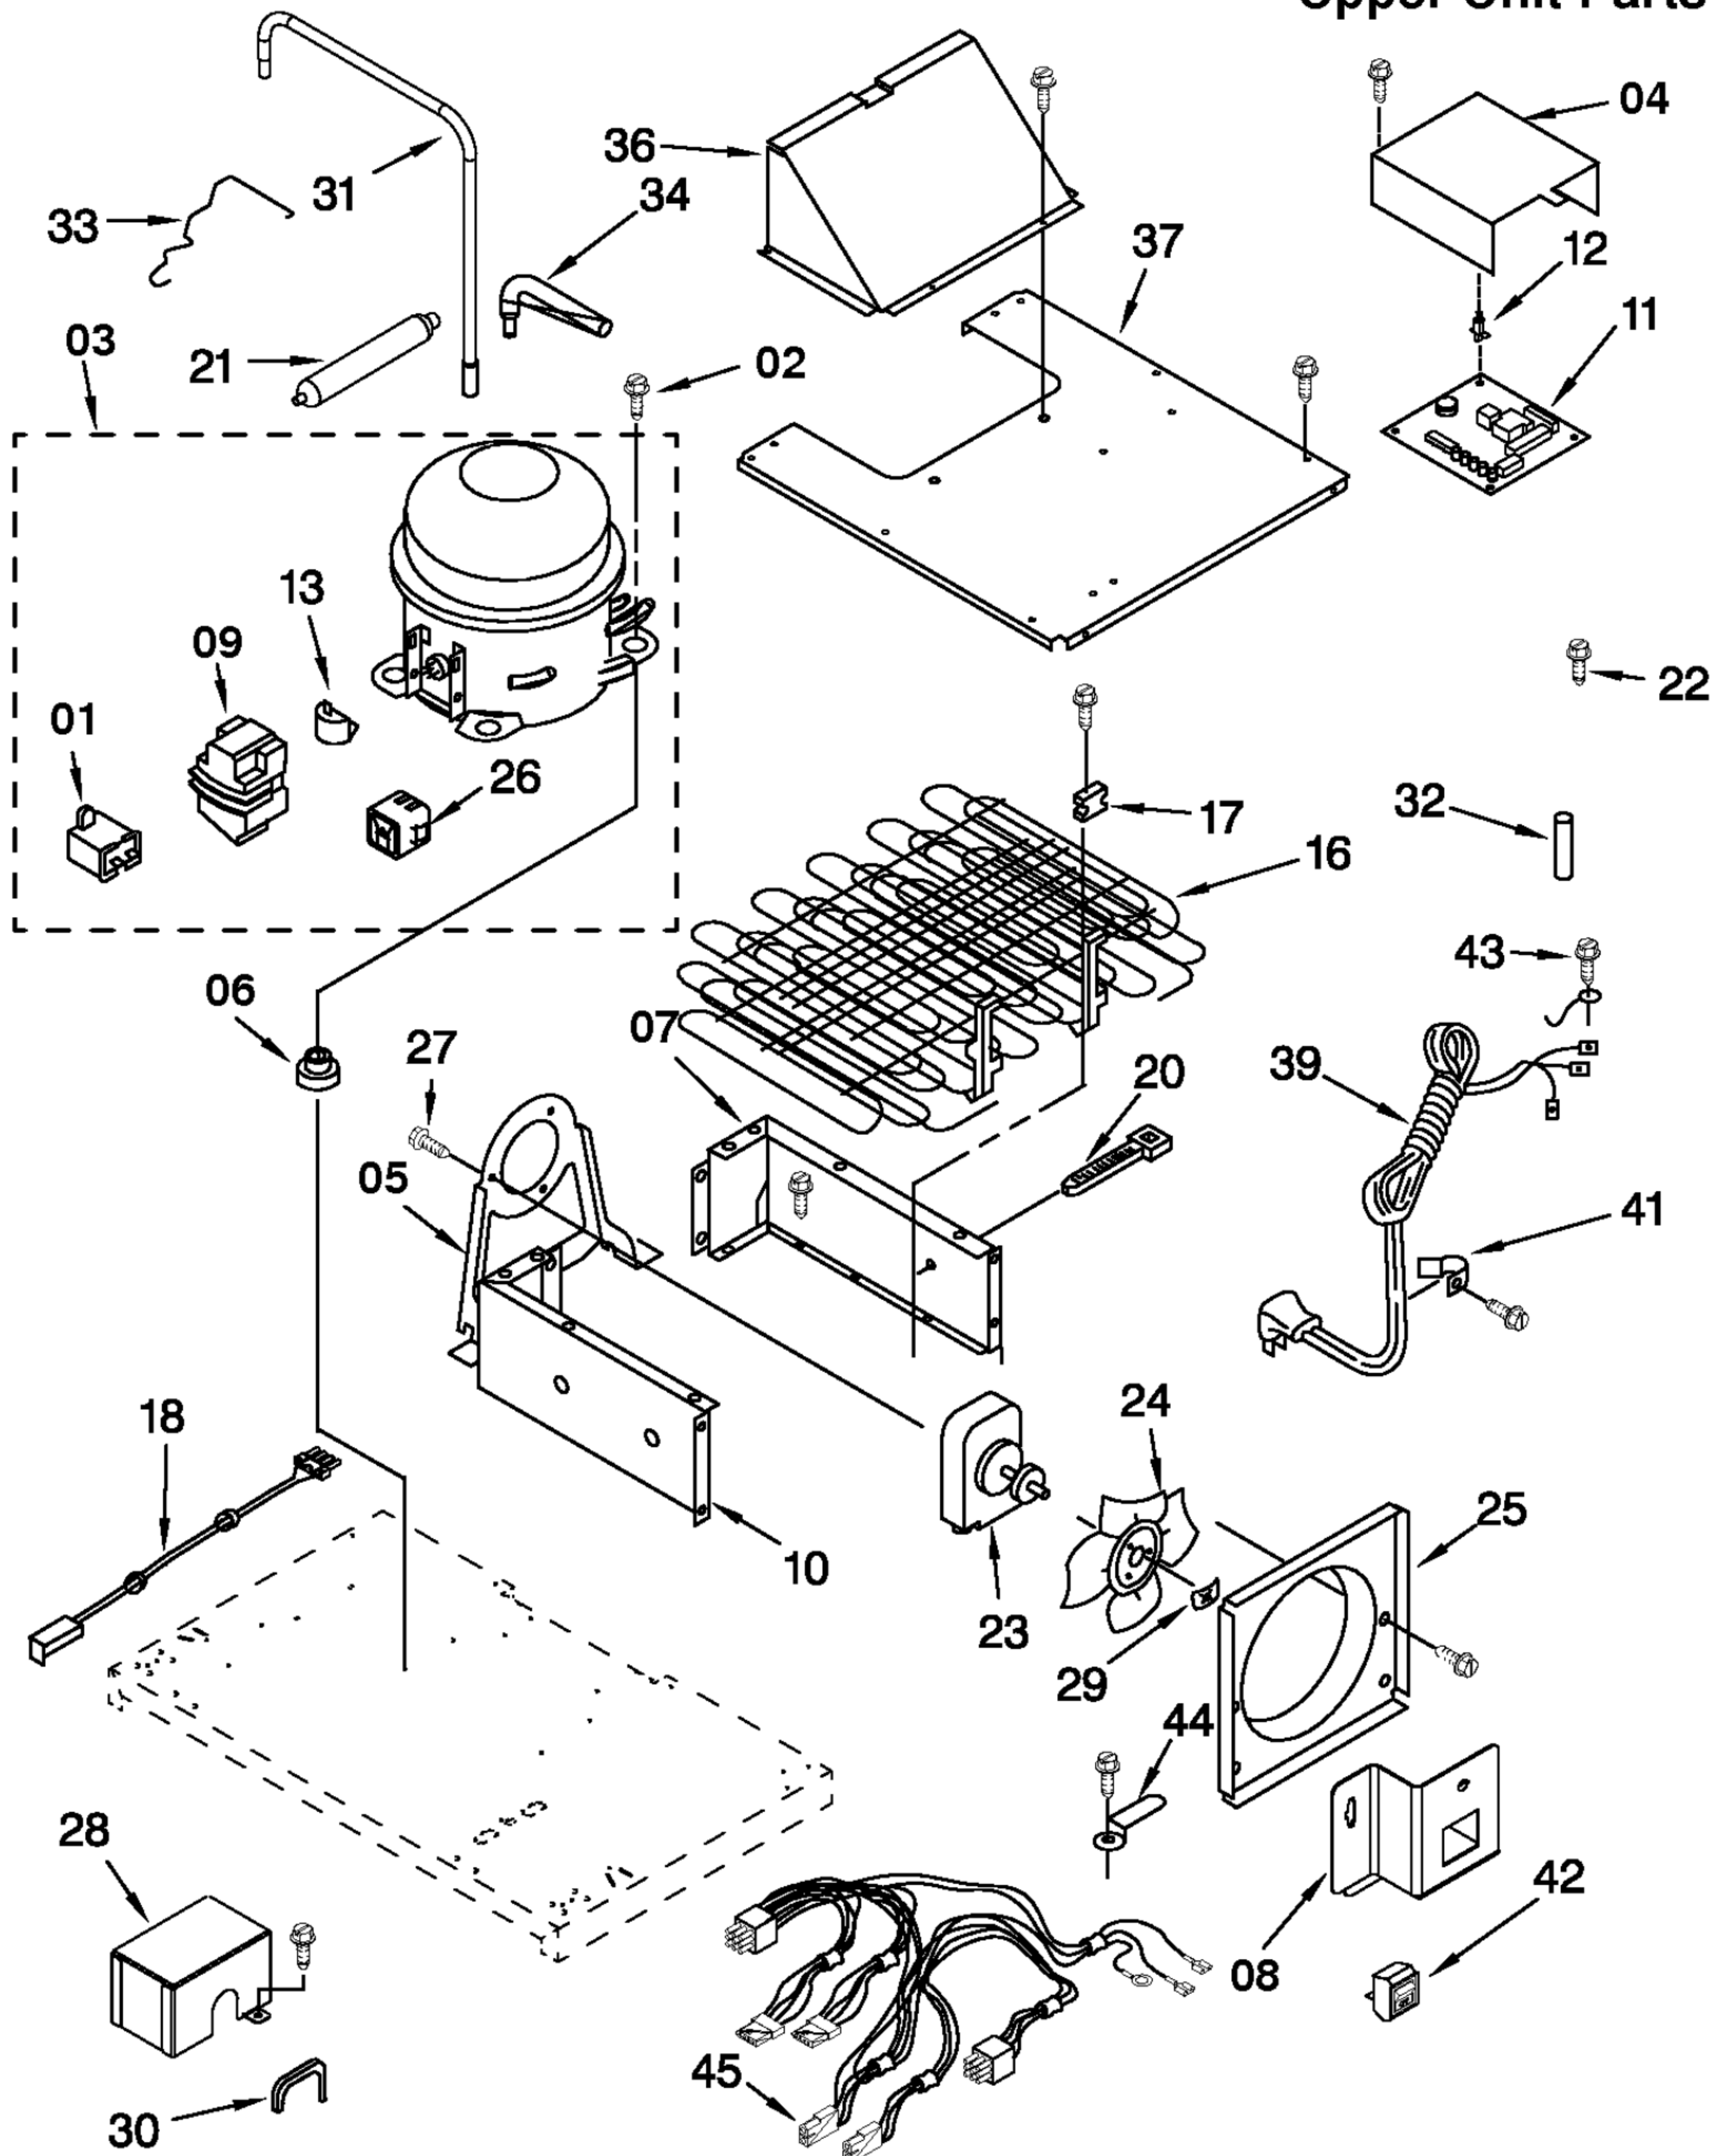

Page/Item	Part No.	Image	Part Description
05 01	42 2665	CAPACITOR	CAPACITOR (SERVICE)
05 02	42 2668	SCREW	COMPRESSOR MOUNTING (4)
05 03	14 3288	COMPRESSOR	COMPRESSOR ASSEMBLY
05 04	49 1932	HOUSING	HOUSING, CONTROL BOARD
05 05	49 1933	BRACKET	BRACKET, FAN MOTOR
05 06	42 2669	WASHER	GROMMET, MOUNTING (SERVICE)
05 07	43 6854	PANEL-SIDE	SHROUD, CONDENSER (RIGHT)
05 08	49 1935	BRACKET	BRACKET, SWITCH
05 09	41 6114	TERMINAL	TERMINAL COVER (SERVICE)
05 10	42 2671	PANEL-SIDE	SHROUD, CONDENSER (LEFT)
05 11	49 1936	CONTROL UNIT	CONTROL BOARD
05 12	42 2672	SPACER	SPACER (5)
05 13	42 2677	RELAY	OVERLOAD/RELAY
05 16	47 1781	CONDENSER	CONDENSER
05 17	42 2359	WASHER	GROMMET (4)
05 18	49 1847	WIRE	WIRE, JUMPER
05 20	41 5906	WIRE	WIRE TIE (2)
05 21	49 1939	FILTER	DRIER
05 22	42 2346	SCREW	SCREW
05 23	49 1937	MOTOR-FAN	MOTOR, FAN (CONDENSER)
05 24	49 1938	FAN BLADE	BLADE, FAN (CONDENSER)
05 25	41 6117	FRAME	FRAME WINDOW
05 26	42 3246	STARTING DEVICE	START-DEVICE, COMBINATION
05 27	42 2447	SCREW	SCREW
05 28	43 6858	COVER	COVER, ELECTRICAL
05 29	42 2311	NUT	SPEED NUT
05 30	41 6144	WASHER	GROMMET
05 31	43 6868	TUBE	TUBE, DRIER TRANSITION
05 32	41 6021	SLEEVE	SLEEVE, CONDENSER
05 33	42 2691	CLIP	CLIP, RETAINER
05 34	49 1941	TUBE	PROCESS, TUBE
05 36	47 1782	COVER-FAN	COVER, FAN
05 37	47 1780	COVER	COVER, CONDENSER
05 39	43 6867	CABLE	SERVICE CORD
05 41	42 2309	CLAMP	CLAMP, CORD
05 42	41 5982	SWITCH	SWITCH, POWER DISCONNECT
05 43	42 2353	SCREW	SCREW, GROUND
05 44	42 2396	CLIP	CLIP, CORD PLUG
05 45	43 6729	CABLE HARNESS	WIRING HARNESS
* 05 46	42 2405	VALVE	VALVE, ACCESS (1/4")
* 05 47	42 2406	VALVE	VALVE, ACCESS (5/16")
* 05 48	42 2407	VALVE	VALVE, ACCESS (3/8")
* 05 49	42 2408	VALVE	VALVE, ACCESS (1/2")
* 05 50	42 2409	VALVE	VALVE, ACCESS (5/8")
* 05 51	42 2410	VALVE	VALVE, ACCESS (3/4")
* 05 52	42 2400	VALVE	VALVE, ACCESS (3/16")

* Not illustrated


Lower Unit and Tube Parts

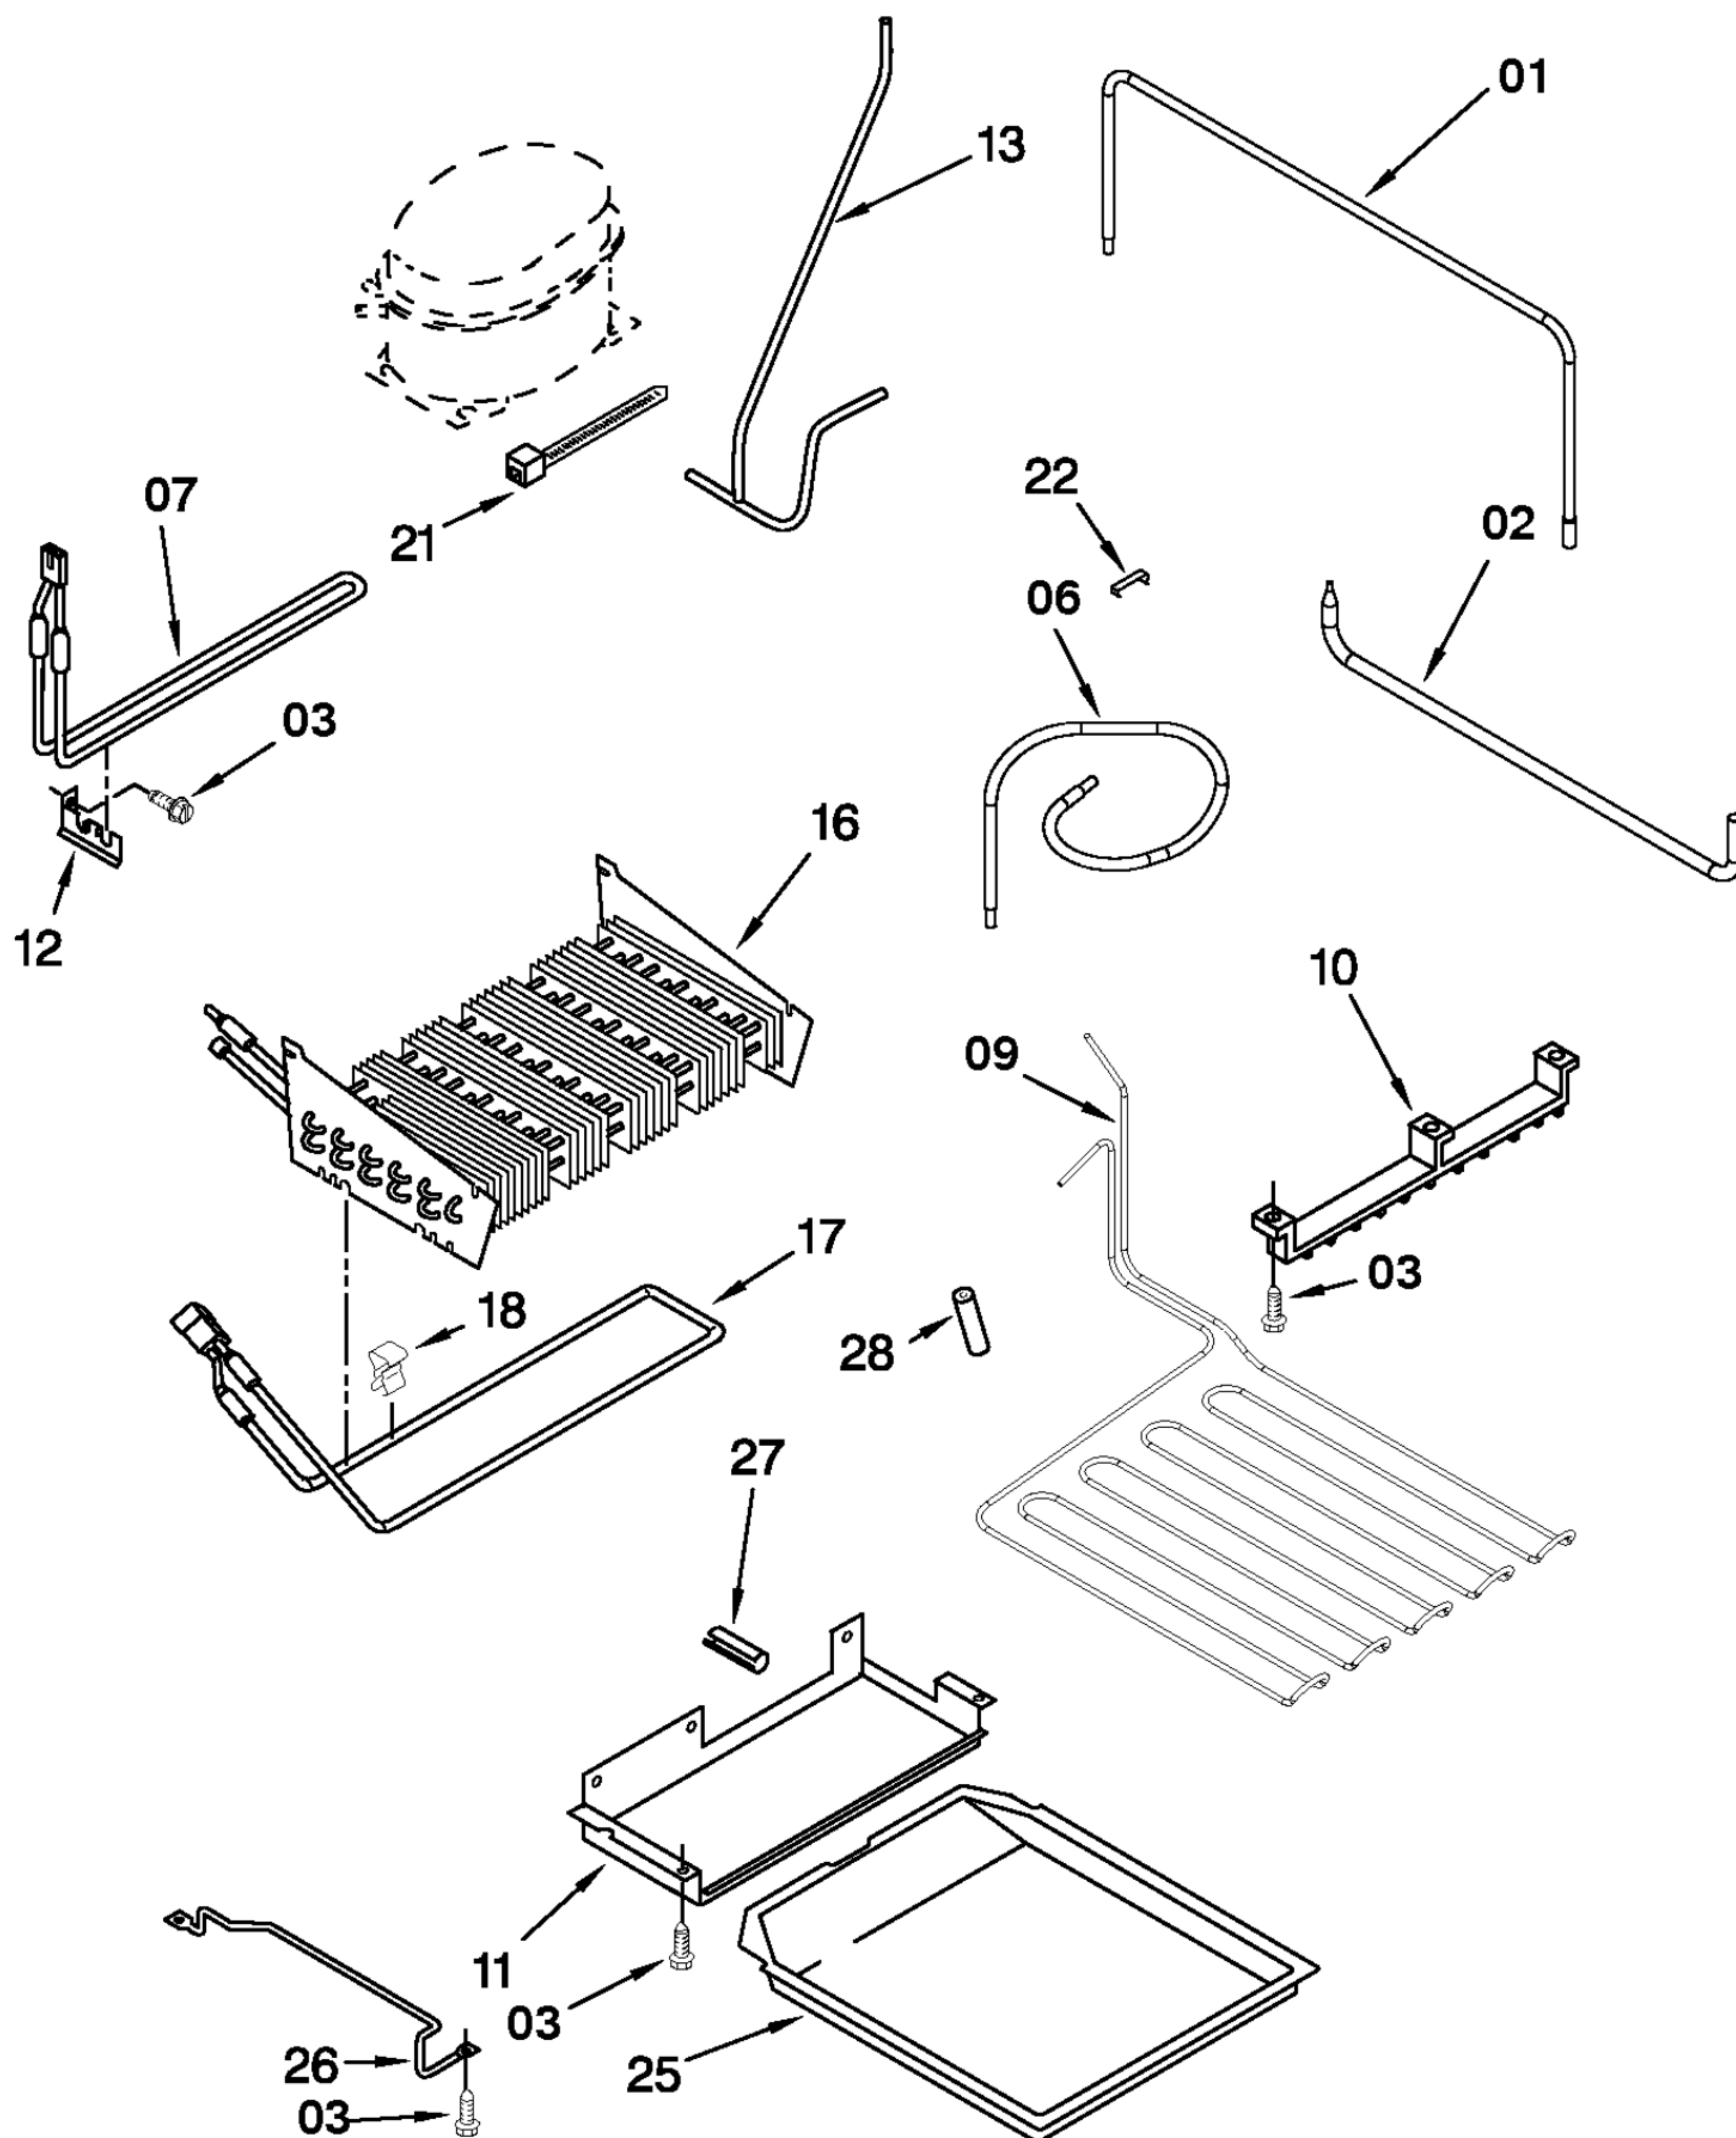

Page/Item	Part No.	Image	Part Description
07 01	14 3791	TUBE	TUBE, TRANSITION (CONDENSER)
07 02	49 1943	TUBE	TUBE, TRANSITION (DRIER)
07 03	41 5861	SCREW	SCREW (4)
07 06	49 1942	SUCTION PIPE/CAPILLARY TUBE	SUCTION TUBE
07 07	43 7637	HEATER-DEFROST	HEATER, DEFROST (REAR)
07 09	47 1784	HEATER-ELEMENT	HEATER, DRAIN PAN
07 10	43 6871	BRACKET	HANGER, HEATER
07 11	43 6704	COVER	SHIELD, DRAIN PAN
07 12	42 3290	SUPPORT	SUPPORT, HEATER
07 13	14 3792	TUBE	TUBE, DISCHARGE
07 16	47 1787	EVAPORATOR	EVAPORATOR
07 17	14 3793	HEATER-DEFROST	HEATER, DEFROST (FRONT)
07 18	42 3291	CLAMP	CLAMP, HEATER
07 21	41 5906	WIRE	WIRE TIE
07 22	42 2682	CLIP	CLIP, HEAT EXCHANGER
07 25	36 9238	PAN	DRAIN PAN
07 26	48 7821	BRACKET	BRACKET, DRAIN PAN (LEFT)
07 27	42 2482	DAMPER	DAMPENER
07 28	42 2683	DAMPER	DAMPER, HEATER
* 07 29	48 7822	BRACKET	BRACKET, DRAIN PAN (RIGHT)

* Not illustrated

Icemaker Parts

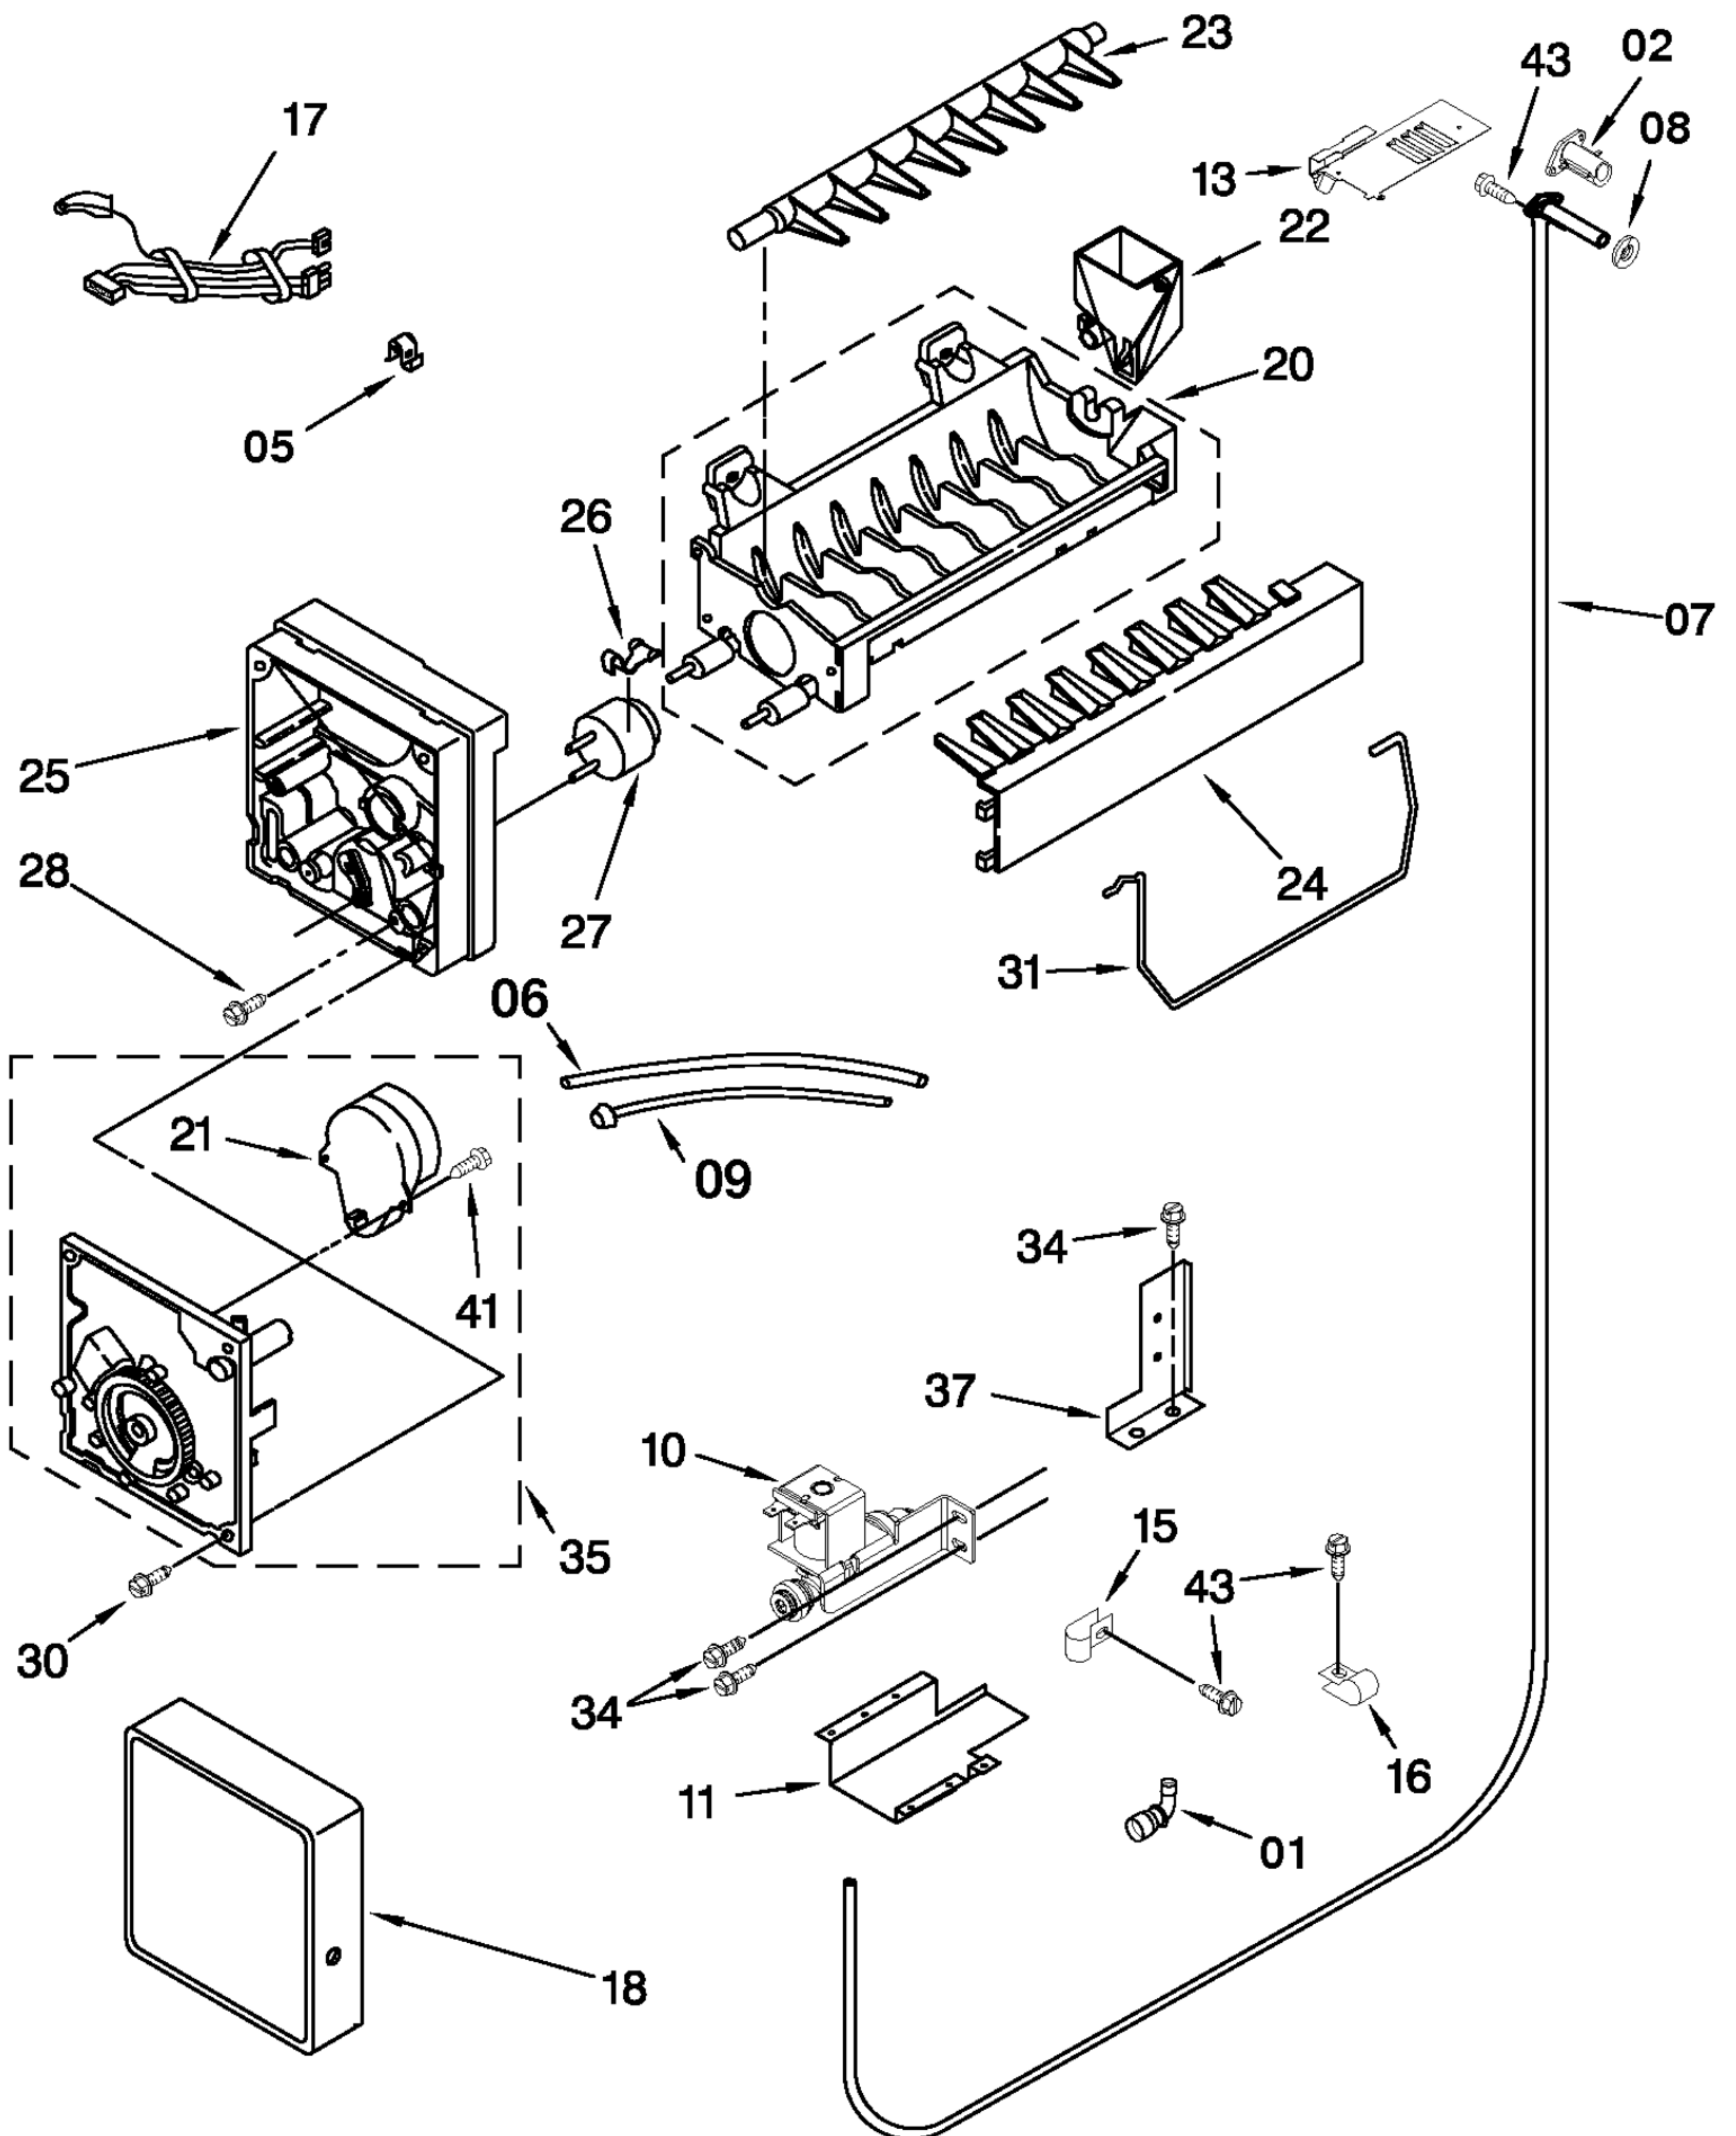

Page/Item	Part No.	Image	Part Description
09 01	42 3289	VALVE	TUBE, VALVE
09 02	42 3055	TUBE-FILL	HEATER, FILL TUBE
09 05	42 2362	CLIP	CLIP, FUSE
09 06	49 1947	TUBE	TUBE, FILTER INLET
09 07	24 1319	PICTURE TUBE	WATER INLET TUBE ASSEMBLY
09 08	41 5942	SEAL	SEAL, GASKET
09 09	49 1948	TUBE	TUBE, FILTER OUTLET
09 10	49 2195	VALVE-MAGNET	VALVE, SOLENOID
09 11	49 1945	COVER	COVER, BOTTOM
09 13	49 2196	DEFLECTOR	HEAT SHIELD
09 15	42 2360	CLAMP	CLAMP, NYLON VALVE
09 16	41 6146	CLAMP	CLAMP, TUBE
09 17	49 1954	CABLE CONNECTOR	WIRE HARNESS, ICEMAKER
09 18	14 3749	COVER	COVER, ICEMAKER
09 20	43 6628	HEATER-ELEMENT	MOLD & HEATER
09 21	48 7777	MOTOR	MOTOR
09 22	49 1784	CUP	CUP-WATER FILL
09 23	48 7772	SCRAPER	EJECTOR
09 24	48 7770	SCRAPER	ICE STRIPPER
09 25	48 7771	HOUSING	HOUSING, ICEMAKER MOTOR
09 26	42 2361	BRACKET	RETAINER THERMOSTAT (2)
09 27	42 2361	THERMOMETER	THERMOSTAT
09 28	42 2454	SCREW	SCREW
09 30	42 2397	SCREW	SCREW
09 31	43 7636	ARM	SHUT OFF ARM
09 34	42 2357	SCREW	SCREW (3)
09 35	14 3768	MOTOR	MODULE ASSEMBLY
09 37	48 8015	BRACKET	WATER VALVE MOUNTING BRACKET
09 41	42 2354	SCREW	SCREW (2)
09 43	41 5861	SCREW	SCREW (3)
* 09 44	48 7783	ICE BIN	COMPLETE ICEMAKER ASSEMBLY
* 09 45	42 2313	LUBRICANT	SILICONE GREASE
* 09 46	41 6071	ADHESIVE	CEMENT ALUMINASTIC

* Not illustrated