


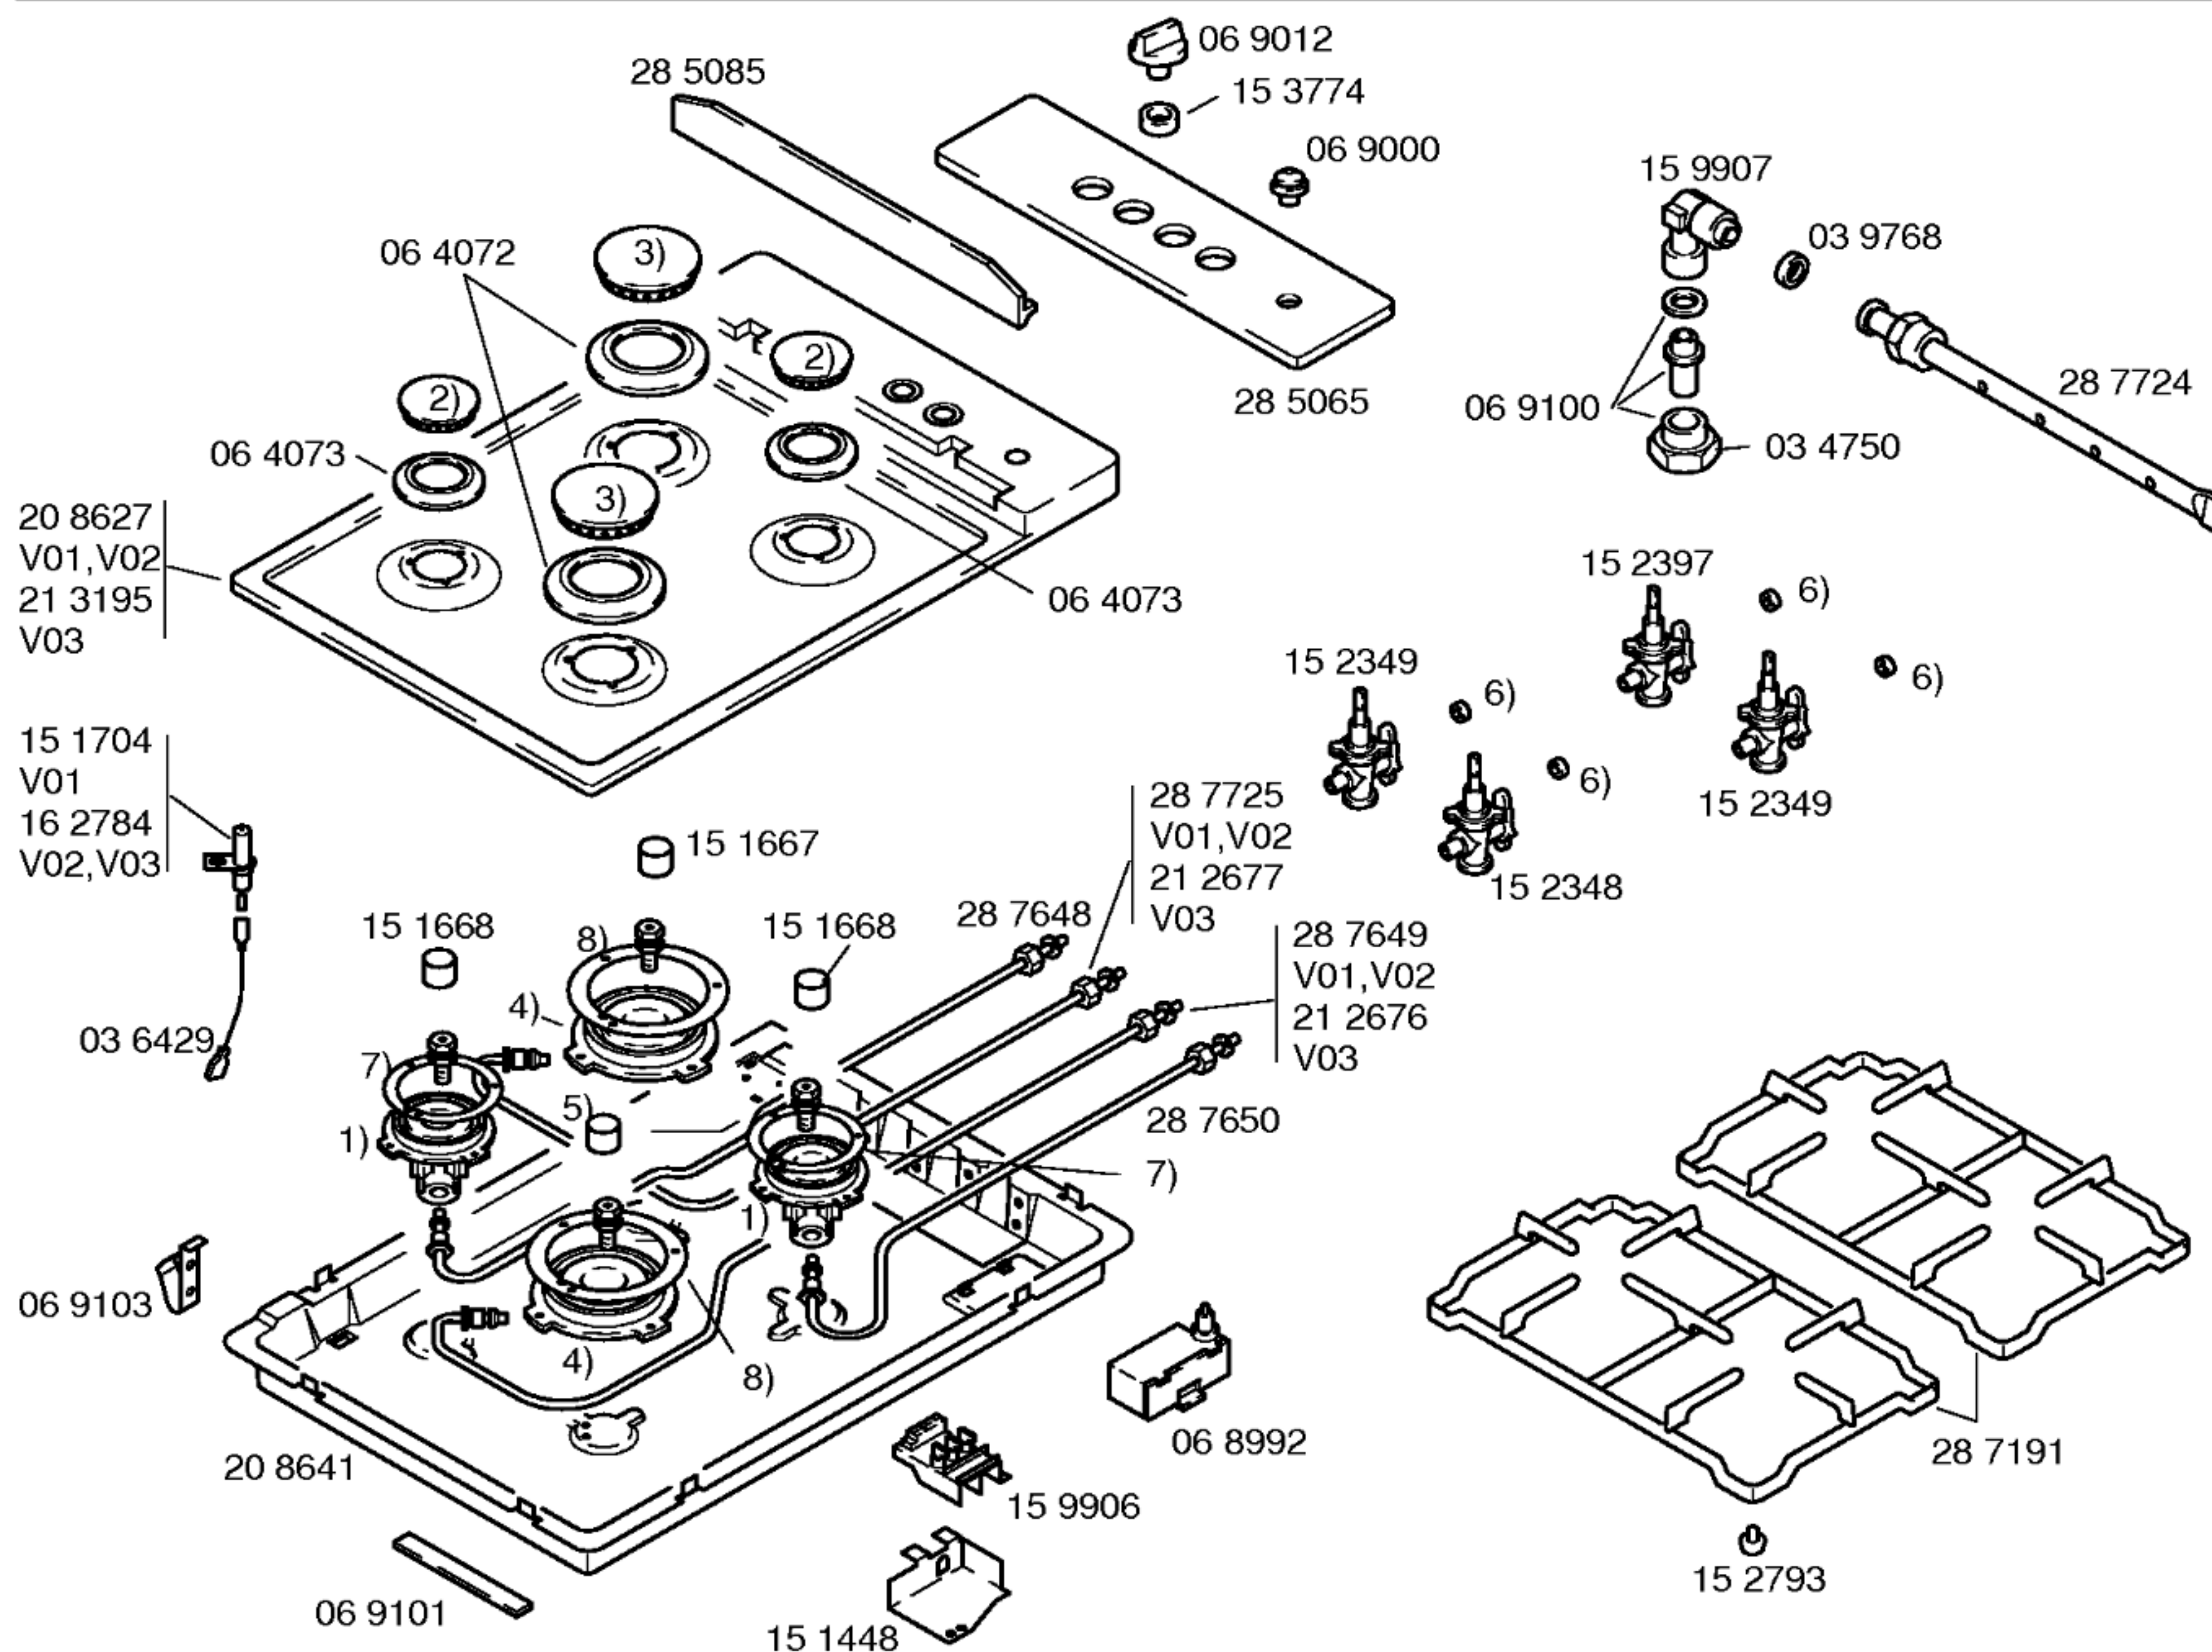

Gebrauchsanweisung
51 8346
V01,V02
(D, GB, F, NL, I, E, P)
51 9887
V03
(D, GB, F, NL, I, E, P)

- 1) 15 1684
V01
16 2776
V02,V03
- 2) 15 1671
V01
16 2794
V02,V03
- 3) 15 1670
V01
16 2781
V02,V03
- 4) 15 1682
V01
16 2775
V02,V03
- 5) 15 1666
- 6) 03 6011
- 7) 18 2596
- 8) 18 2595

Düsensatz für
Erdgas EE20 mBar
15 1818
Stadtgas 8 mBar
15 1819
Flüssiggas 28 mBar
15 1820