


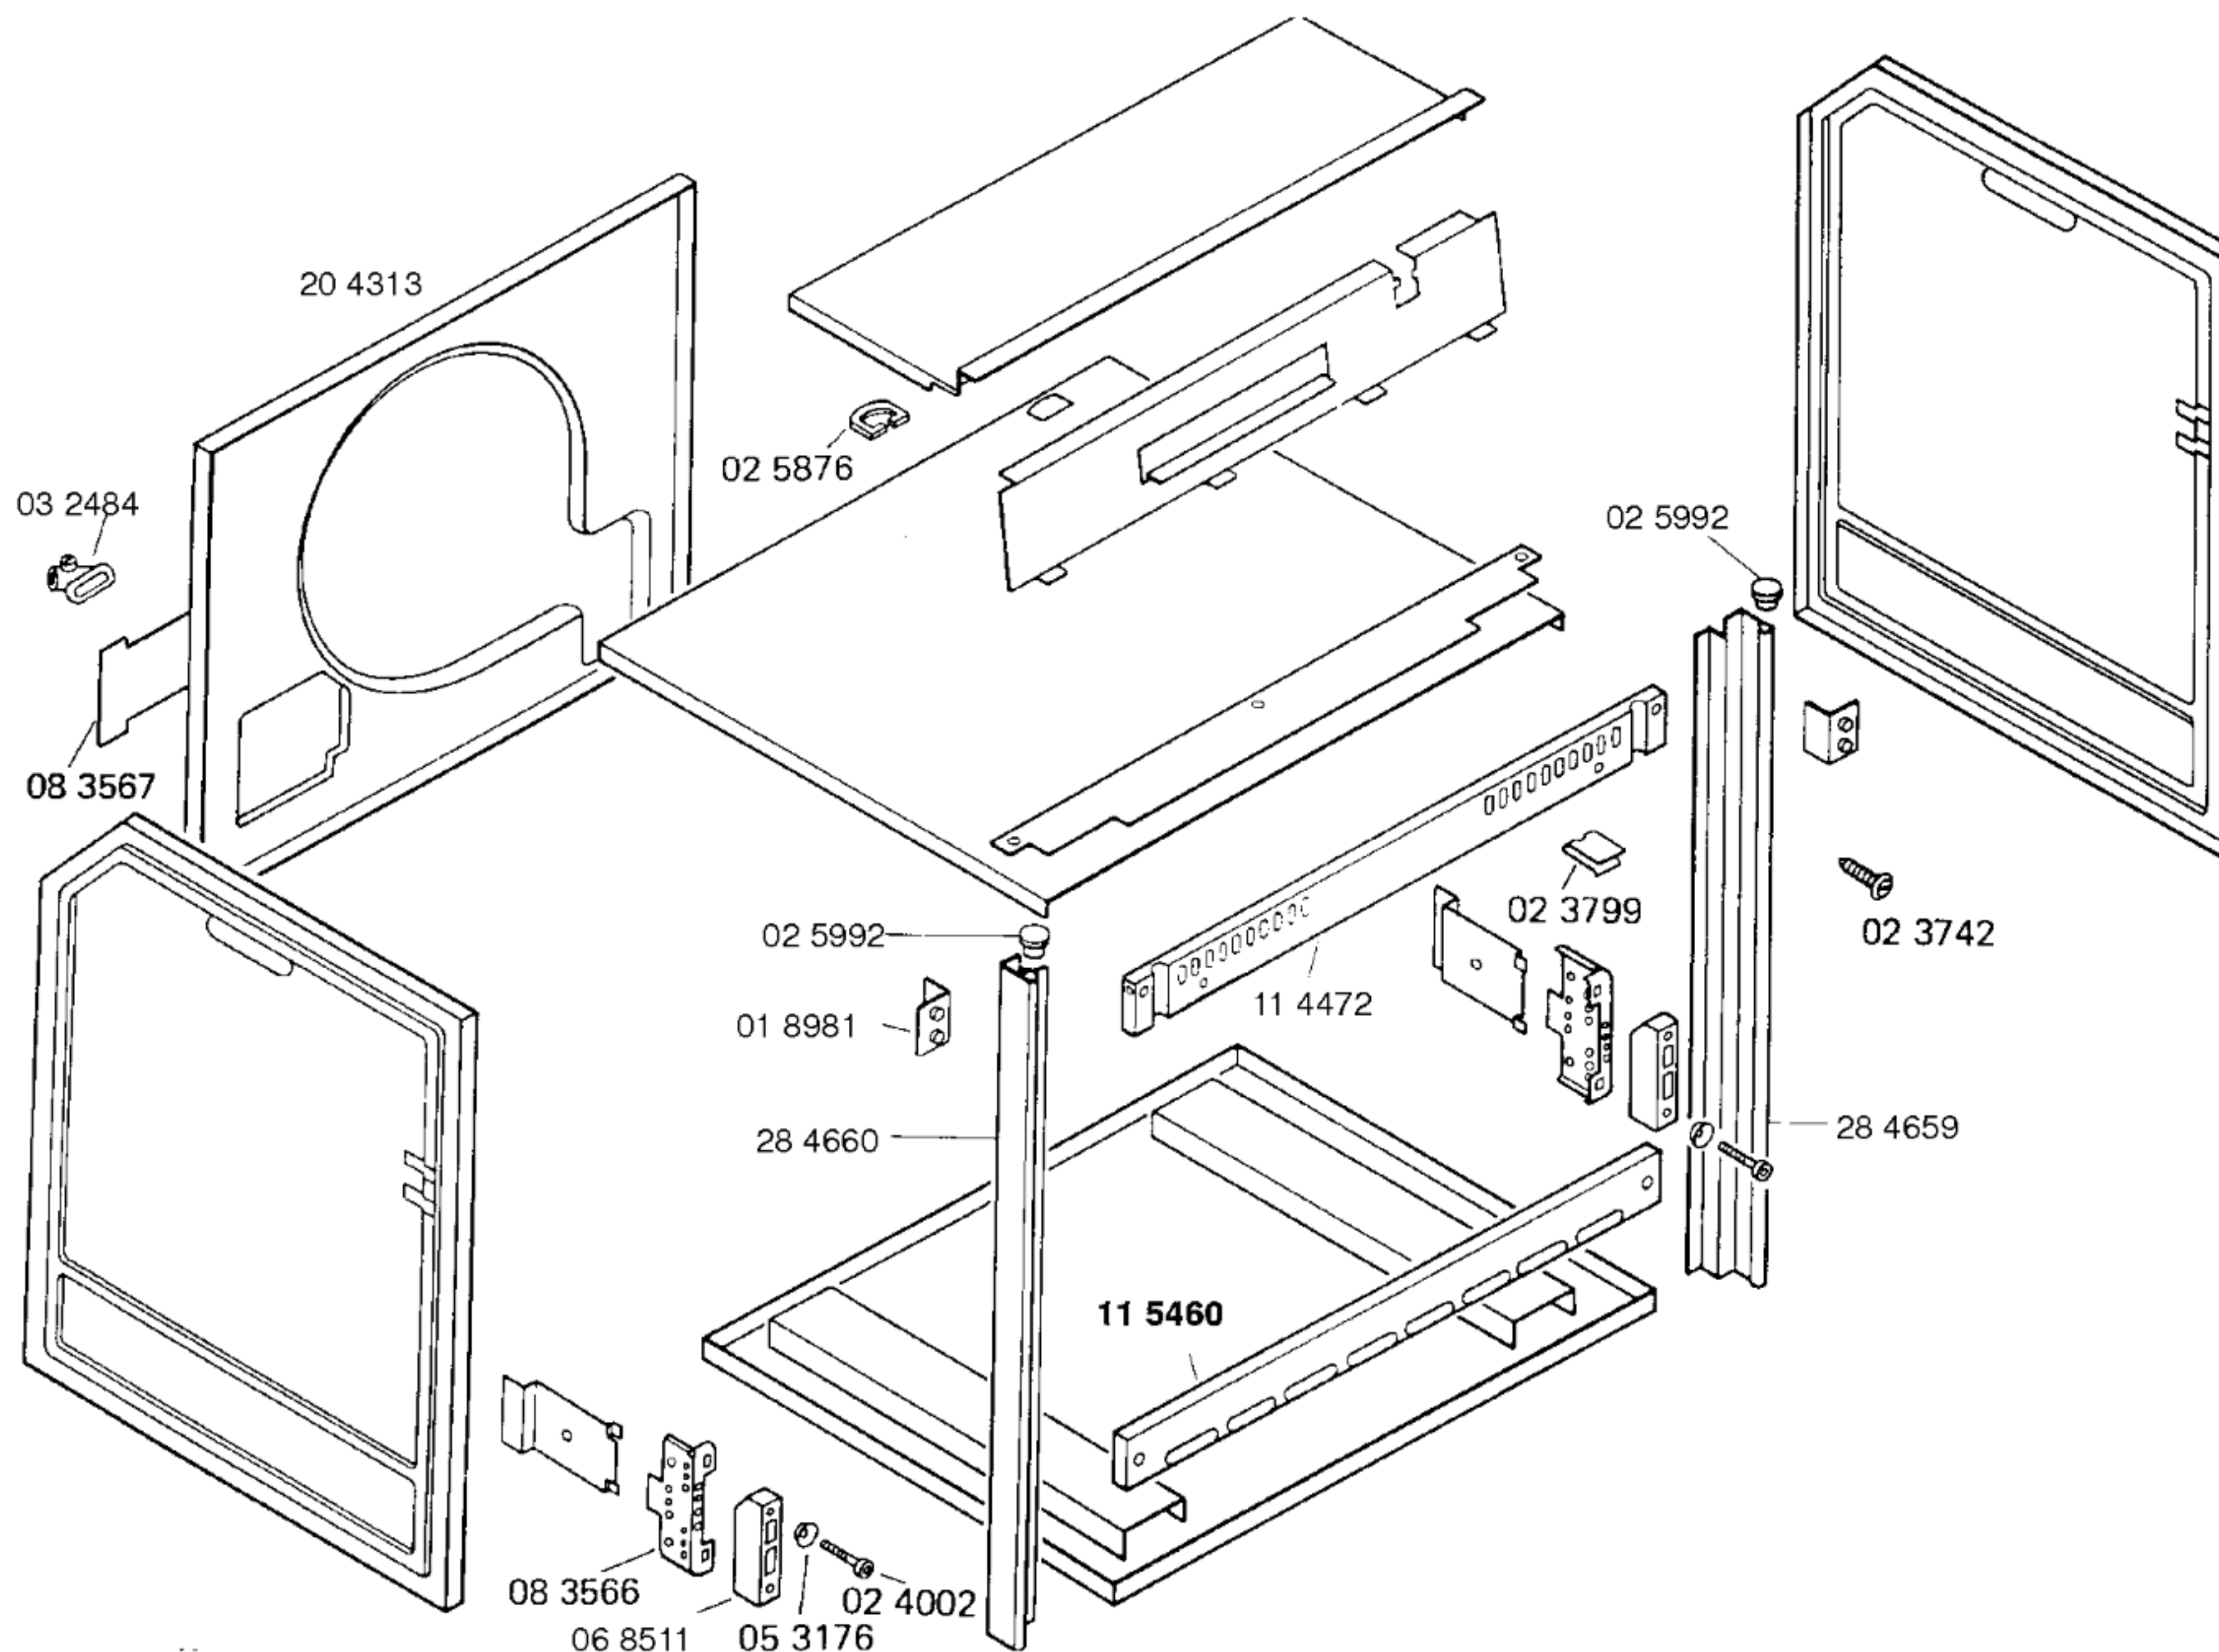

Gebrauchsanweisung
 51 6812
 (D,GB,F,NL,I,E,GR)

Tips und Rezepte
 51 2001
 (D)

Zubehör:

Fettpfanne
 Z1220X0


Backblech–Alu
 Z1320X0

Back–Bratrost
 Z1420X0

Bratenblech
 Z1510X0


Teleskopschiene
 Z1721X0


Brot–Backstein
 Z1910X0

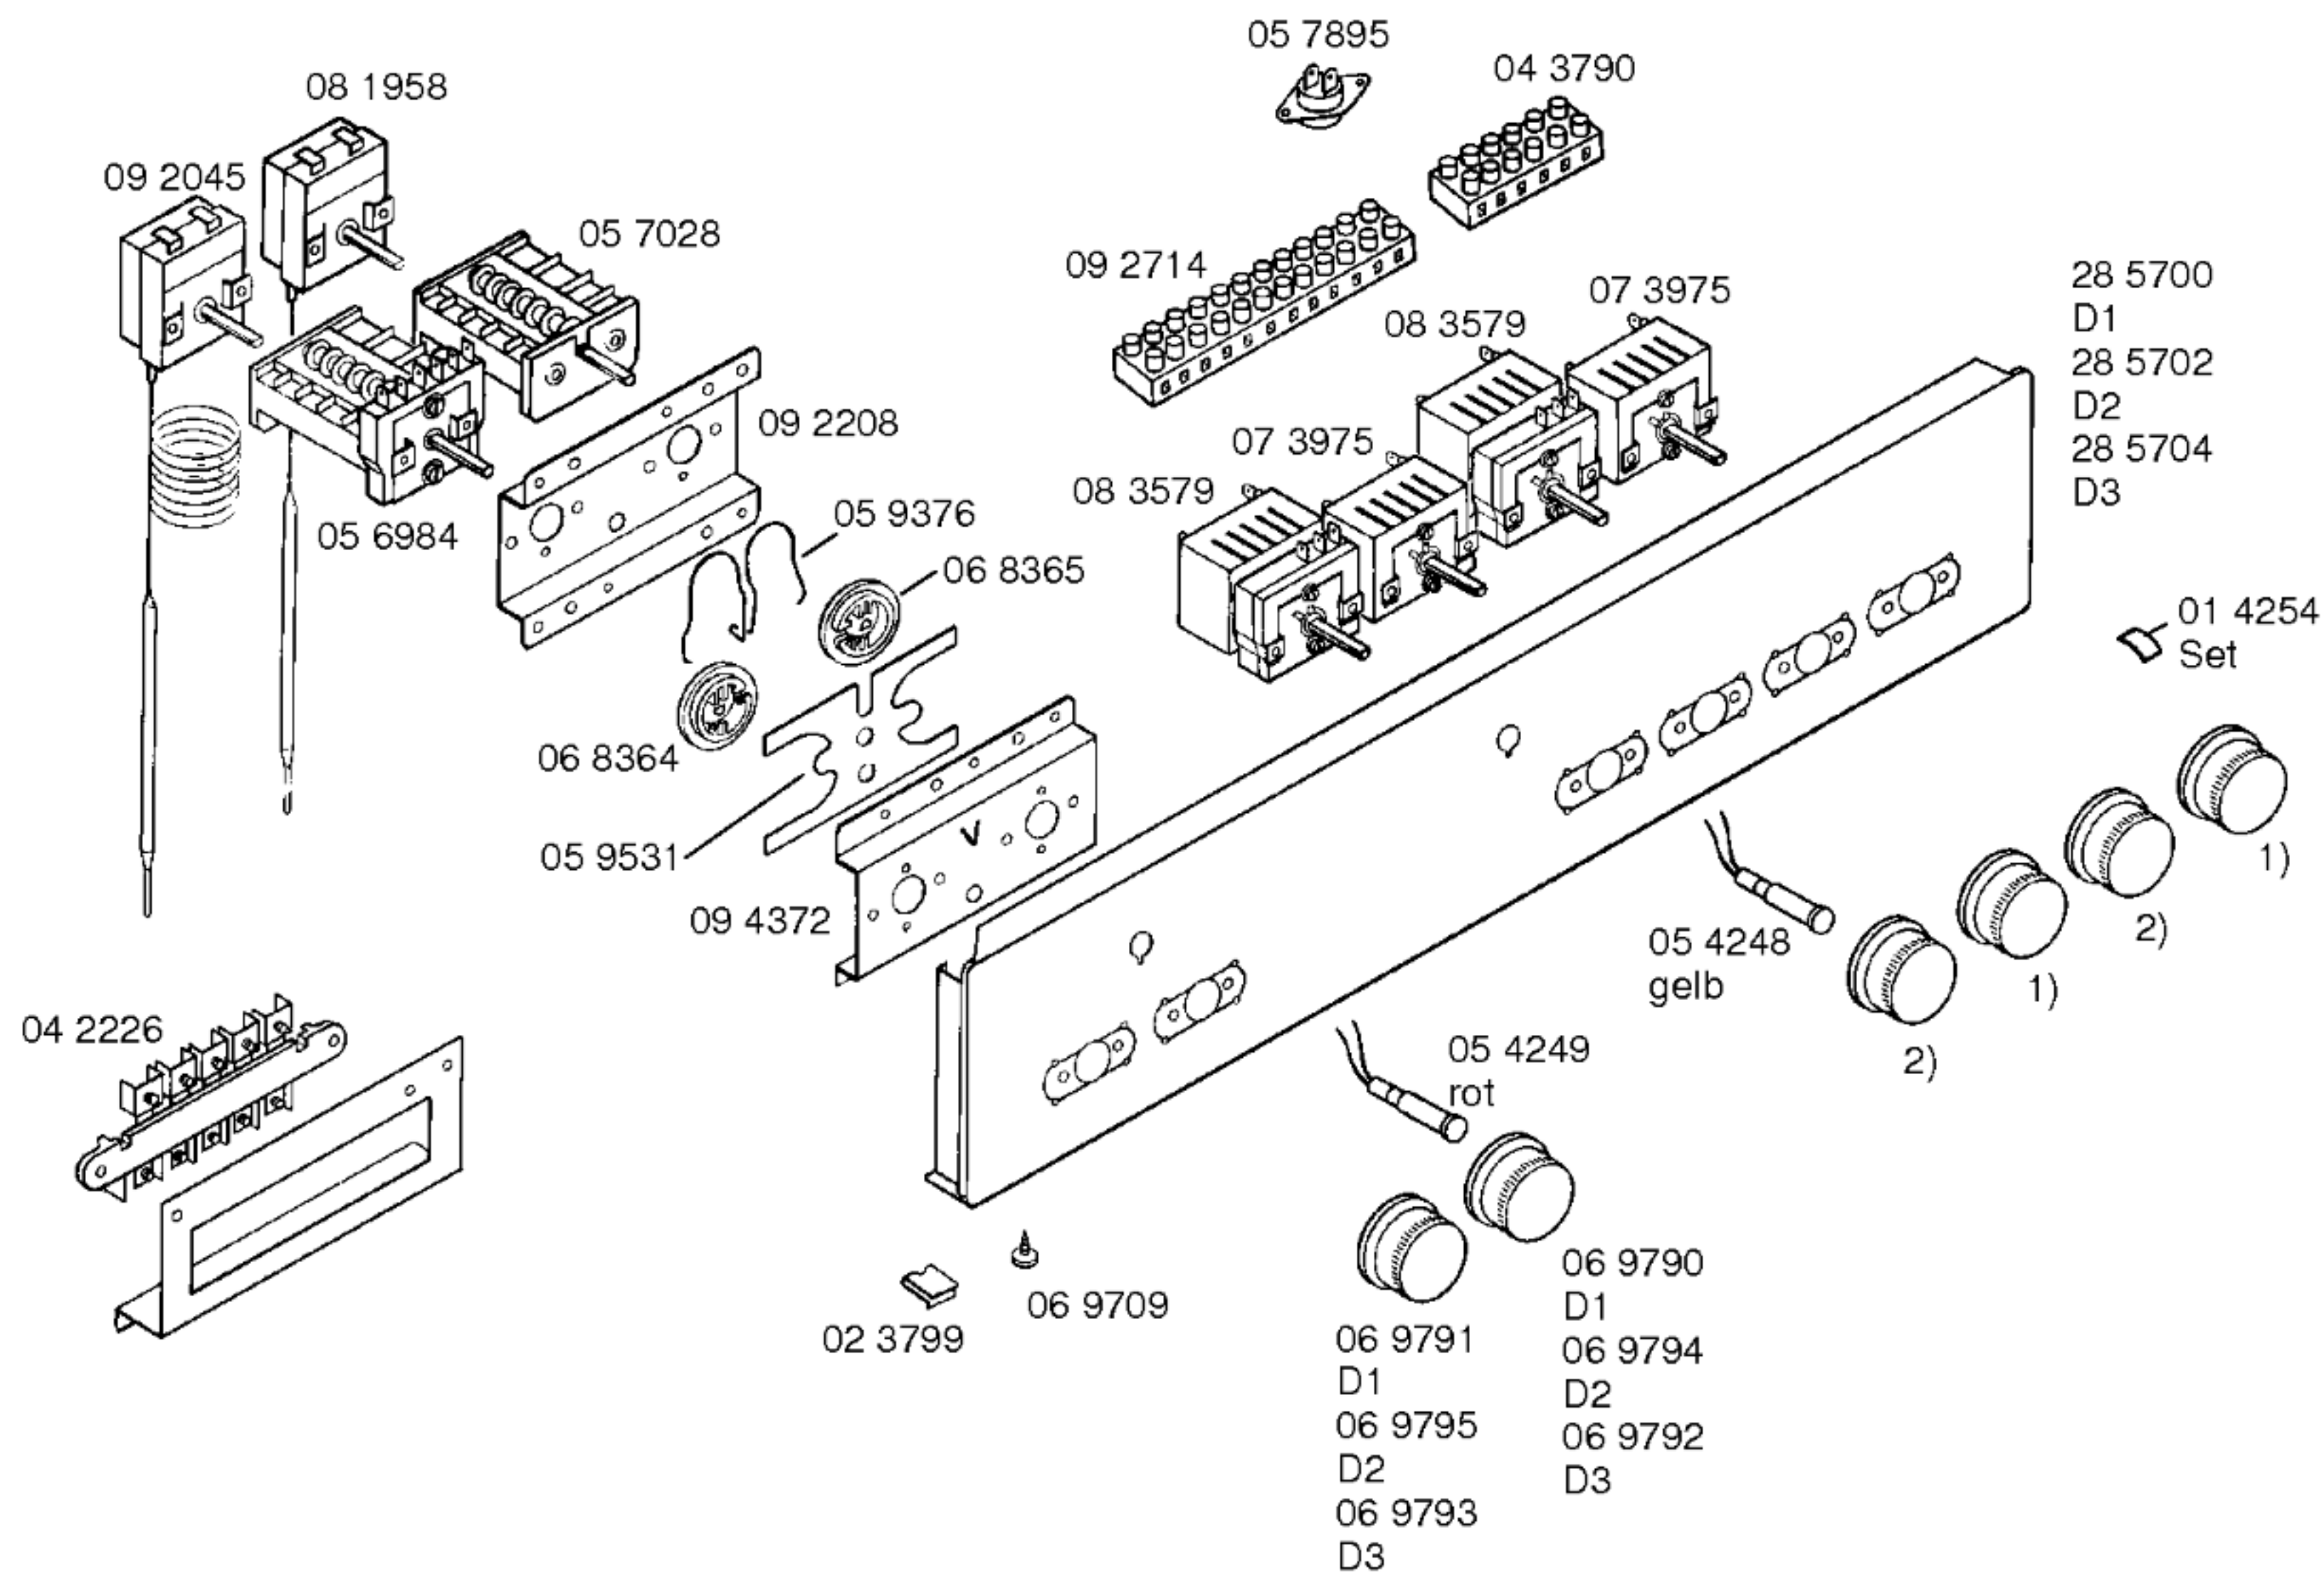


1) 06 9784
 D1
 06 9788
 D2
 06 9786
 D3


2) 06 9785
 D1
 06 9789
 D2
 06 9787
 D3

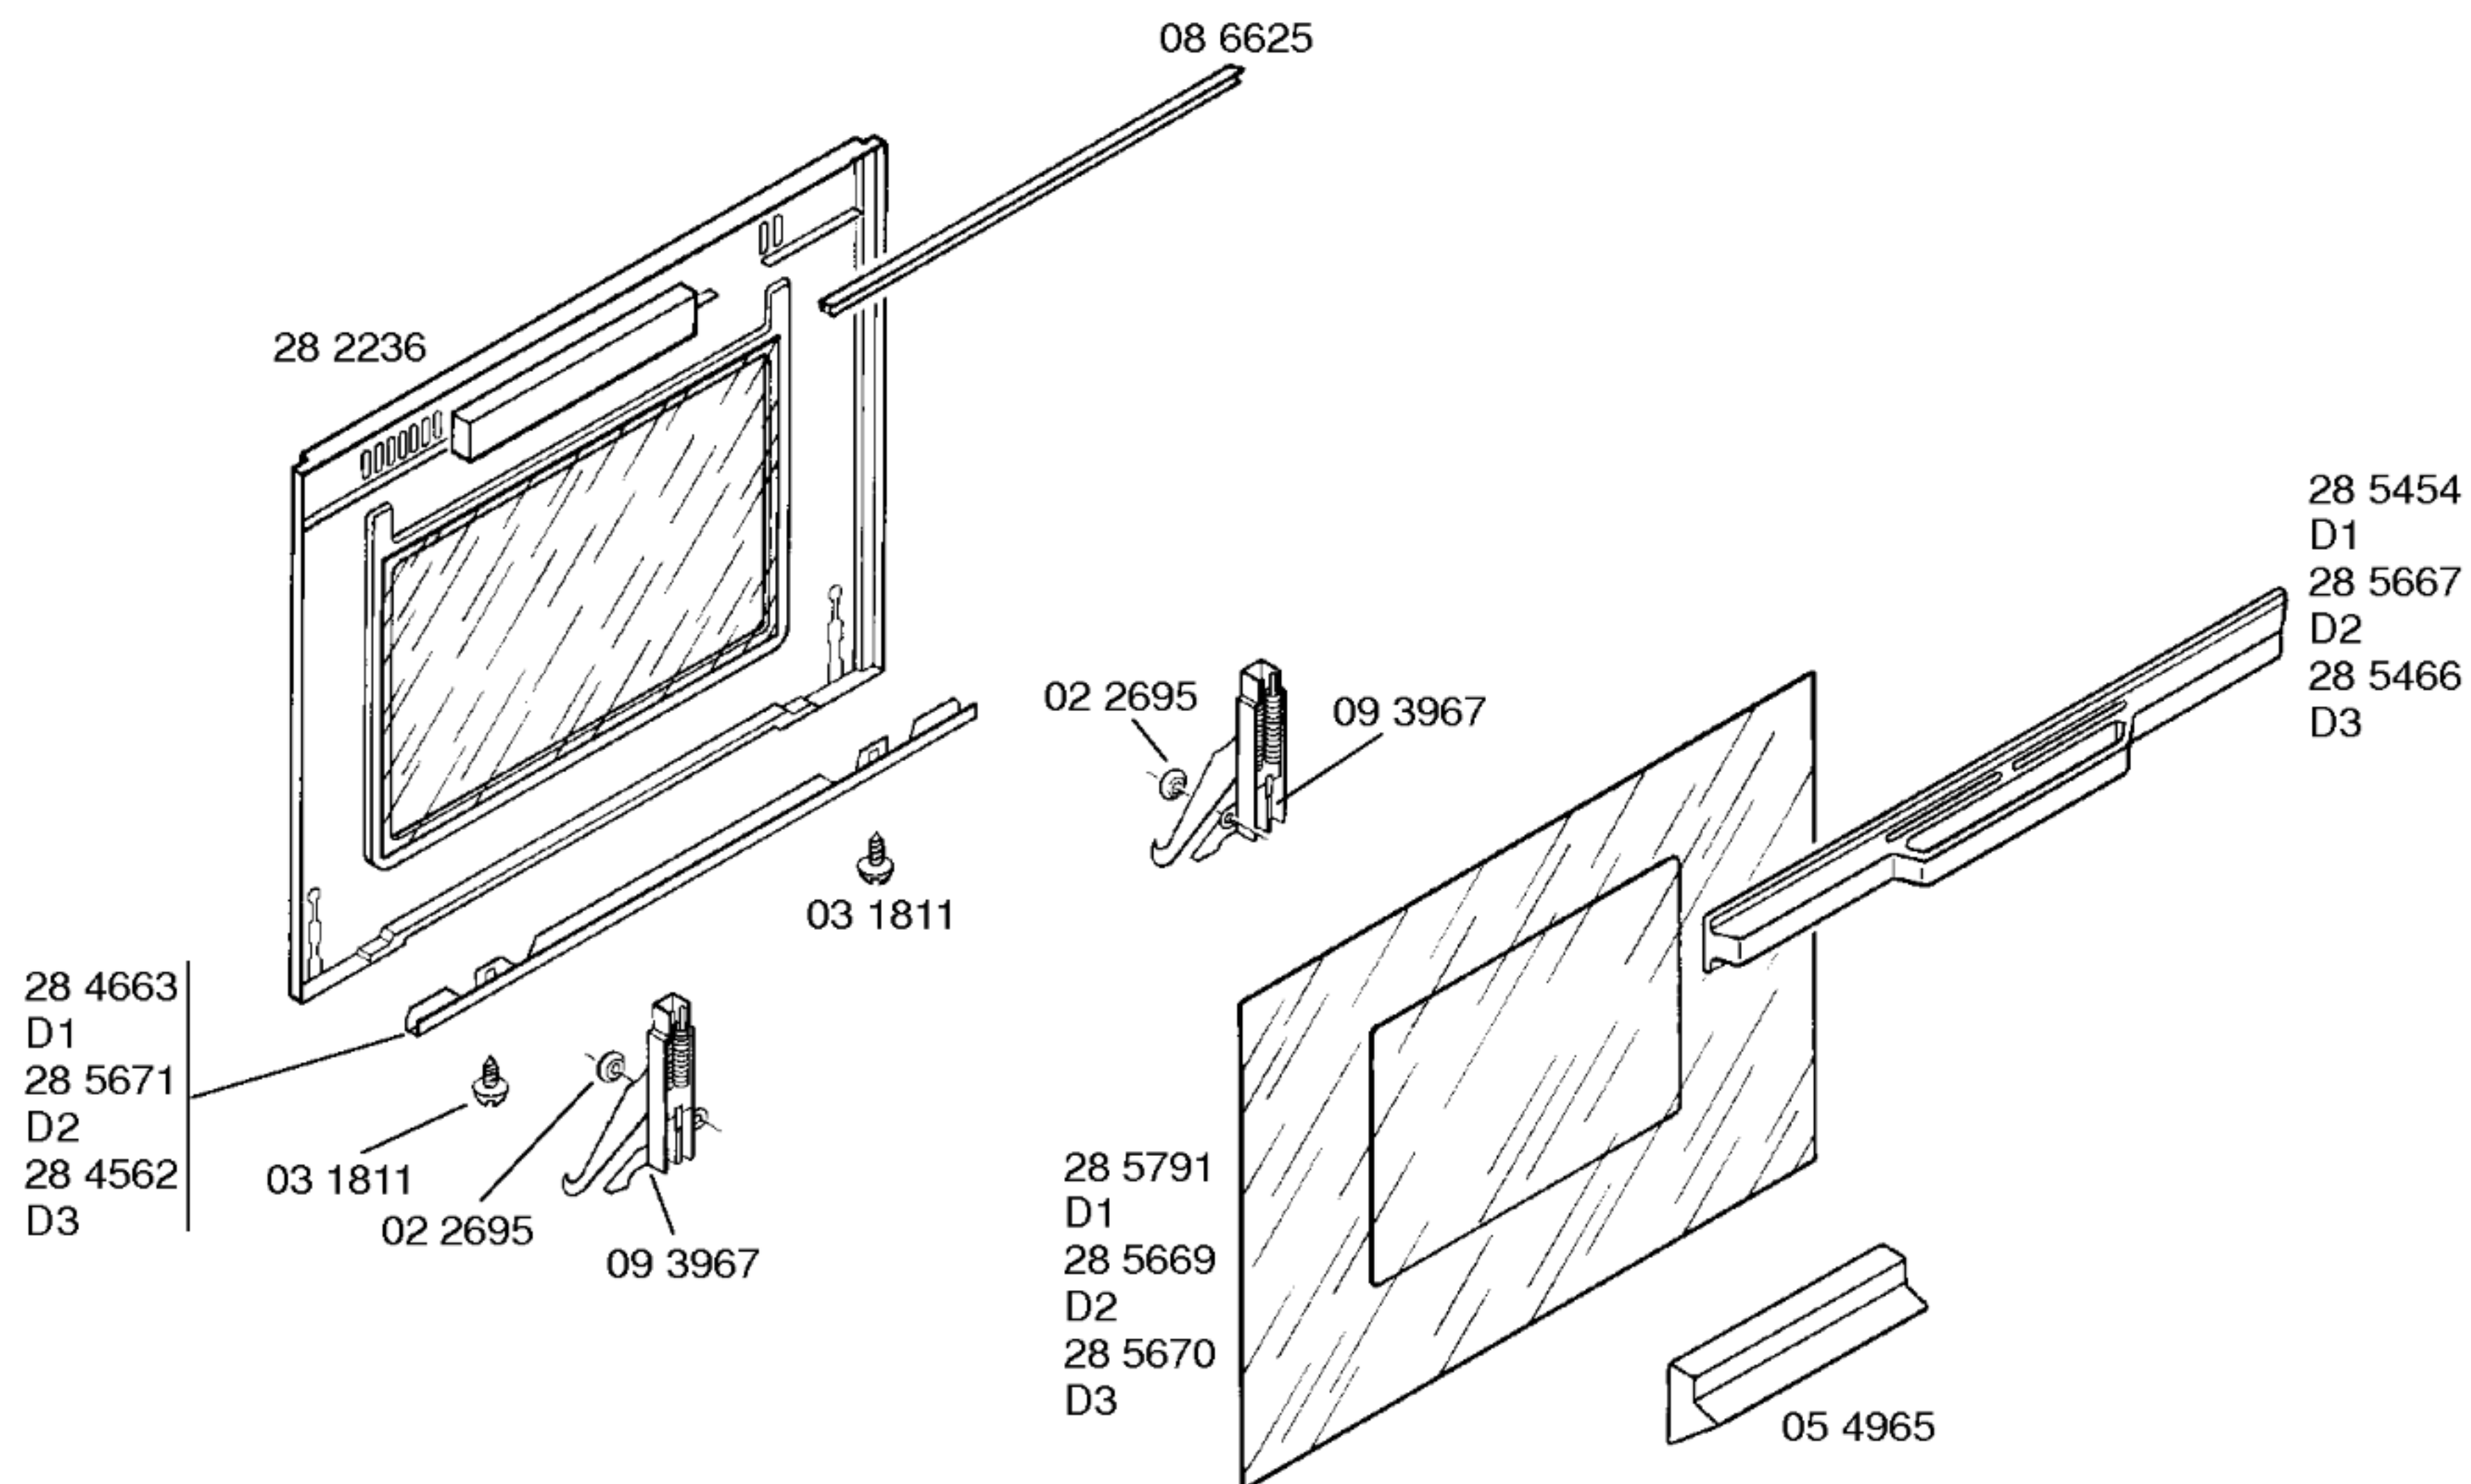

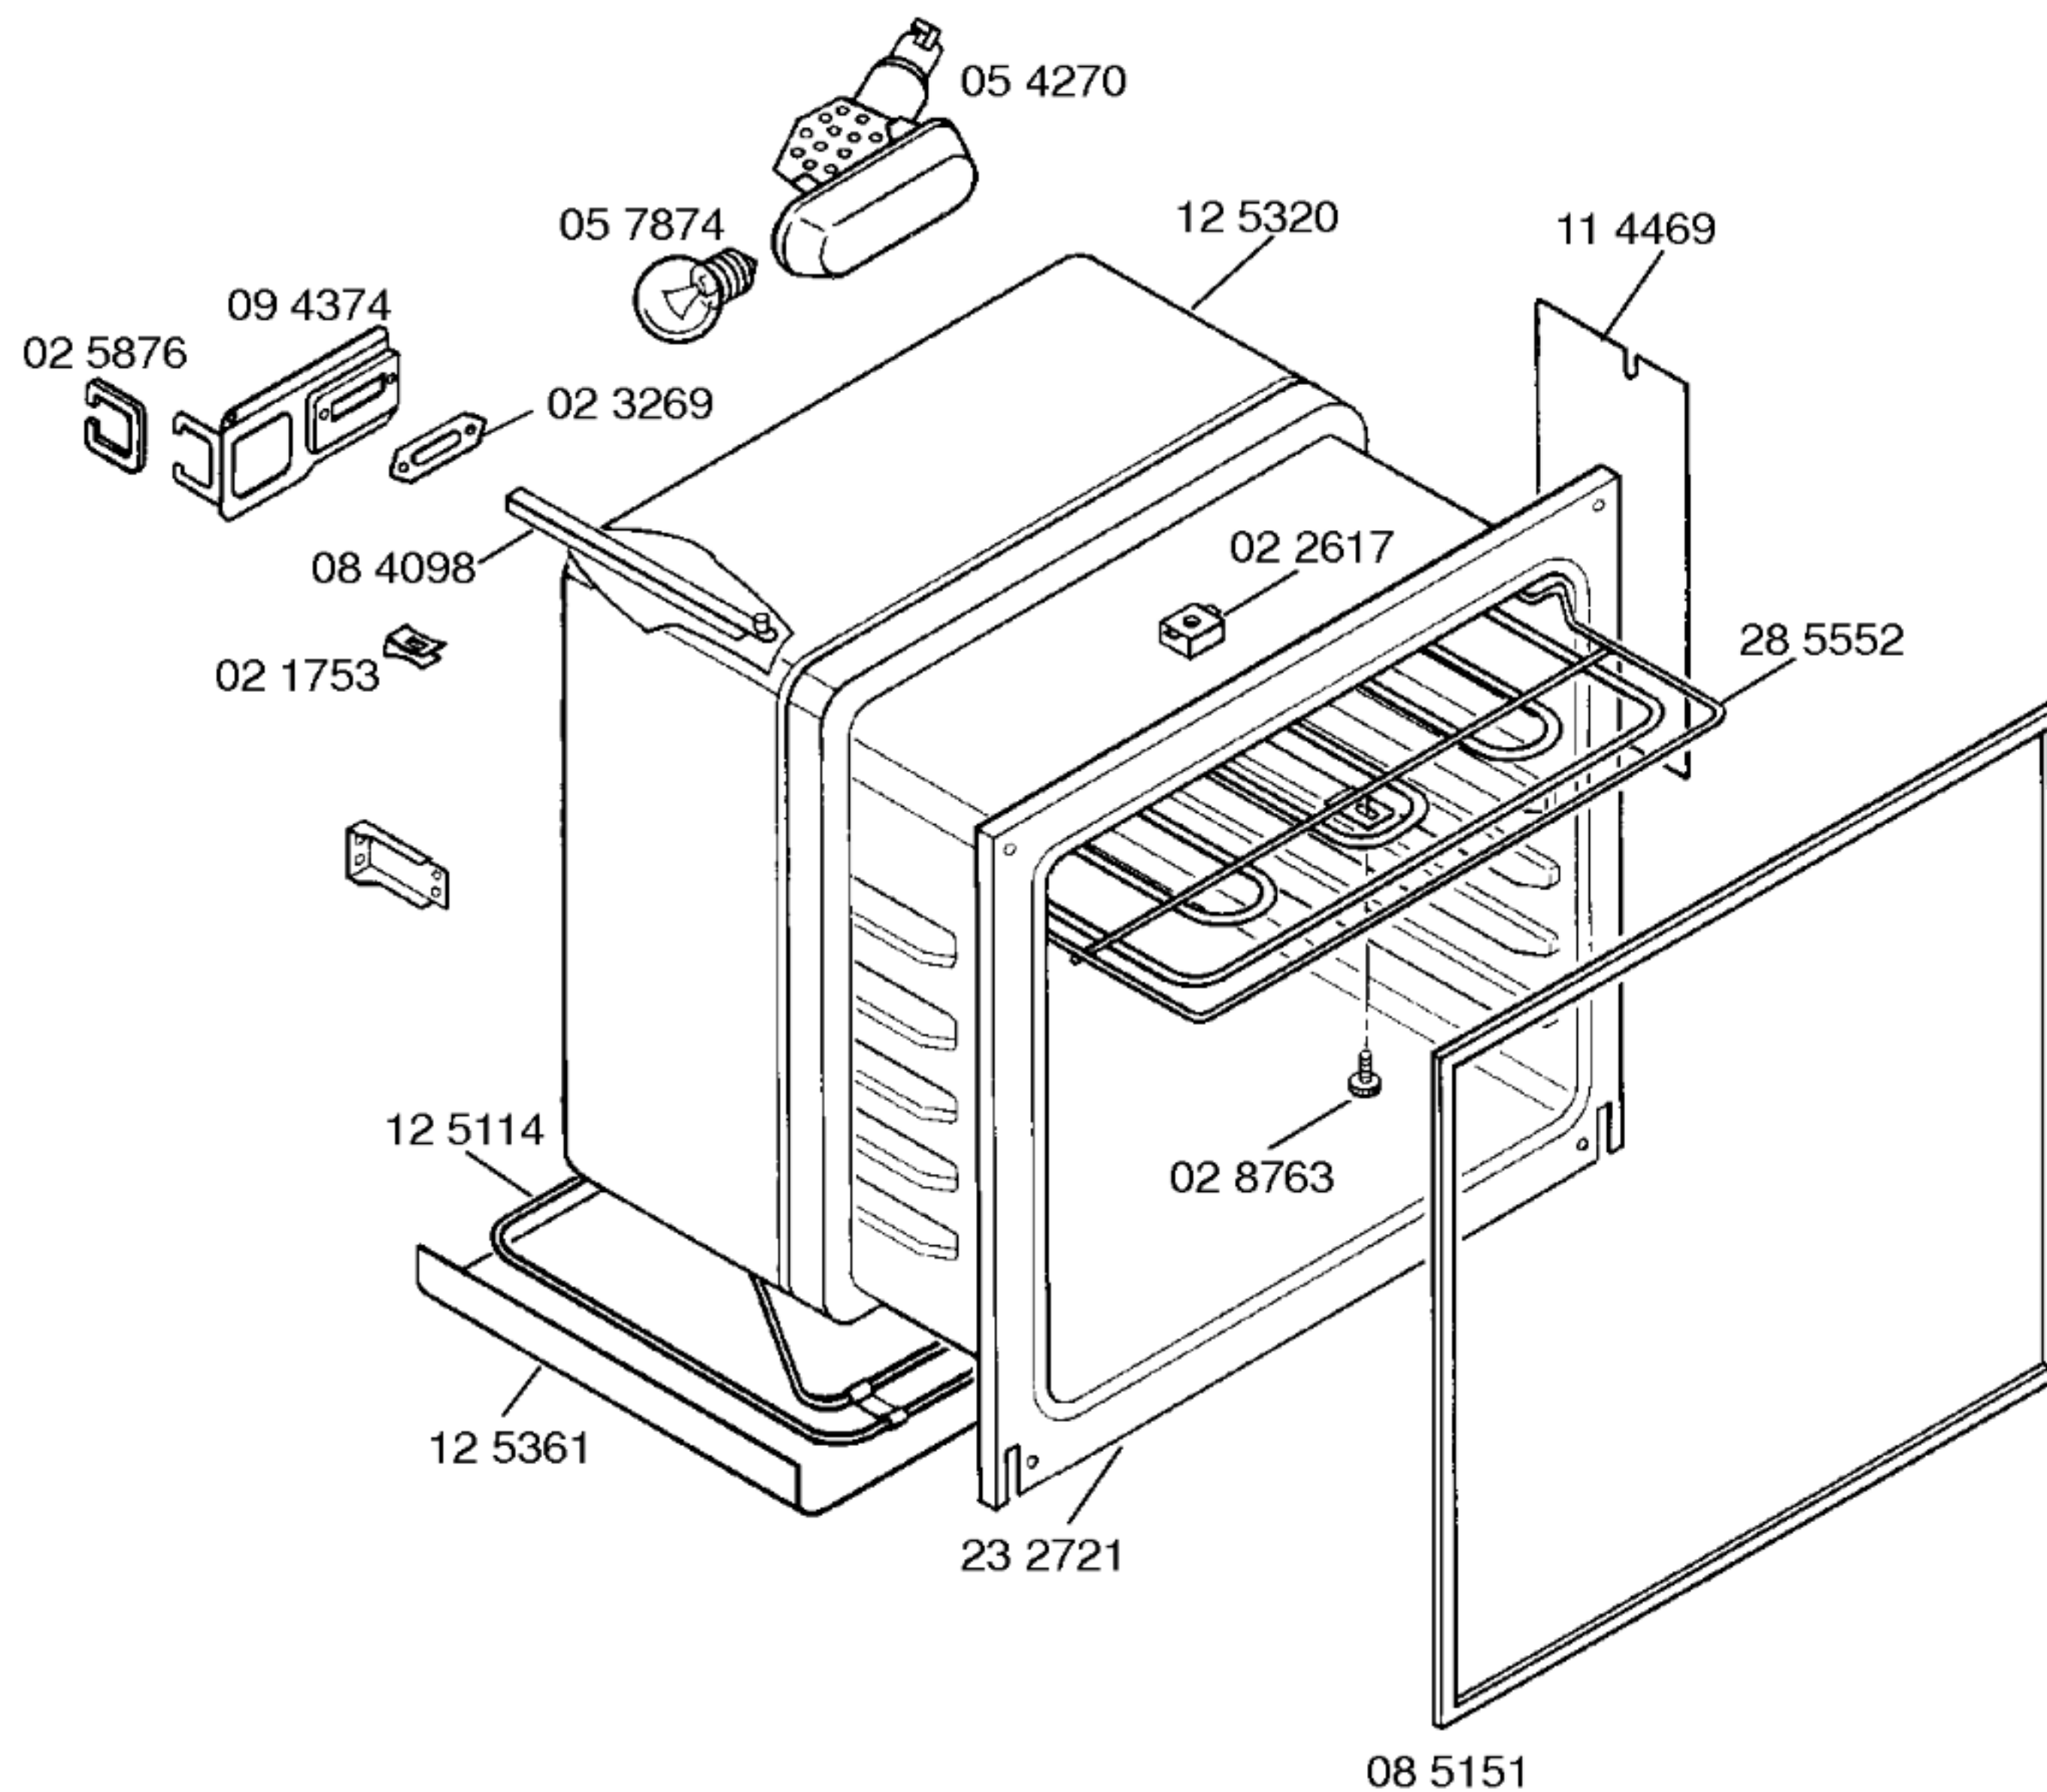

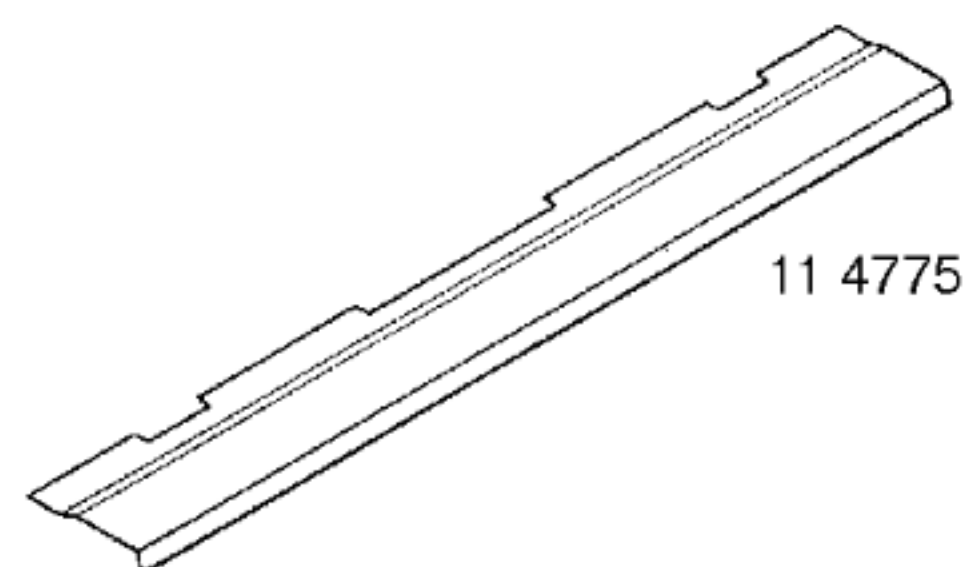


11 4775

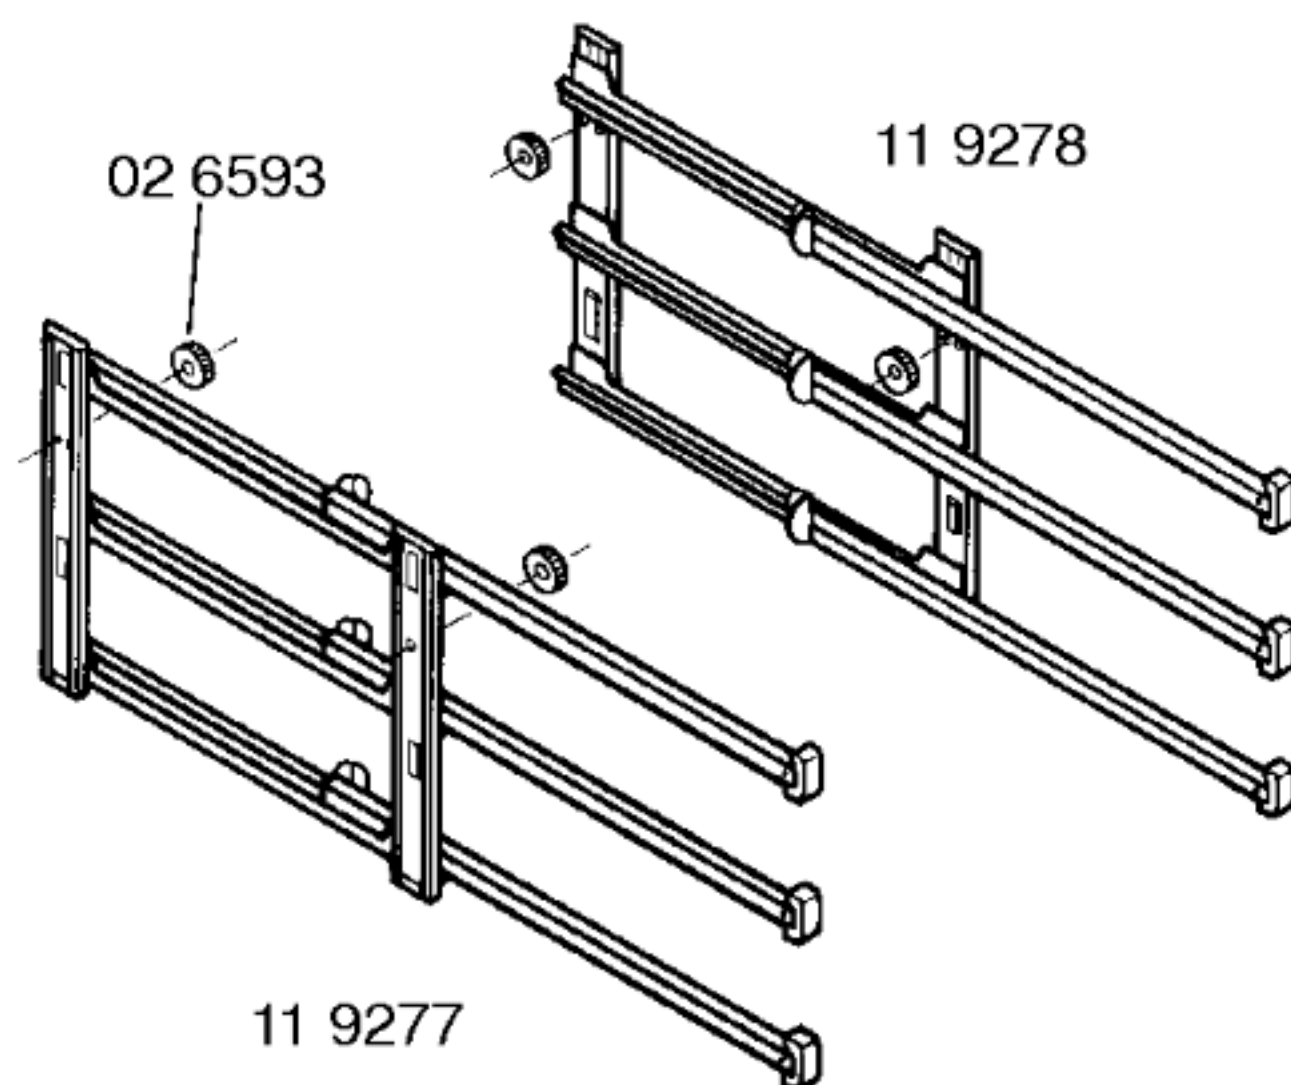

02 6593

11 9278

11 9277

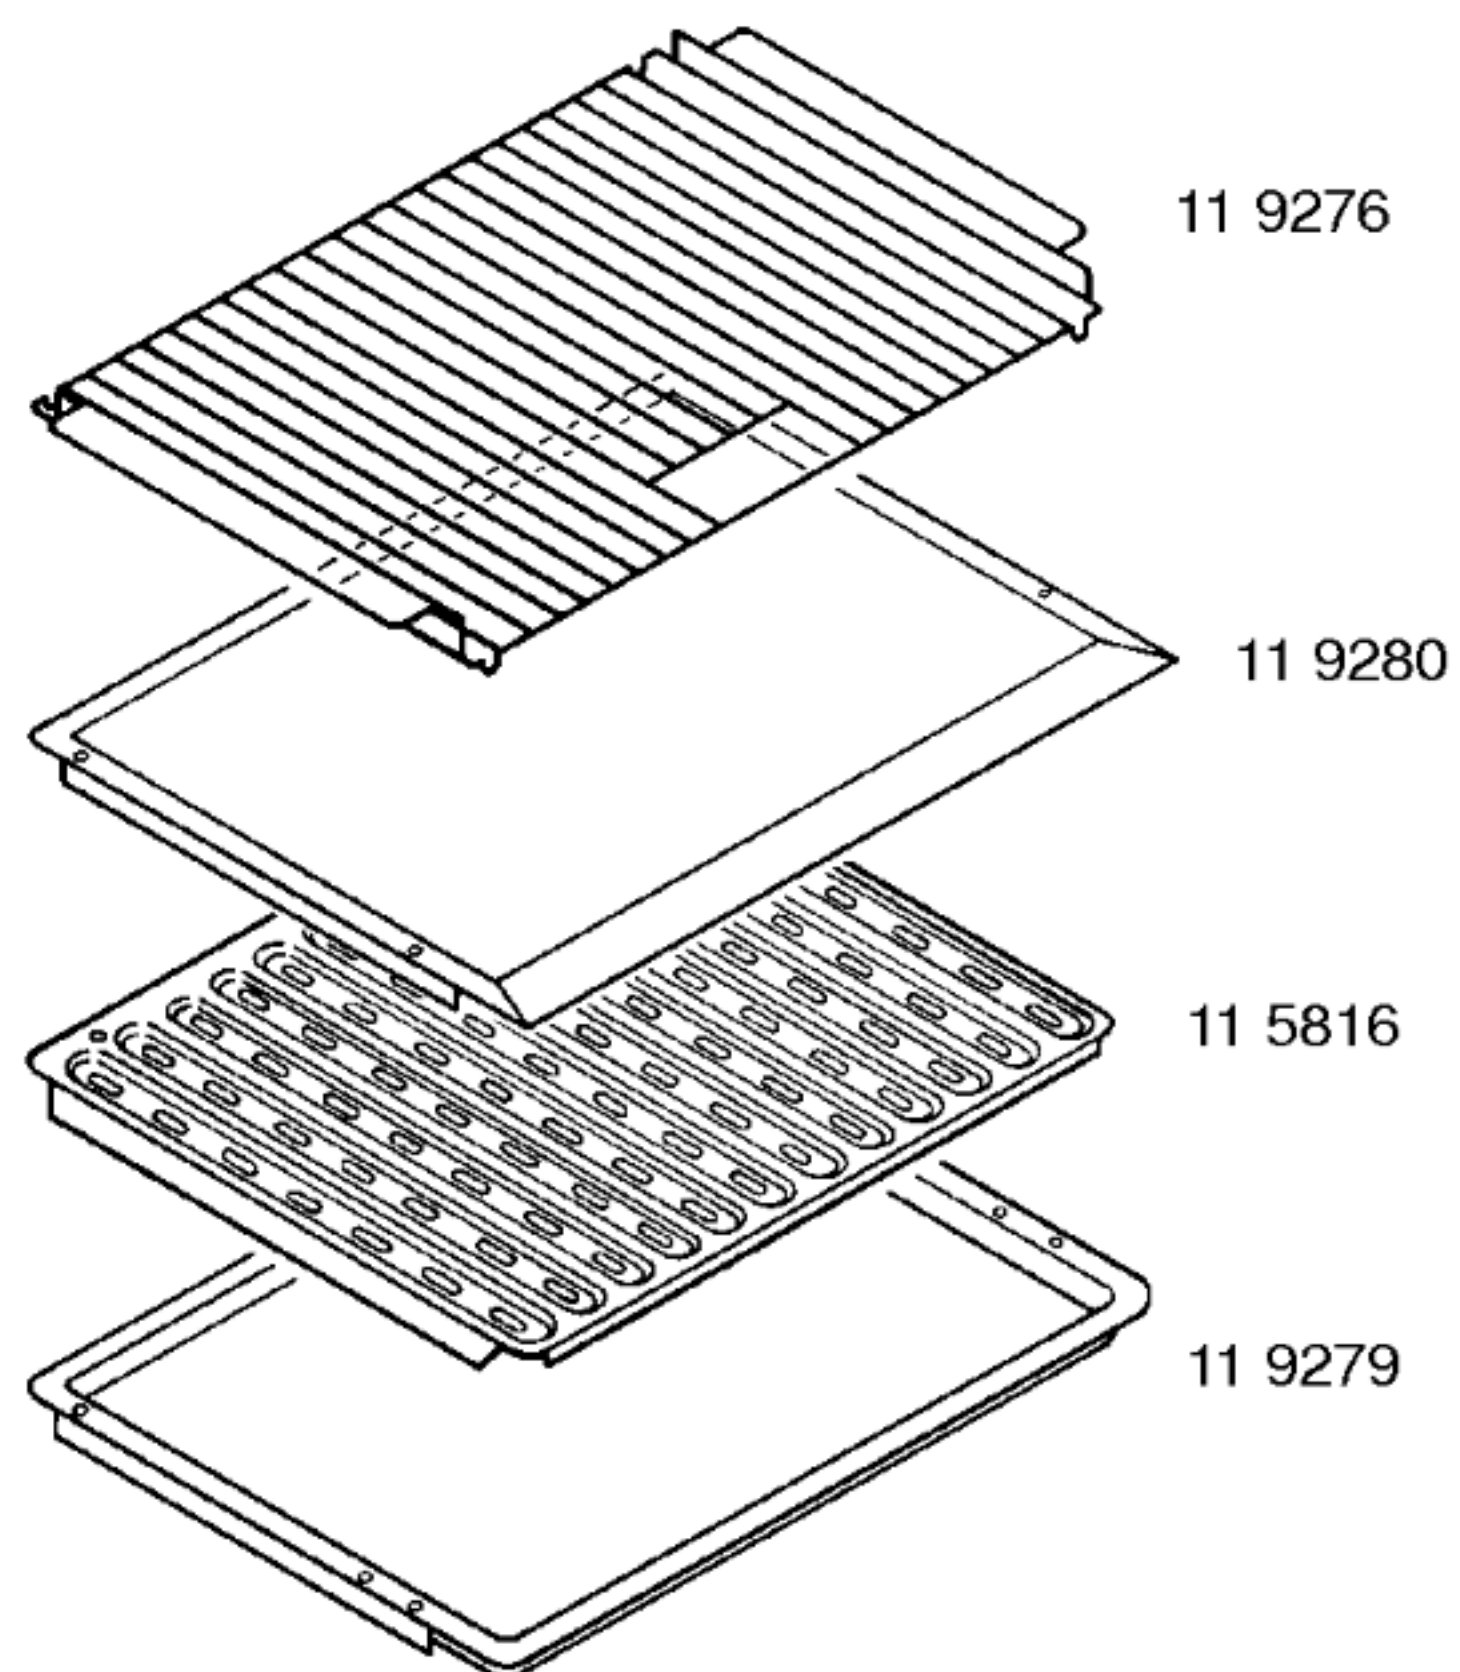

11 9276

11 9280

11 5816

11 9279

1) 08 4701
 kompl.

2) 02 5244

3) 02 5462

