




## Gebrauchsanweisung 52 9272

- 1) 23 6654
- 2) 35 2493
- 3) 36 2710
- 4) 18 3902
- 5) 26 7357
- 6) 26 7359
- 7) 26 7356
- 8) 17 3897
- 9) 17 3898
- 10) 17 3896
- 11) 26 8644
- 12) 48 1795
- 13) 18 3455
- 14) 18 7489
- 15) 18 6972
- 16) 23 5806
- V01, V02, V03
- 21 8905
- V04

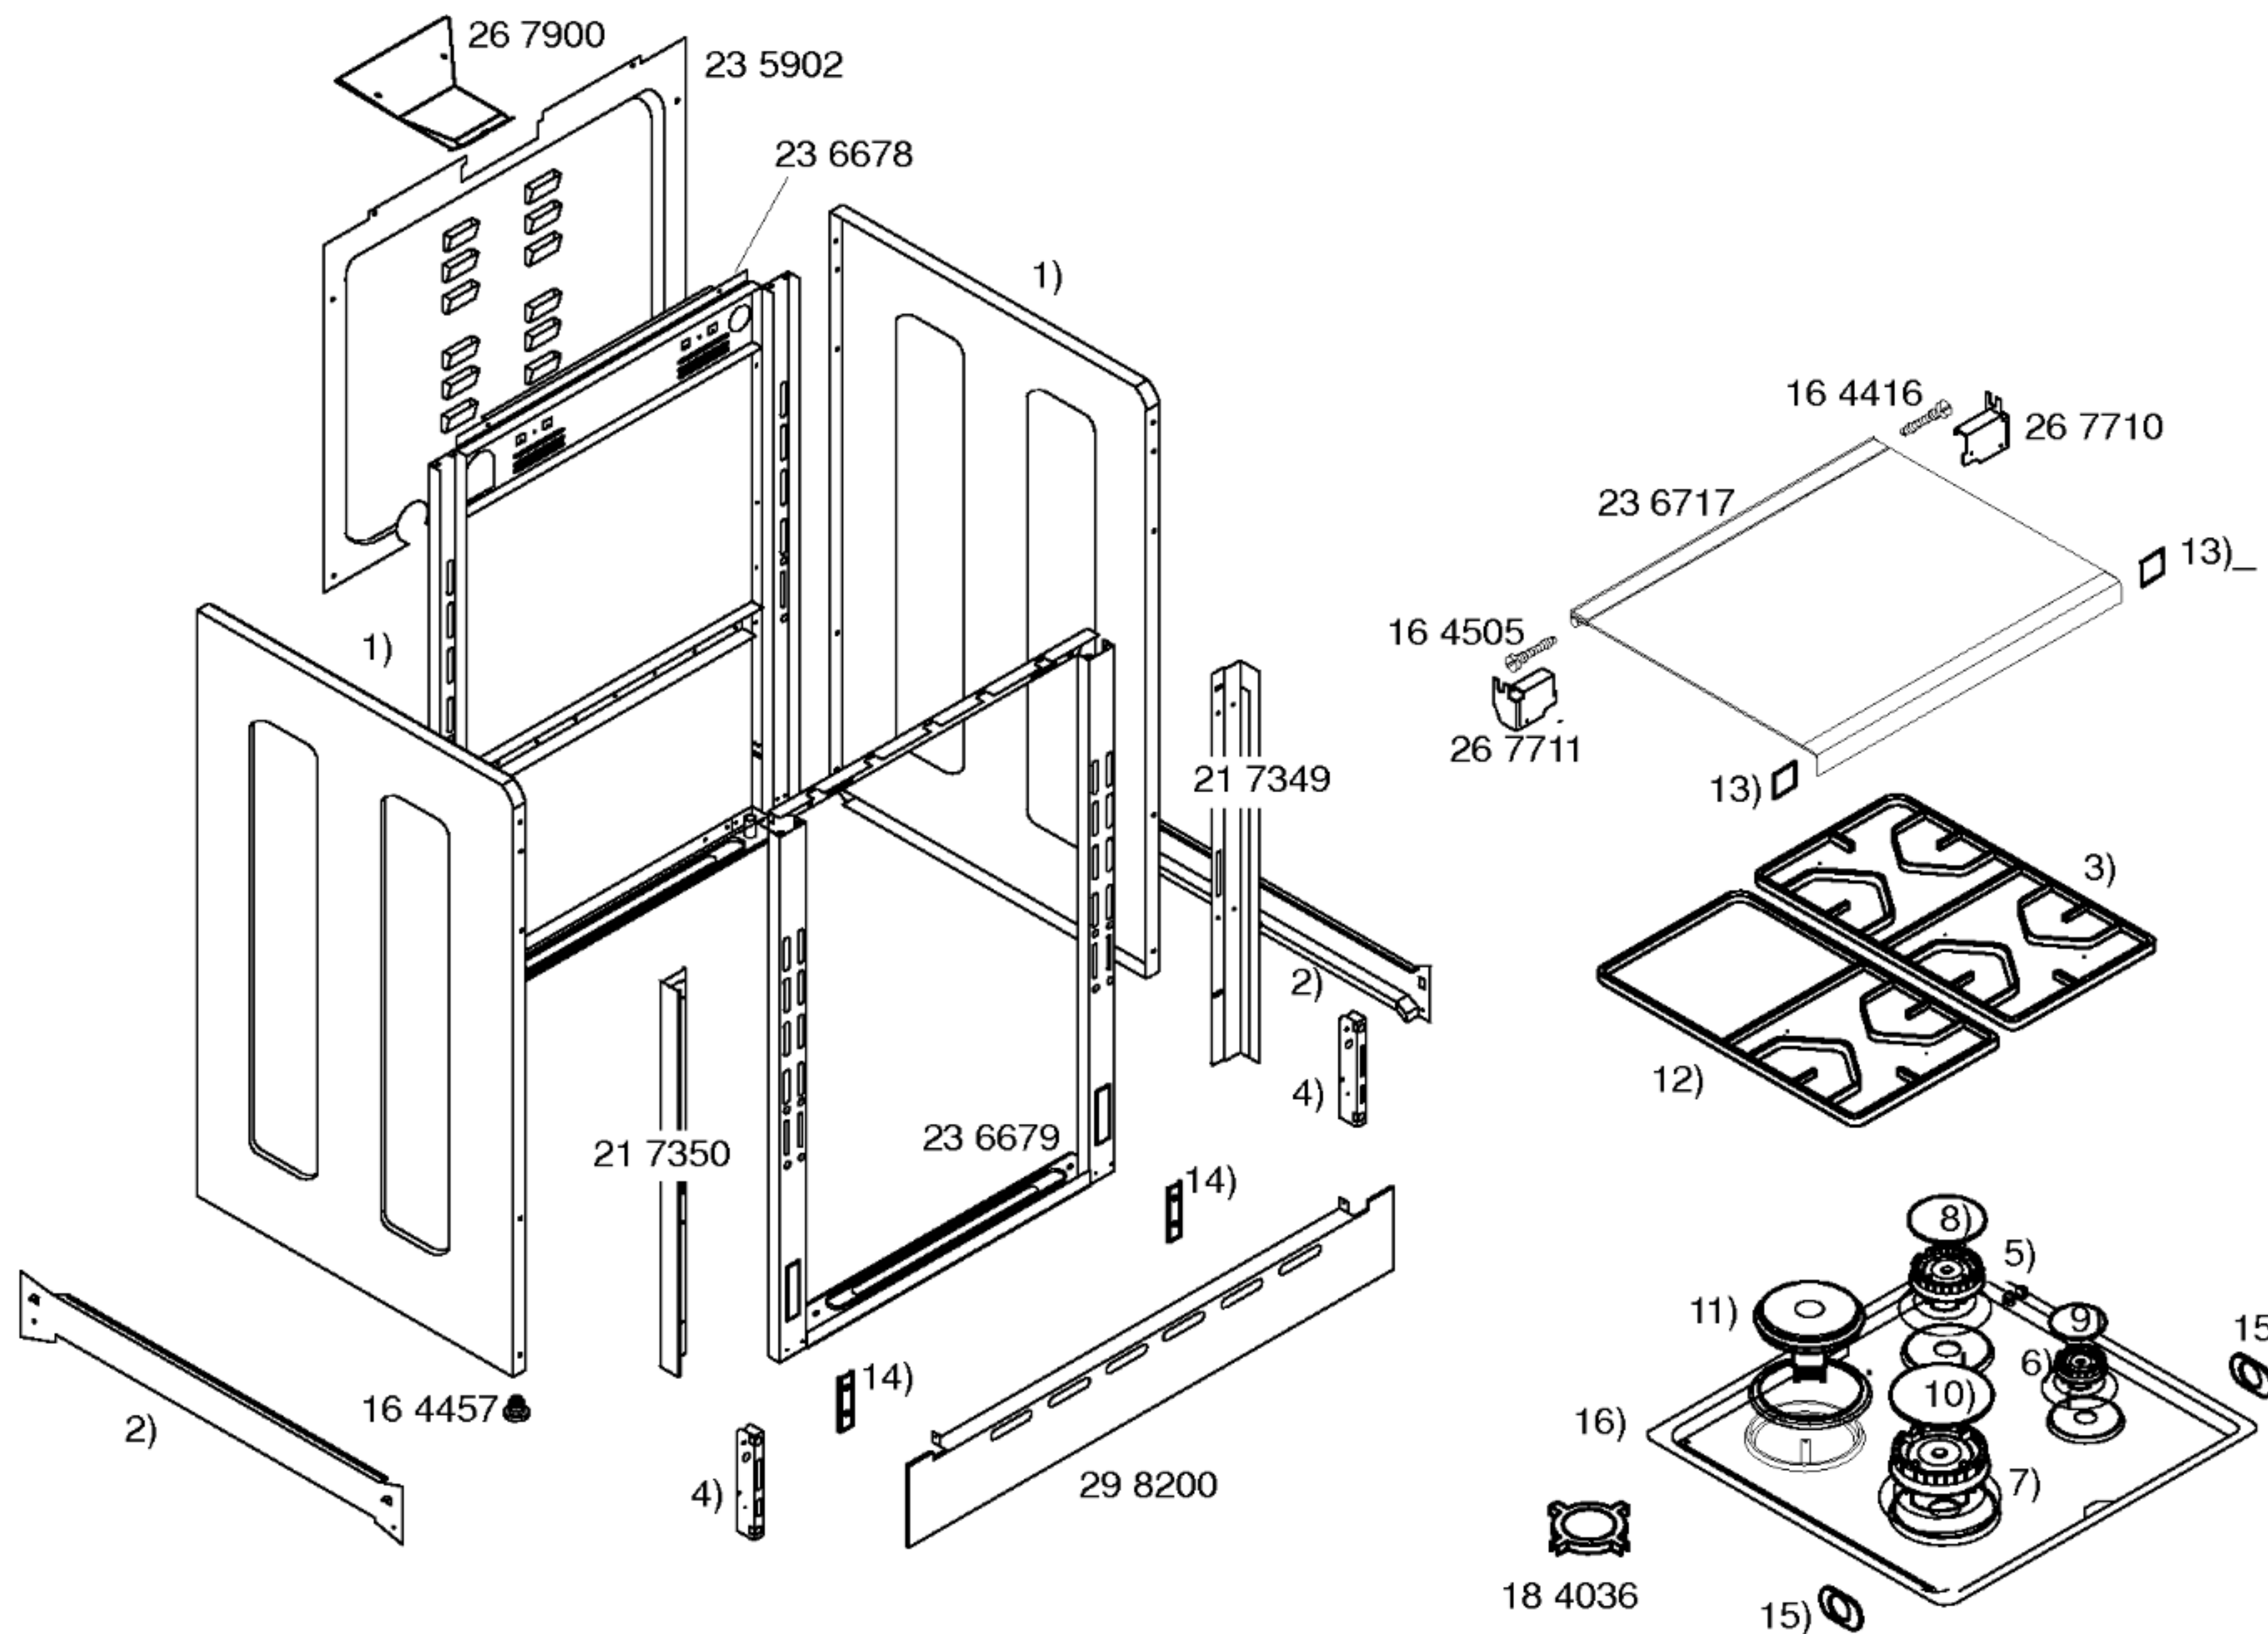


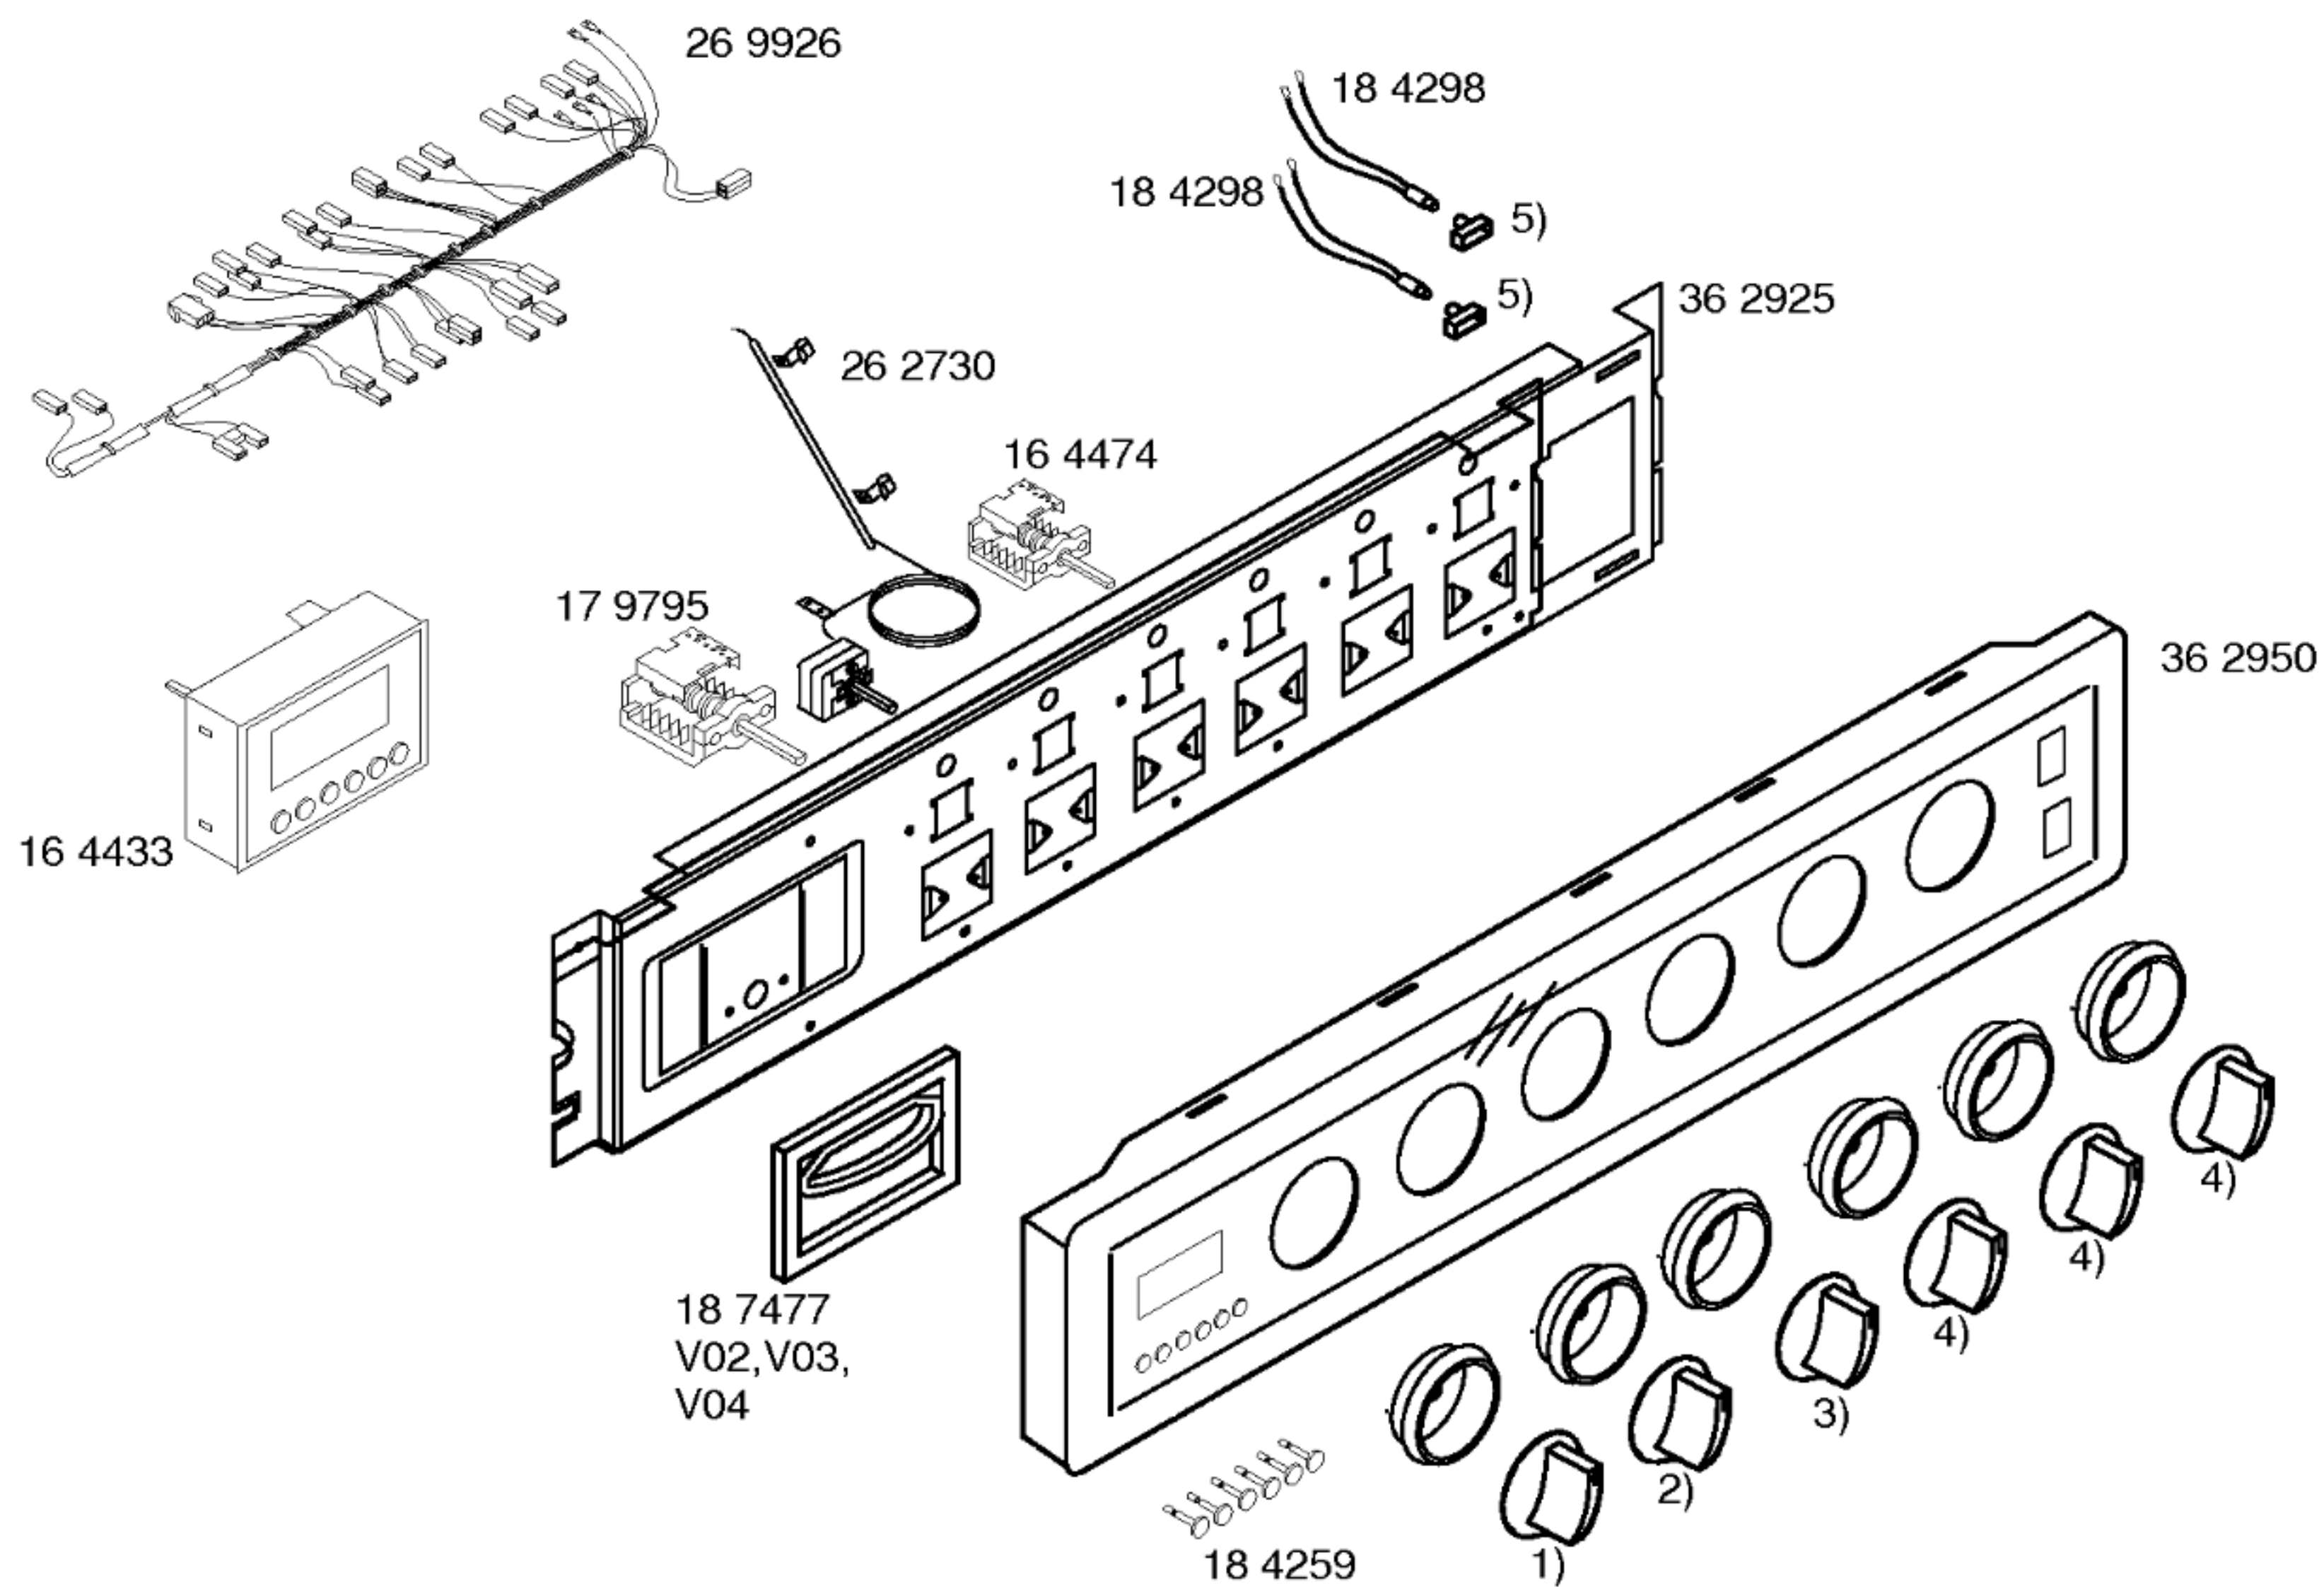


- 1) 18 4270  
V01,V02  
18 8152  
V03,V04
- 2) 18 4256  
V01,V02  
18 8150  
V03,V04
- 3) 18 4258  
V01,V02  
18 8153  
V03,V04
- 4) 18 4257  
V01,V02  
18 8148  
V03,V04
- 5) 18 4297

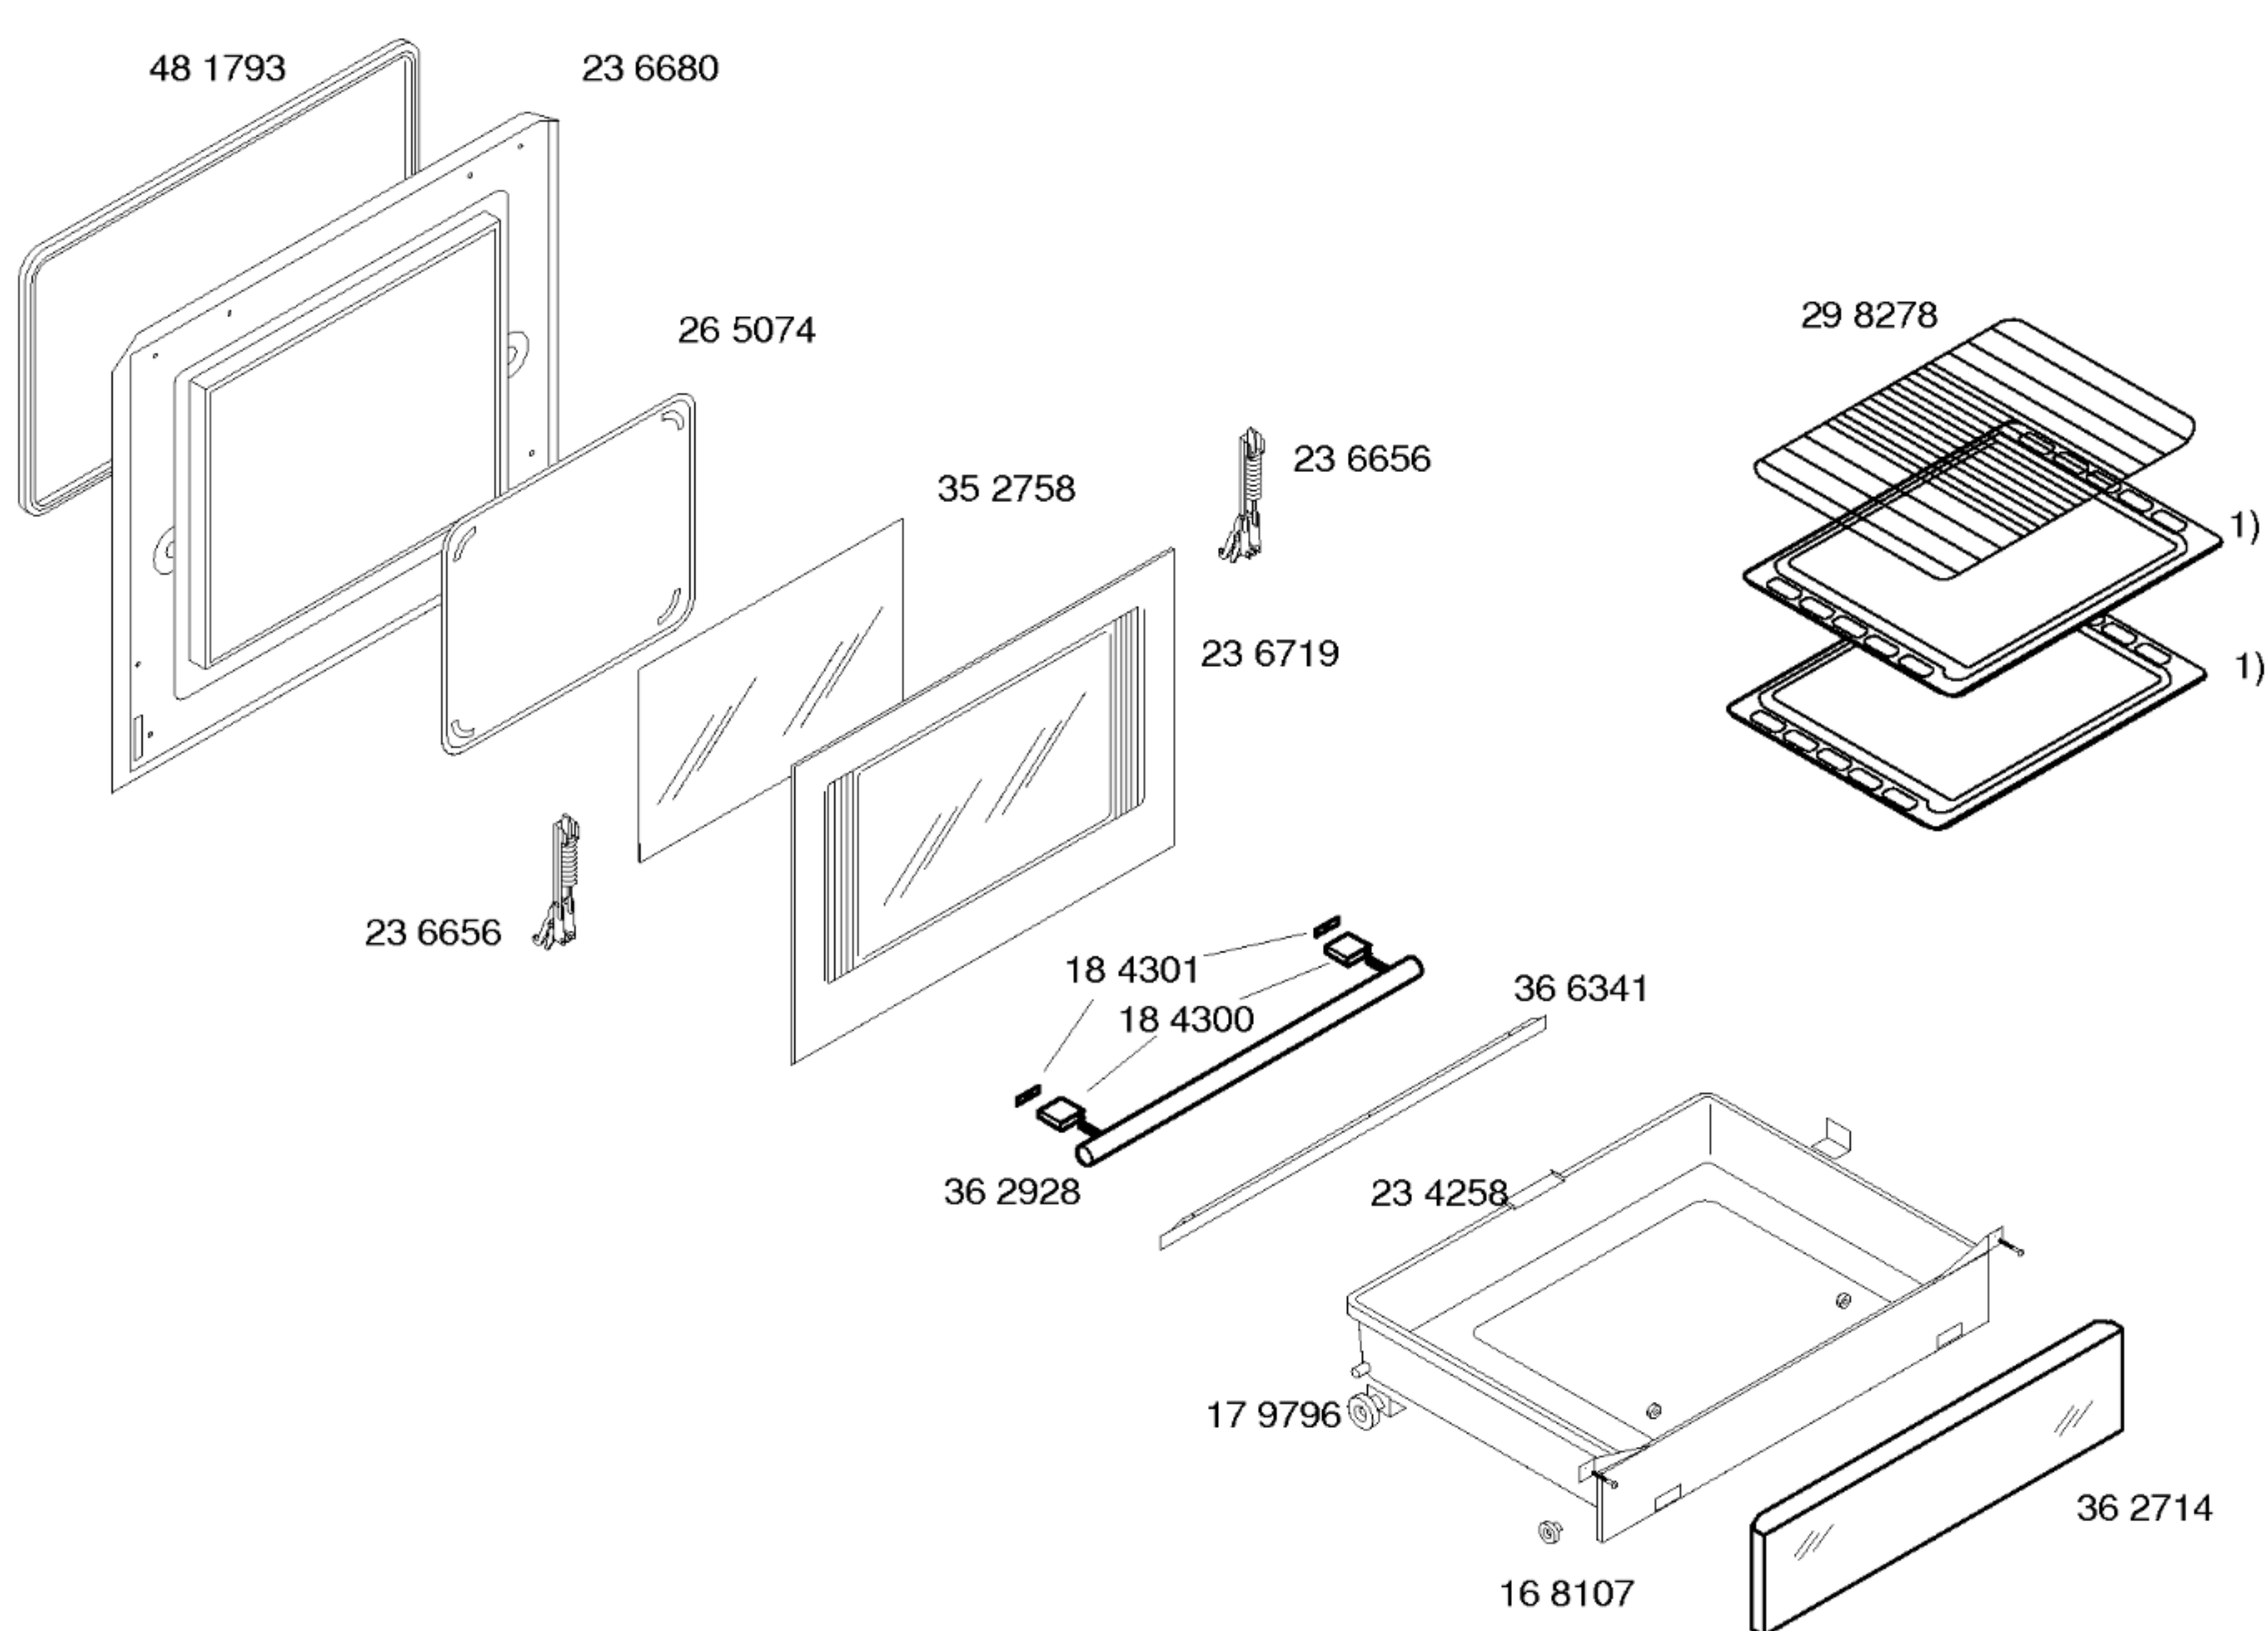

1) 35 3489

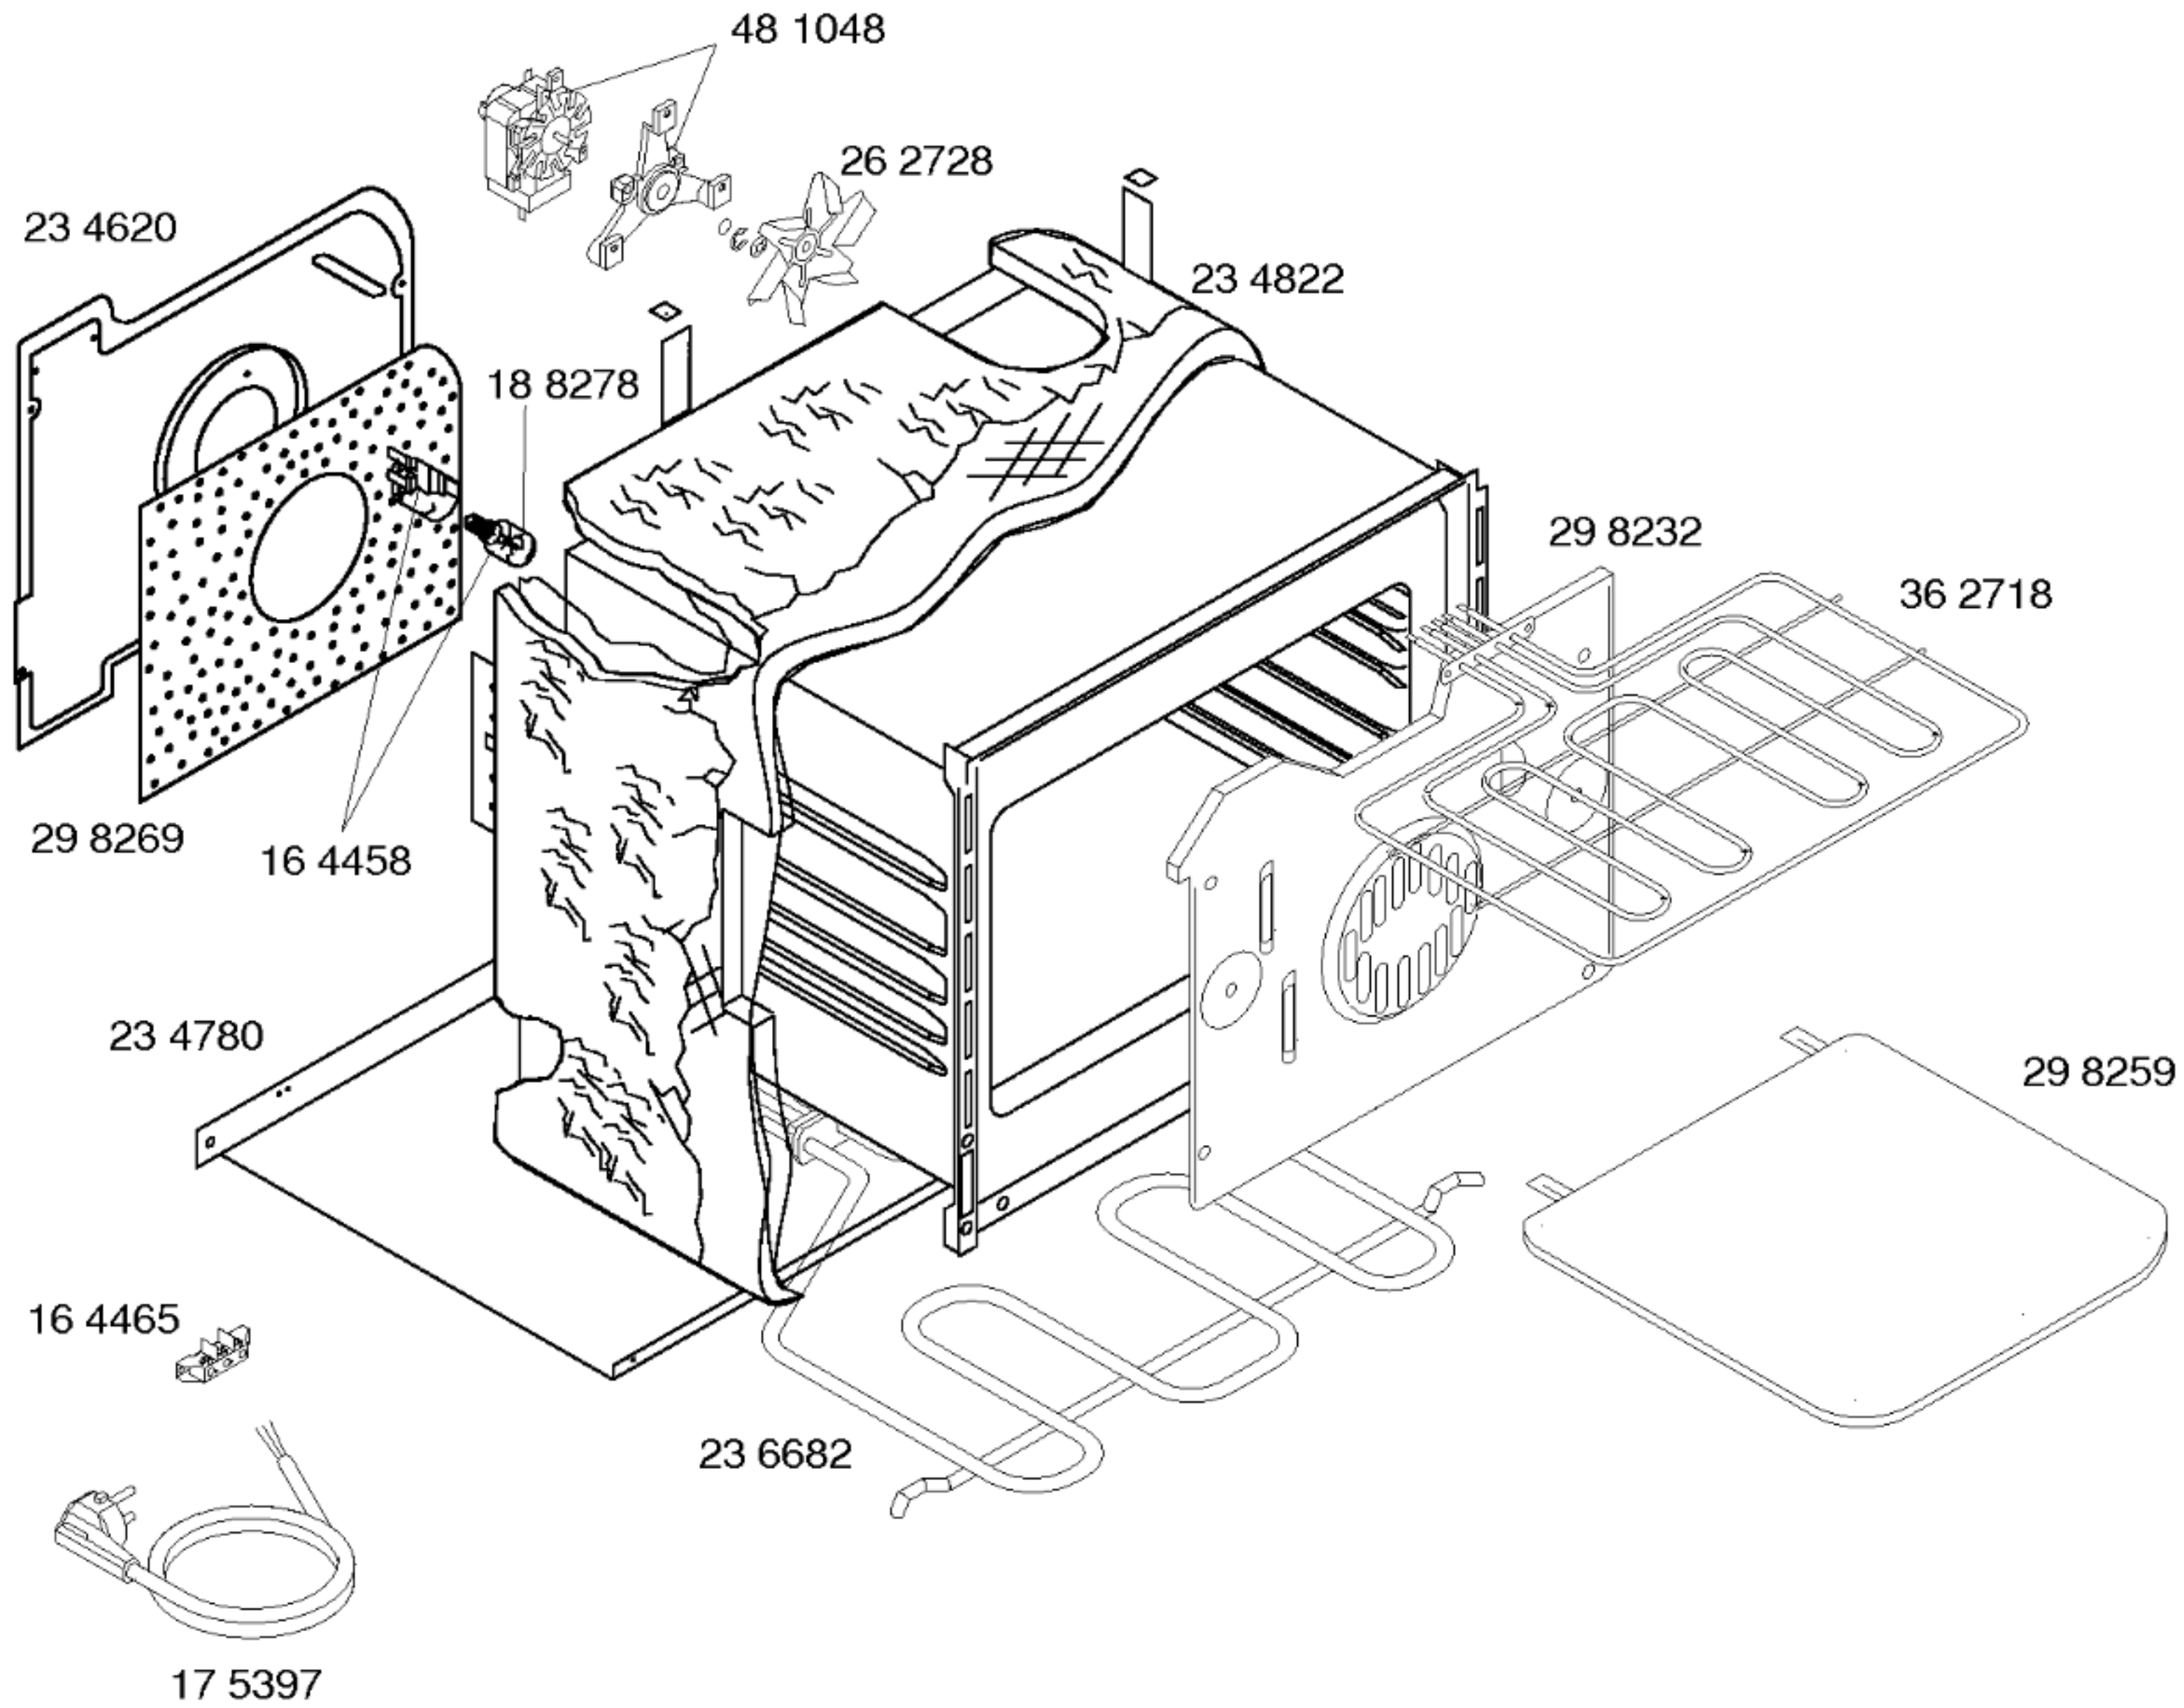

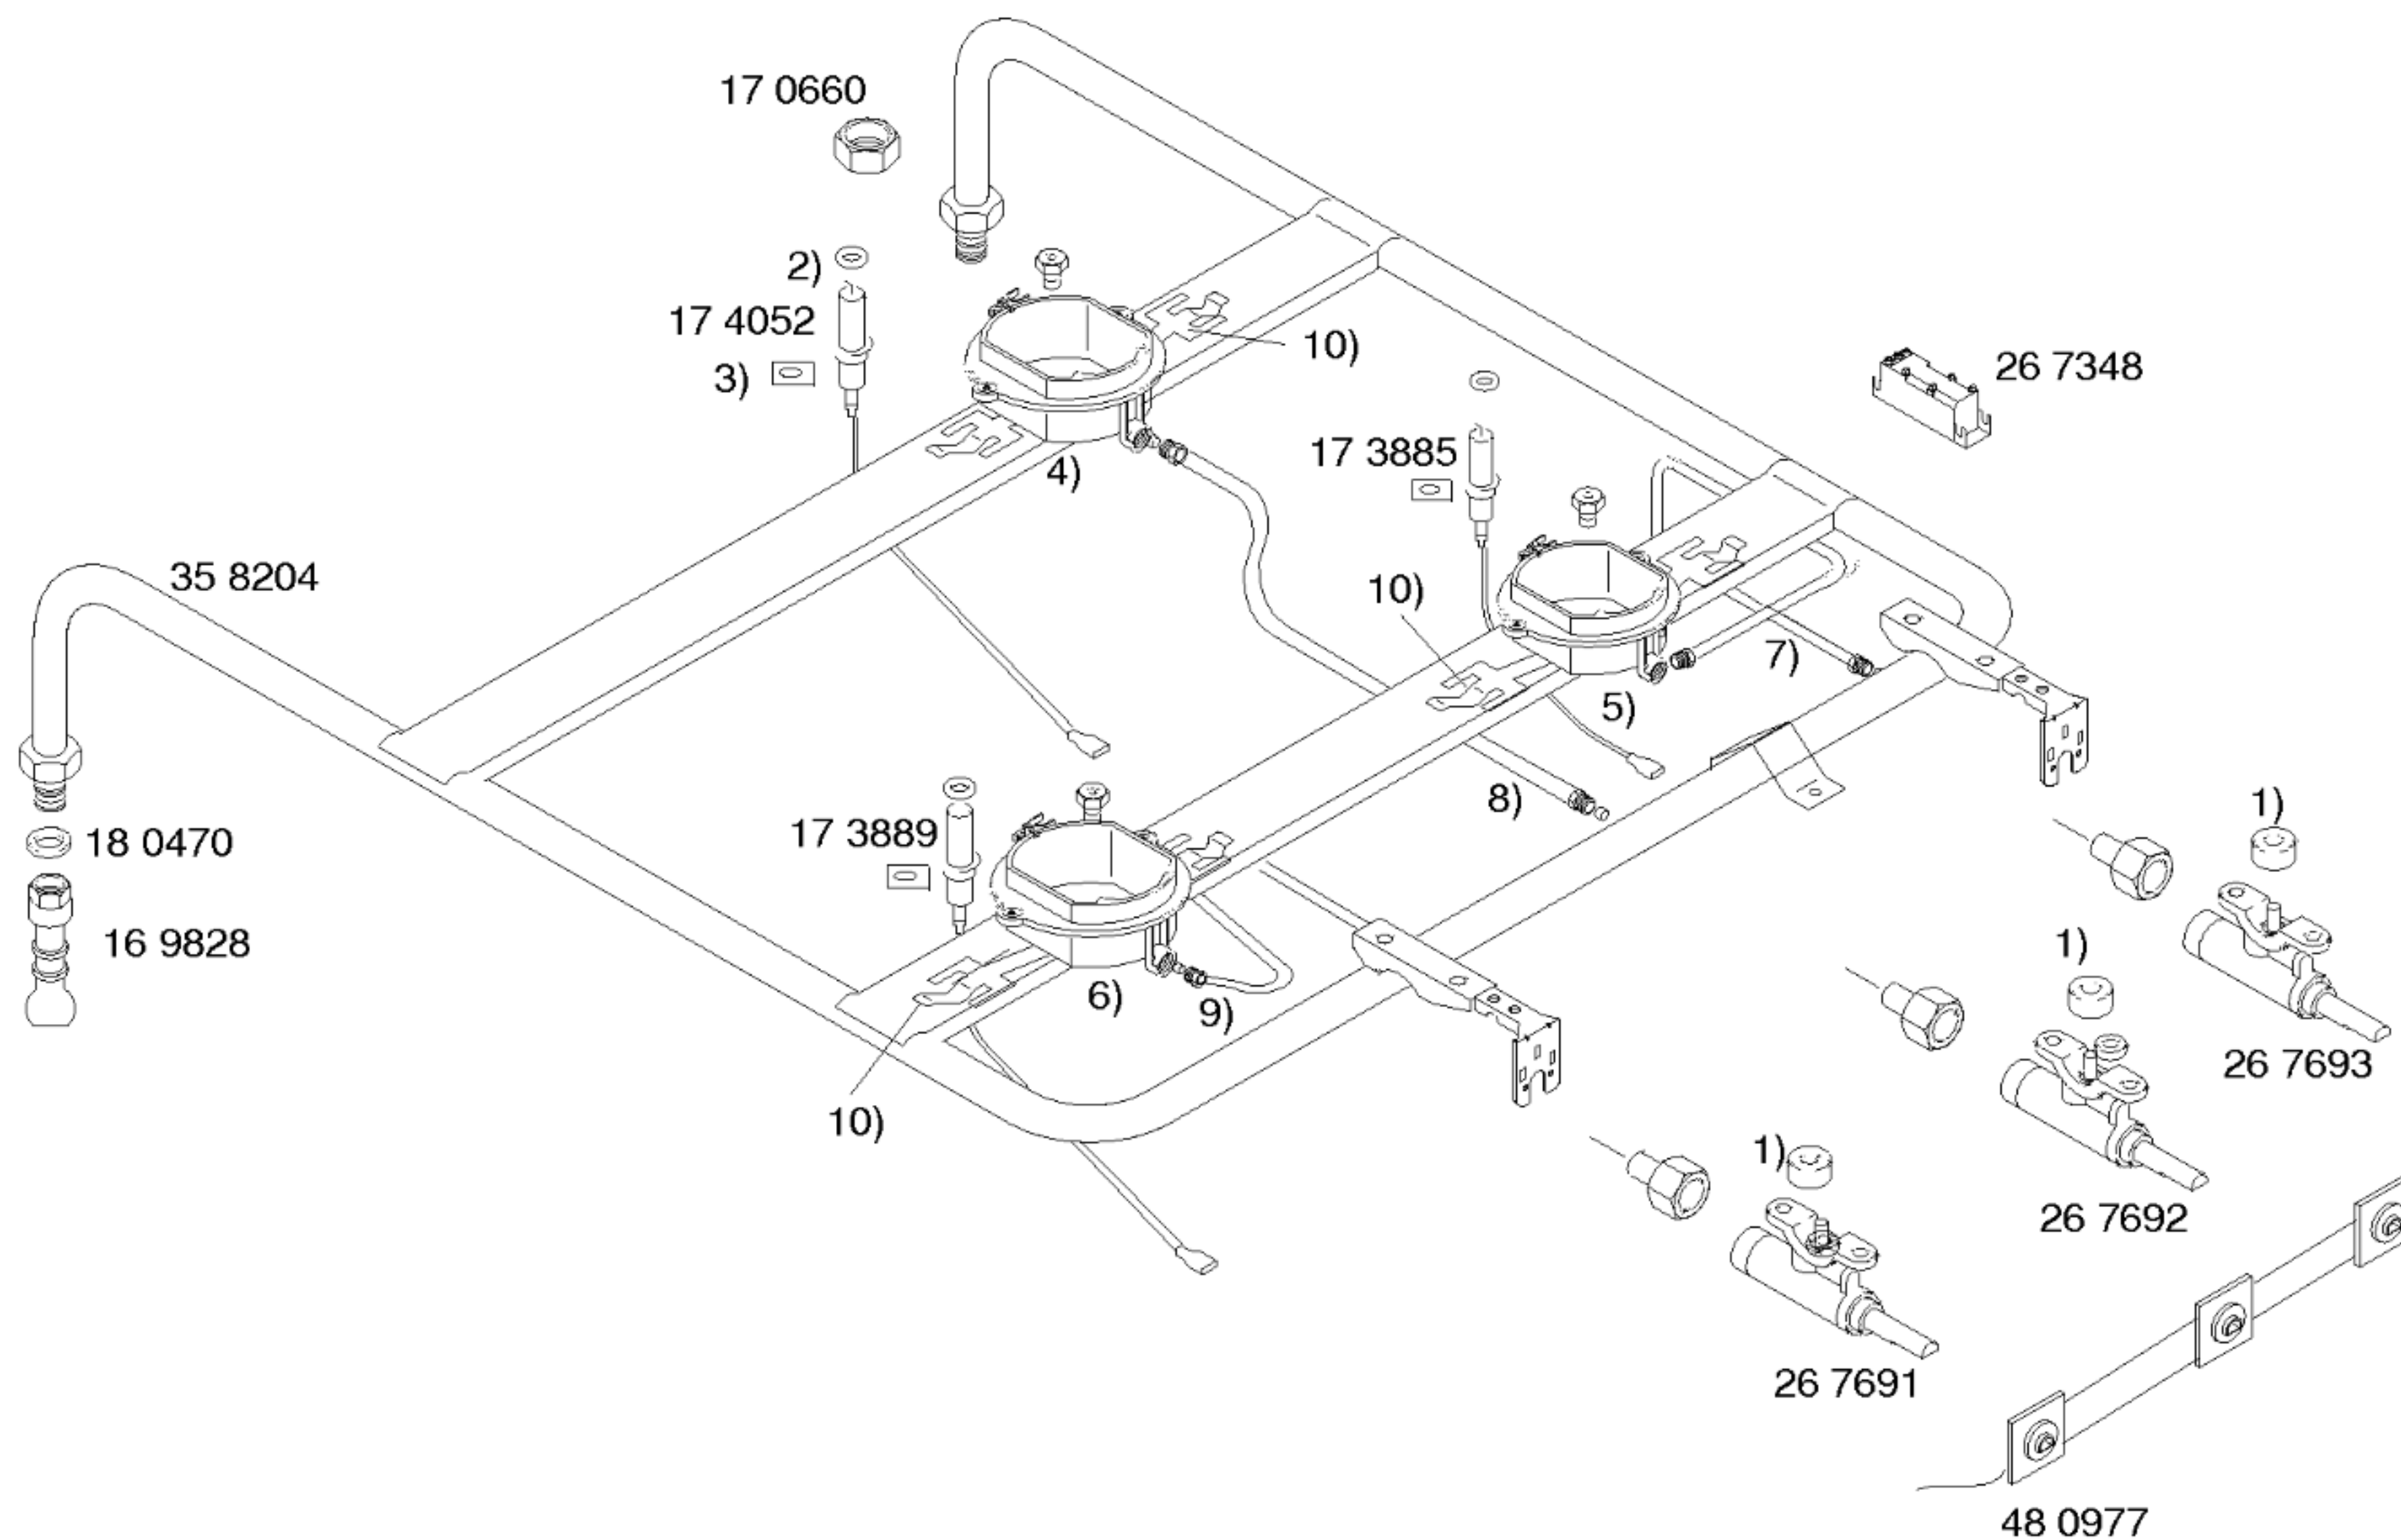

- 1) 16 9339
- 2) 17 3894
- 3) 17 3895
- 4) 26 7362
- 5) 26 7363
- 6) 26 7360
- 7) 35 7810
- 8) 35 7811
- 9) 35 8205
- 10) 17 4634

Duesensatz Erdgas  
17 3900  
Duesensatz  
Fluessiggas  
17 3899

Duesensatz EG  
(inkl.Bypass-Dusen)  
41 7595  
Duesensatz FG  
(inkl.Bypass-Dusen)  
41 7838