


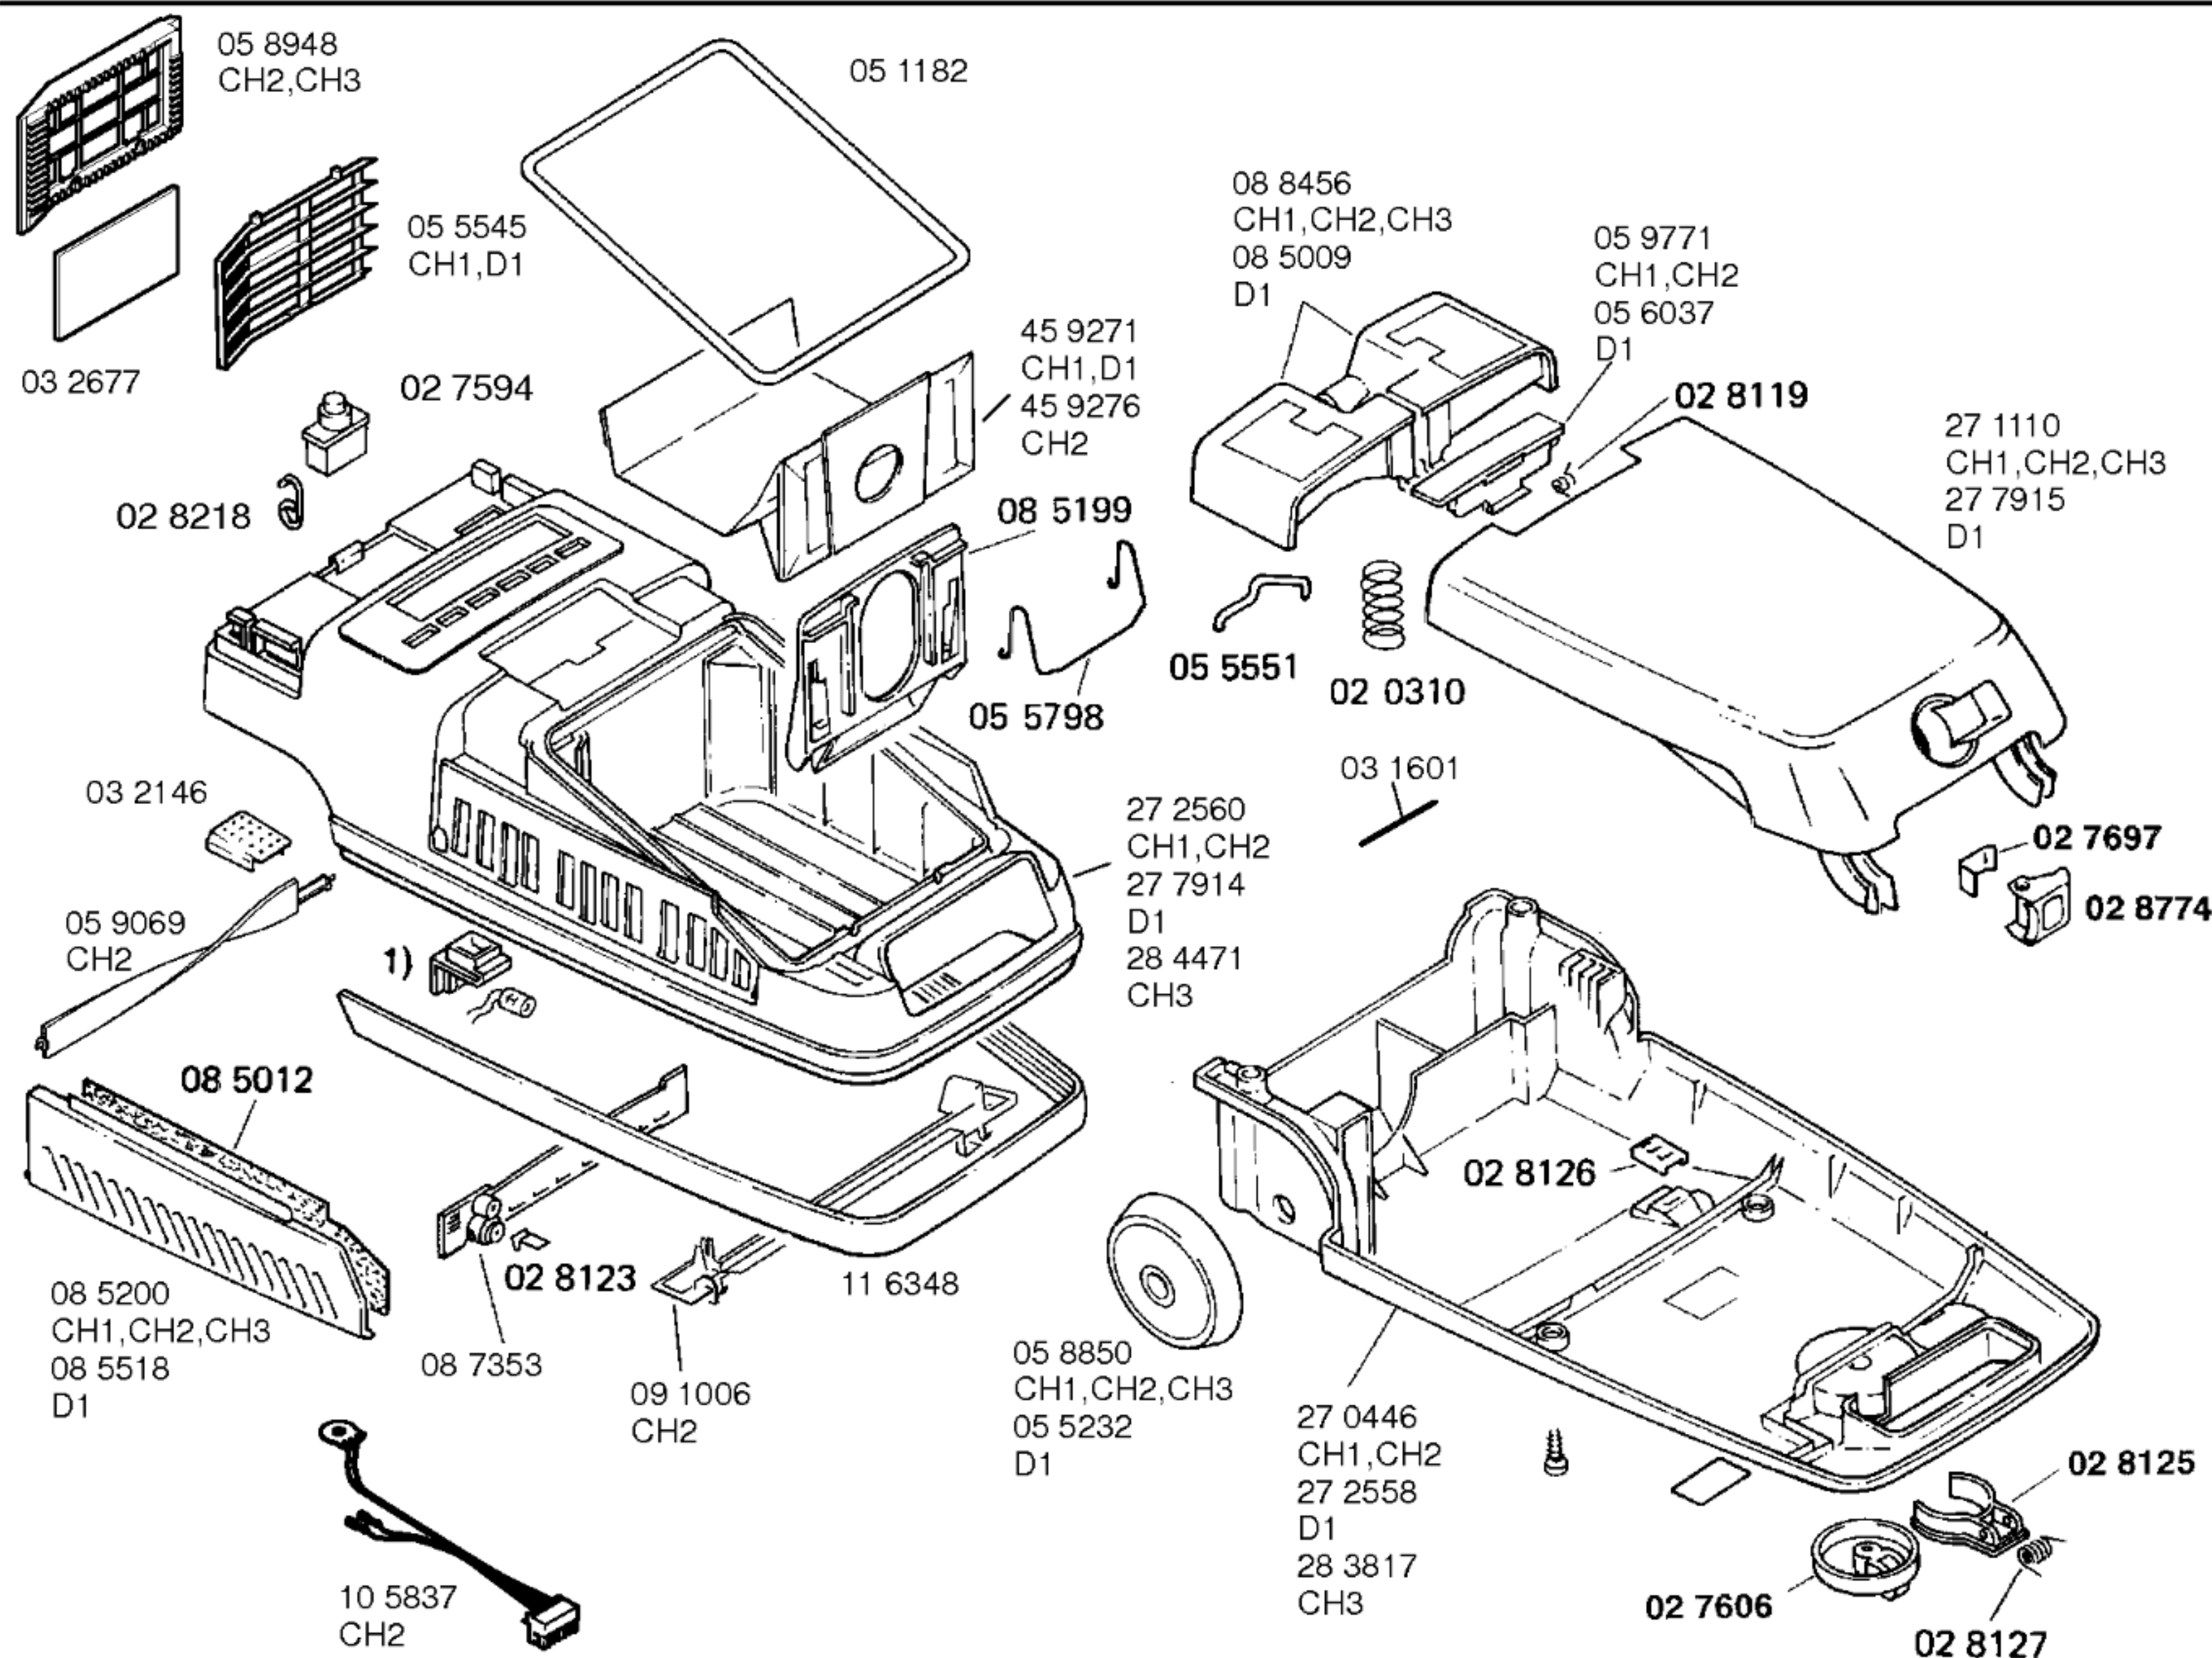

Gebrauchsanweisungen

51 3335
 CH1, D1
 (de, nl, fr, it, en, sp)
 51 4653
 CH2
 (de, en, fr, it, nl, da, no, sv,
 fi, es, pt, el)
 51 5565
 CH3
 (de, en, fr, it, nl, da, no, sv, fi,
 es, pt, el)


1) 03 1958
 CH1, CH2
 02 8129
 D1
 03 2798
 CH3

Zubehör:


Heizkörperbürste
 VZ 0683
 schwarz

Möbelpinsel
 VX 0773
 schwarz

Turbobürste
 VZ470900
 schwarz

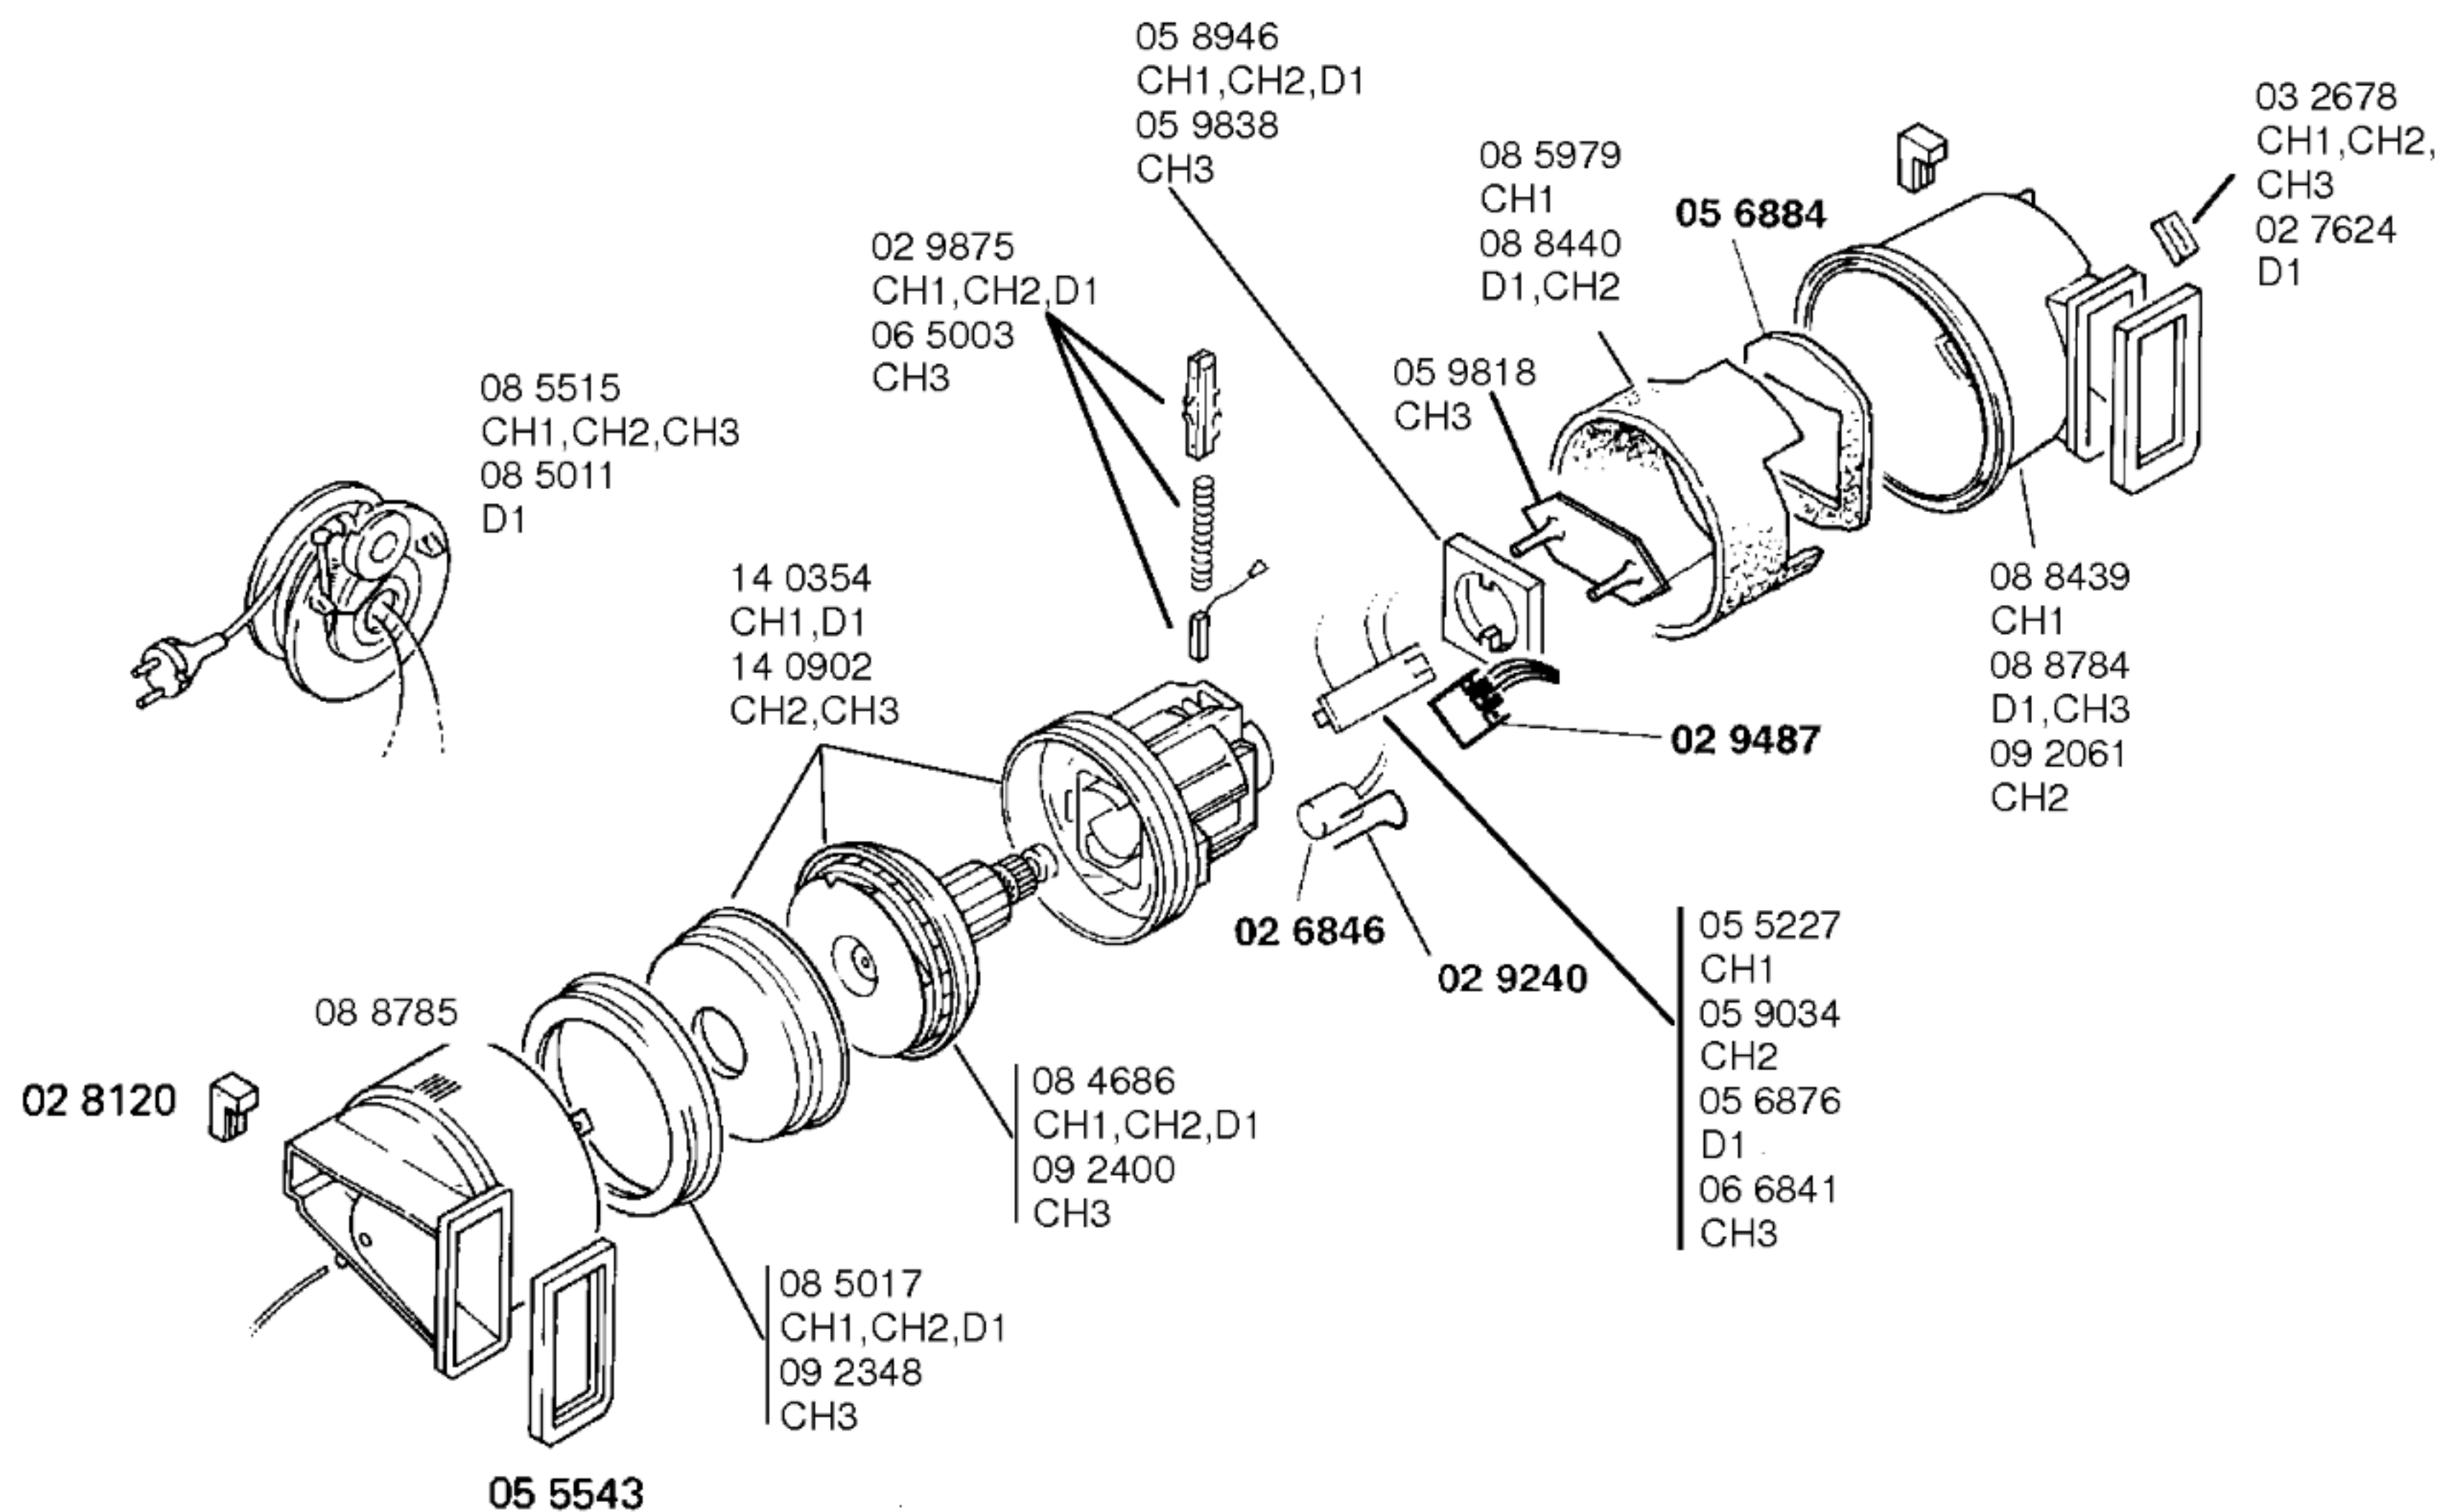

46 0077
 schwarz
 kompl.

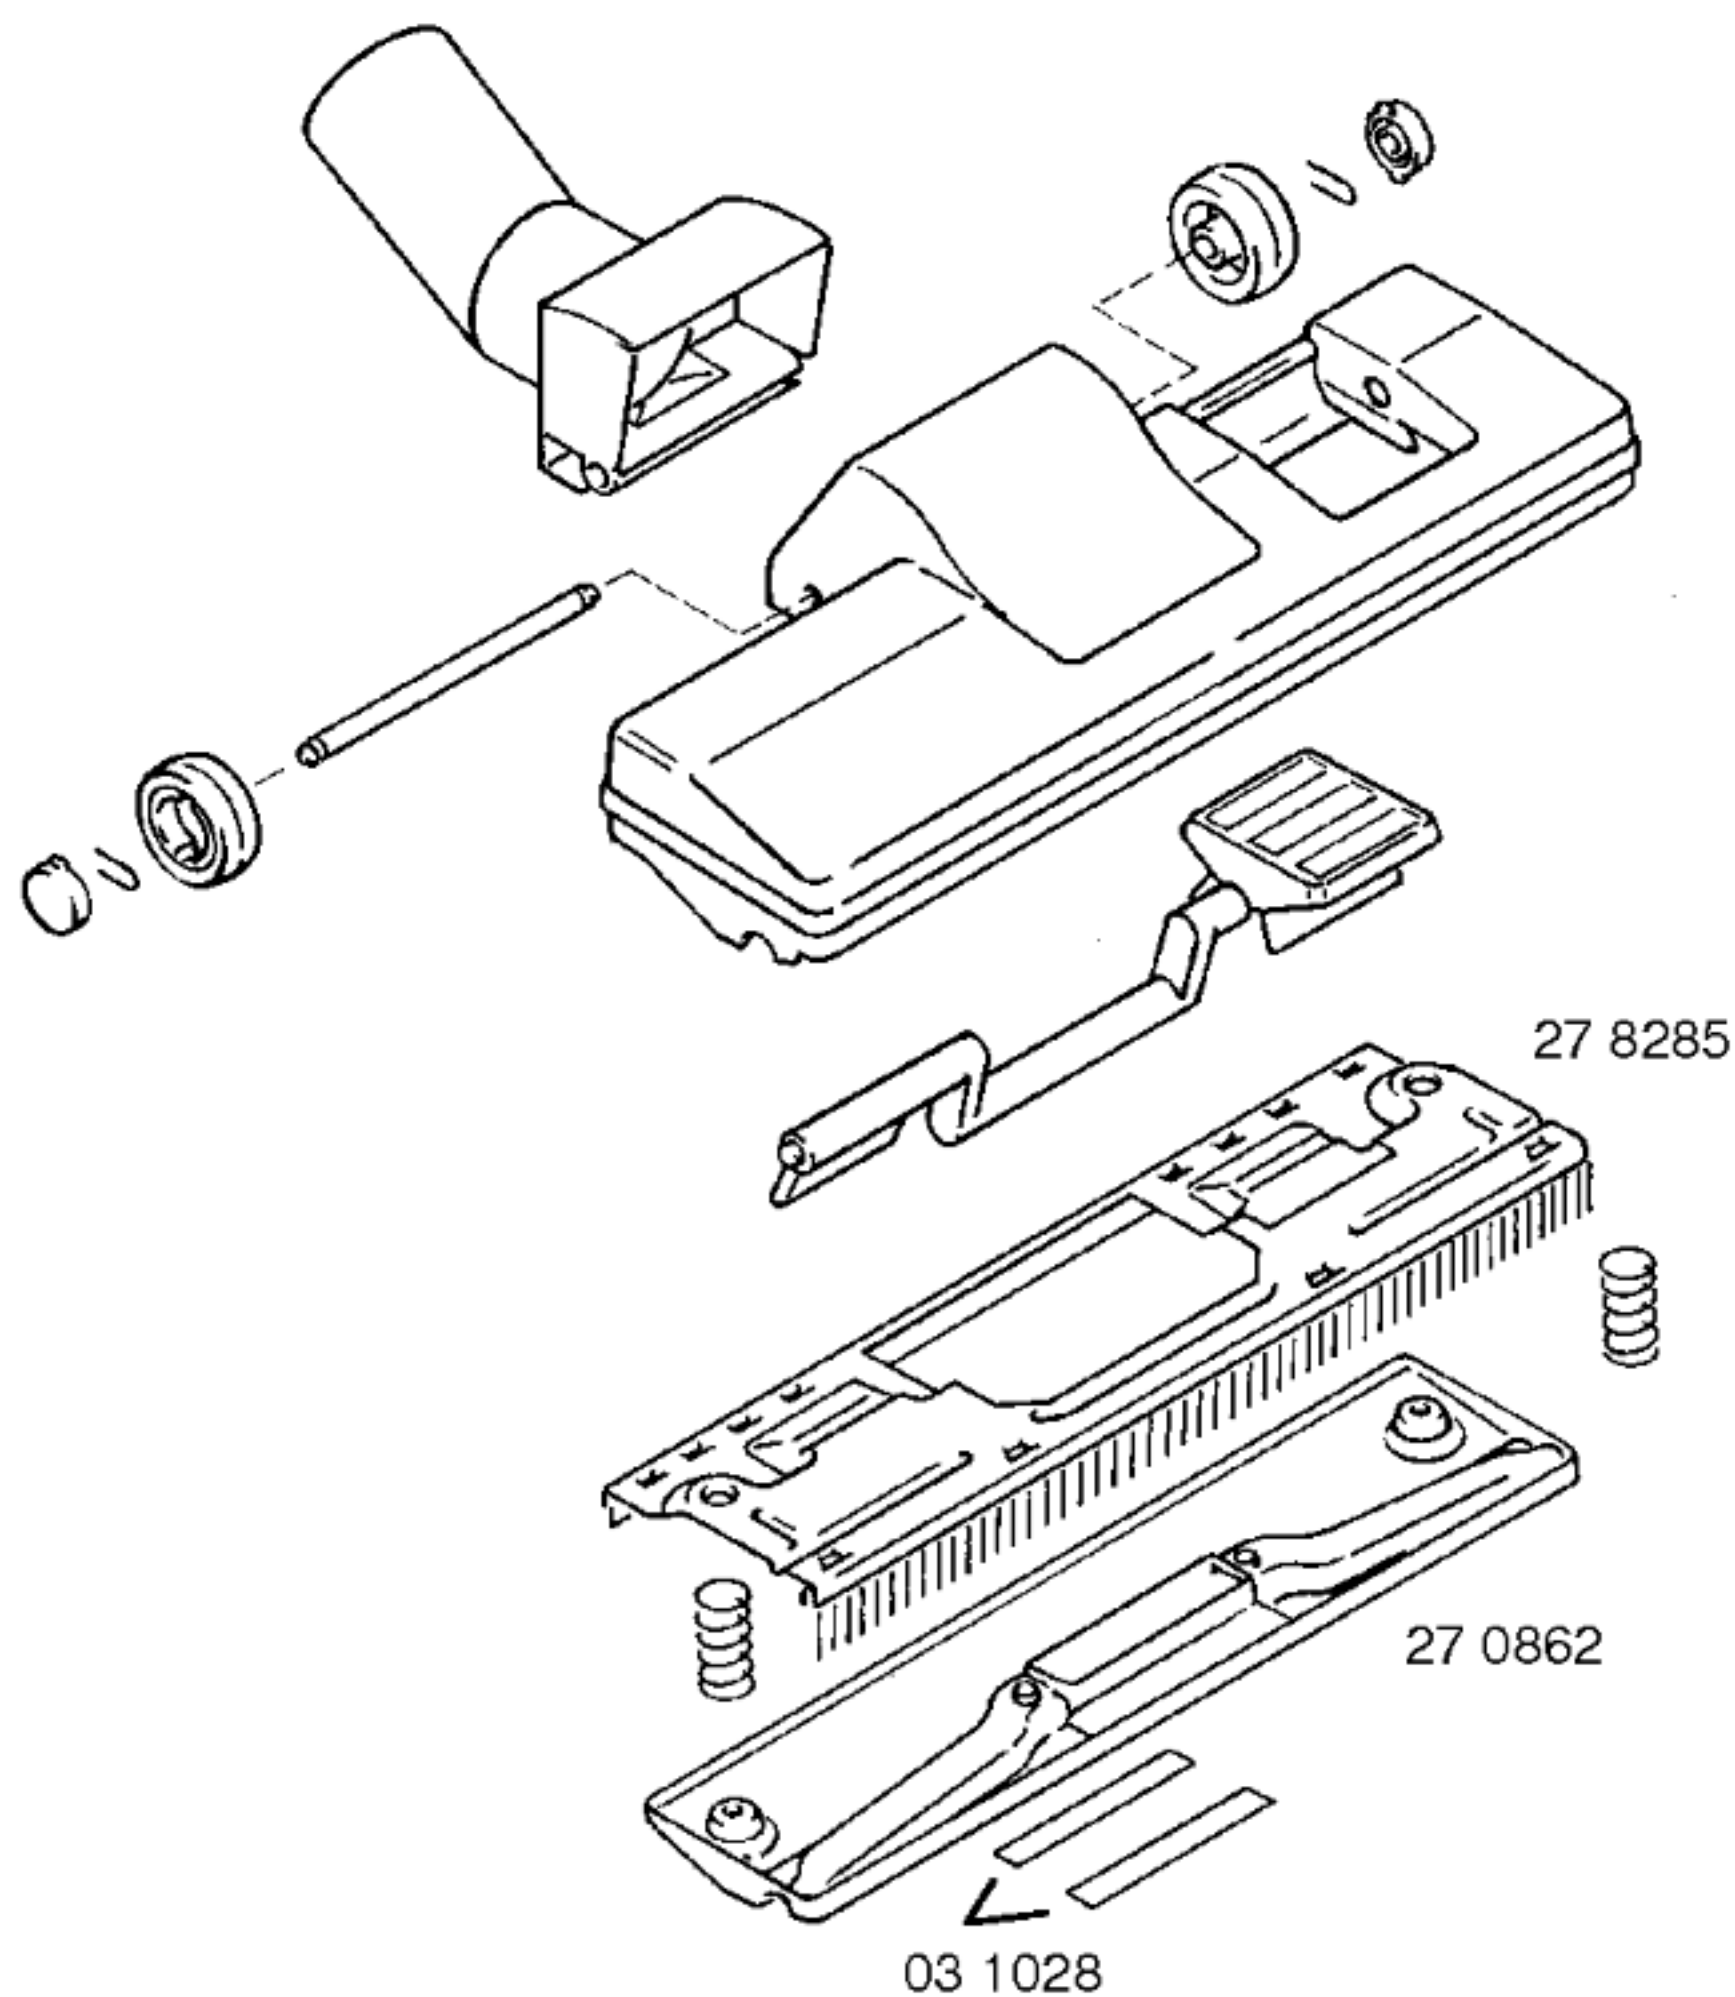

02 7109





08 0857




02 9169



45 0759
 schwarz
 kompl.

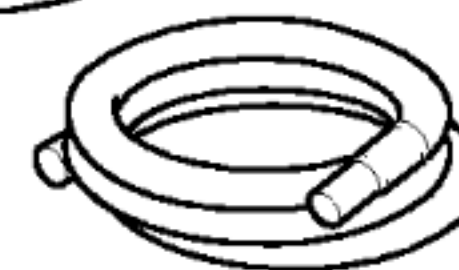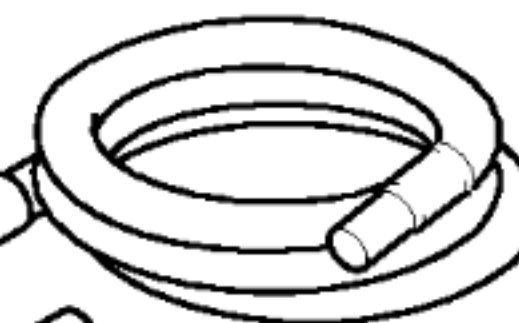


28 7684

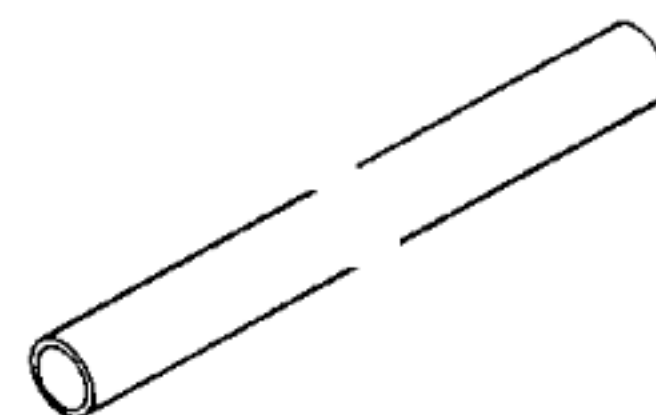


45 0140

46 0097
 schwarz

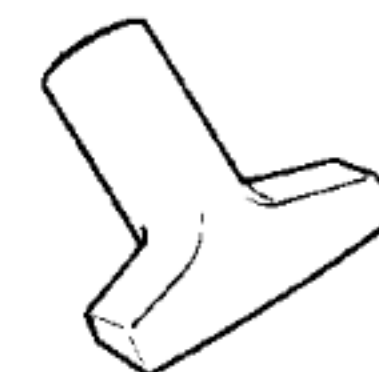

46 0098
 schwarz

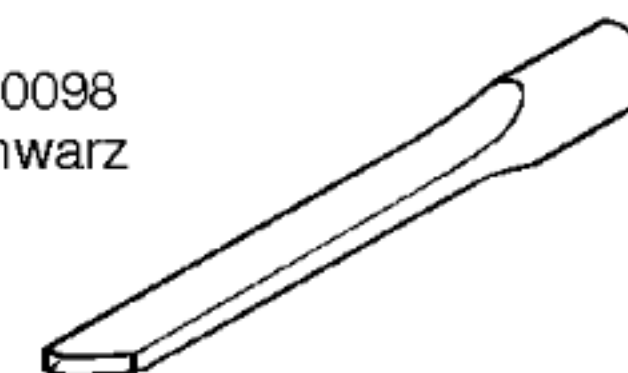

46 0123
 schwarz

