


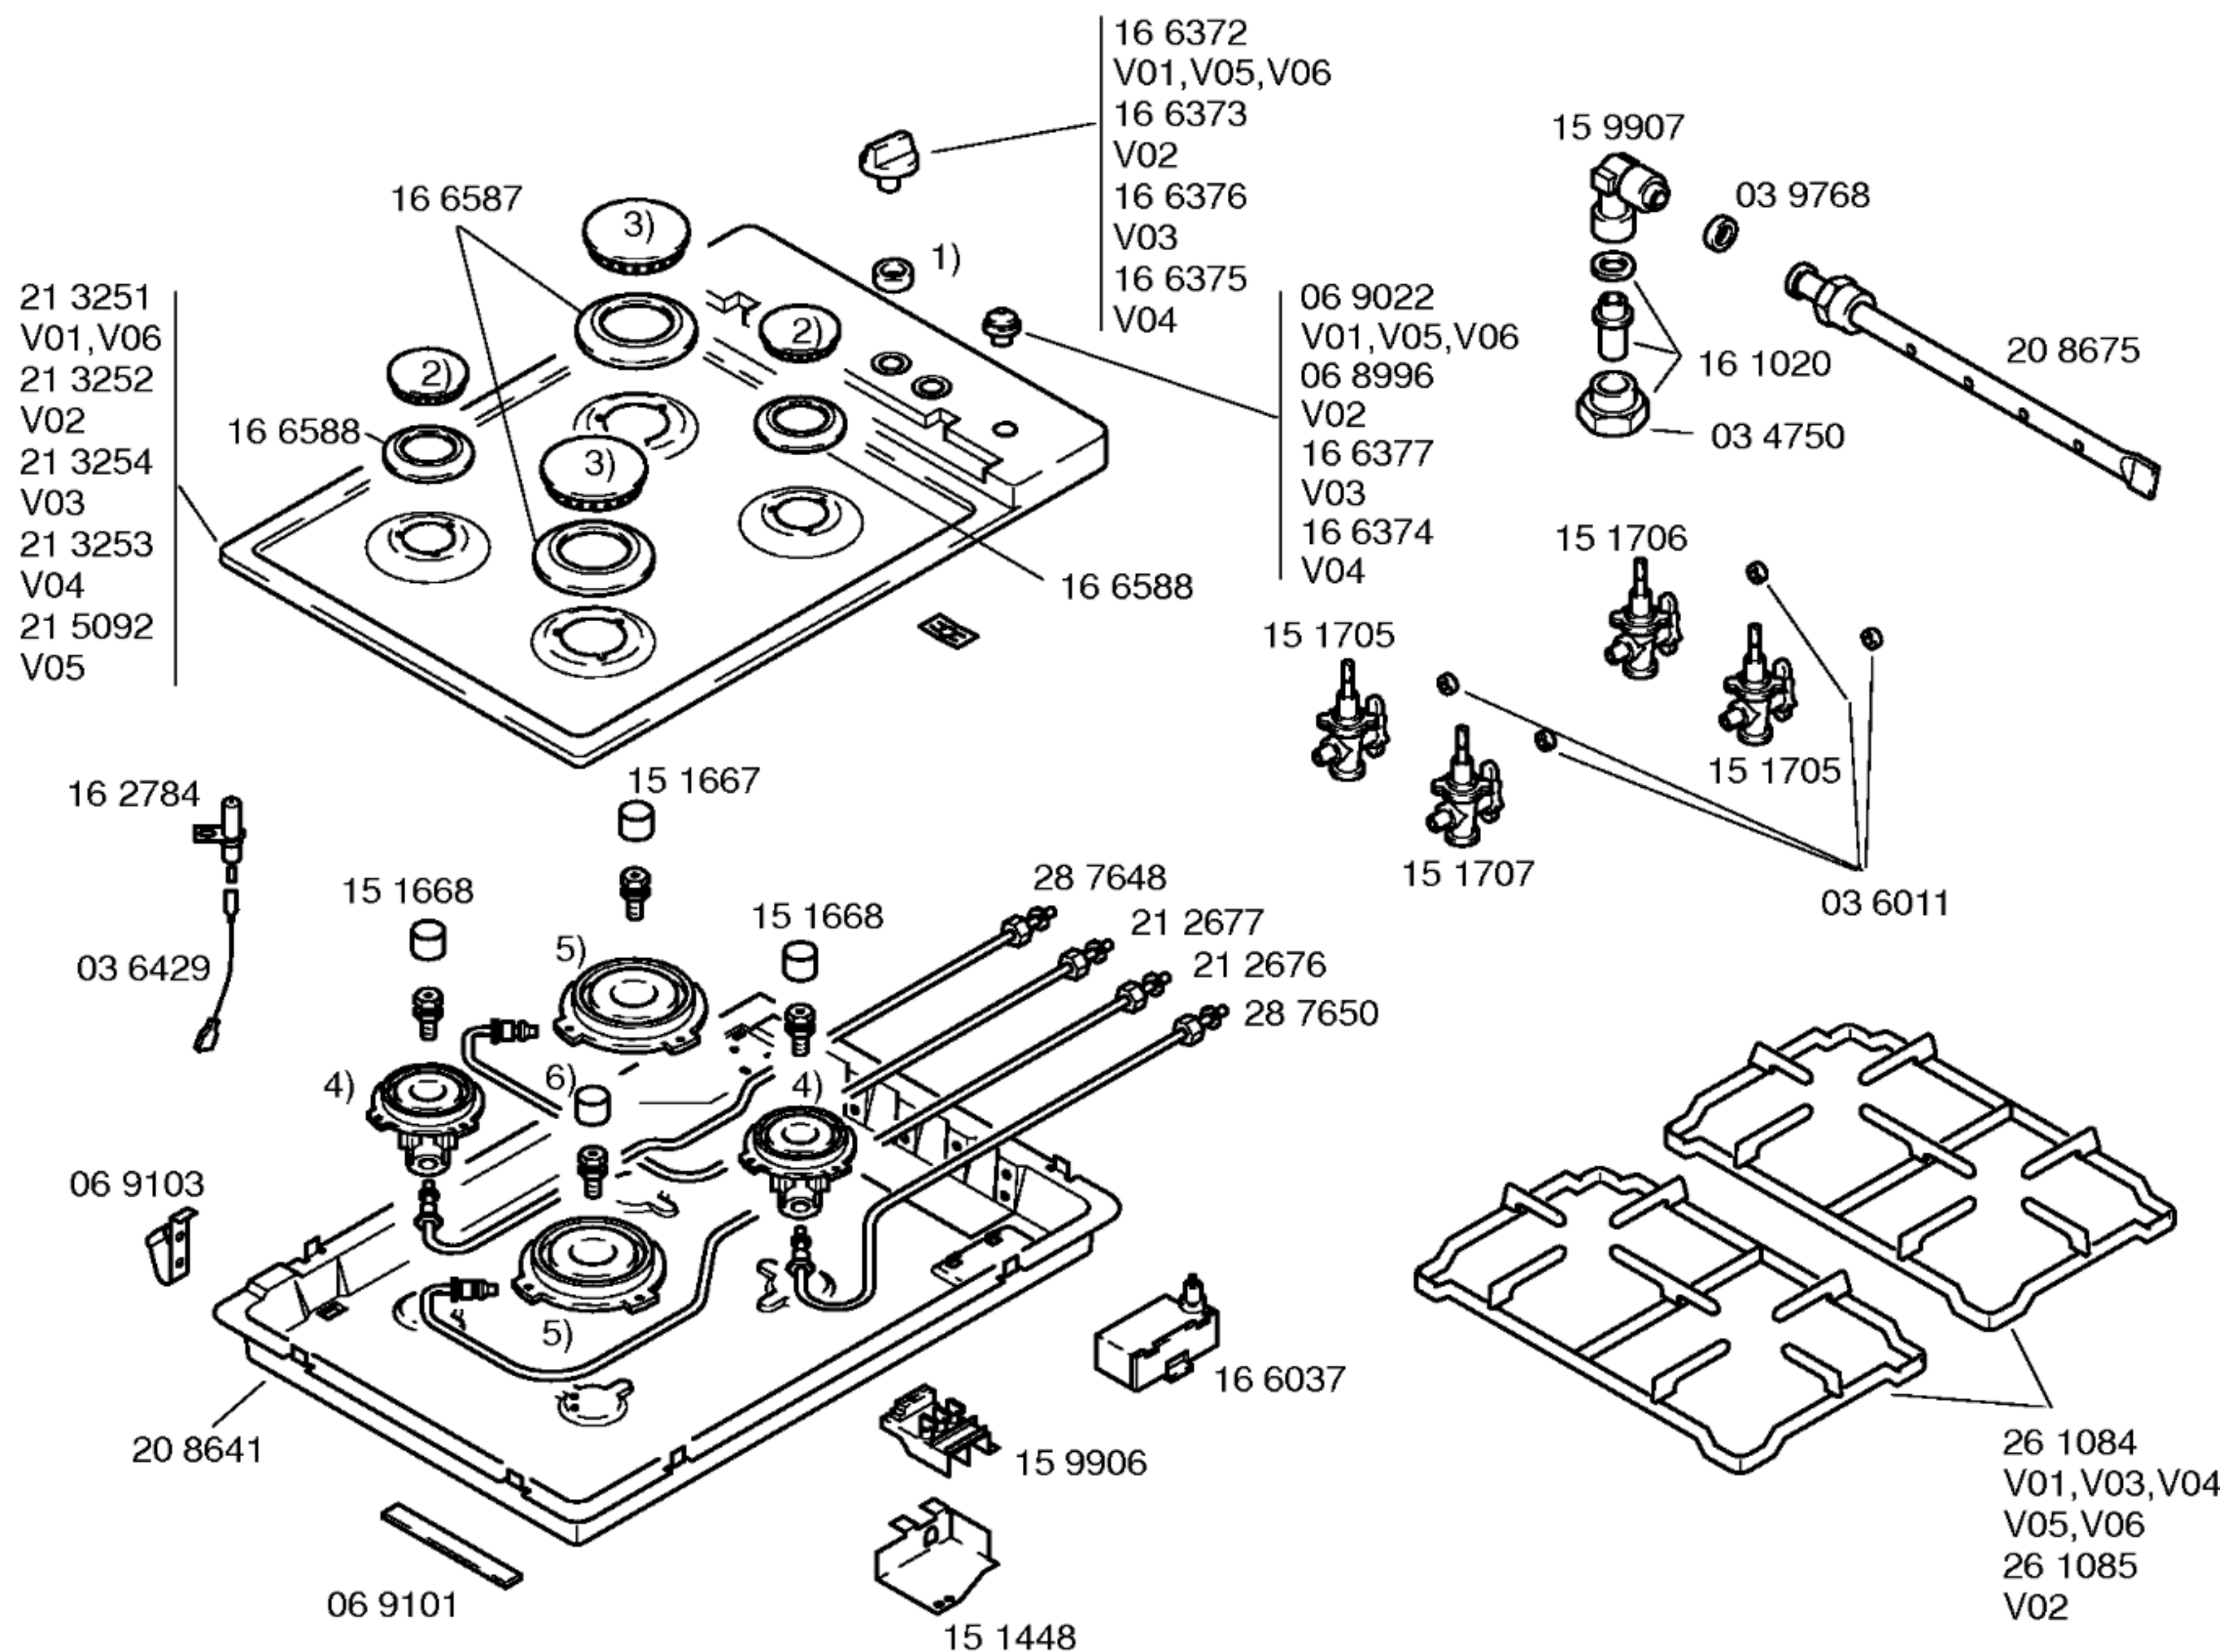

Gebrauchsanweisung
51 9888
(D, GB, F, NL, I, E, P)

- 1) 15 1675
V01,V03,V04
V05,V06
15 1676
V02
- 2) 16 2794
V01,V03,V04
V05,V06
16 2783
V02
- 3) 16 2781
V01,V03,V04
V05,V06
16 2782
V02
- 4) 16 2776
- 5) 16 2775
- 6) 15 1666

Düsensatz für
Erdgas EE20 mBar
15 1818

Stadtgas 8 mBar
15 1819

Flüssiggas 28 mBar
15 1820