 


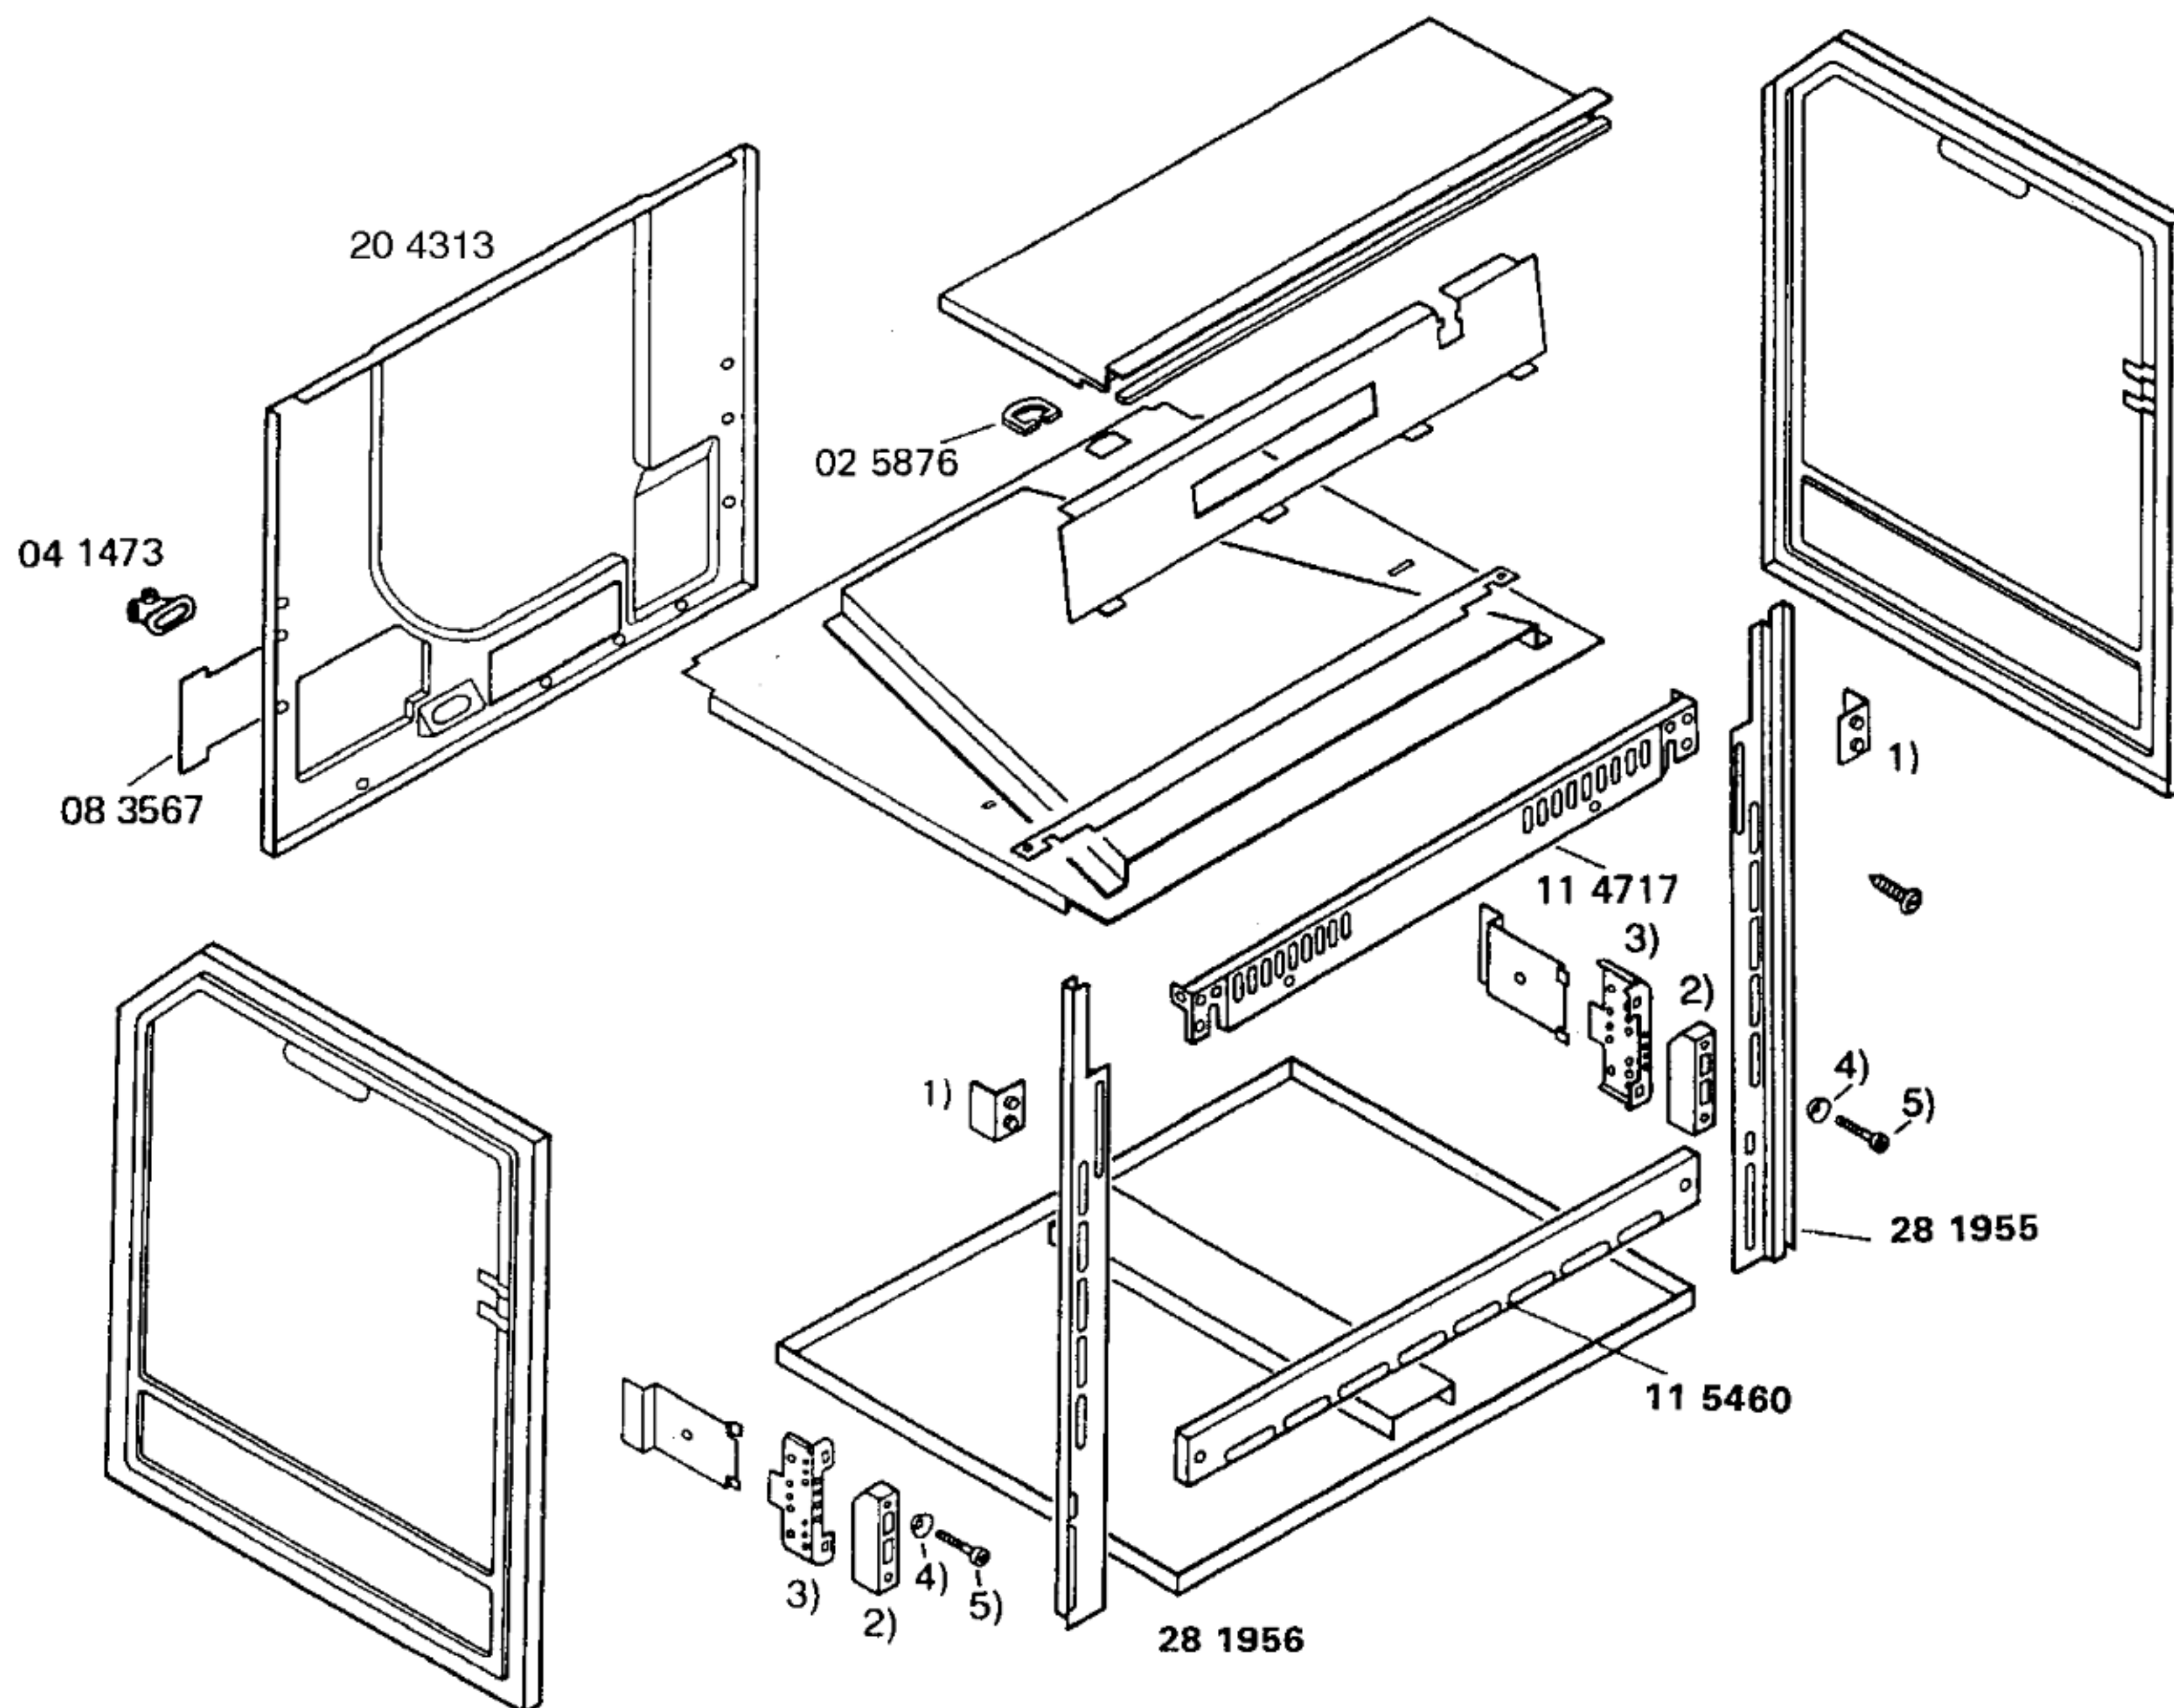

Gebrauchsanweisung
51 6832
(D,GB,F,NL,I,E,GR)

Tips und Rezepte
51 2001

- 1) 01 8981
- 2) 05 1477
- 3) 08 3566
- 4) 05 3176
- 5) 02 4002

Zubehör:

Fettpfanne
Z1220X0

 
Backblech–Alu
Z1320X0

 
Back–Bratrost
Z1420X0

 
Bratenblech
Z1510X0

 
 
 
Teleskopschiene
Z1721X0

Brot–Backstein
Z1910X0

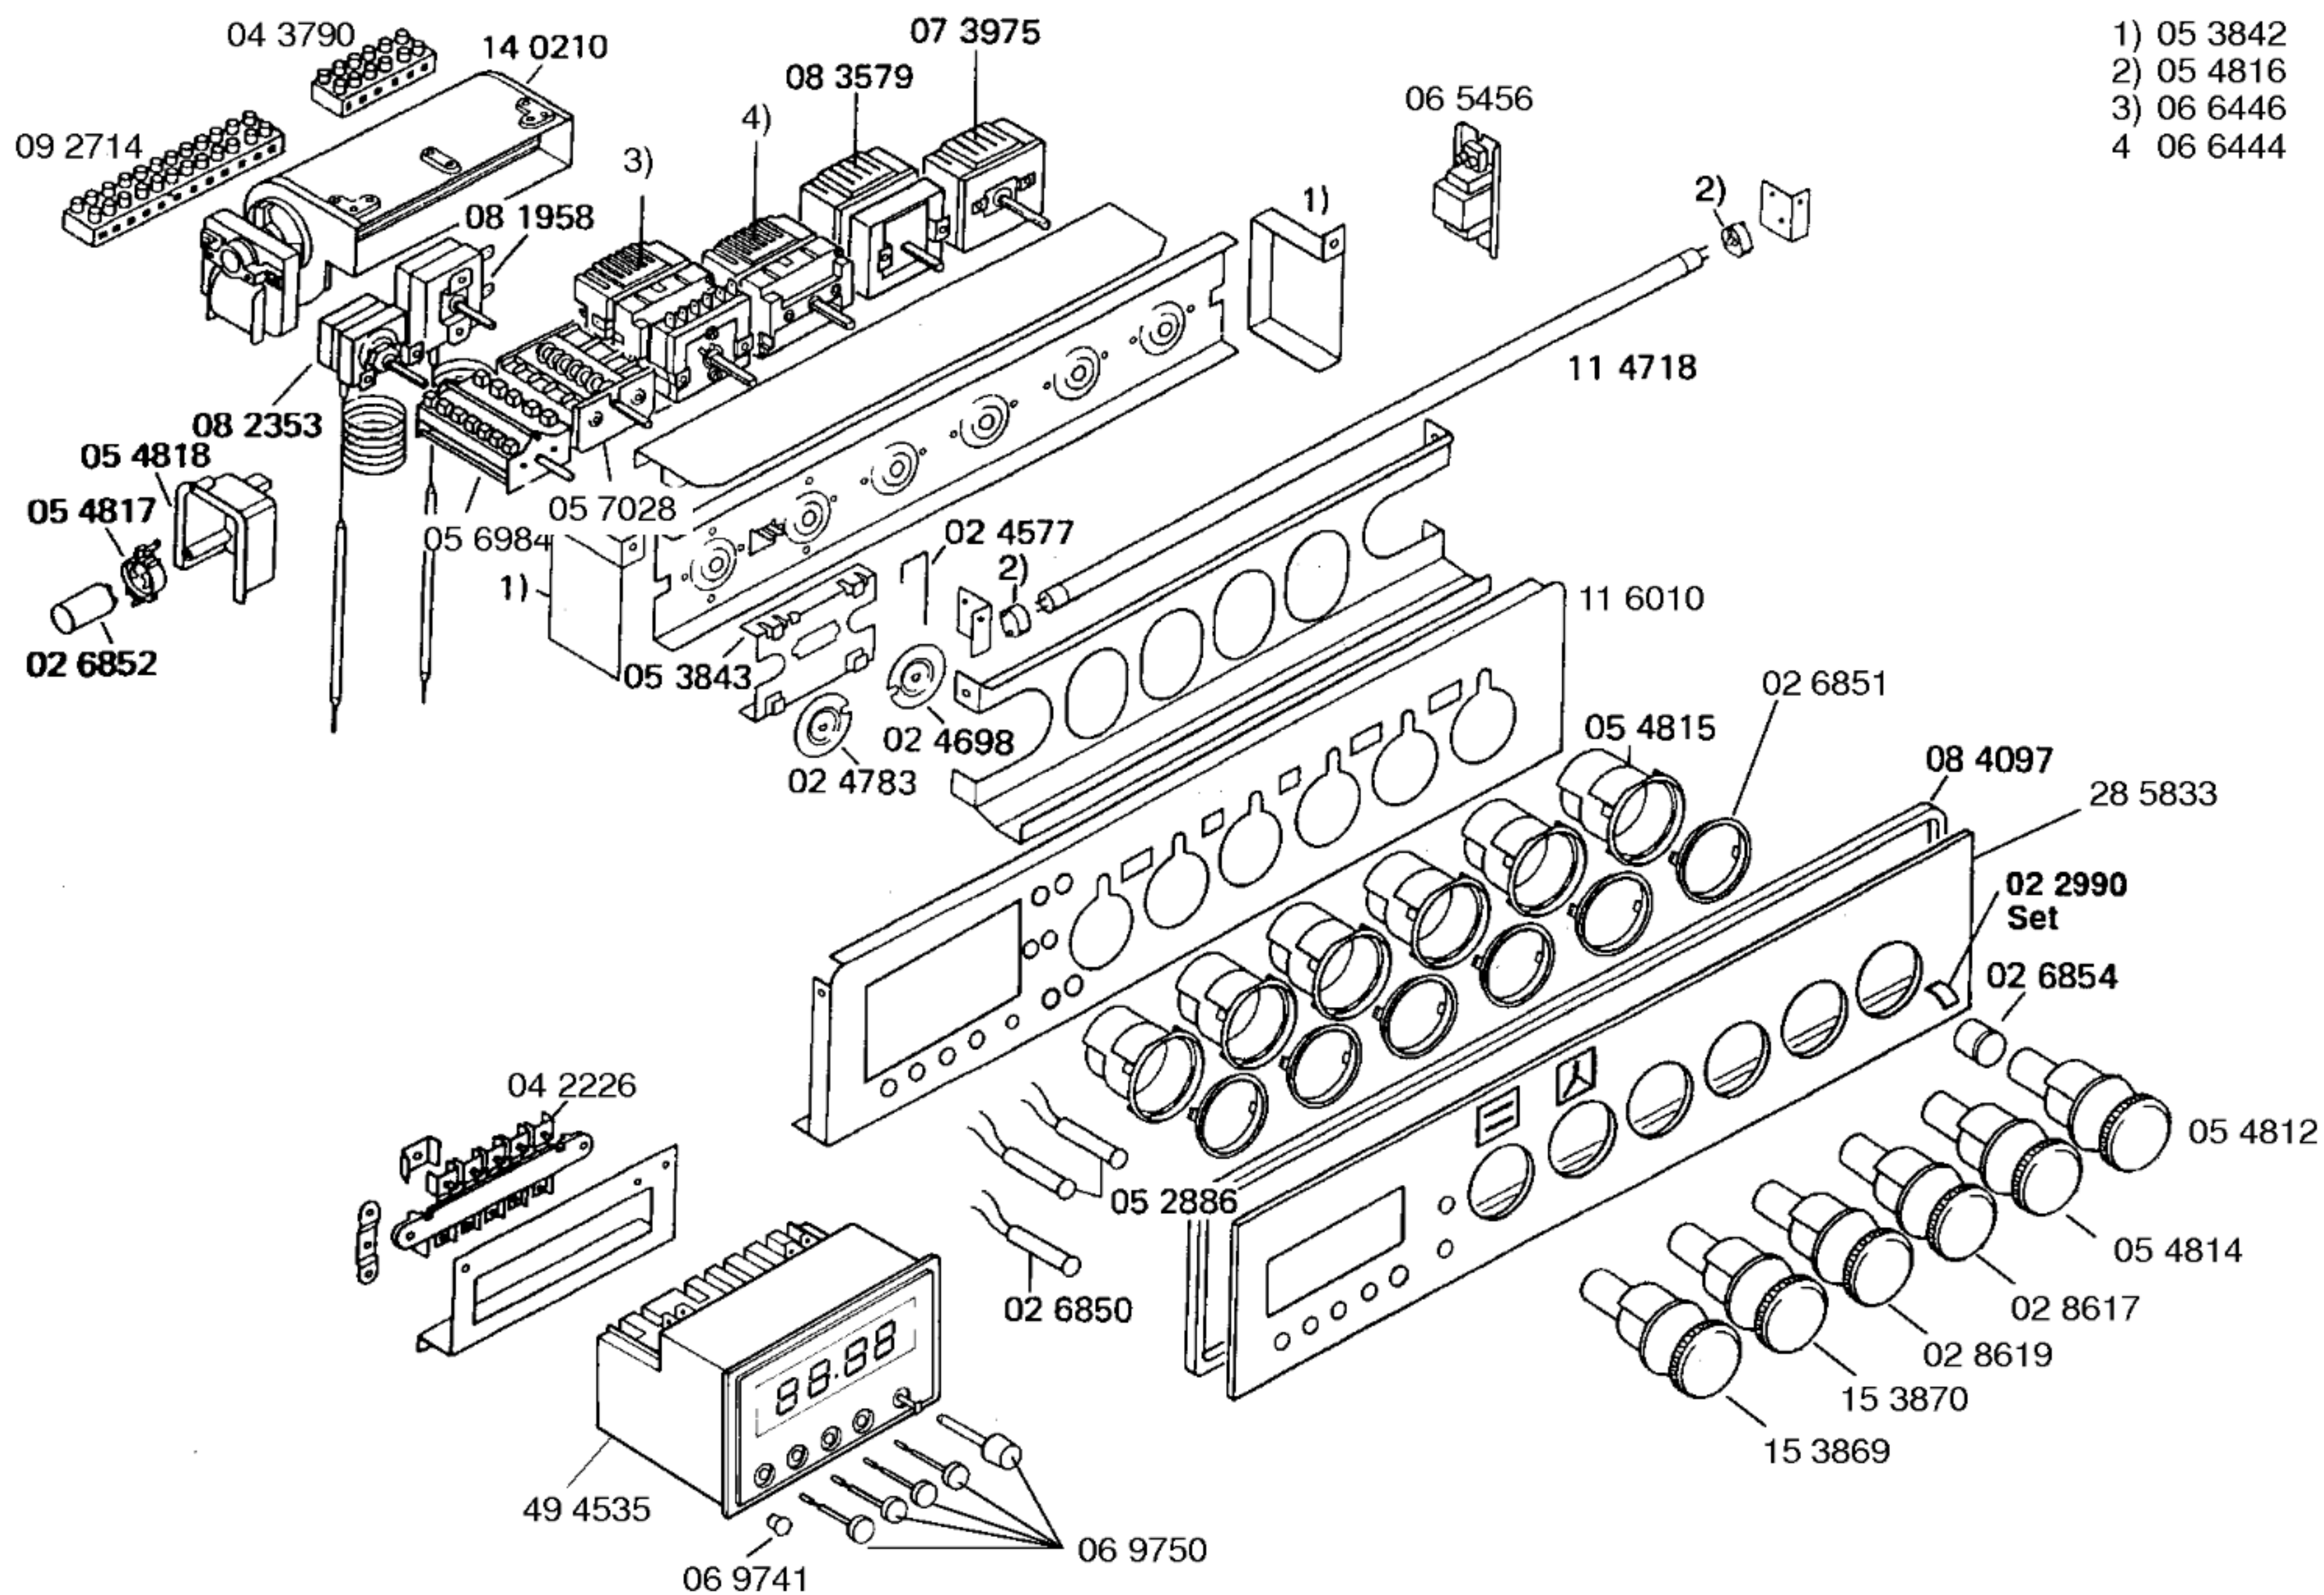

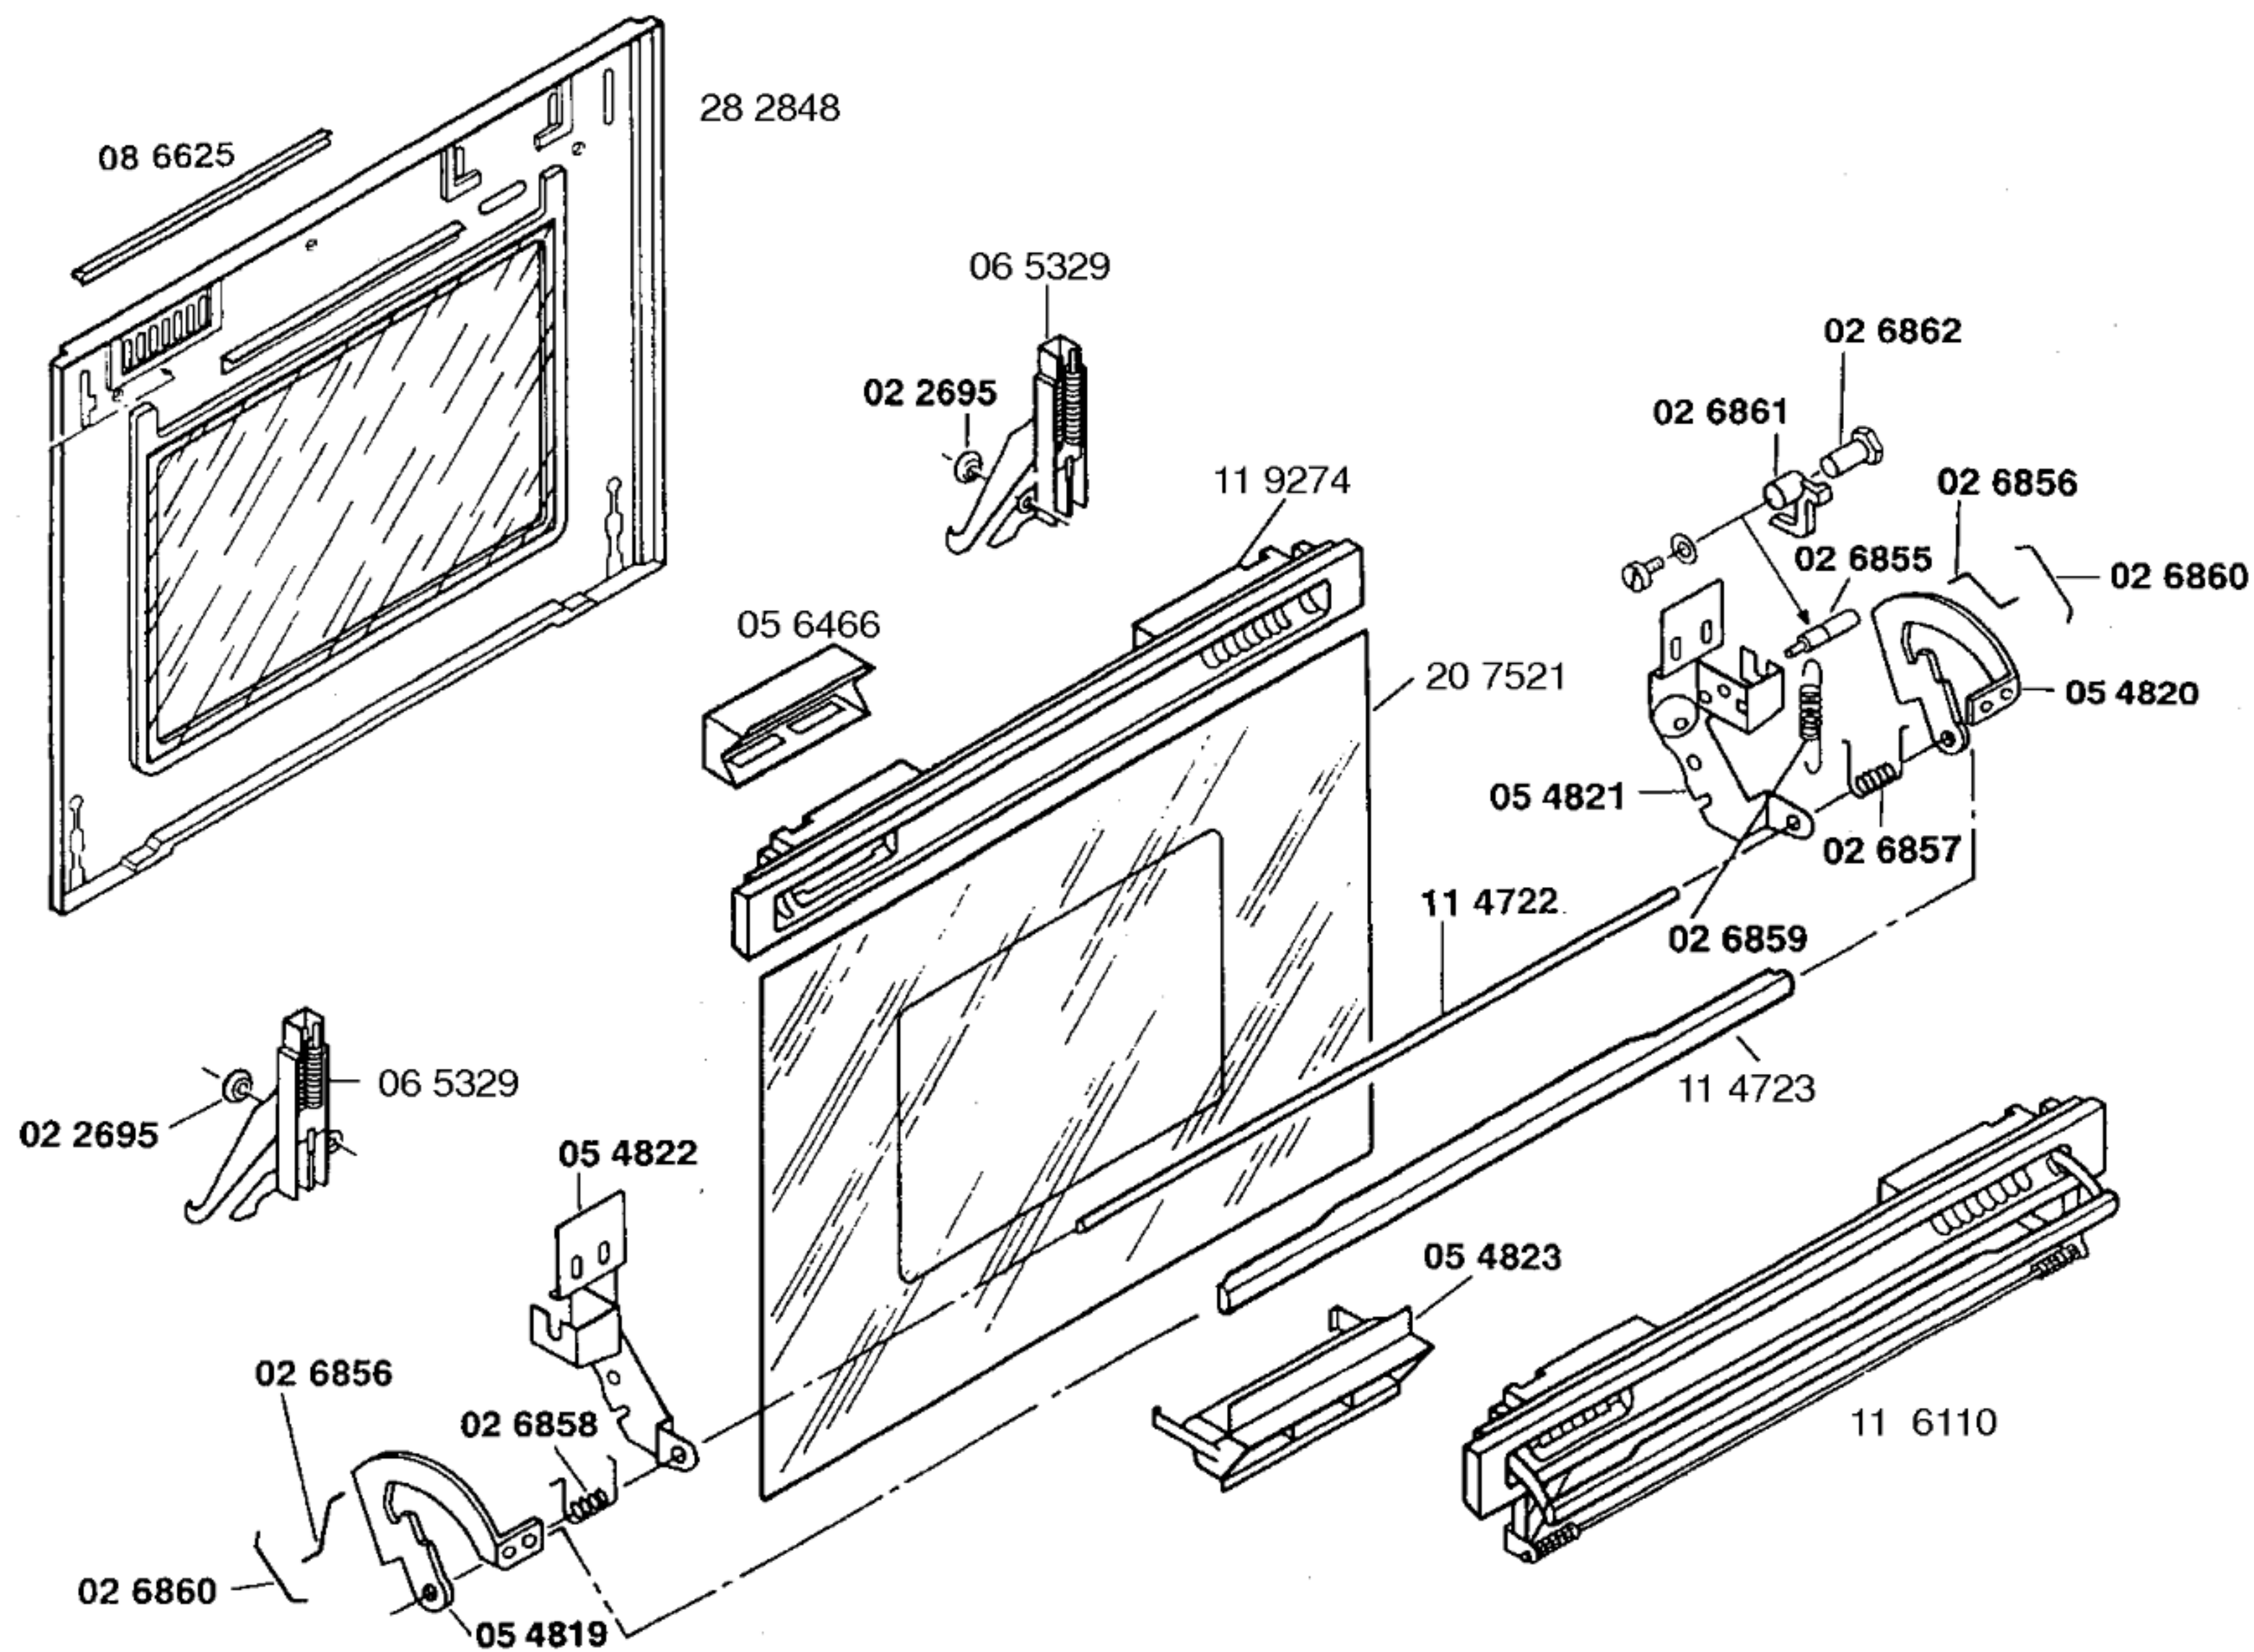

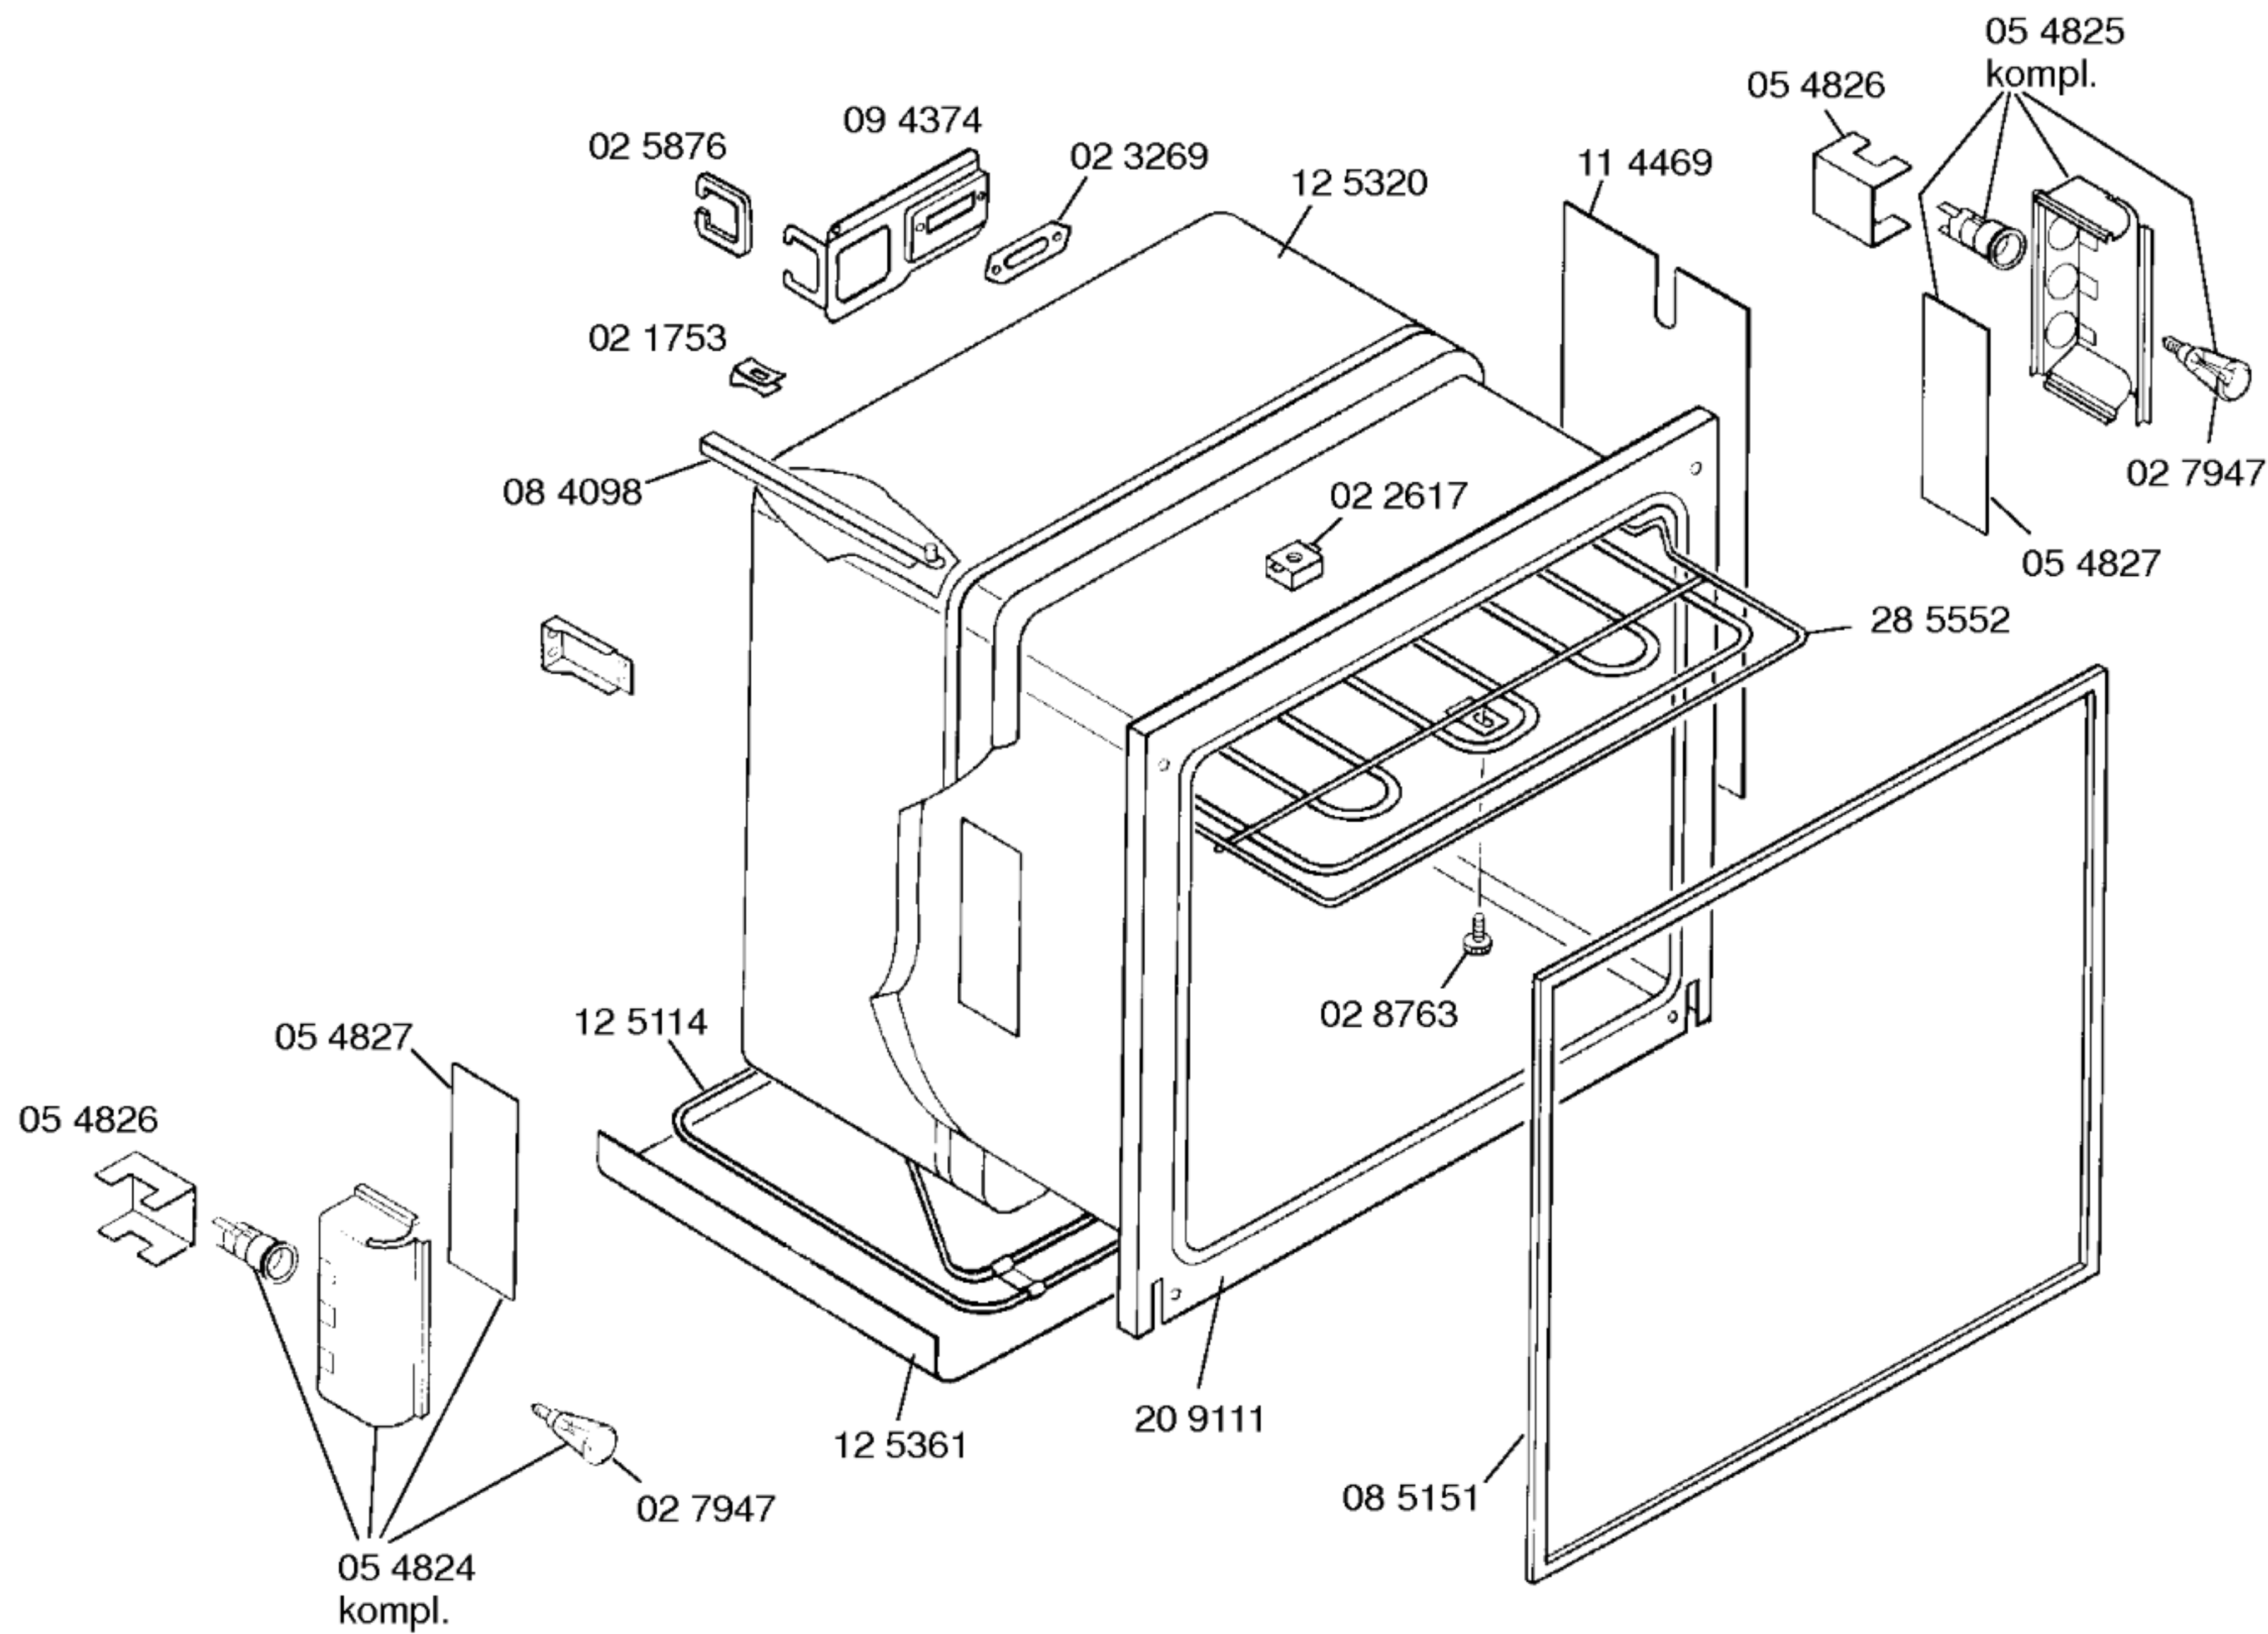

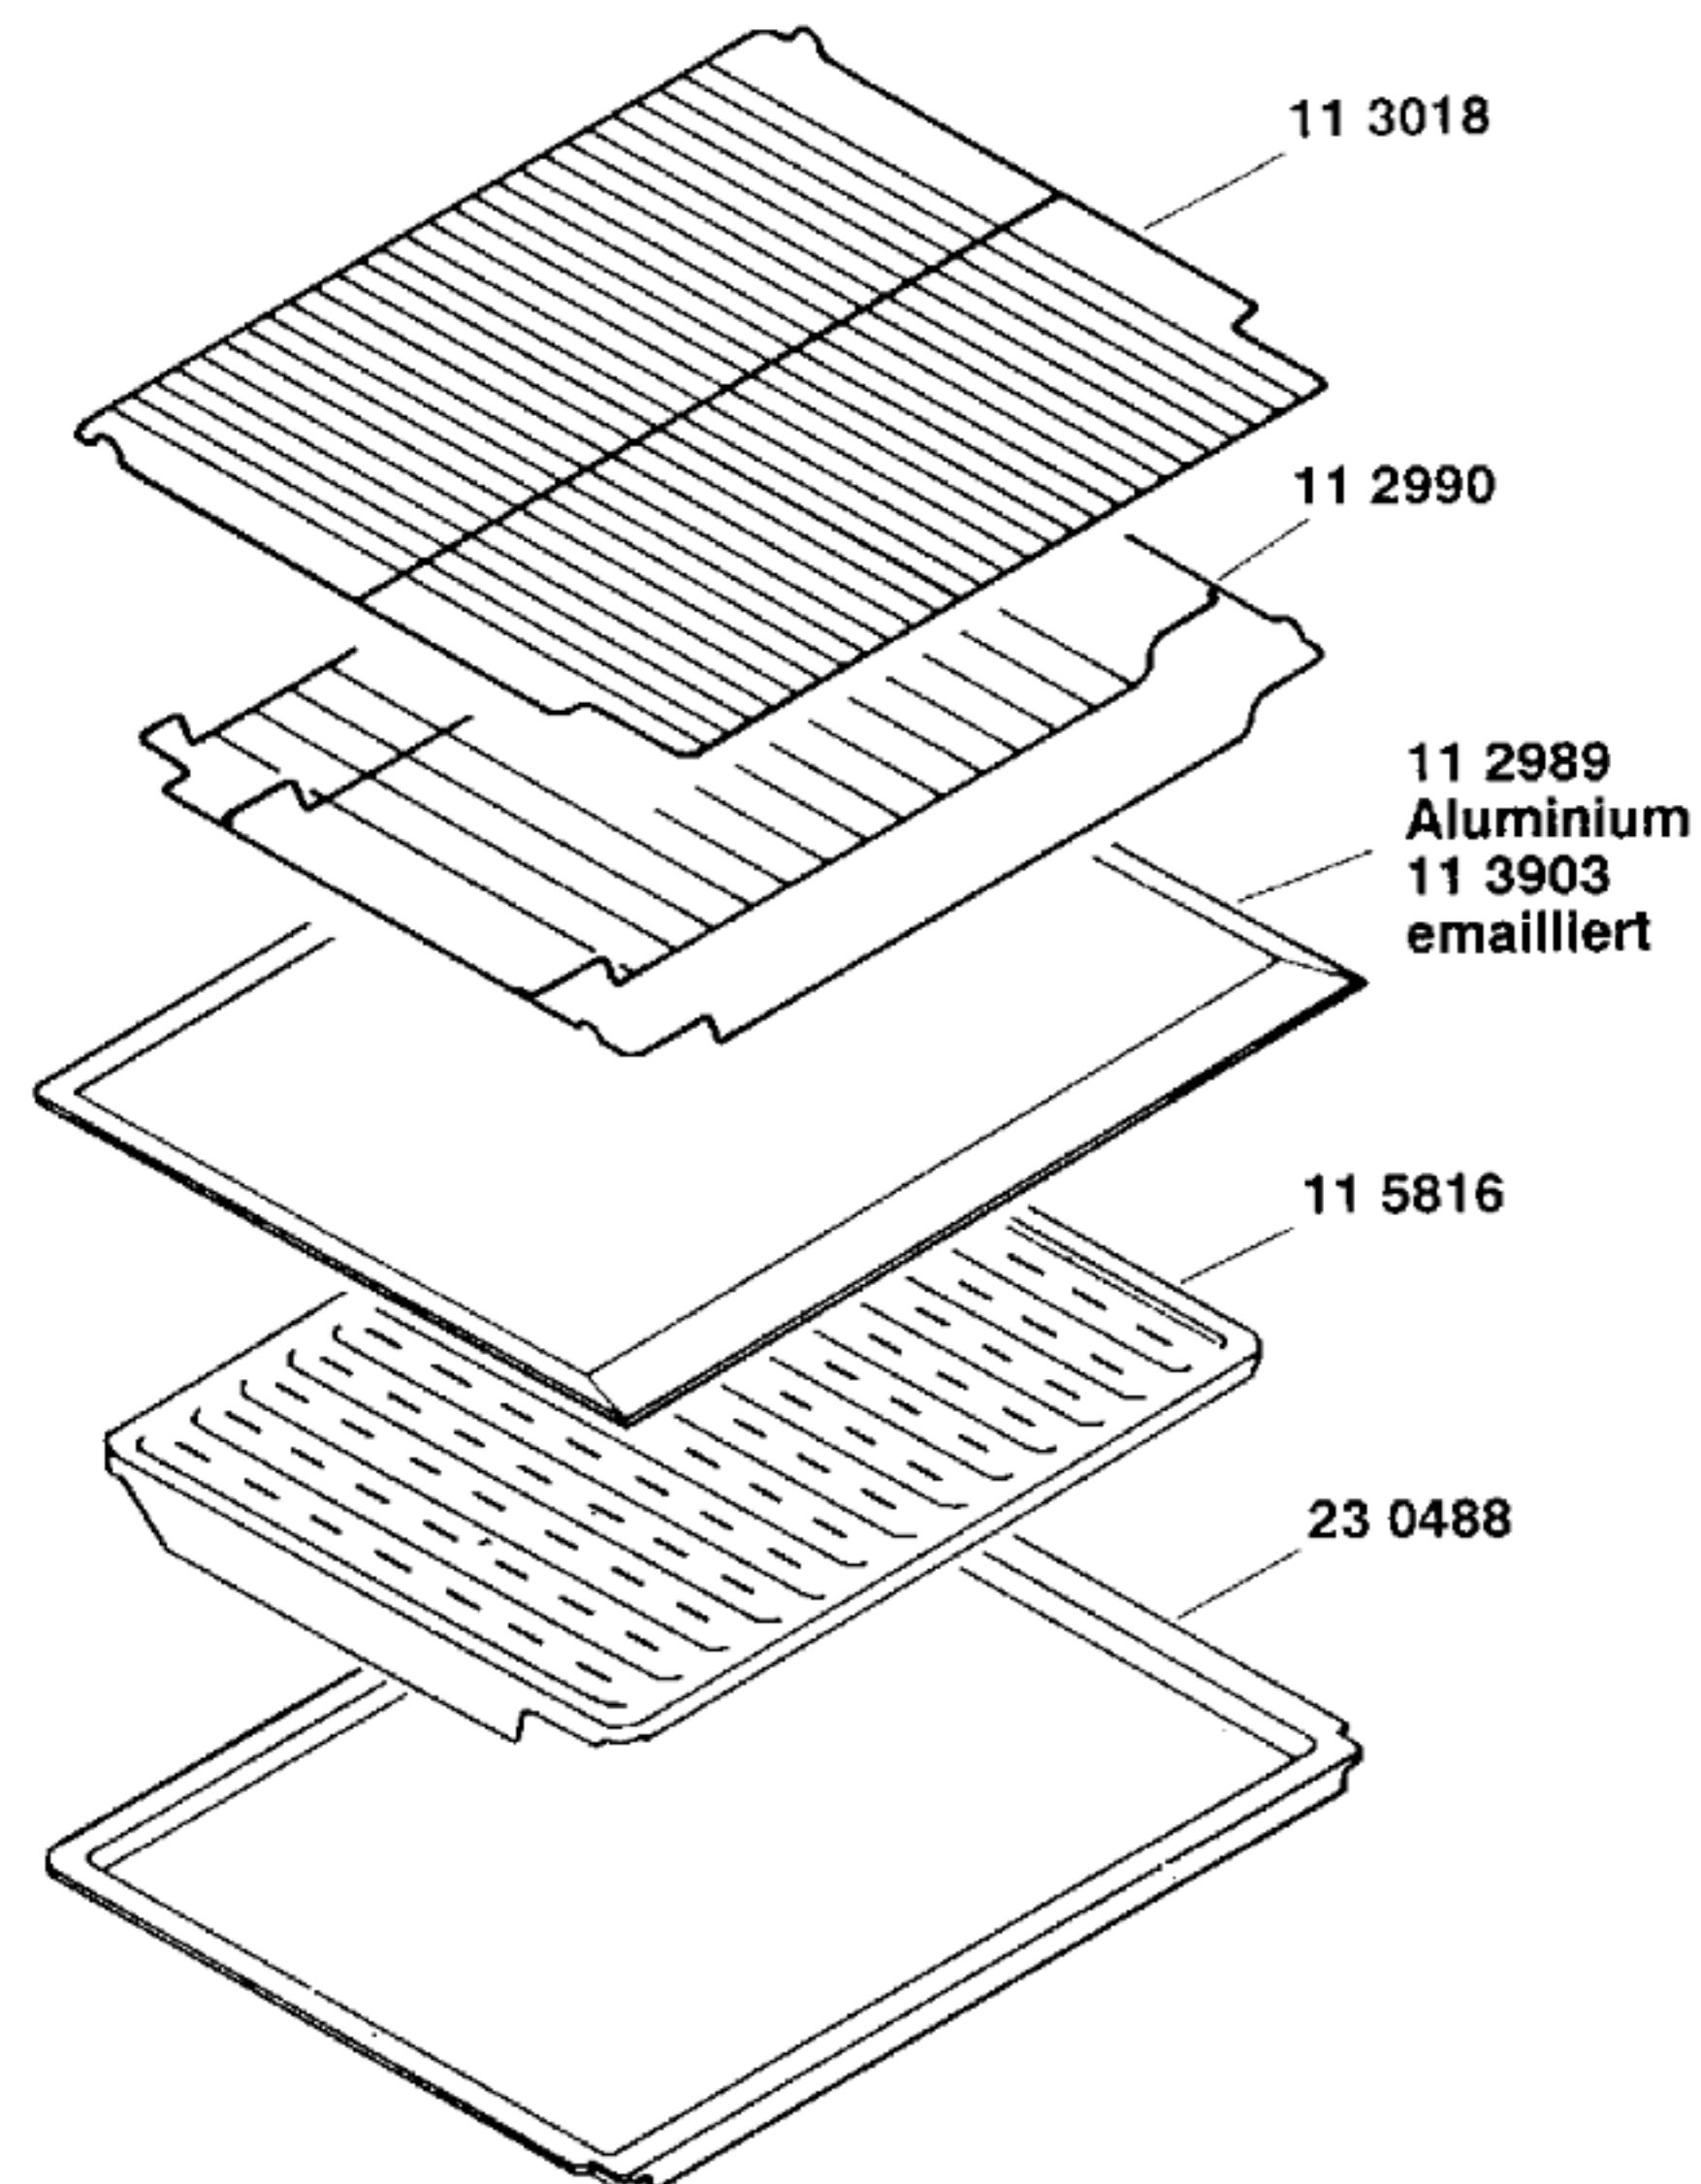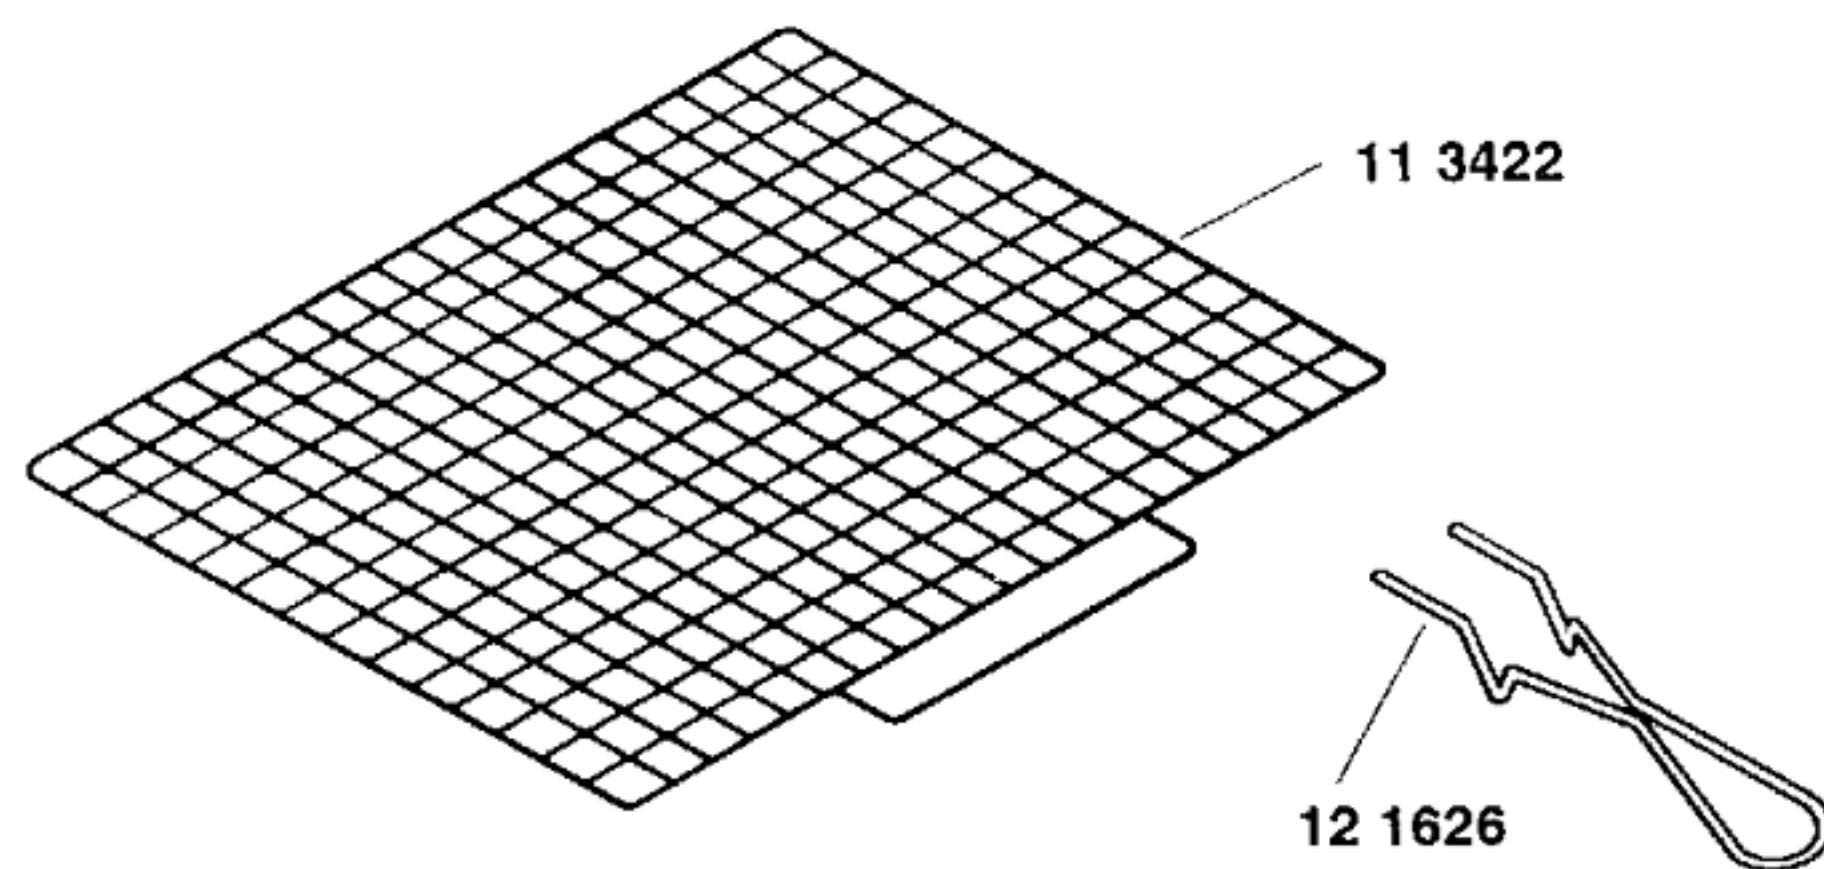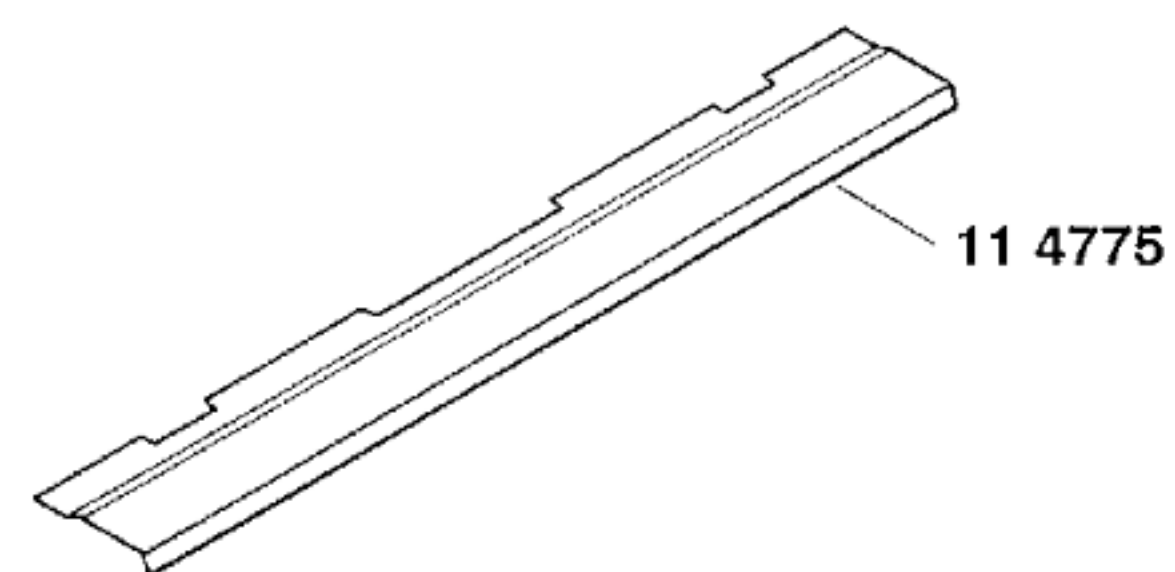

1) 08 4701
kompl.

2) 02 5244

3) 02 5462

