


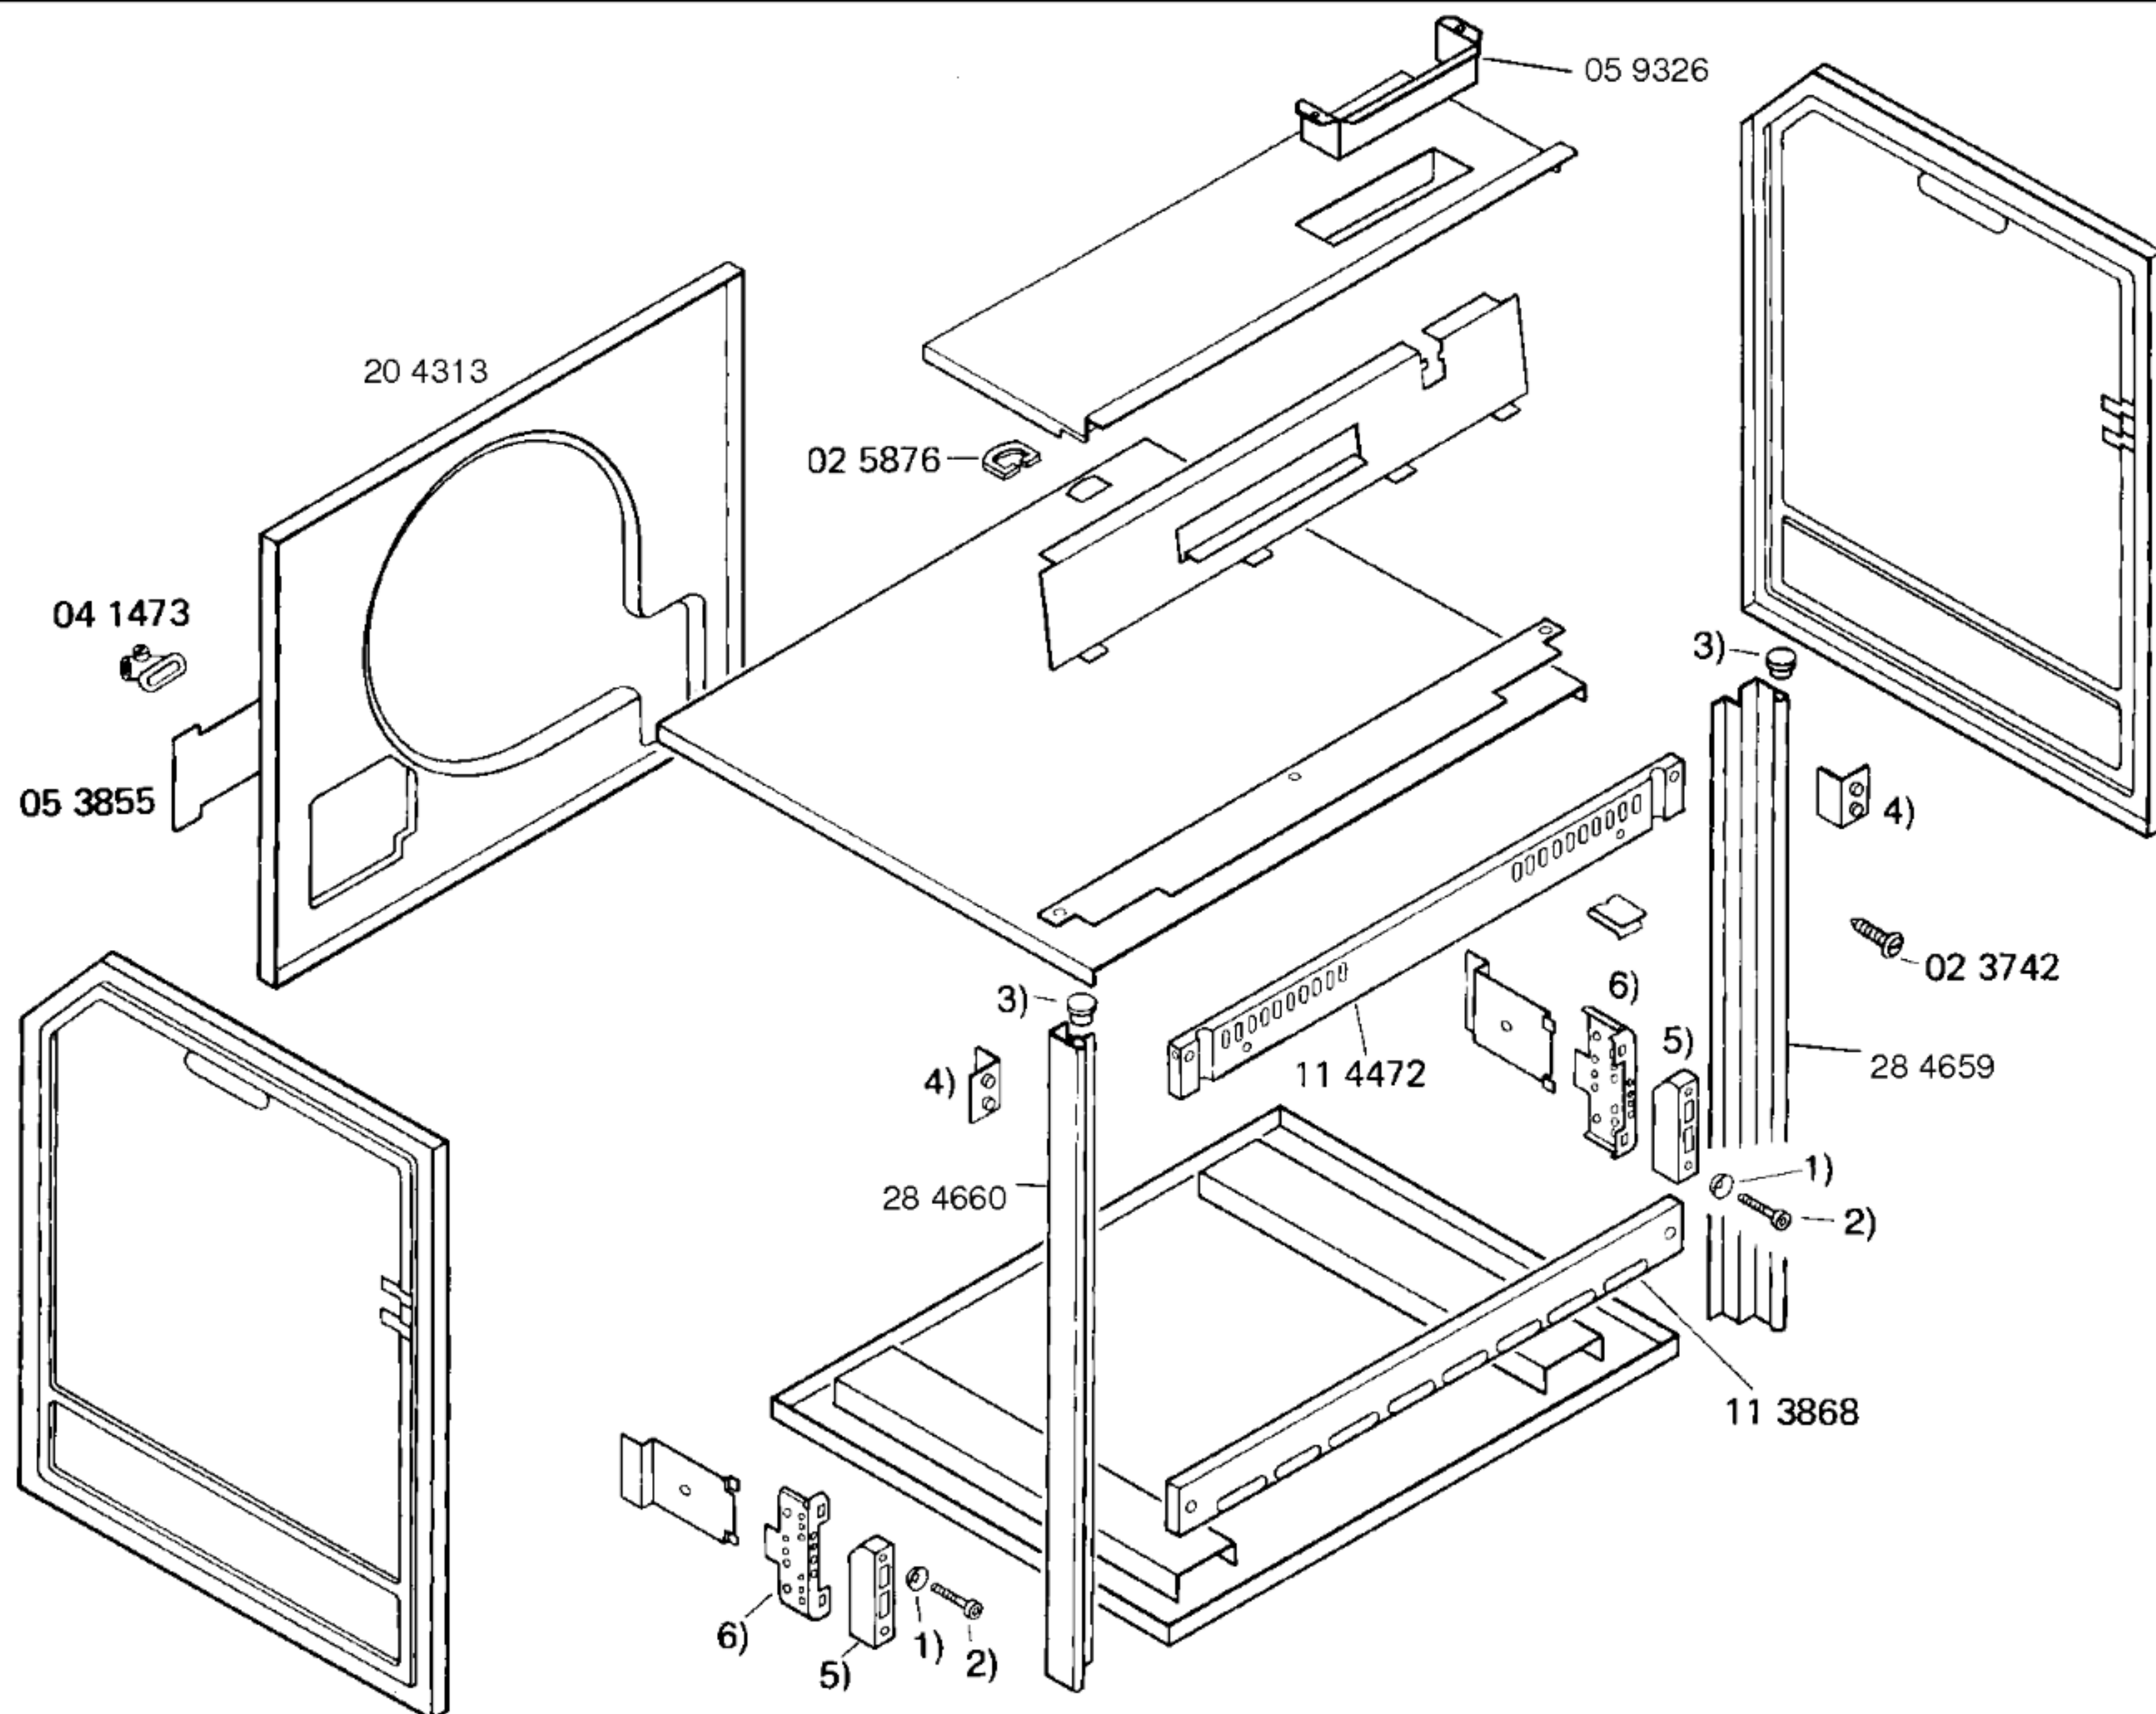

Gebrauchsanweisung
 51 7305
 (D)

Tips und Rezepte
 51 1936
 (D)

- 1) 05 3176
- 2) 02 1947
- 3) 02 5992
- 4) 01 8981
- 5) 05 1477
- 6) 08 3566

Zubehör:
 Bratpfanne
 Z1200X1

Rost
 Z1400X1

Backblech-Alu.
 Z1300X1

Backblech emailiert
 Z1310X1

