



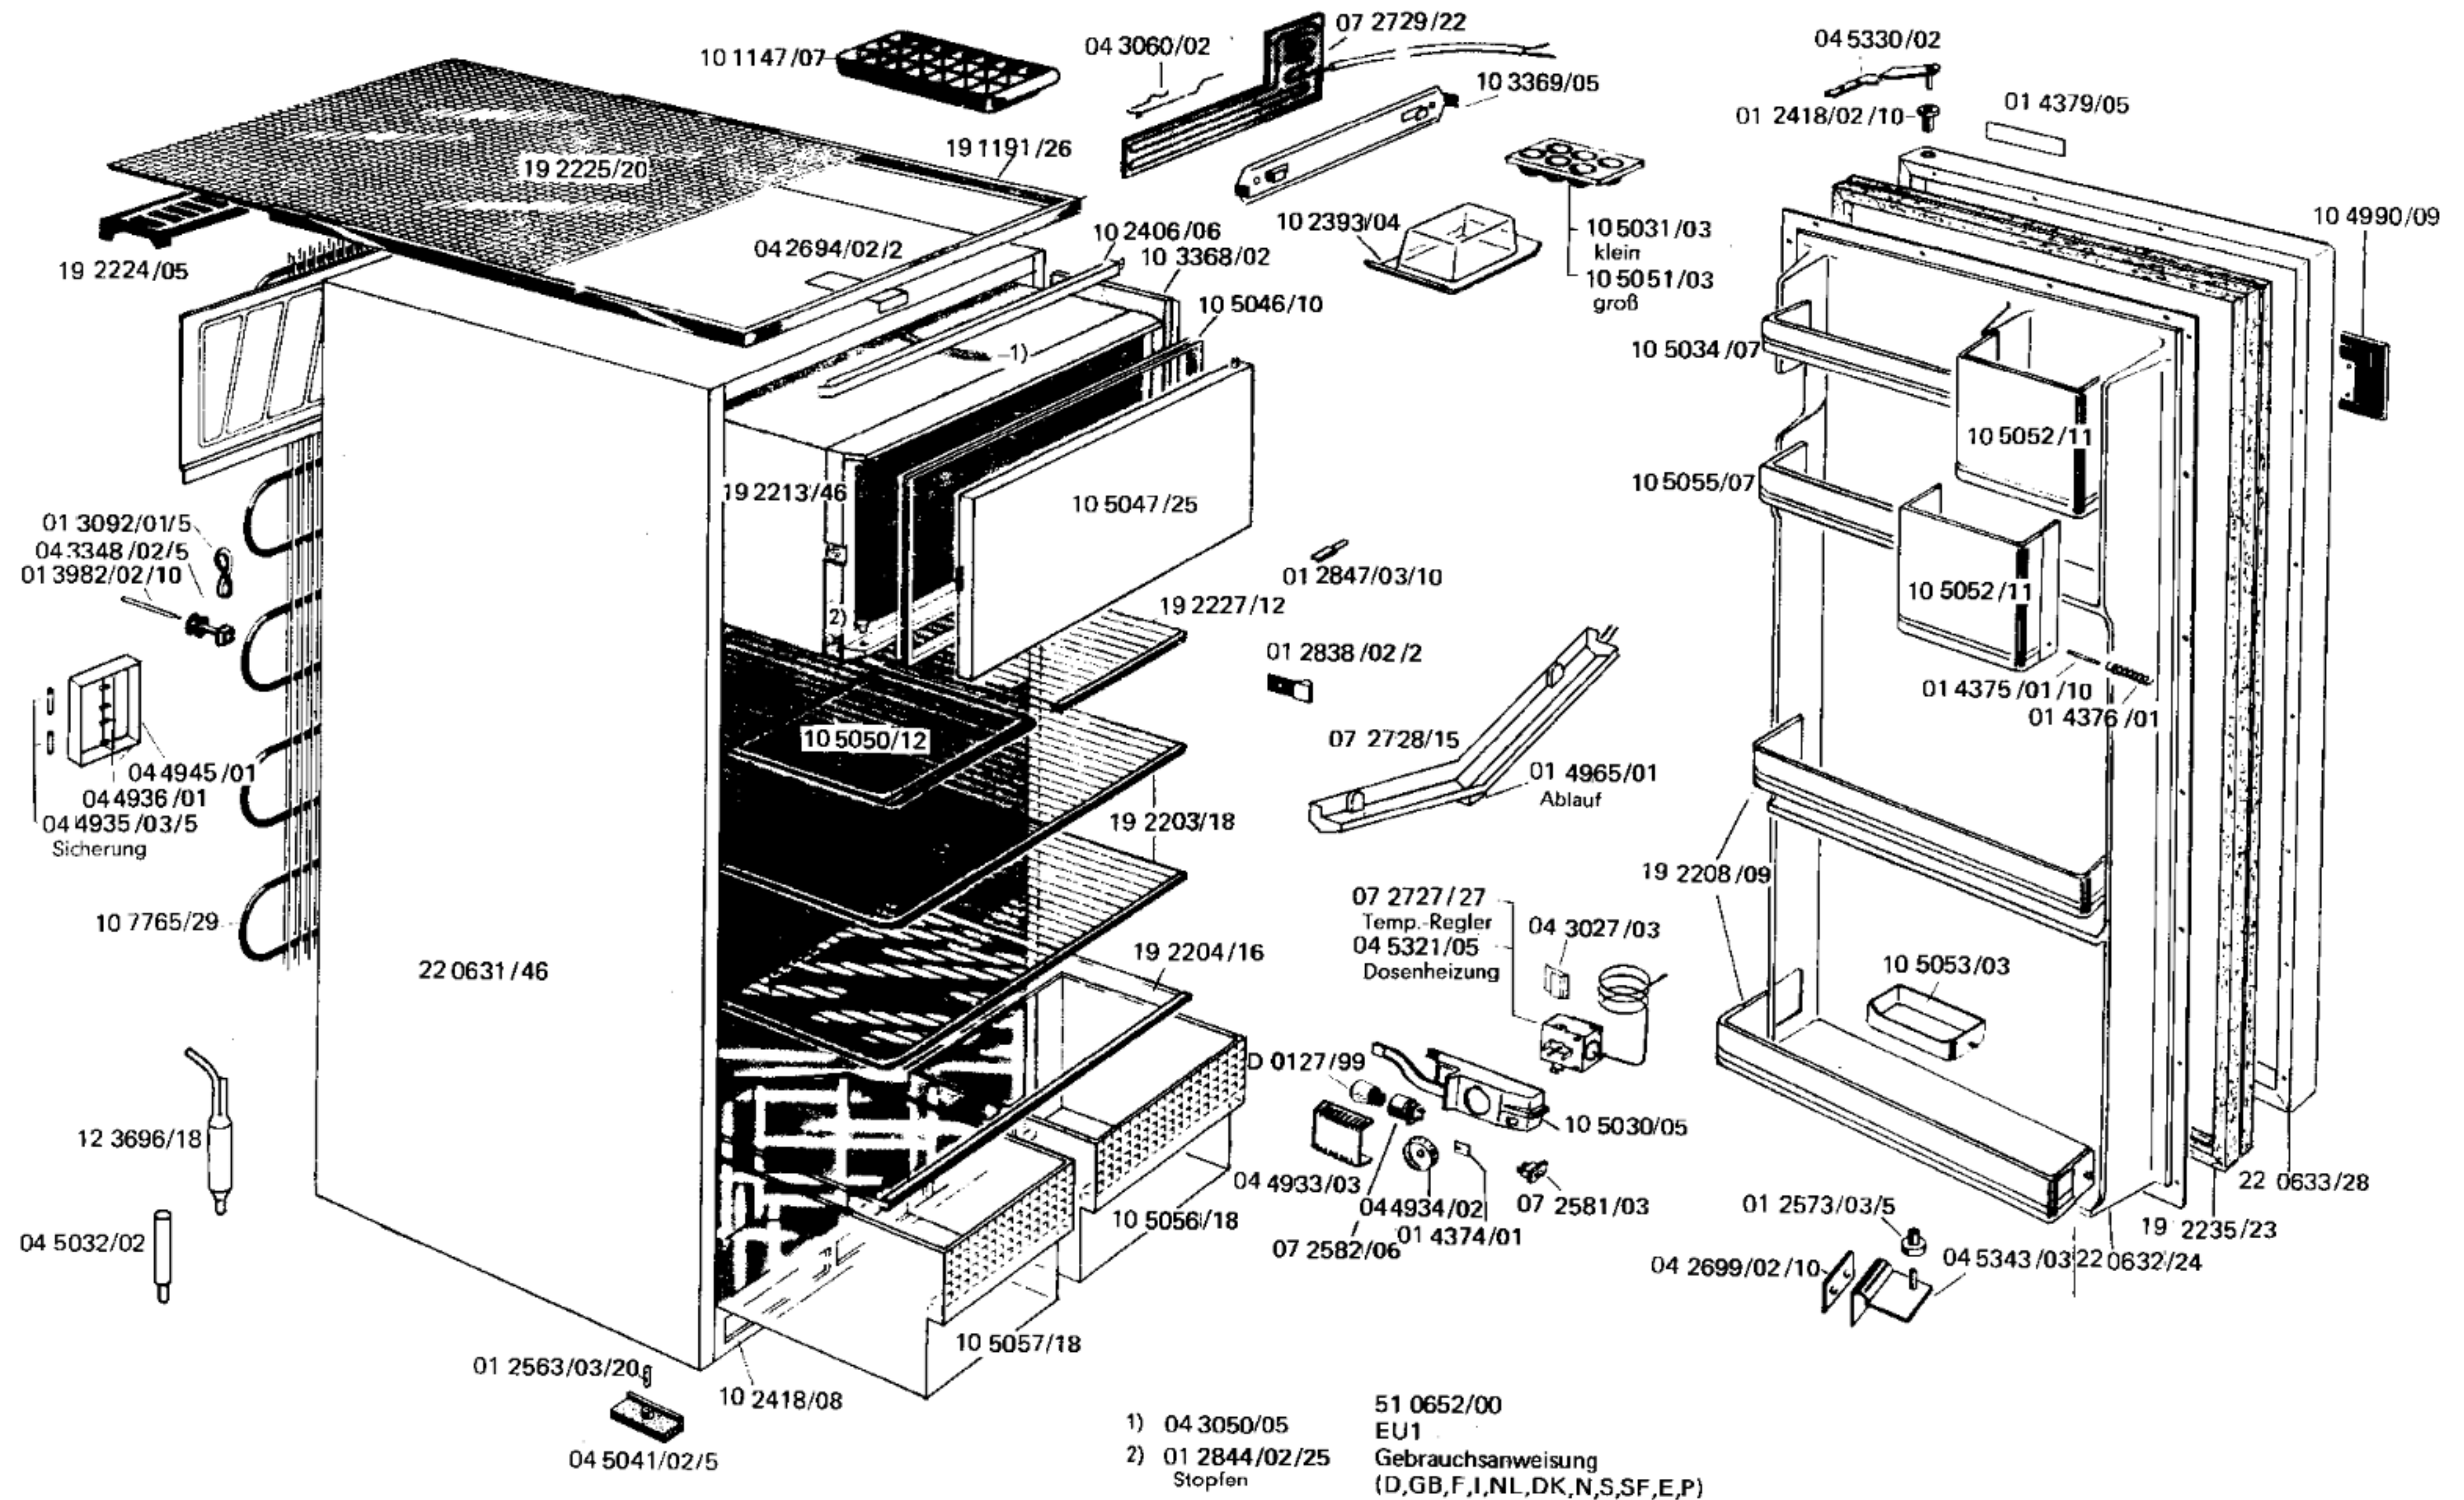

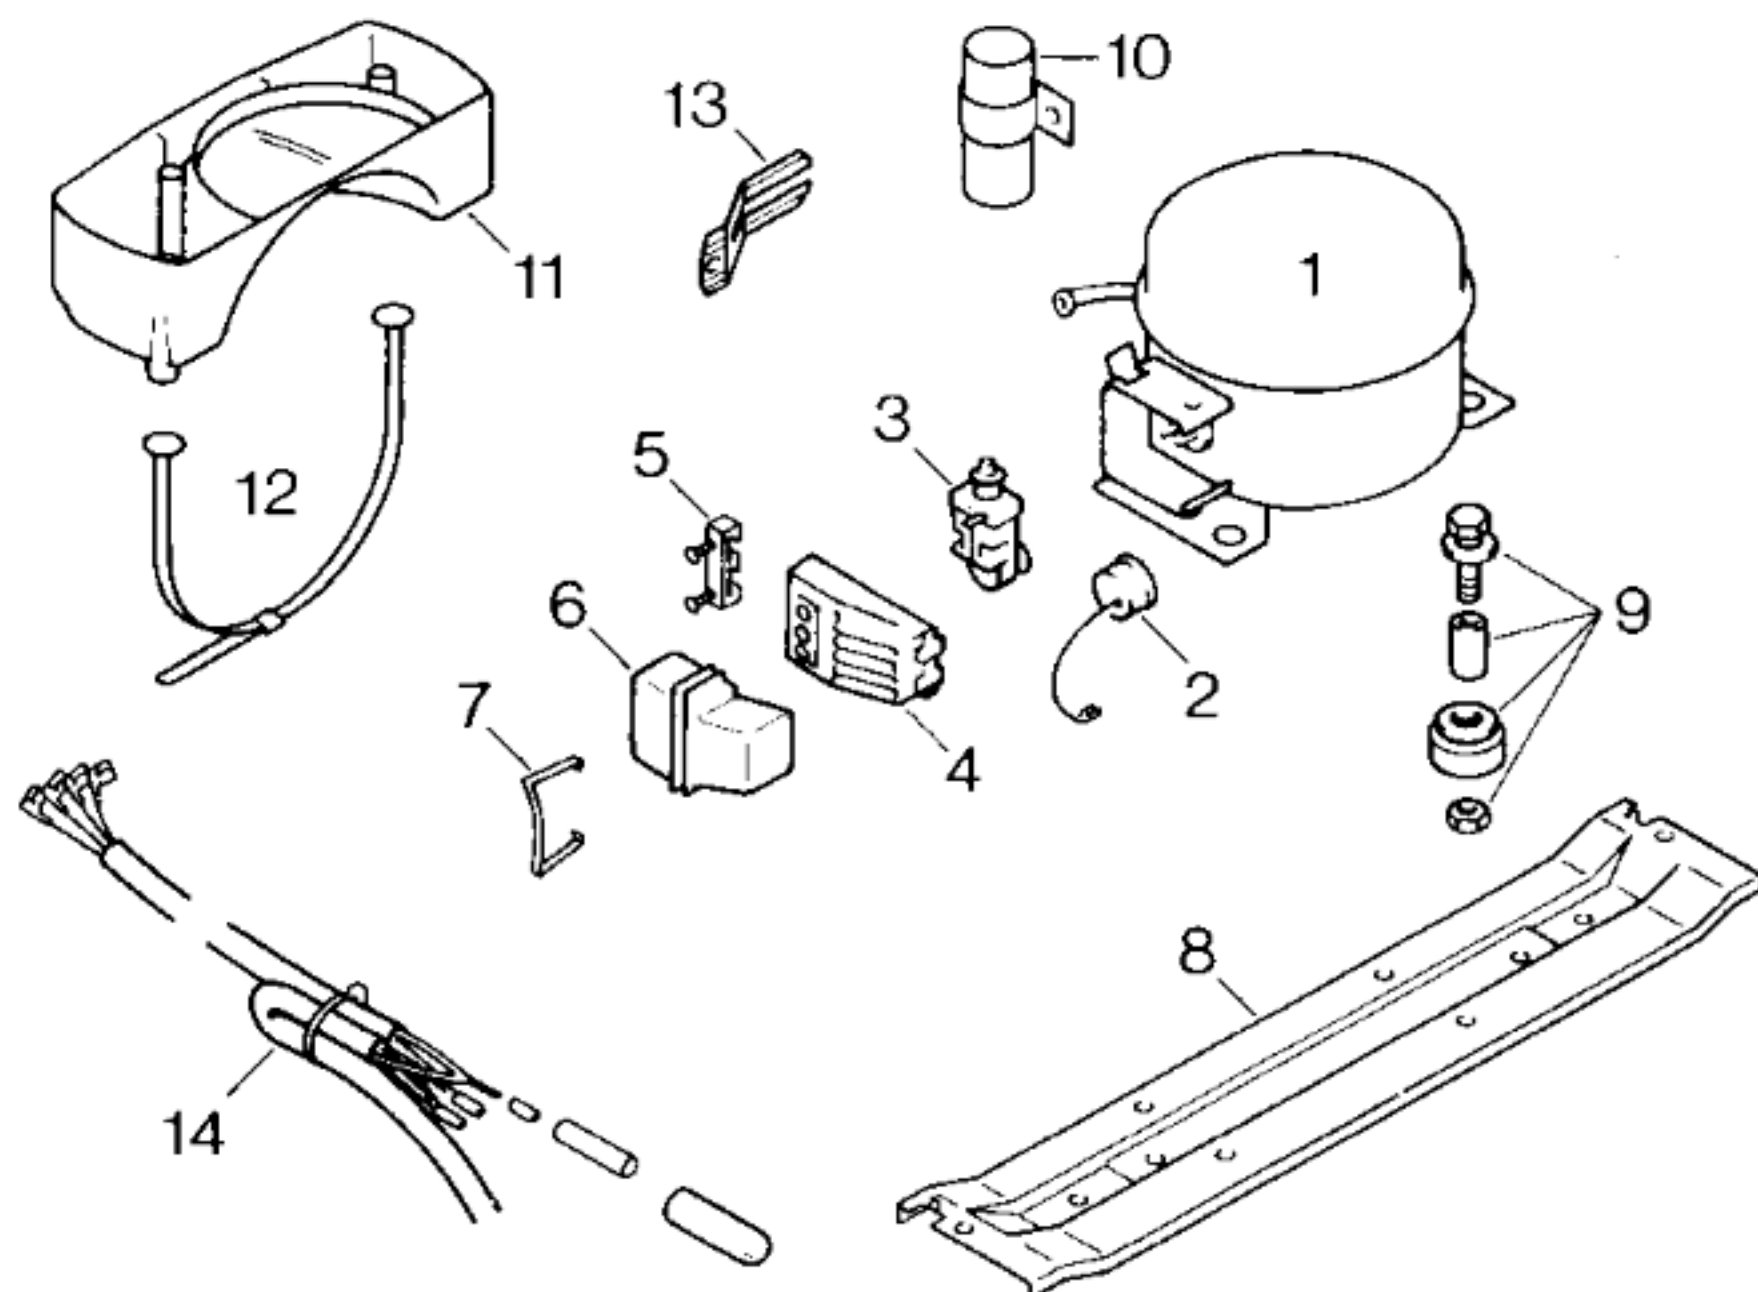

Pos.	EU1	EU1		
	Danfoss TL	Bosch		
1	14 0065/45			
2		07 2131/18		
3	02 0108/27	07 3899/09		
4		04 9757/02		
5	02 1361/04			
6	05 1413/05	04 9758/02		
7				
8	*11 1839/07	19 2409/05		
9	*05 0166/05/4			
10				
11	*11 1243/01	10 6693/03		
12				
13	*04 1568/01/2			
14	*05 1226/08			

*) Bei Ersatz des Bosch-Verdichters mitbestellen
To be ordered when replacing the Bosch compressor
À commander lors du remplacement du compresseur Bosch

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Bosch	Danfoss		
Typ/Type		V 1040	TL 5 A		
Förderleistung/Delivery/Débit		l/h	914		
Anlaufstrom/Starting current/Cour. de démarrage		A	9,0		
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	15,0		
		Hi/aux Ω	29,5		
Temp.-Regler/Thermostat		Ranco	Bosch	Ranco	
Typ/Type		A 59	1 707 212 501	A 59	
Reglerstellung/Position		kalt warm	kalt warm	kalt warm	
Schaltwerte/Switching values/		+ 4 + 4	+ 4 + 4	+ 4 + 4	
Valeurs de commutation		- 29 - 20	- 31 - 21	- 31 - 21	
		„abtauen“ od.)	„alarm“		
Füllmenge/Fill quantity/Charge		R12 g	140		
Anschlußwert/Conn. load/Puiss. connectée		W	130		
Heizung/Heater/Chauffage		Abtau	Rinne	Fühlerrohr	
Widerstand/Resistance/Résistance		2120	540	82	
Leistung/Power/Puissance		14,5	3,7	0,6	
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			