


SIEMENS

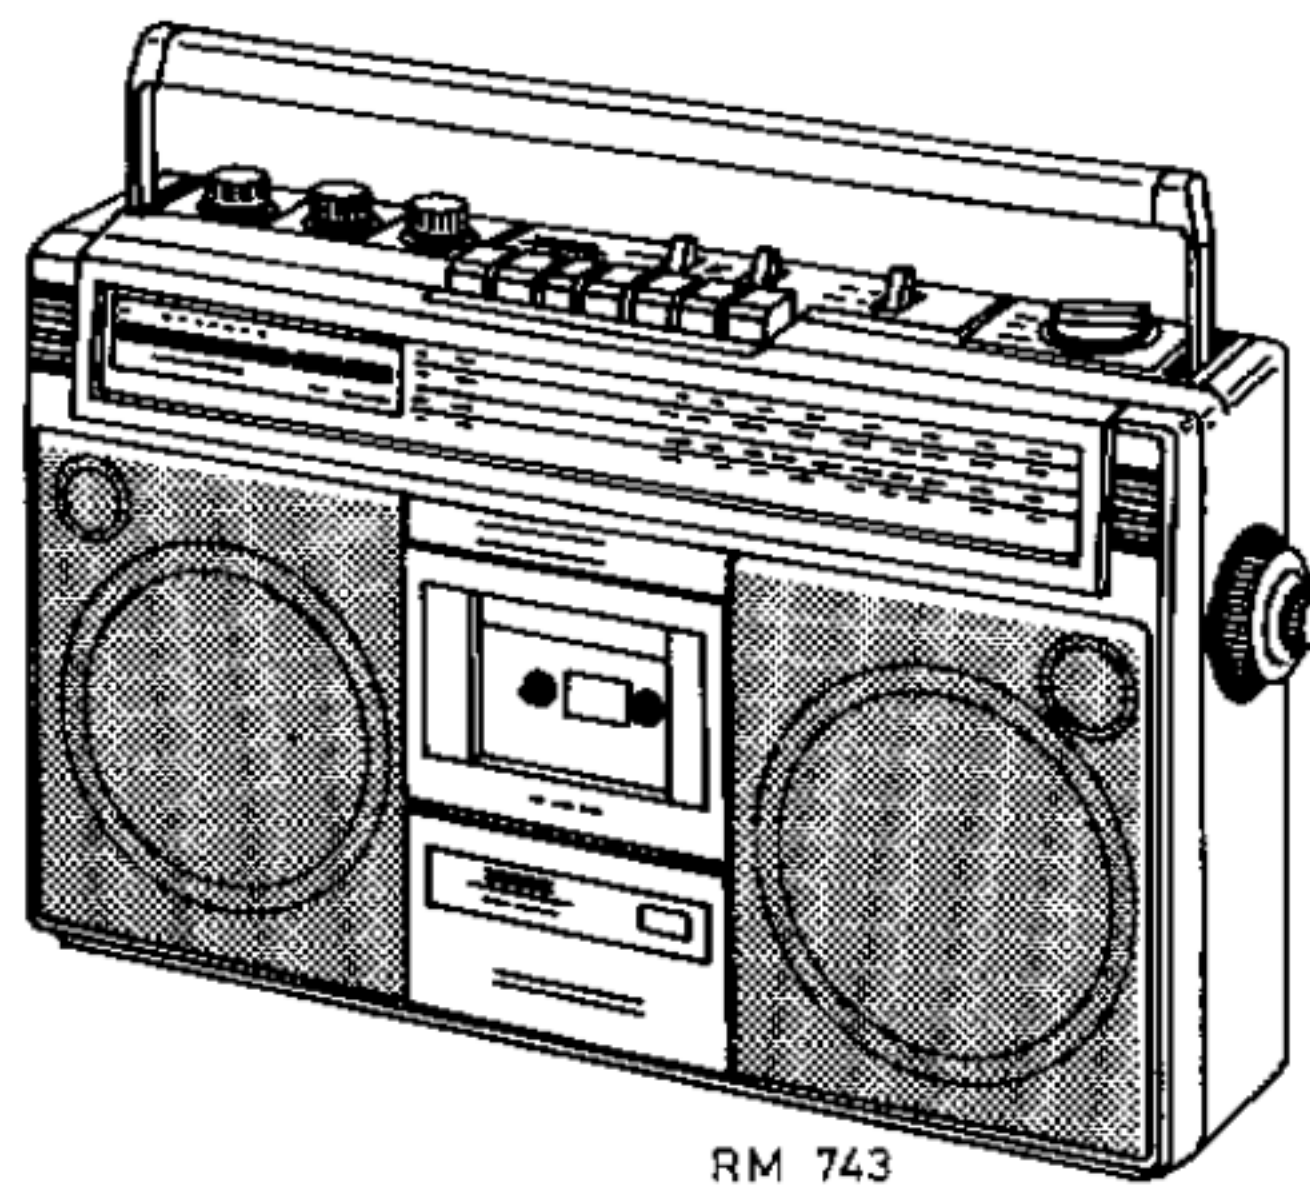

RM 743

ERSATZTEILLISTE
SPARE PARTS LIST
LISTE DE PIÈCES DE RECHANGE

RADIORECORDER

RM 743 6


* Wiederholteile
 Spare parts on stock
 Pièces de rechange sur dépôt


Ausgabe: Oktober 1980

Issue: October 1980

Edition: Octobre 1980

Pos.	Best.-Nr.	Gegenstand	Pckg.	PG	Pos.	Best.-Nr.	Gegenstand	Pckg.	PG
Item	Code No.	Part	Qty.	Price	Item	Code No.	Part	Qty.	Price
			Pckg.	Gp.				Pckg.	Gp.
Pos.	Ref. de	Objet	Quant.	cat.	Pos.	Ref. de	Objet	Quant.	cat.
	cde		Emb.	de prix		cde		Emb.	de prix
ELEKTRISCHE TEILE ELECTRICAL PARTS PIECES ELECTRIQUE					Integrierte Schaltkreise integrated circuits circuits intégré				
	75 0940	Tuner		31	IC1	72 3415	TA 7303 P		03
	78 0391	Grundplatte base plate/plaque de base		33	IC2	*72 0647	BA 1320		04
VC1-4, TC1,2,4,7	72 3448	Drehko/variable capacitor condensateur variable		05	IC101	72 3417	M 51 301 P		03
T301	75 0962	Netztrafo power transformer transformateur secteur		07	IC102	*72 1387	LB 1416		04
		Spulen und Filter coils and filters bobines et filtres			IC103	72 3418	BA 536		06
L1	72 3429	Band Pass		01	Transistoren/transistors				
L2,3	72 3430	FM RF	2	01	Q1	*72 1198	2 SC 535 B		03
L4	72 3431	FM Oscillator	2	01	Q2	72 3419	2 SC 353 B		01
L5	72 3432	Ferritantenne/ferrite antenna antenne ferrite		03	Q3,6	72 3420	2 SC 460 C		01
L6	72 3433	Antenne KW/SW/OC		01	Q4,5	72 3421	2 SC 461 C		01
L7	72 3435	Oscillator LW/GO		01	Q7	72 3422	2 SC 3800		01
L8	72 3436	Oscillator MW/PO		01	Q101	*70 9042	2 SC 458 D		02
L9	72 3437	Oscillator KW/SW/OC		01	Q102-	*70 7552	2 SC 458 C		05
L10,101	72 3438	47 uH		01	106,108, 109,110,113				
L11	72 3439	Drossel/choke/self	2	01	Q107	72 3423	2 SB 562 C		01
L100	72 3440	Löschoscillator erase oscillator oscillateur d'effacement		01	Dioden/diodes				
T1	72 3441	FM		01	D1,2,4, 9,104-107, 110,111	*71 1092	1 S 2076	2	01
T2	72 3442	FM		01	D3	72 3424	1 S 2688 B		01
T3	72 3443	AM		01	D6,8	*70 7504	1 N 34 A	2	05
T4	72 3444	AM 455 kHz		01	D7	72 3425	HZ 7 B2L		01
CF1	72 3446	FM 10,7 MHz		01	D102	72 3426	GL 106 R 54		04
CF2	72 3447	AM 455 kHz		02	D103	72 3427	10 E 1		01
		Regler/controls/réglages			301-304				
VC5	72 3449	Feinabstimmung fine tuning/réglage fin		02	D108	72 3428	GL 9 NG 623 (LED)		01
VR1	72 3452	10 kOhm		01	D109	72 3445	GL 9 PR 623 (LED)		01
VR101	72 3453	20/50/20 kOhm f. Lautstärke/Klang/Balance f. volume/tone/balance		04	Trimmer				
					TC3,5	72 3450	Antenne LW/GO, KW/SW/OC		01
					TC6,8	72 3451	Oscillator KW/SW/OC, LW/GO		01
					F301	*70 0613	Sicherung 1 A träge fuse/fusible	10	04
						74 2269	Netzschur		10
						72 5609	Blindstecker		01

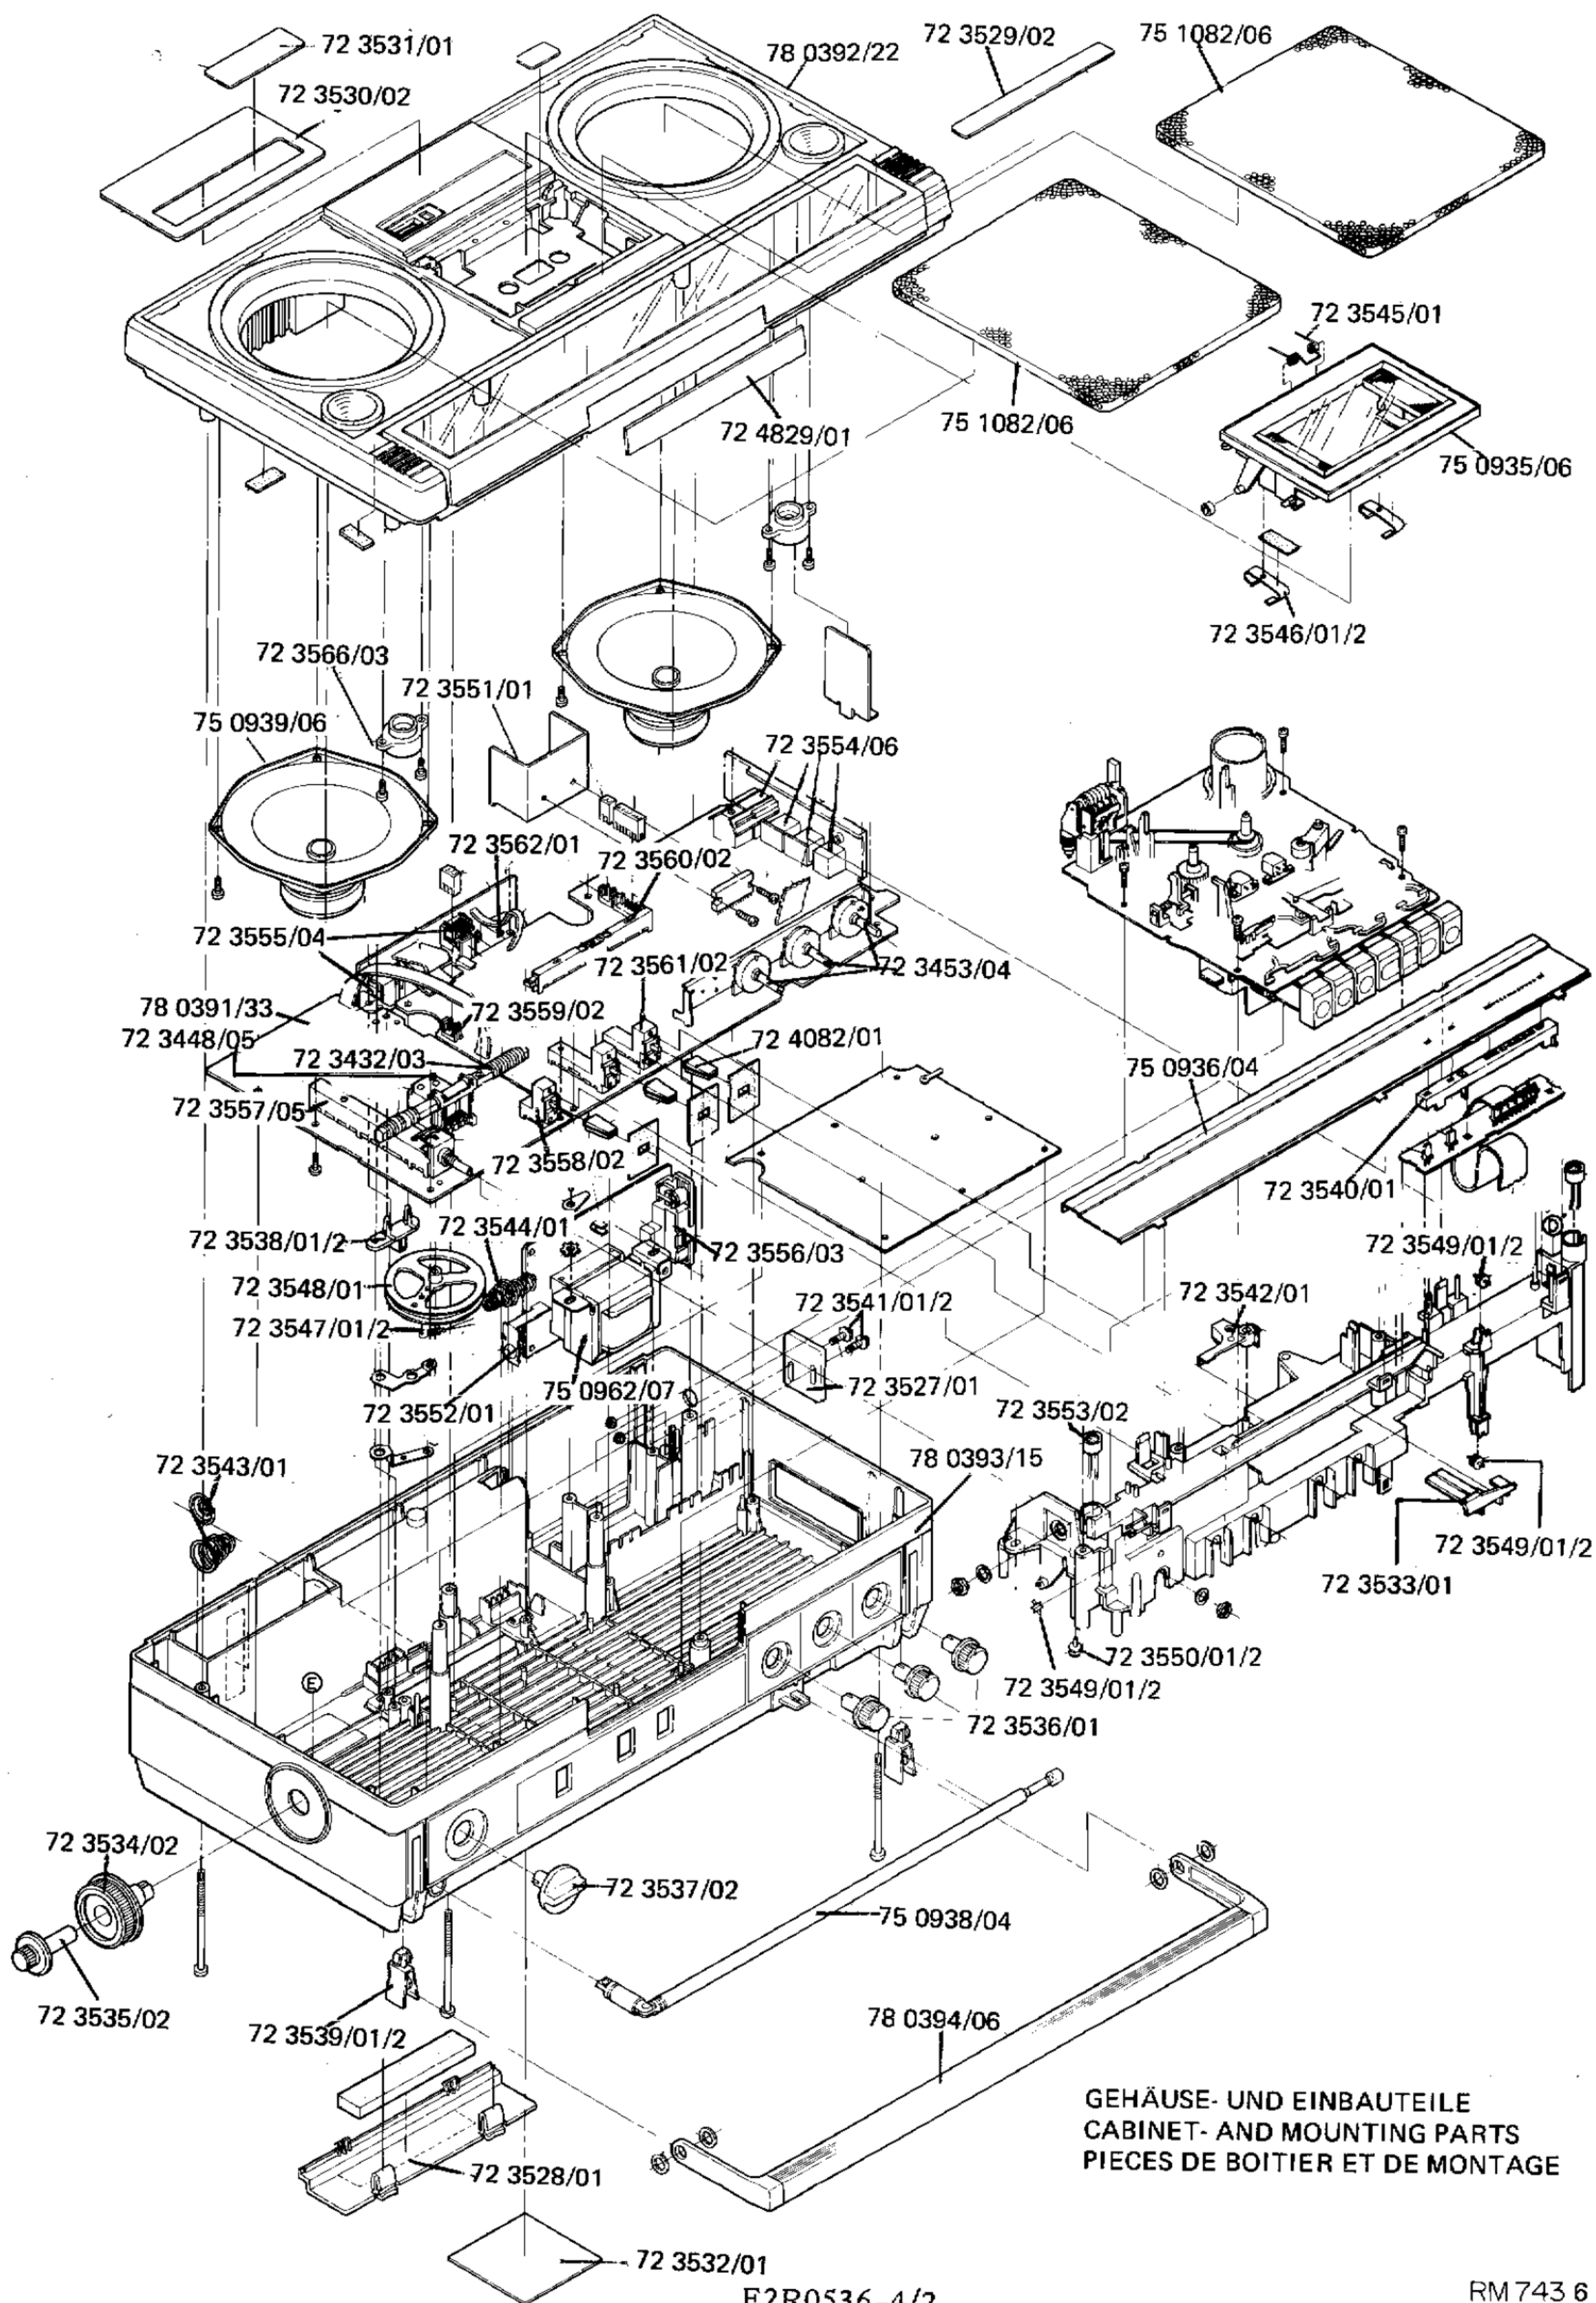

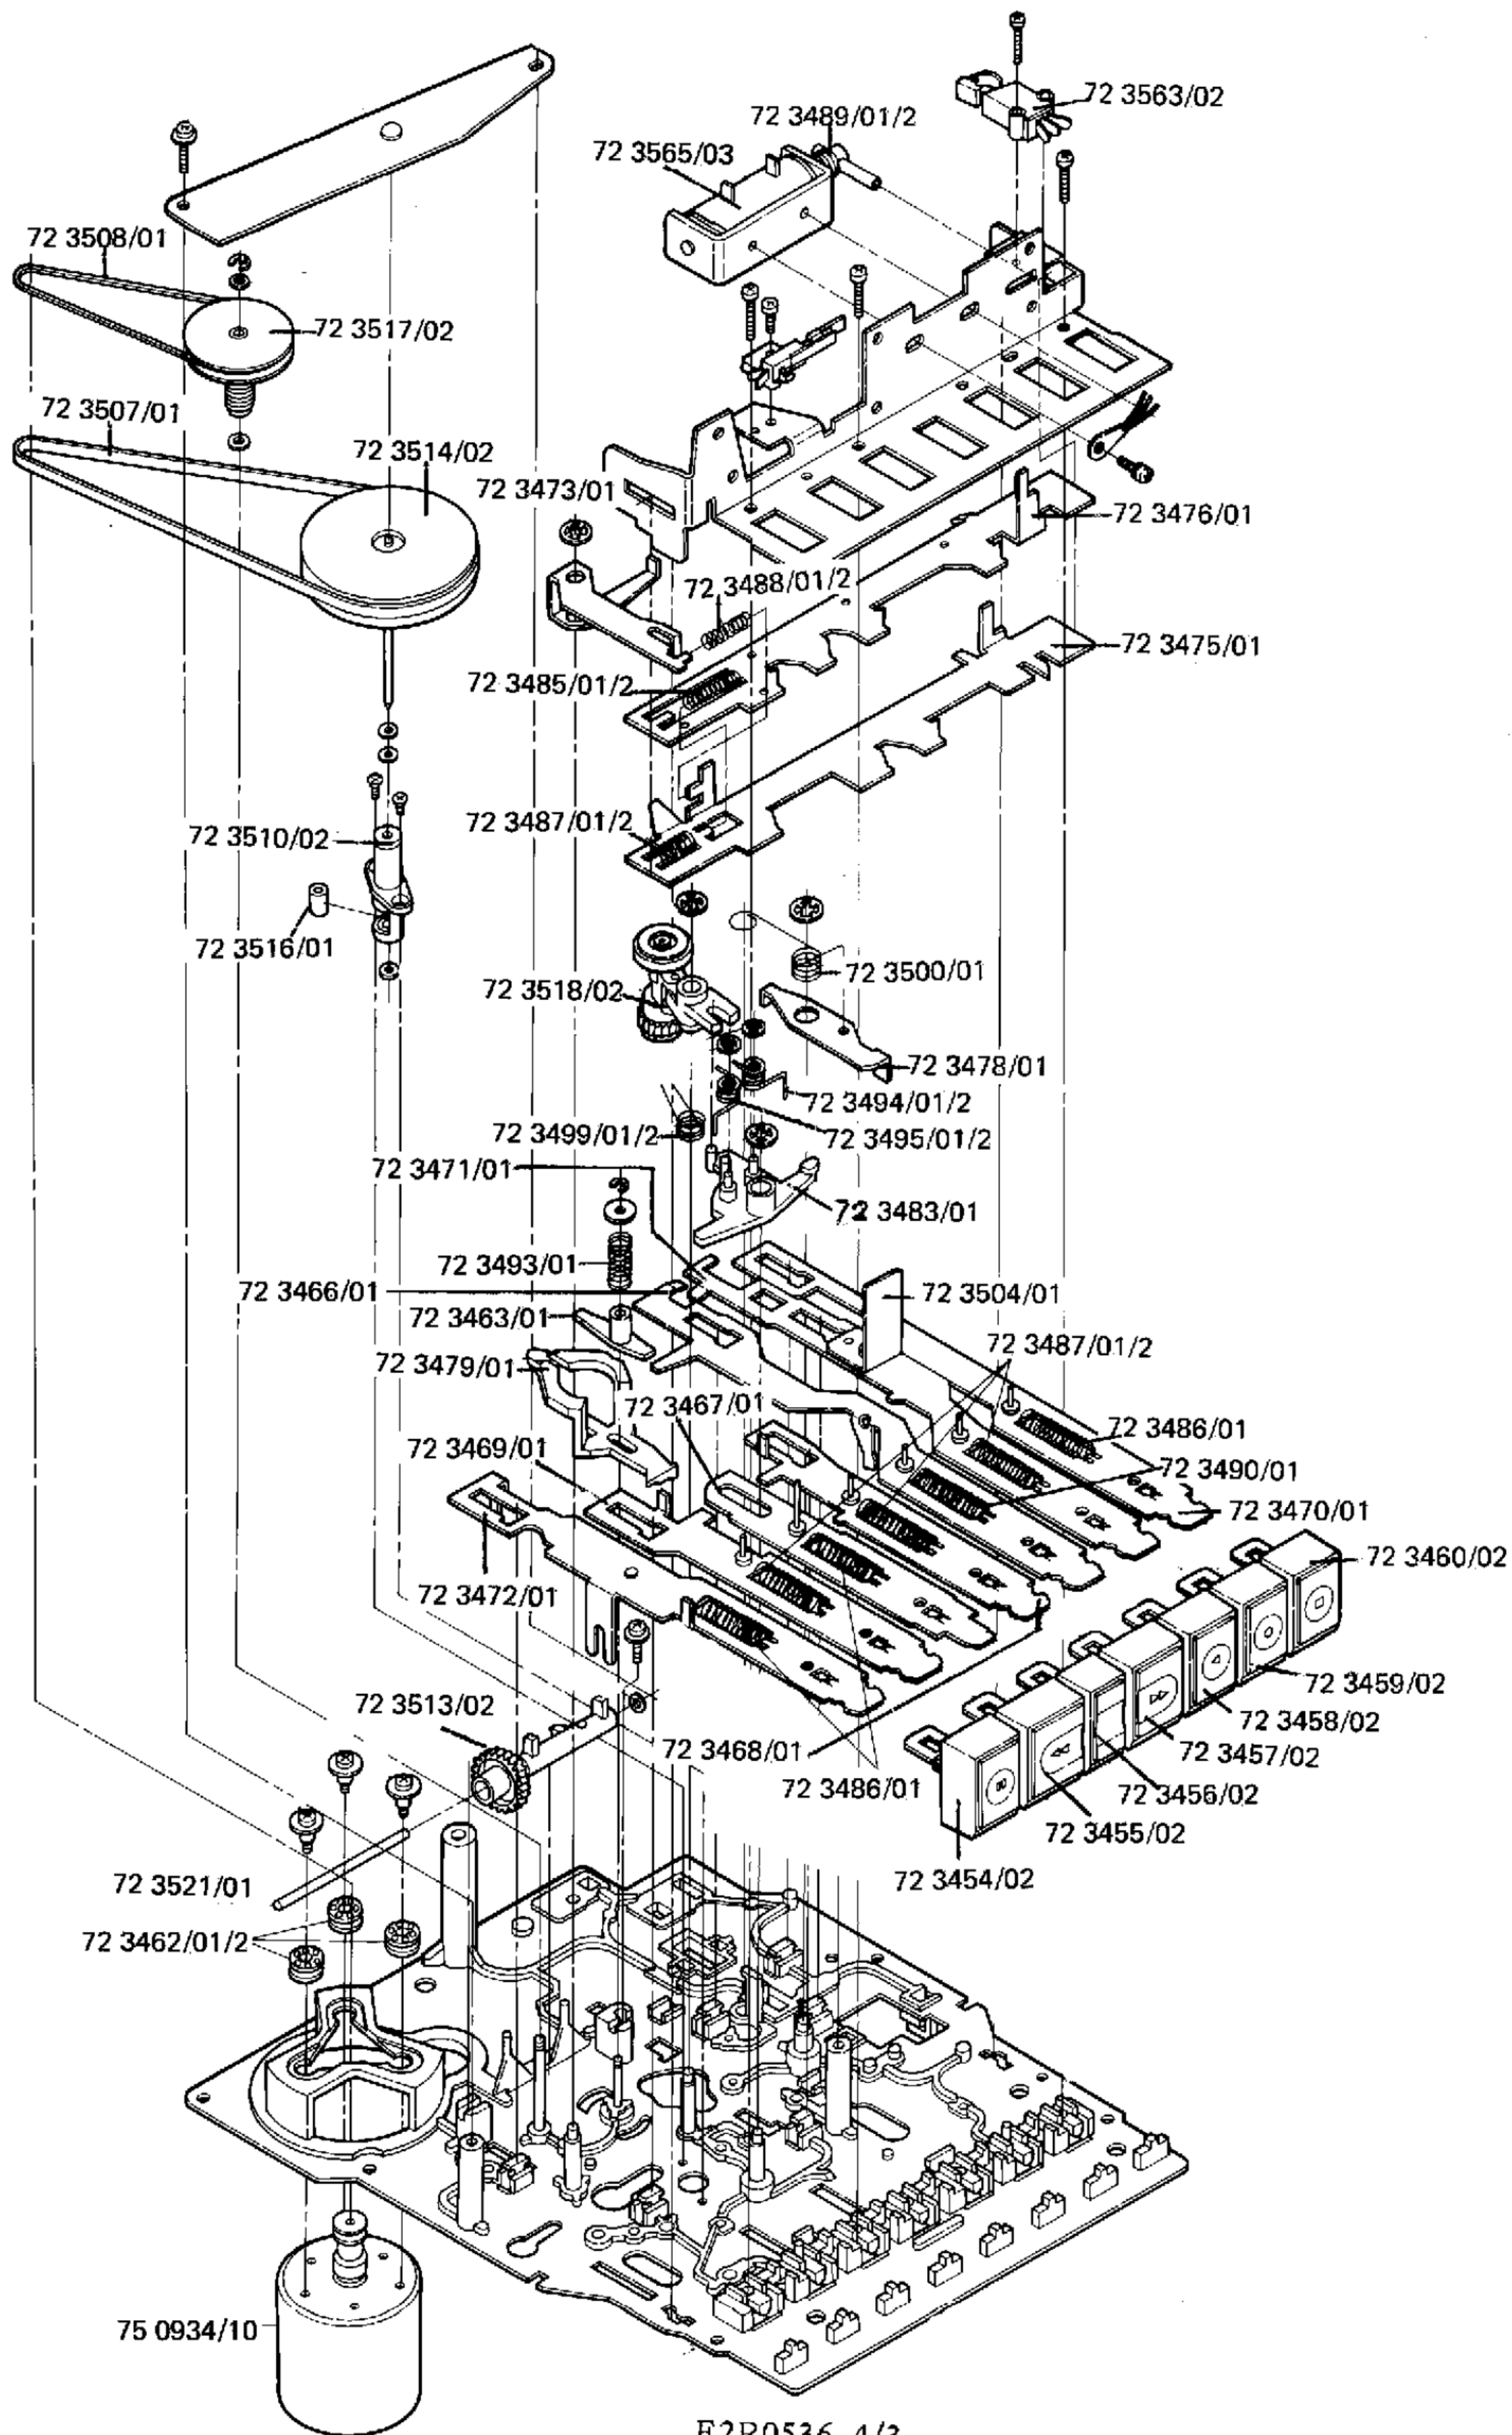

LAUFWERKTEILE
DRIVE MECHANISM PARTS
PIECES MECANISME D'ENTRAINEMENT

