

**BOSCH**

KIR2033/01-EU1
KIR2033CH/01-CH1
KIR2033SD/01-SD1


KÜHLGERÄTE
Kühlschränke, Einbau

Ident – Nummern – Konstante
3740

51 3616
Gebrauchsanweisung
(D,GB,F,I,NL,DK,S,N,SF,E)
51 2737
Montageanweisung
(D,GB,F,I,NL,DK,N,S,SF,E)

08 4136
Schraubensatz

08 6512
Befestigungssatz

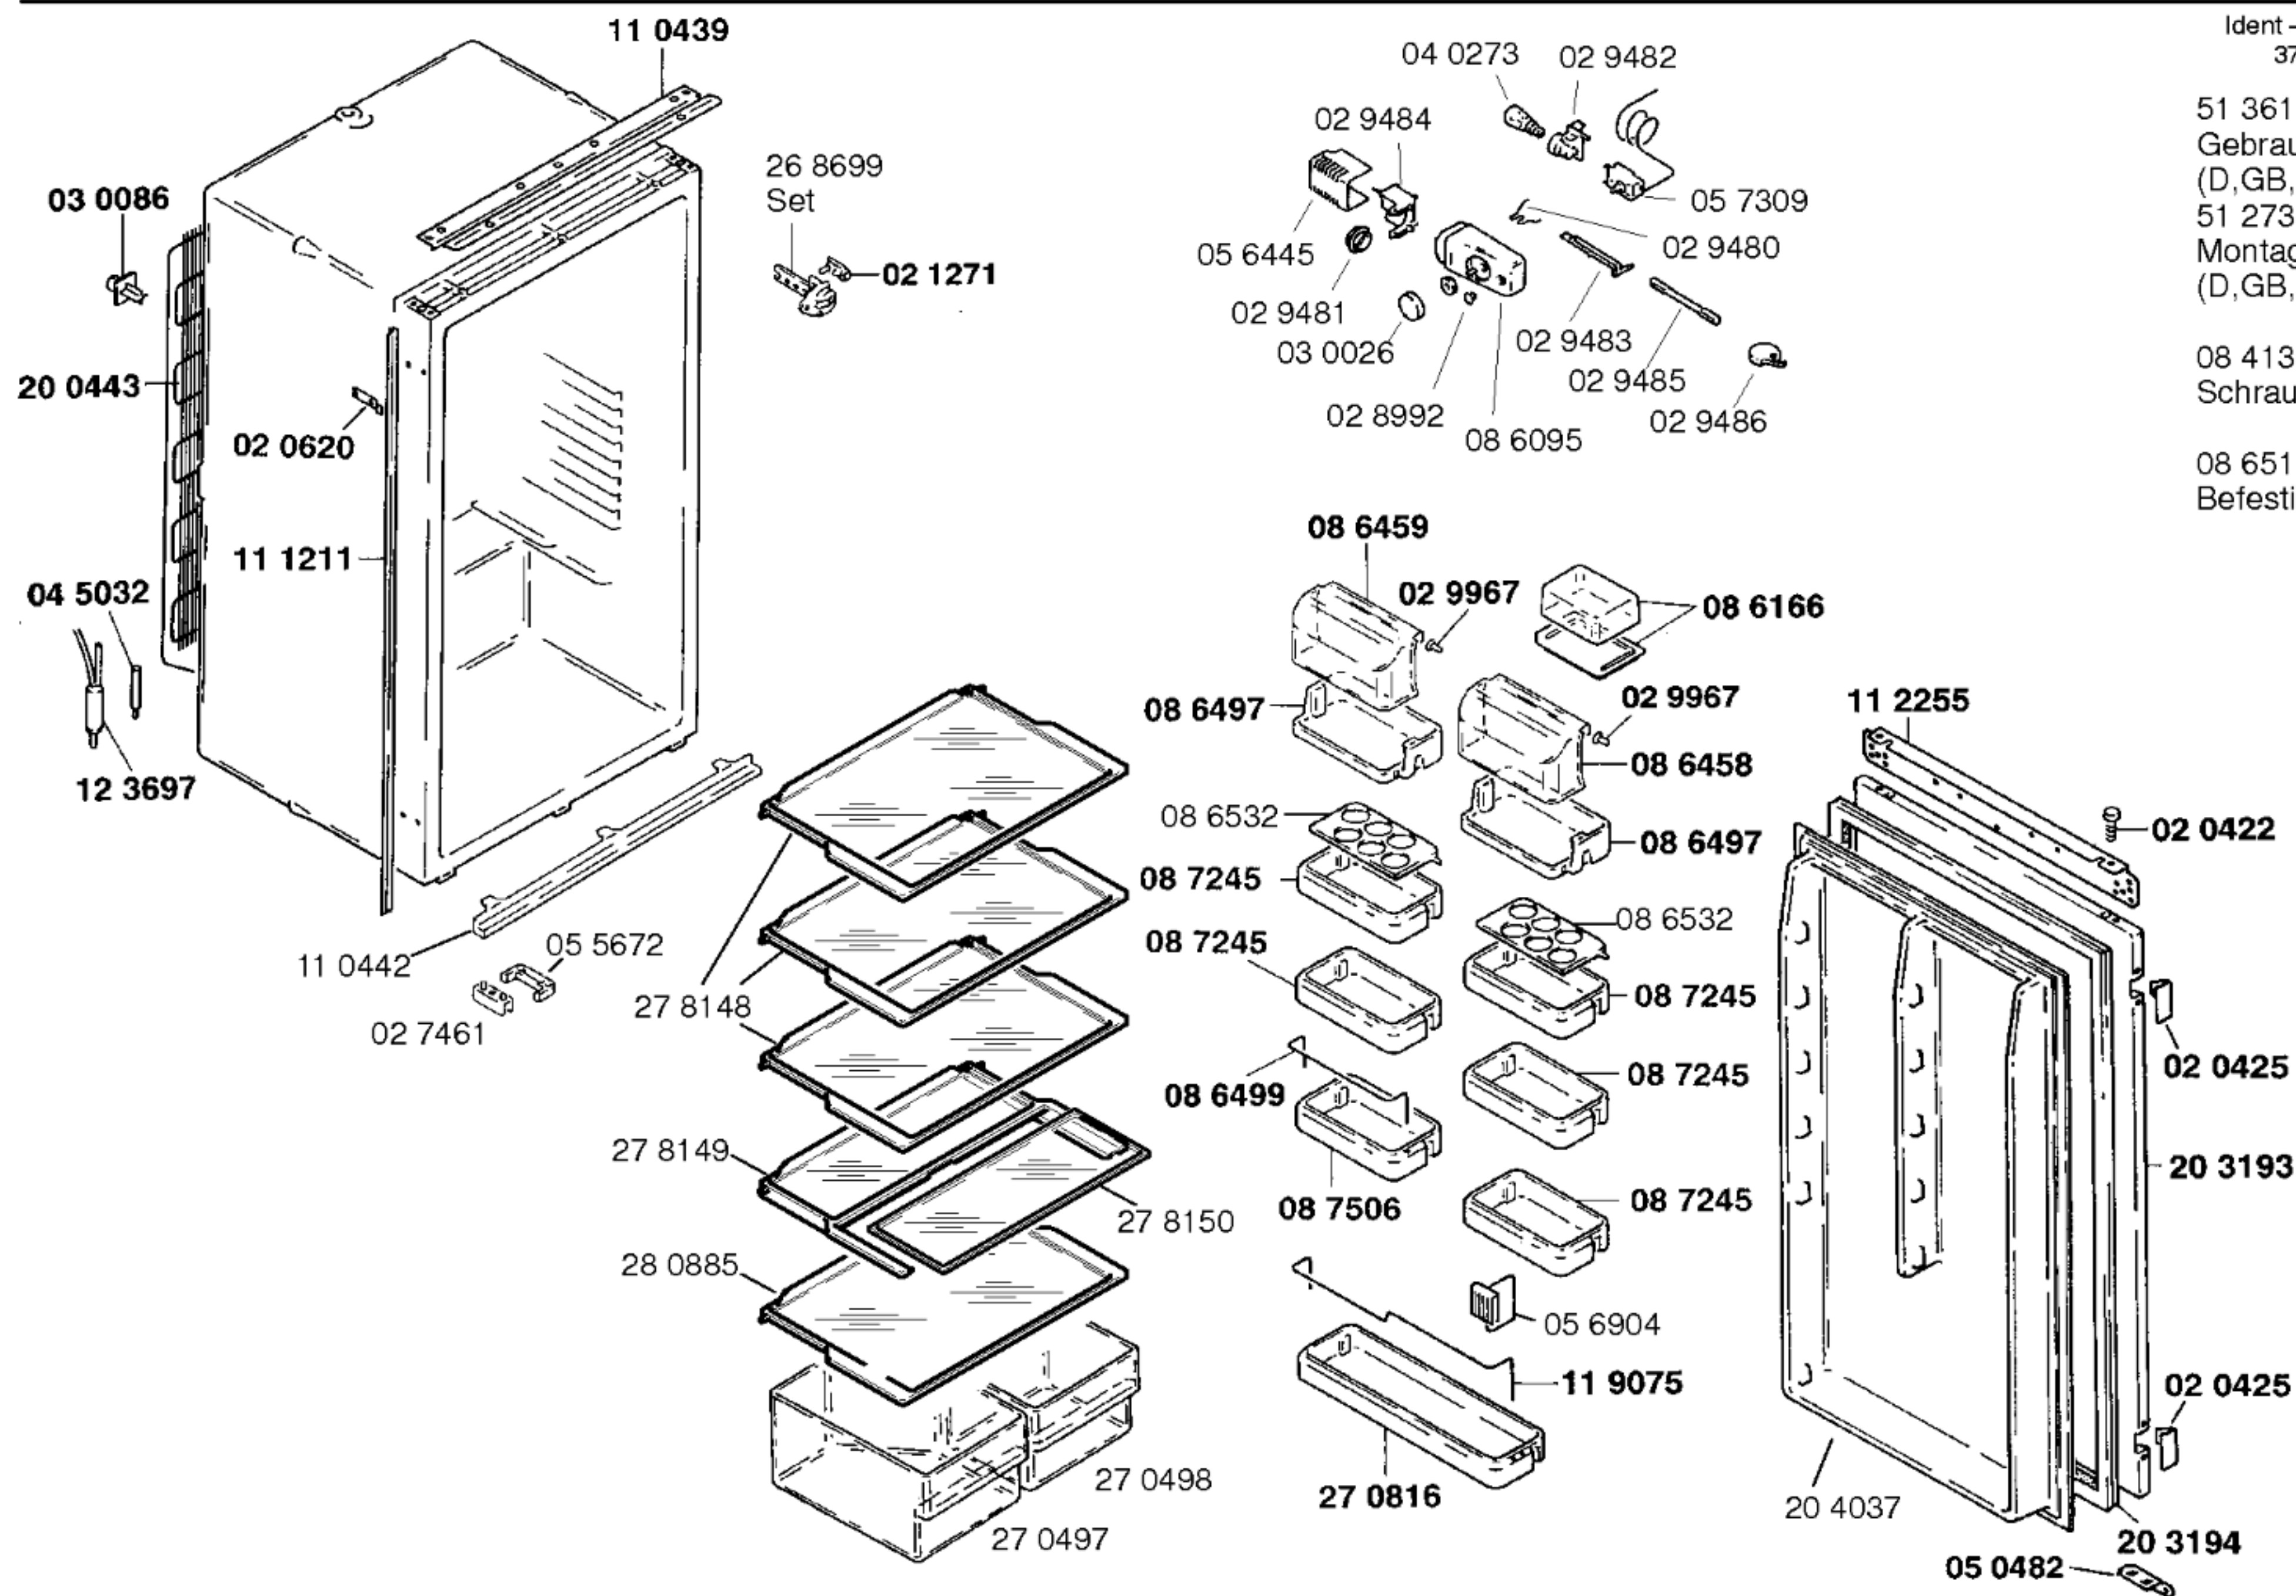


**BOSCH**

KIR2033/01-EU1
KIR2033CH/01-CH1
KIR2033SD/01-SD1

KÜHLGERÄTE
Kühlschränke, Einbau

Ident – Nummern – Konstante
3740

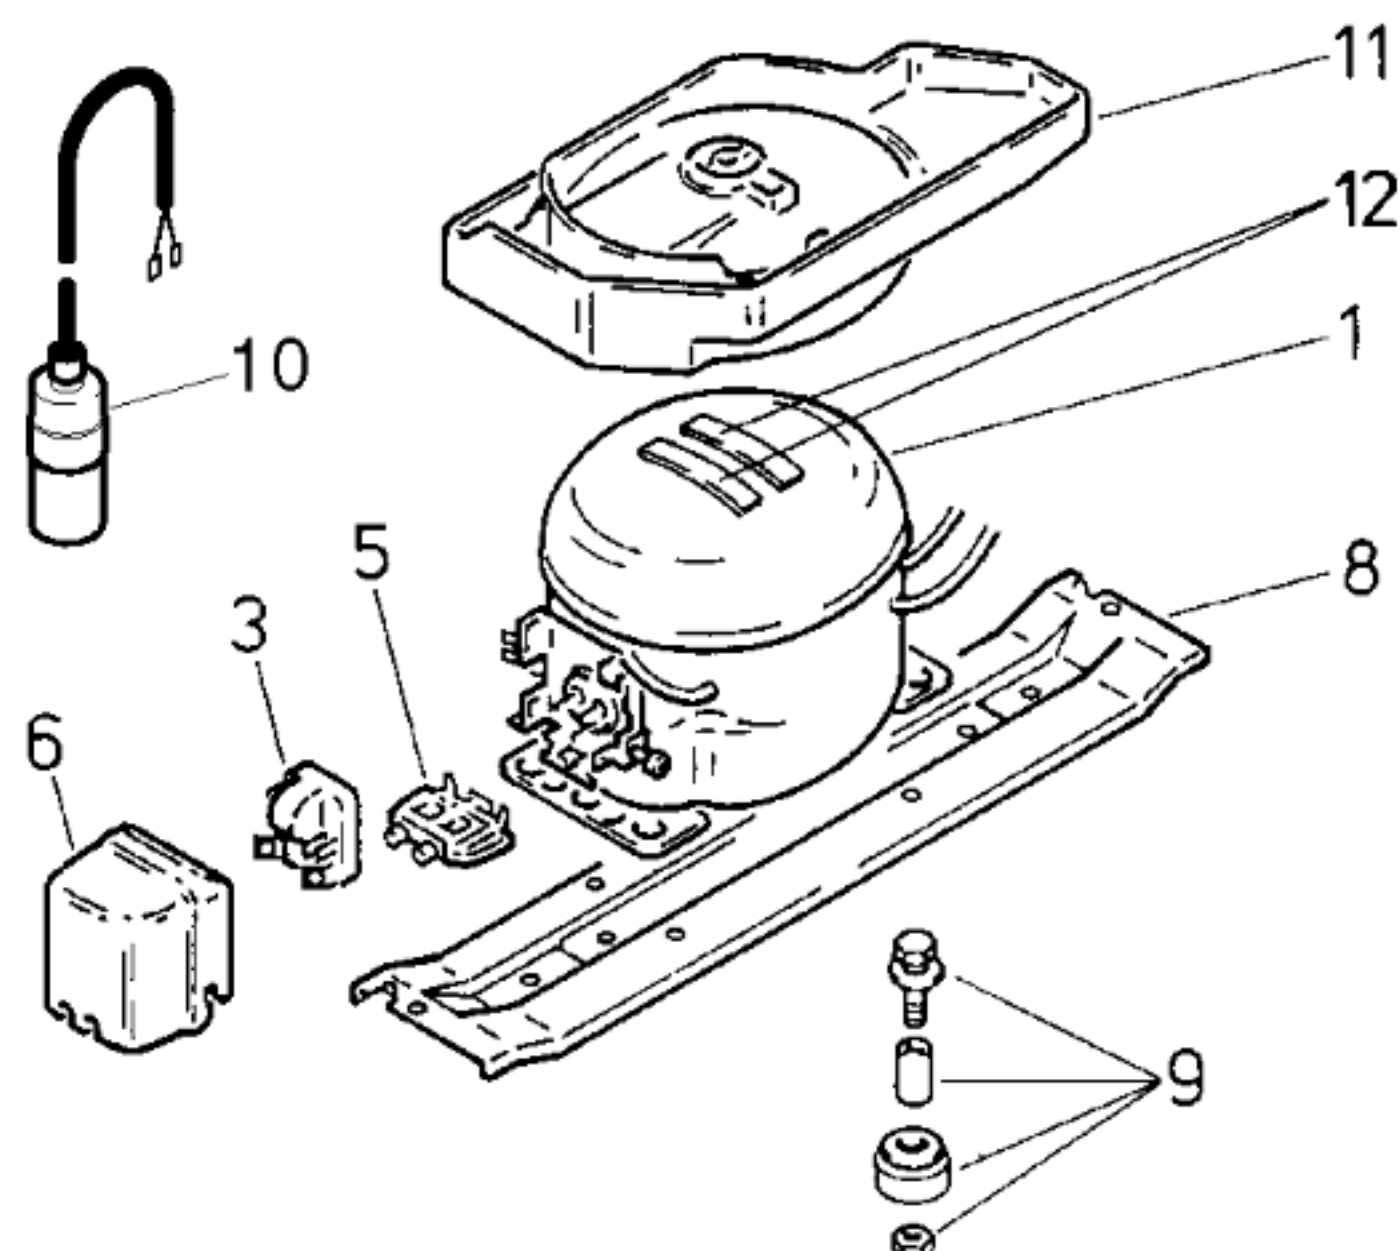

Pos.			
	Danfoss		
	TL 4 A		
1	14 0065		
2			
3	05 9191		
4			
5	02 7310		
6	05 1413		
7			
8	27 8207		
9	05 0166		
10	05 9467		
11	08 4744		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TL4A		
Förderleistung/Delivery/Débit	l/h	695		
Anlaufstrom/Starting current/Cour de démarrage	A	8,3		
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	23,4		
	Hi/aux Ω	15,5		
Temp.-Regler/Thermostat		WHF		
Typ/Type		TF57F1		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	+5	+5	
Valeurs de commutation	„aus“	-27	-12	
(„abtauen“ od.)	„alarm“			
Füllmenge/Fill.quantity/Charge	R12	g	75	
Anschlußwert/Conn.load/Puiss. connectée	W	110		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			