



Electrolux

ELECTROLUX HOME PRODUCTS PTY LTD

ABN 51 004 762 341

Technical Publication N° WM340

Issue: 1

Date: 08/15

Westinghouse

FRONT LOAD WASHING MACHINE

SECTION	PAGE N°
CONTROL PANEL	2 & 3
HOUSING ASSEMBLY	4 & 5
ELECTRICAL EQUIPMENT	6 & 7
FUNCTIONAL ASSEMBLY	8 & 9
HYDRAULIC ASSEMBLY	10 & 11
WIRING & ELECTRICAL DIAGRAMS	12 & 13


Release Date: **July 2015**

New Zealand only


MODEL:

WWF1274


PNC: 914900587 00

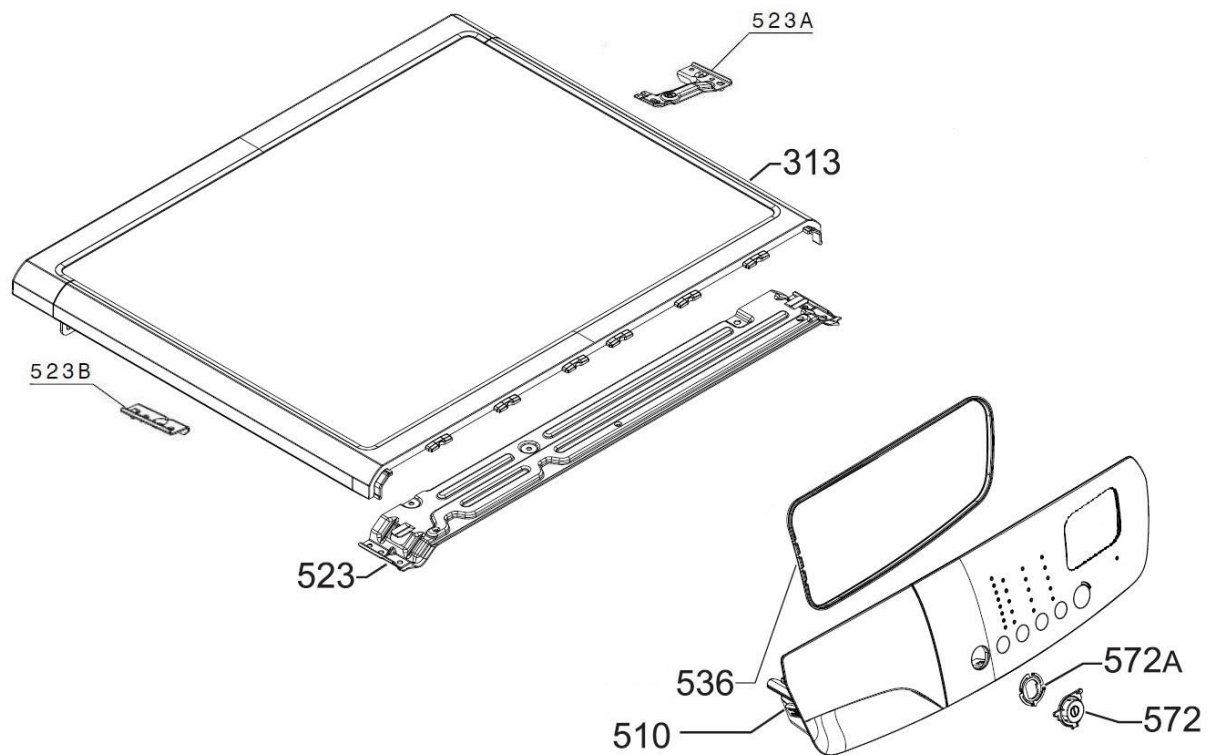

ITEM	PART #	DESCRIPTION	QTY
313	807983302	Work Top Assembly	1
510	A01258125	Control Panel+Handle Printed NZ only	1
523	807859201	Bracket, Control Panel	1
523A	132658301	Support,WG Spring, RH	1
523B	132658310	Support,WG Spring, LH	1
536	808176901	Gasket Control Panel	1
572	807961606	Button On/Off	1
572A	807961501	Spring On/Off Button	1

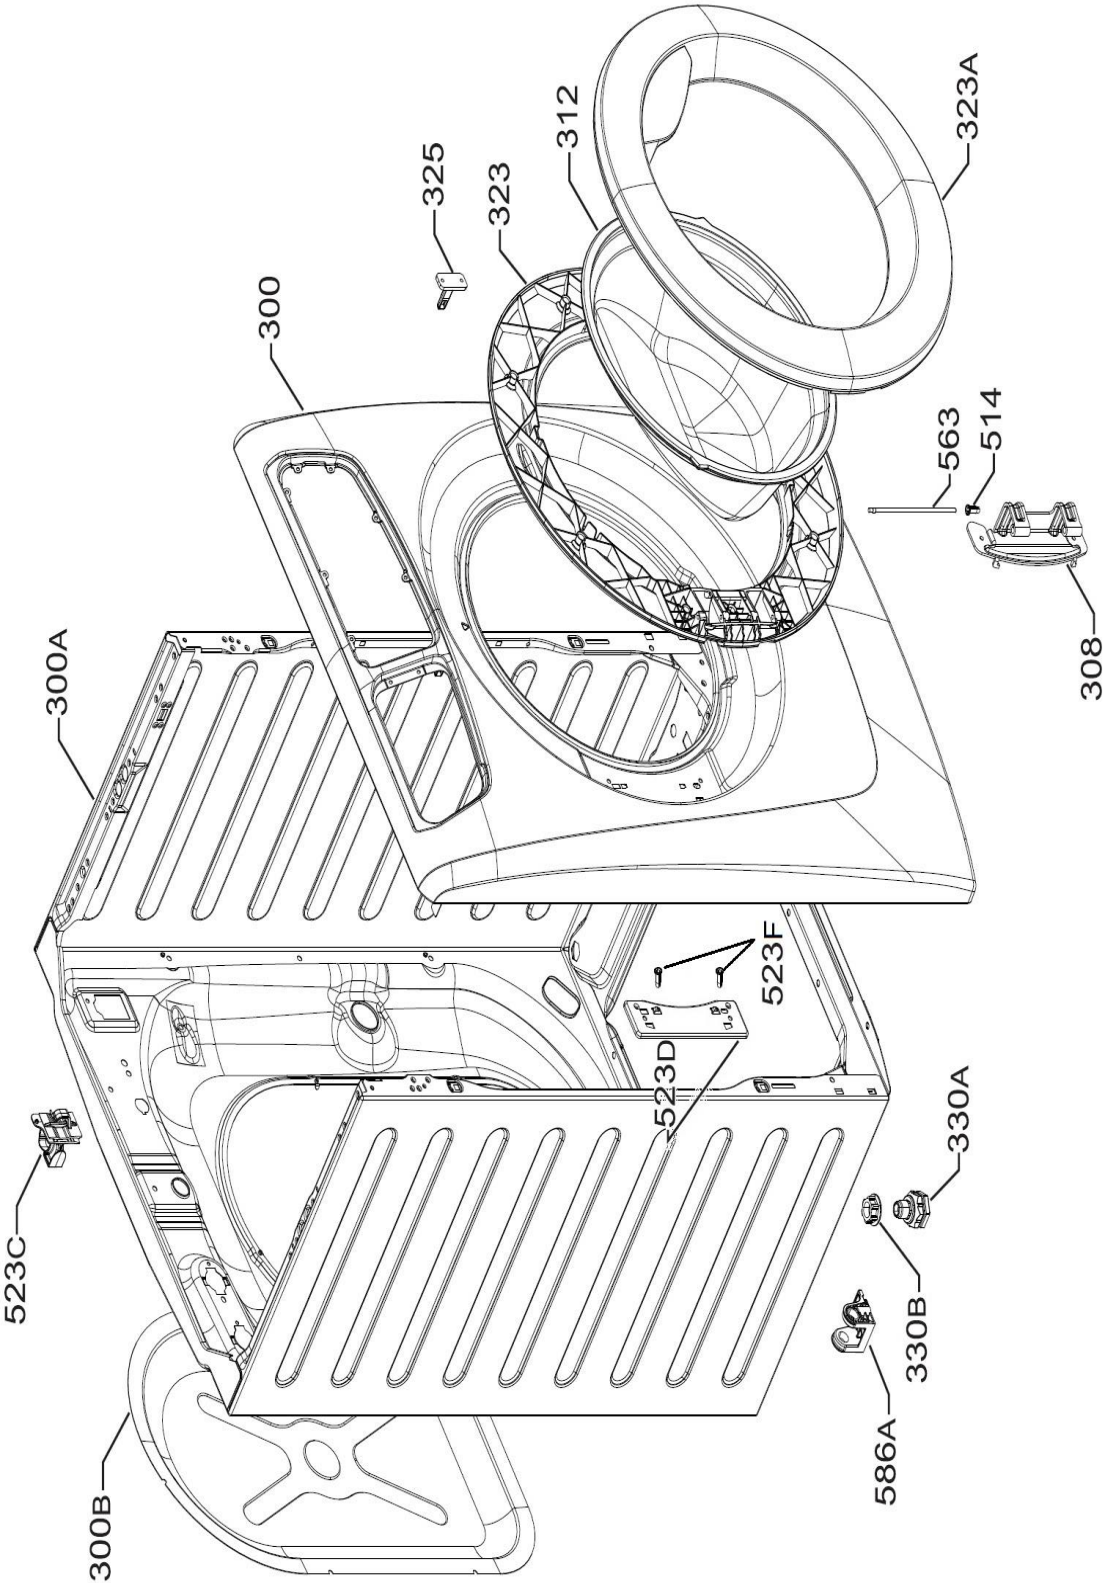


ITEM	PART #	DESCRIPTION	QTY
300	807699906	Panel, Front	1
300A	NPN	Cabinet, HEC54	1
300B	1327638043	Panel, Rear	1
308	807531001	Hinge, Porthole	1
312	807755002	Glass, Porthole	1
323	807643604	Frame, Back, Porthole, Gray	1
323A	807643509	Frame, Front, Porthole, NZ only	1
325	807654201	Latch, Door	1
330A	1325007043	Foot, Adjustable, Assy	4
330B	1108771-00/5	Nut, Plastic	4
514	807493801	Bushing Hinge	2
523C	132734200	Support,Hose Drain,High	1
523D	1327663009	Hinge Reinforcement	1
523F	519093002	Screw, Hinge	2
563	1325541207	Pin Door Hinge	1
586A	808345001	Support Shock Absorber	2
N.I.	1325039020	Cap Rear Panel	1
N.I.	132510821K	Transit bolts Kit	1

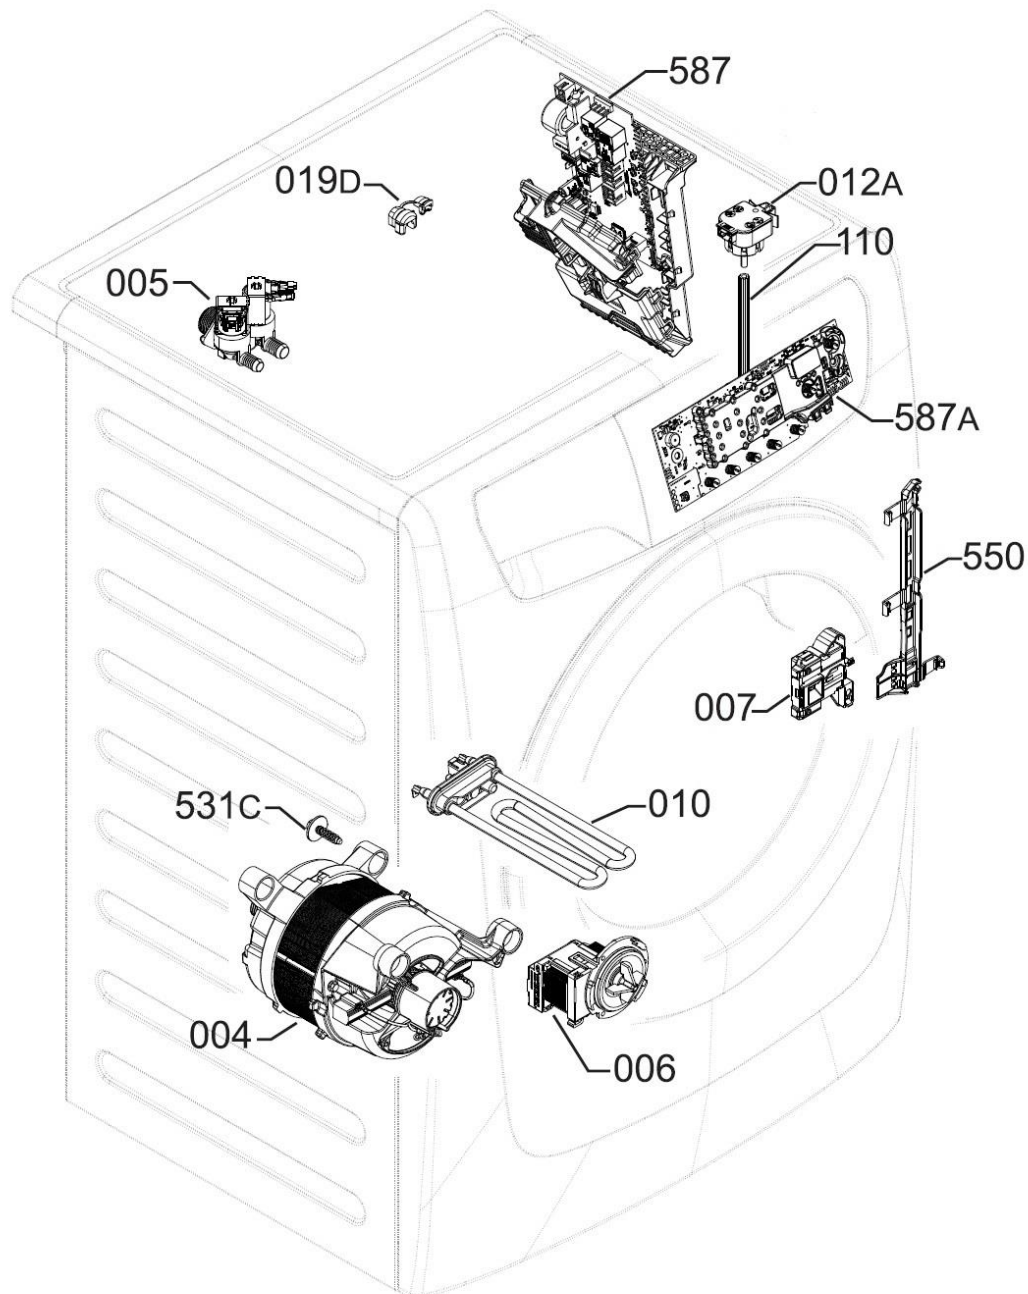


ITEM	PART#	DESCRIPTION	QTY
004	808064301	Universal Motor ECM 52mm AL	1
005	A00192101	Valve,Solenoid,2 Way	1
006	132732020	Pump Drain Leili	1
007	808455303	Lock Door	1
010	132647500	Heating Element	1
012A	132819501	Low Freq Analog Pressure sensor	1
019D	1297196-03/0	Clamp Cable	1
110	147194211	Hose Pressure Sensor L620	1
531C	807103201	Screw Motor (8X30 TE)	4
550	807756001	Protection Door Lock	1
587	A00420301K	PCBA Main Board EWX13	1
587A	A00907901	PCBA User Interface TC4	1
NI	147138120	Cord Power Supply AU	1
NI	A00875101	Wiring Harness Assy Complete	1

MODEL: WWF1274

EX. VIEW DRAWING
FUNCTIONAL ASSEMBLY

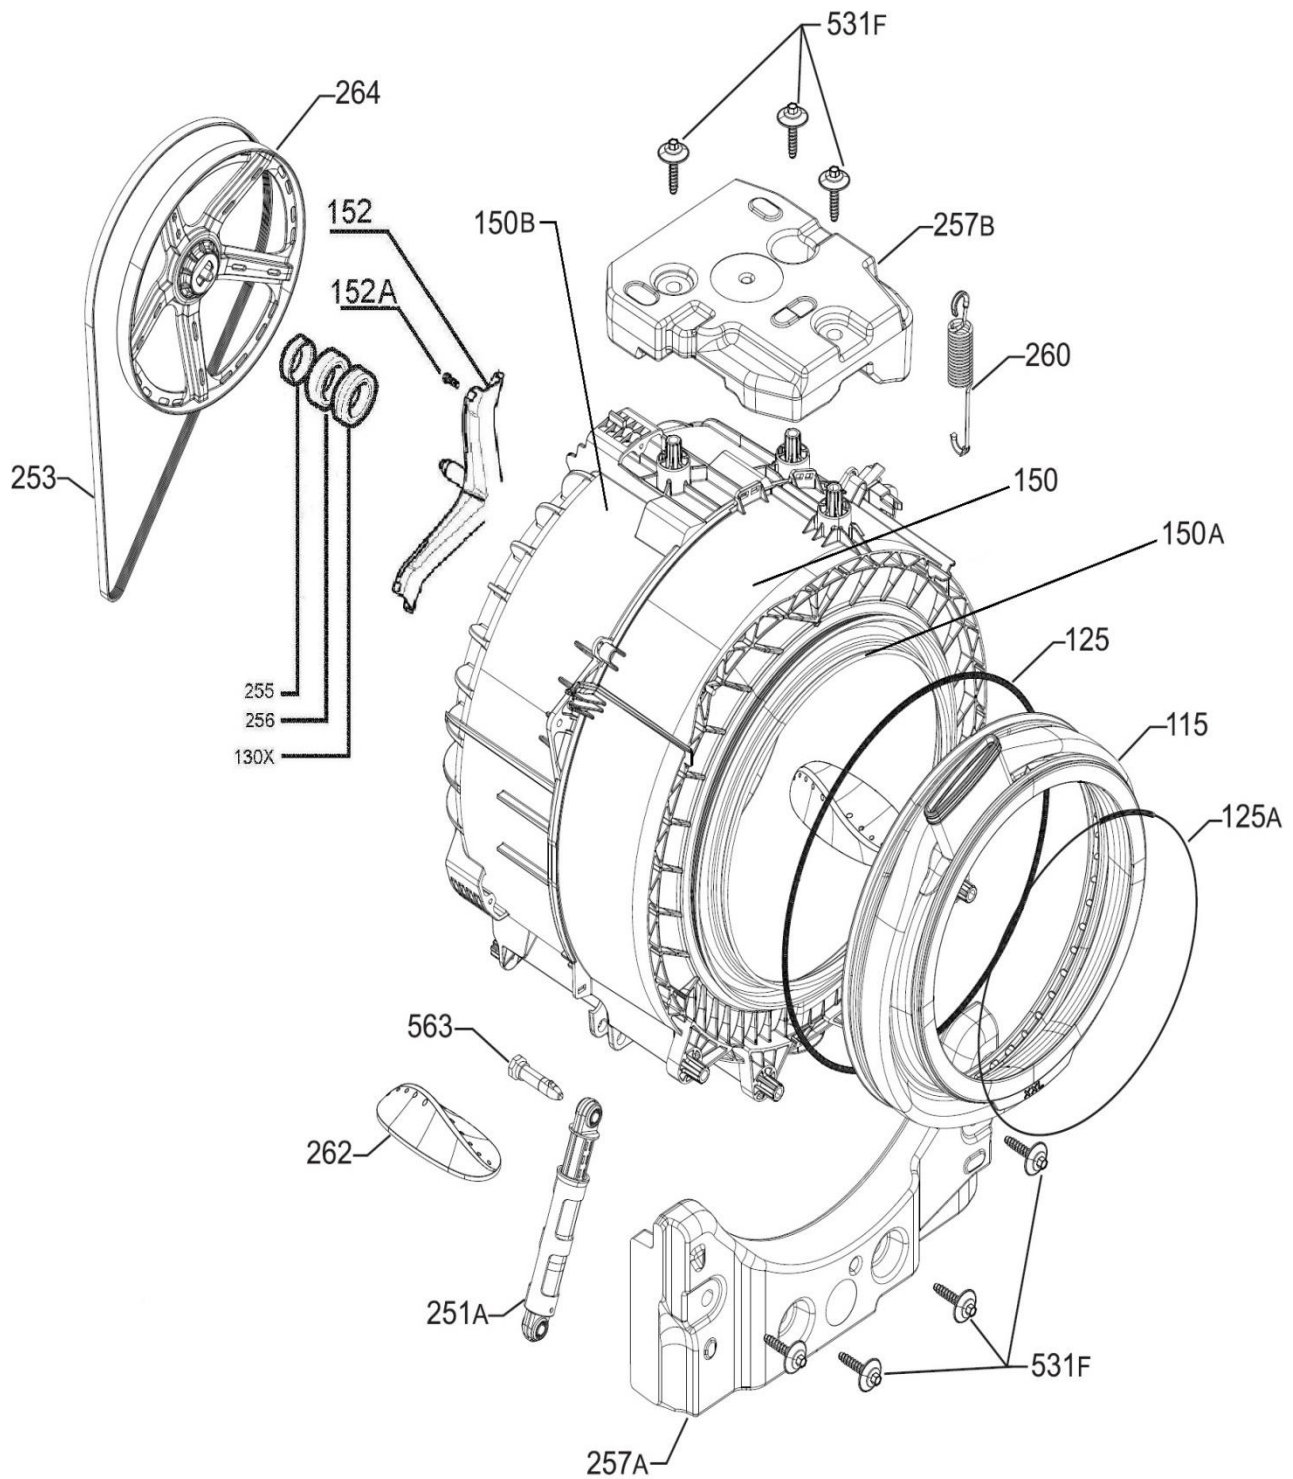

ITEM	PART #	DESCRIPTION	QTY
115	807120001	Gasket, Bellow	1
125	132562100	Spring,Bellow,TUB,G33	1
125A	1325562005	Ring, Bellow, Cabinet	1
130X	807556201	Gasket, Drum shaft	1
150	808380103	Tub Shell Front P49	1
150A	A00679201	Drum Assy P49/1200(items 152,152A,262 included)	1
150B	808561204	Tub Shell Rear(items 130X,255,256 included)	1
152	A00675501	Cross Spider Assembly	1
152A	124022001	Screw, Spider	1
251A	132255383	Shock Absorber Assy	2
253	132353120	Belt, Drive	1
255	G211367	Bearing Ball 20X47X14	1
256	542325520	Bearing Ball 25X52X15	1
257A	A00273201	Counter Weight Front	1
257B	A00273101	Counter Weight Top	1
260	132768411	Spring, Tub Suspension	2
262	807793402	Lifter Drum	3
264	132396555	Pulley	1
531F	132729101	Screw counterweight	7
563	132780412	Bolt Shock absorber	4
NI	1471007-00/3	Tub shell seal	1
NI	1322290-01/4	Screw, tub shell	15
NI	124021830	Screw, Pulley	1

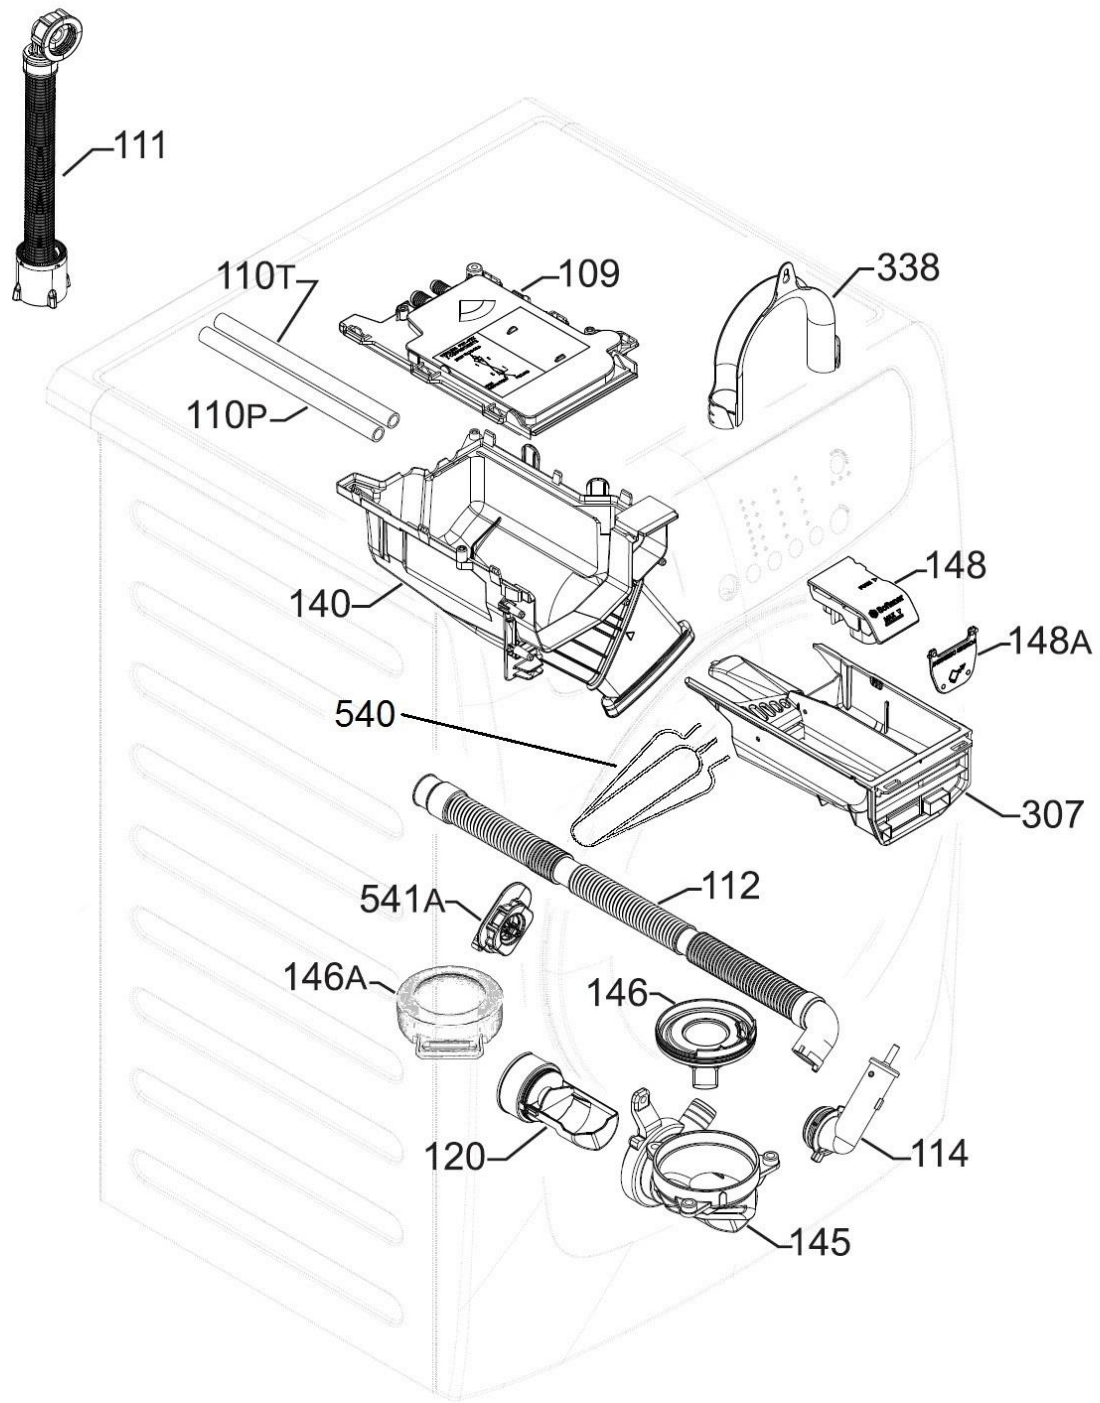

ITEM	PART #	DESCRIPTION	QTY
109	132730416	Conveyor Assy	1
110P	147154931	Hose Valve connection+Clamp	1
110T	147154929	Hose Valve connection+Clamp	1
111	0571200124	Hose Inlet Cold	1
112	808276401	Hose Drain + Clamp	1
114	A00102201	Air Chamber Assy	1
120	807703901	Filter Diaphragm	1
140	132730102	Dispenser Detergent Assy	1
145	807695101	Drain Body Integrated	1
146	807668901	Diaphragm	1
146A	807658101	Valve Floating	1
148	807850502	Syphon Additive	1
148A	132730901	Partition Drawer Rib	1
307	132730707	Drawer Detergent	1
338	0180200003	Hook Outlet Hose	1
540	132732500	Clip Door Gasket	1
541A	132736704	Support Drain Hose Low	1

NOTE:- *Parts required for extending Drain Hose.


0571 400 142 Hose, Drain

0182 200 002 Connector

0005 001 019 Clamp (x2)


For extensions under two meters, use hose, Part N° ES5323 (per meter) and connector, Part N° ES5149 x 2. Total drain hose length must not exceed 4 meters.

WIRING HARNESSES

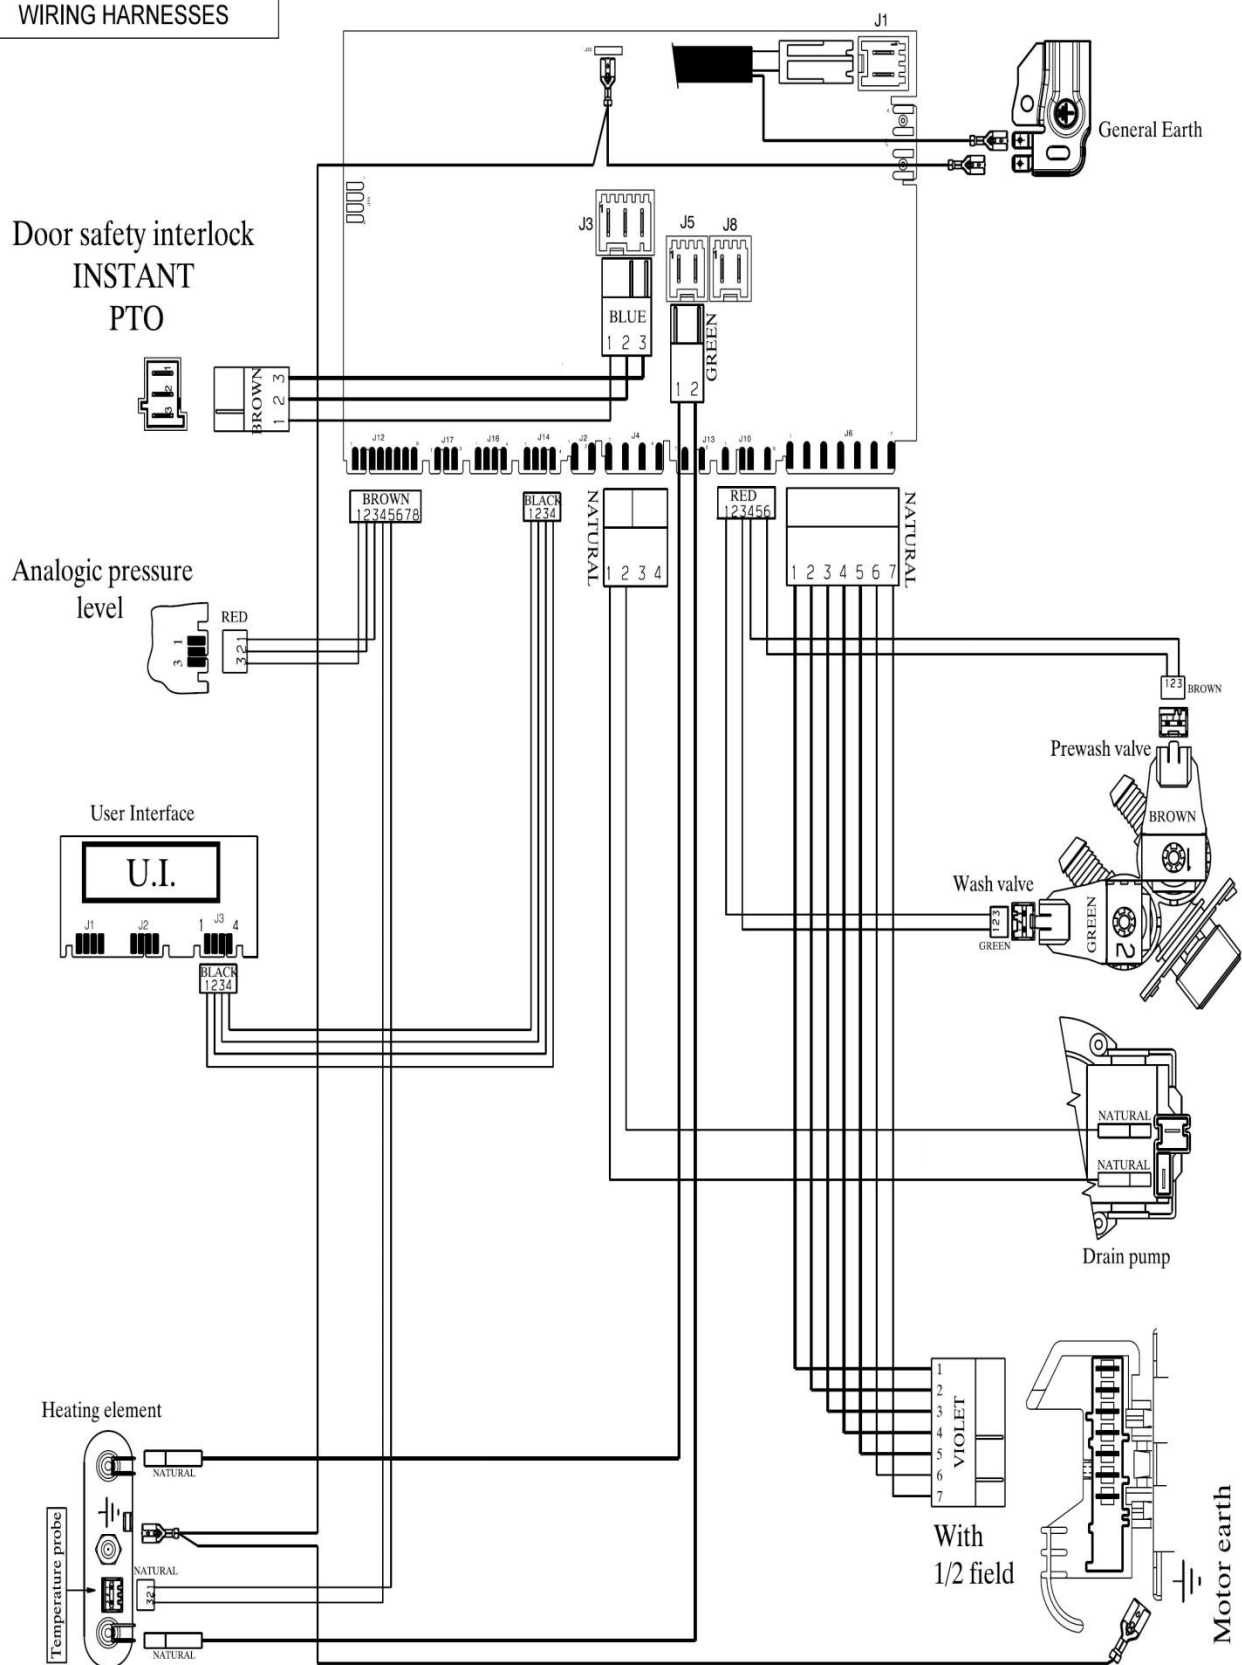

IMPORTANT SAFETY NOTICE

This diagram has been prepared for use by electrically qualified service technicians. Electrolux cannot be held responsible for the interpretation of its service publications nor for any injury or damage that may occur in connection with their use.

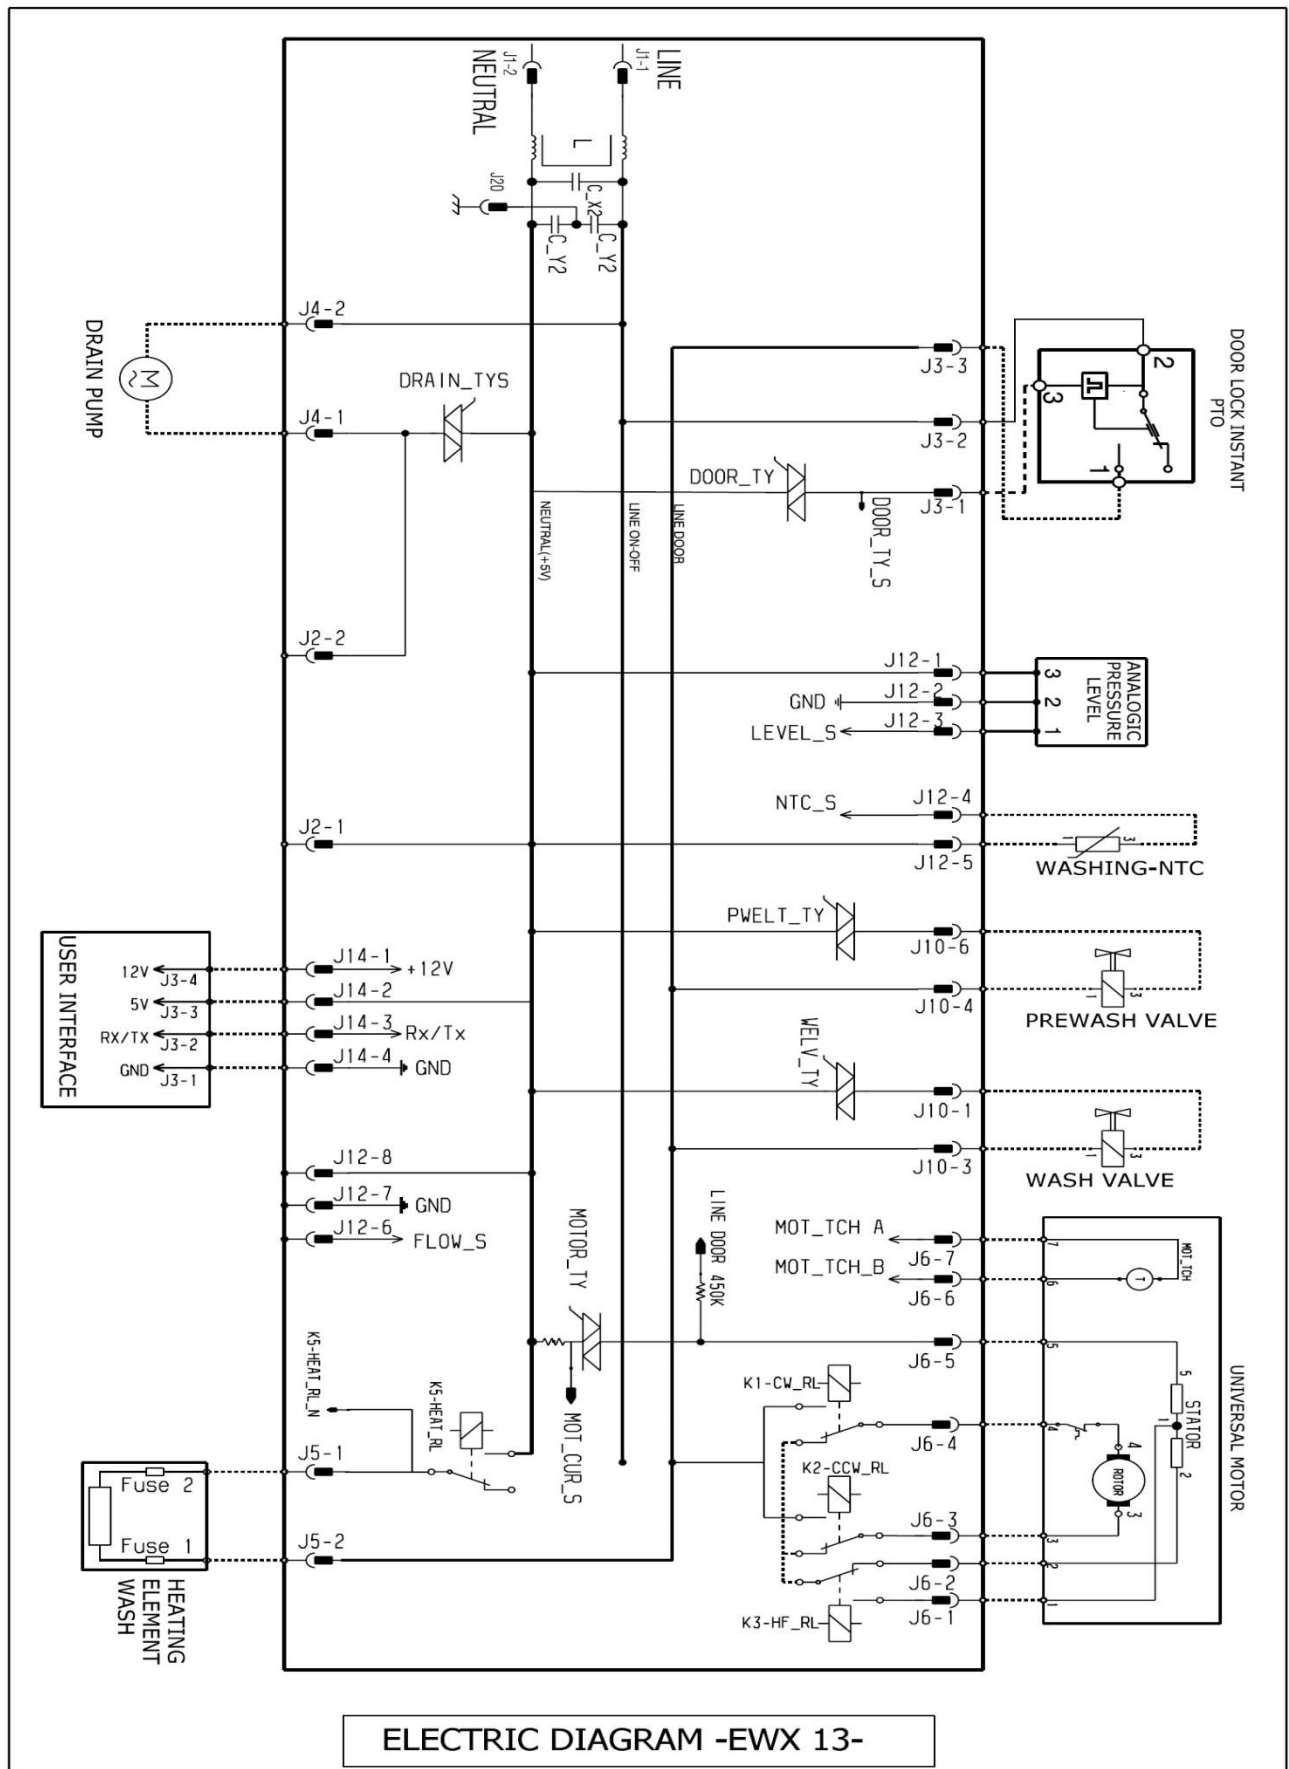

IMPORTANT SAFETY NOTICE

This diagram has been prepared for use by electrically qualified service technicians. Electrolux cannot be held responsible for the interpretation of its service publications nor for any injury or damage that may occur in connection with their use.