


KÜHLSCHRANK KS 145 TL	- 0 701 154 652-D1	KS 510 Exkl.	- 0 701 154 675-D5	KS 152 TL	- 0 701 154 679-CH2	KS 145 TL	- 0 701 154 686-D9
	- 0 701 154 653-D2	KS 520 Exkl.	- 0 701 154 676-D6		- 0 701 154 680-D8	KS 1500	- 0 701 154 697-D10
KS 152 TL	- 0 701 154 671-D3	KS 152 TL	- 0 701 154 677-D7	KS 145 TL	- 0 701 154 681-SK1		
KS 155 TL	- 0 701 154 672-D4		- 0 701 154 678-CH1		- 0 701 154 682-SK2		

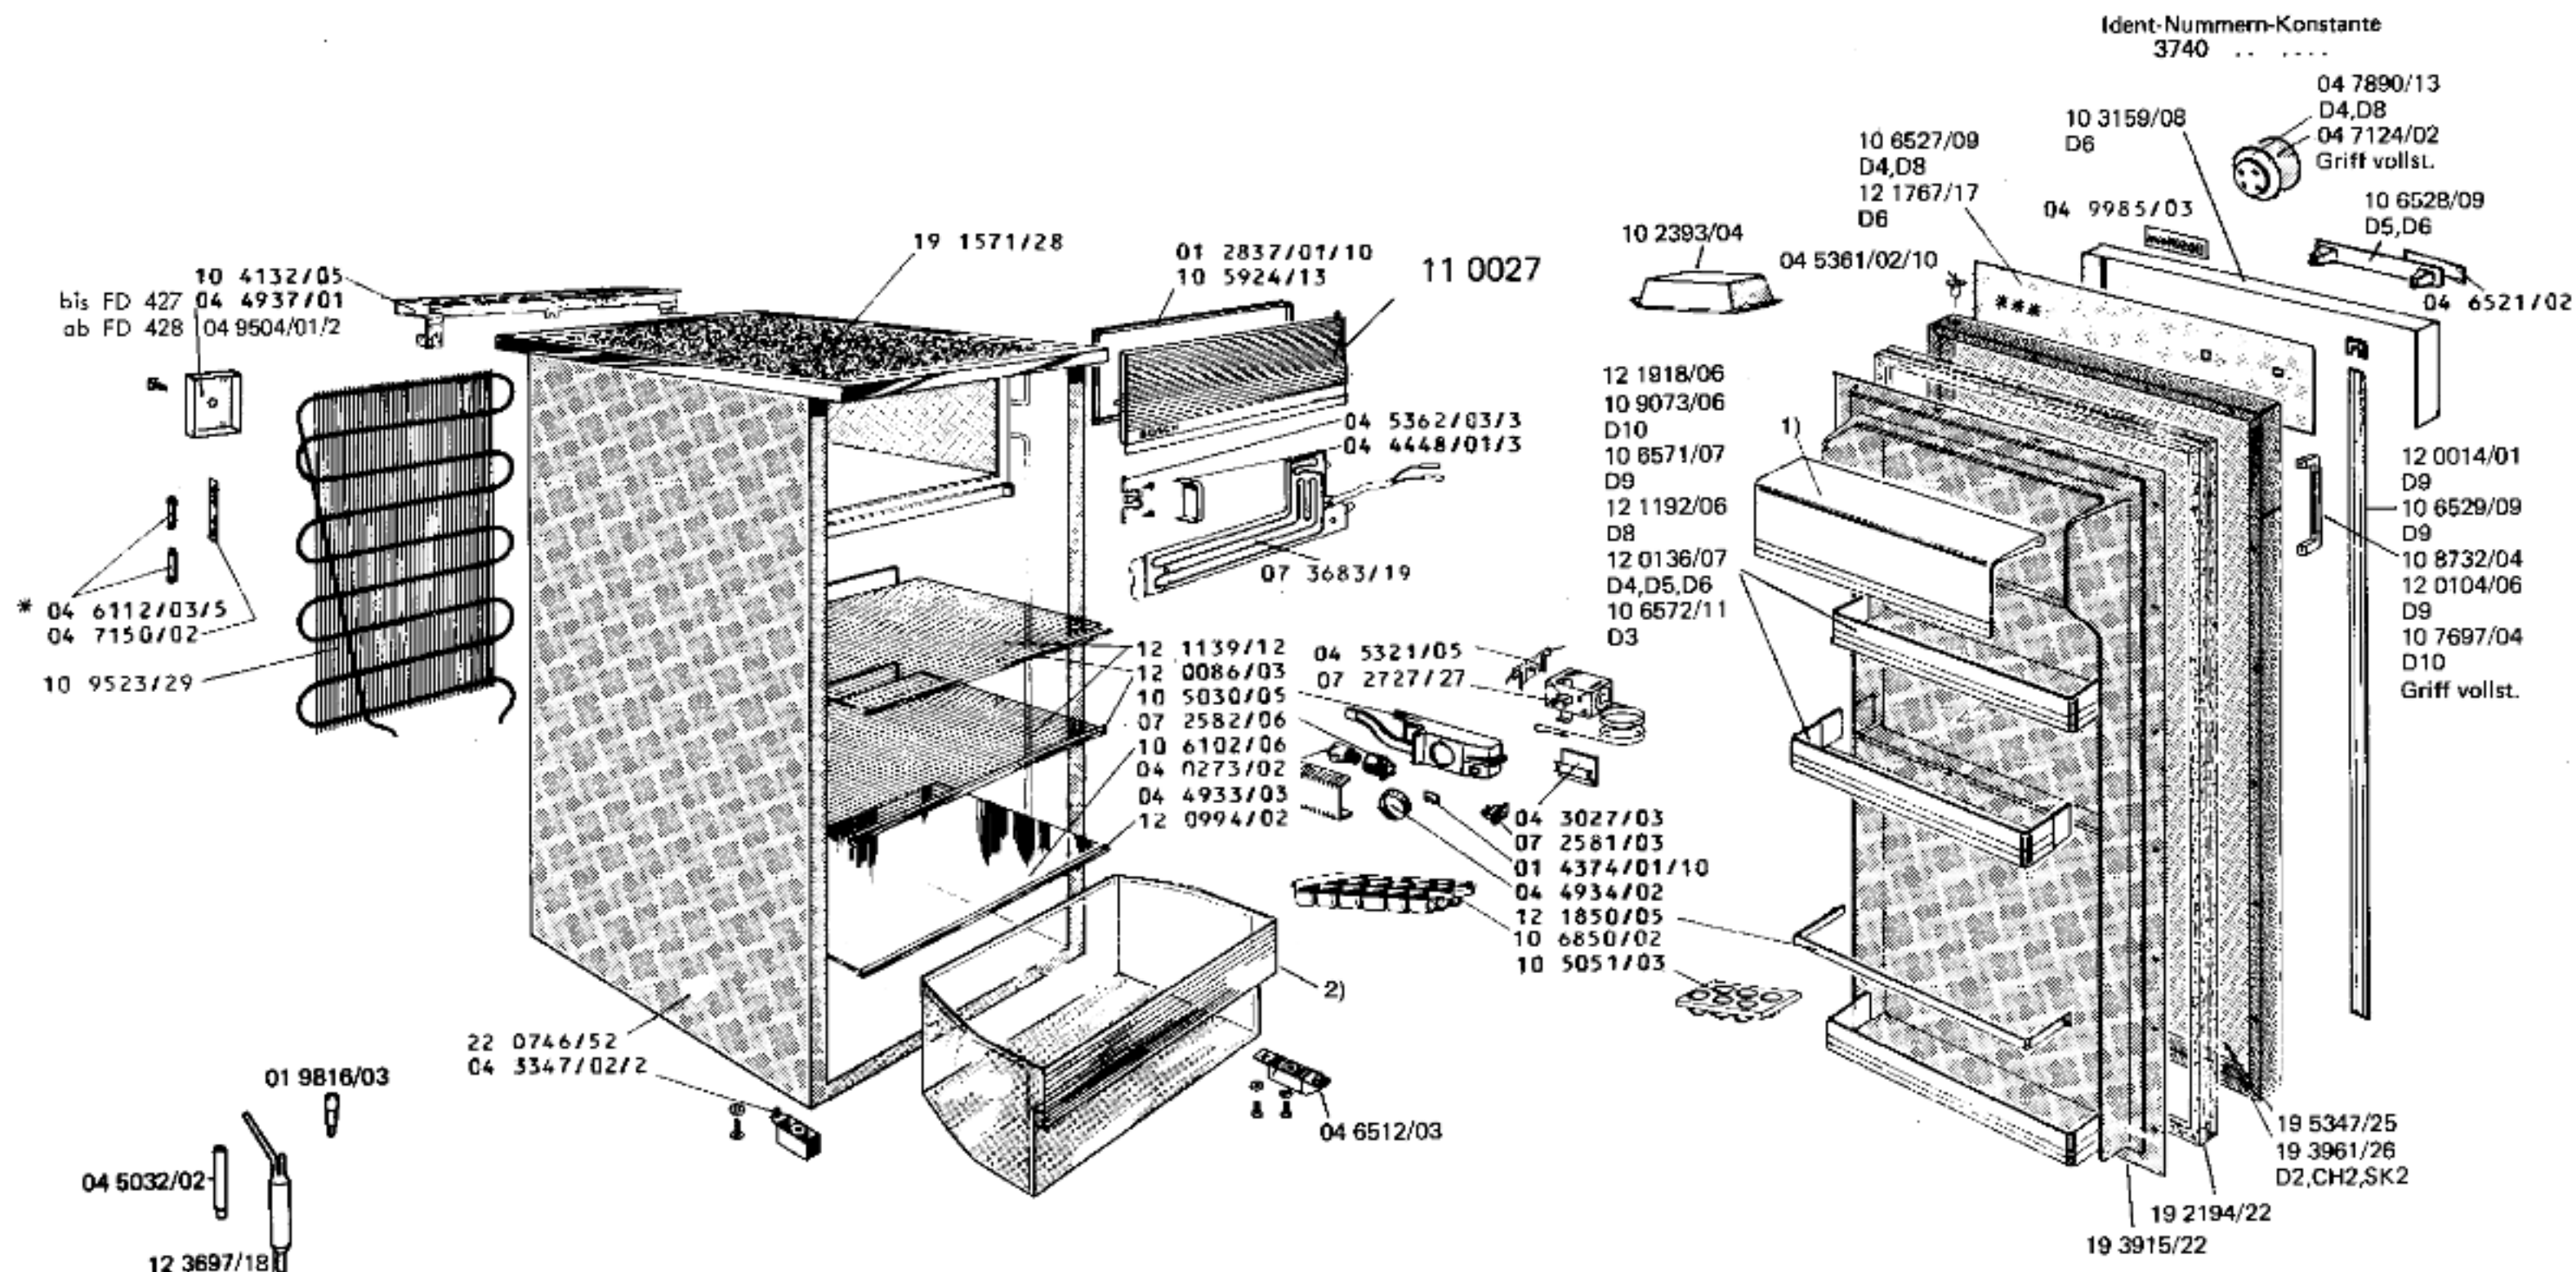


* ab FD 428 keine Feinsicherungen mehr eingebaut

x Türe links angeschlagen

- 1) 12 1301/08
10 8965/07
D3
12 1311/08
D4,D5,D6
12 1309/08
D8
10 9072/08
D10
- 2) 12 1943/18
19 3502/18
D3,D4,D6,D8,D9
12 1946/18
D10

KÜHLSCHRANK KS 145 TL	- 0 701 154 652-D1	KS 510 Exkl.	- 0 701 154 675-D5	KS 152 TL	- 0 701 154 679-CH2	KS 146 TL	- 0 701 154 686-D9
	- 0 701 154 653-D2	KS 520 Exkl.	- 0 701 154 676-D6		- 0 701 154 680-D8	KS 1500	- 0 701 154 697-D10
KS 152 TL	- 0 701 154 671-D3	KS 152 TL	- 0 701 154 677-D7	KS 145 TL	- 0 701 154 681-SK1		
KS 155 TL	- 0 701 154 672-D4		- 0 701 154 678-CH1		- 0 701 154 682-SK2		

Ident.-Nummern-Konstante
3740

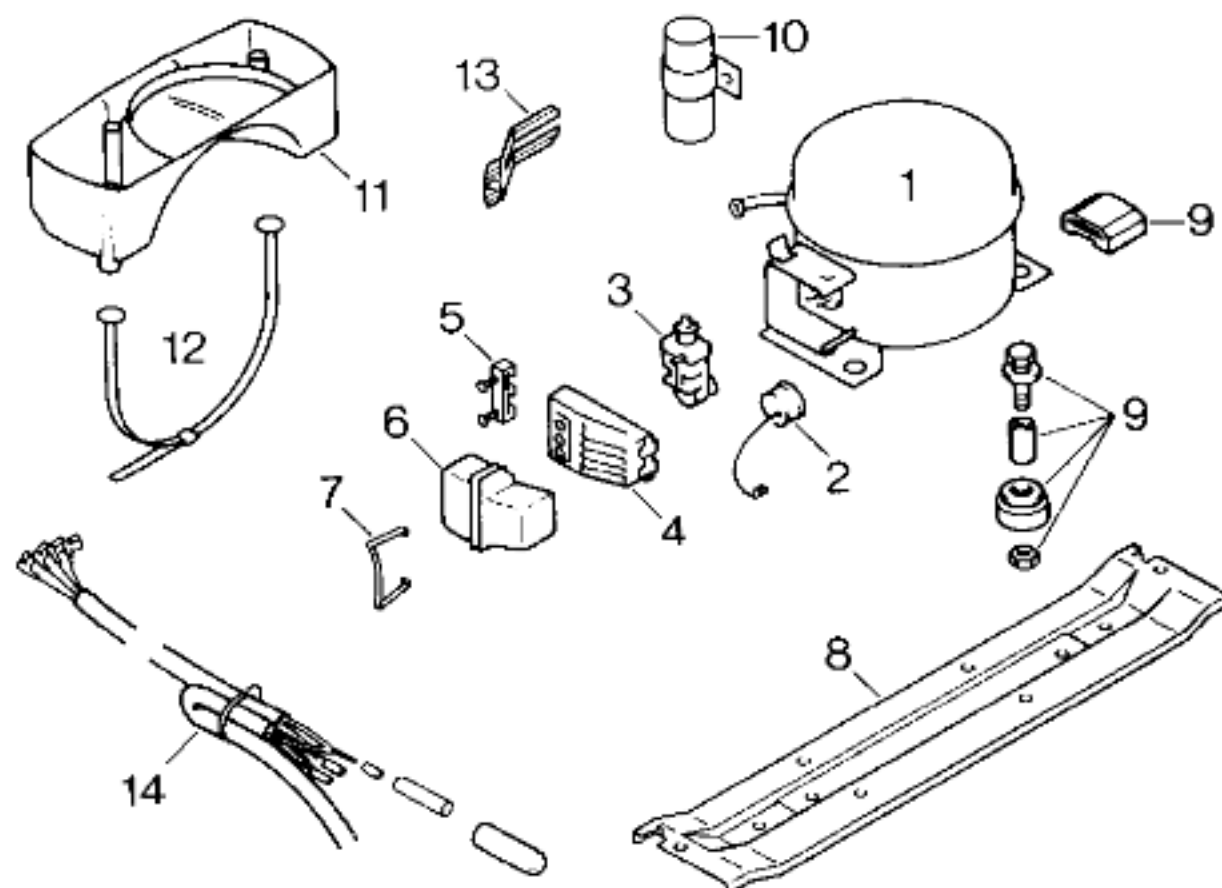

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Bosch	Danfoss		
Typ/Type		V 792	TL 4 A		
Förderleistung/Delivery/Débit	l/h	792	702		
Anlaufstrom/Starting current/Cour. de démarrage	A	8,3	7,8		
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	23,0	23,8		
	Hi/aux Ω	25,2	17,0		
Temp.-Regler/Thermostat		Ranco			
Typ/Type		A 59			
Reglerstellung/Position		kalt warm			
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	+ 4 + 4			
Valeurs de commutation	„aus“	29 - 19			
	(„abtauen“ od.) „alarm“				
Füllmenge/Fill.quantity/Charge	R 12 g	120			
Anschlußwert/Conn.load/Puiss. connectée	W	120			
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance	Ω	3280			
Leistung/Power/Puissance	W	14,8			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance	Ω				
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance	Ω				
Spannung/Voltage/Tension	V				

Pos.	D1-D10,CH1,CH2	D1 D10,CH1,CH2
1	SK1,SK2	SK1, SK2
2	Bosch	Danfoss
3	07 2115/18	13 1064/45
4	07 1804/18	02 0108/27
5	04 9757/02	
6		02 1361/04
7	04 9758/02	05 1413/06
8		
9		*11 1493/03
10		*05 0166/05/4
11	10 6693/03	*11 1243/01
12		
13		*04 1568/01/2
14		*05 1226/08

*1) Bei Ersatz des Bosch-Verdichters mitbestellen
To be ordered when replacing the Bosch compressor
A commander lors du remplacement du compresseur Bosch